

# WJ200 Series Inverter Instruction Manual

---

- Single-phase Input 200V class
- Three-phase Input 200V class
- Three-phase Input 400V class

Manual Number: NT325DX  
February 2018

**After read this manual,  
Keep it handy for future reference.**

**Hitachi Industrial Equipment Systems Co., Ltd.**

---

# Safety Messages

For the best results with the WJ200 Series inverter, carefully read this manual and all of the warning labels attached to the inverter before installing and operating it, and follow the instructions exactly. Keep this manual handy for quick reference.

## Definitions and Symbols

A safety instruction (message) includes a “Safety Alert Symbol” and a signal word or phrase such as WARNING or CAUTION. Each signal word has the following meaning:



**HIGH VOLTAGE:** This symbol indicates high voltage. It calls your attention to items or operations that could be dangerous to you and other persons operating this equipment. Read the message and follow the instructions carefully.



**WARNING:** indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.



**CAUTION:** Indicates a potentially hazardous situation that, if not avoided, can result in minor to moderate injury or serious damage to the product. The situation described in the **CAUTION** may, if not avoided, lead to serious results. Important safety measures are described in **CAUTION** (as well as **WARNING**), so be sure to observe them.



**Step 1:** Indicates a step in a series of action steps required to accomplish a goal. The number of the step will be contained in the step symbol.



**NOTE:** Notes indicate an area or subject of special merit, emphasizing either the product's capability or common errors in operation or maintenance.



**TIP:** Tips give a special instruction that can save time or provide other benefits while installing or using the product. The tip calls attention to an idea that may not be obvious to first-time users of the product.

## Hazardous High Voltage



**HIGH VOLTAGE:** Motor control equipment and electronic controllers are connected to hazardous line voltages. When servicing drives and electronic controllers, there may be exposed components with housing or protrusions at or above line potential. Extreme care should be taken to protect against shock.

Stand on an insulating pad and make it a habit to use only one hand when checking components. Always work with another person in case an emergency occurs. Disconnect power before checking controllers or performing maintenance. Be sure equipment is properly grounded. Wear safety glasses whenever working on electronic controllers or rotating machinery.

## Caution when using Safe Stop Function

When using Safe Stop function, make sure to check whether the safe stop function properly works when installation (before starting operation). Please carefully refer to page Appendix E

## General Precautions – Read These First!



---

**WARNING:** This equipment should be installed, adjusted, and serviced by qualified electrical maintenance personnel familiar with the construction and operation of the equipment and the hazards involved. Failure to observe this precaution could result in bodily injury.

---



---

**WARNING:** The user is responsible for ensuring that all driven machinery, drive train mechanism not supplied by Hitachi Industrial Equipment Systems Co., Ltd., and process line material are capable of safe operation at an applied frequency of 150% of the maximum selected frequency range to the AC motor. Failure to do so can result in destruction of equipment and injury to personnel should a single-point failure occur.

---



---

**WARNING:** For equipment protection, install a ground leakage type breaker with a fast response circuit capable of handling large currents. The ground fault protection circuit is not designed to protect against personal injury.

---



---

**WARNING:** HAZARDOUS OF ELECTRICAL SHOCK. DISCONNECT INCOMING POWER BEFORE WORKING ON THIS CONTROL.

---



---

**WARNING:** Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.

---



---

**CAUTION:** These instructions should be read and clearly understood before working on WJ200 series equipment.

---



---

**CAUTION:** Proper grounds, disconnecting devices and other safety devices and their location are the responsibility of the user and are not provided by Hitachi Industrial Equipment Systems Co., Ltd.

---



---

**CAUTION:** Be sure to connect a motor thermal disconnect switch or overload device to the WJ200 series controller to assure that the inverter will shut down in the event of an overload or an overheated motor.

---



---

**HIGH VOLTAGE:** Dangerous voltage exists until power light is OFF. Wait at least ten (10) minutes after input power is disconnected before performing maintenance.

---



---

**WARNING:** This equipment has high leakage current and must be permanently (fixed) hard-wire to earth ground via two independent cables.

---



**WARNING:** Rotating shafts and above-ground electrical potentials can be hazardous. Therefore, it is strongly recommended that all electrical work conform to the National Electrical Codes and local regulations. Installation, alignment and maintenance should be performed only by qualified personnel.

---



**CAUTION:**

- a) Class I motor must be connected to earth ground via low resistive path ( $<0.1\Omega$ )
  - b) Any motor used must be of a suitable rating.
  - c) Motors may have hazardous moving path. In this event suitable protection must be provided.
- 



**CAUTION:** Alarm connection may contain hazardous live voltage even when inverter is disconnected. When removing the front cover for maintenance or inspection, confirm that incoming power for alarm connection is completely disconnected.

---



**CAUTION:** Hazardous (main) terminals for any interconnection (motor, contact breaker, filter, etc.) must be inaccessible in the final installation.

---




**CAUTION:** This equipment should be installed in IP54 or equivalent (see EN60529) enclosure. The end application must be in accordance with BS EN60204-1. Refer to the section "Choosing a Mounting Location" on page 2-7. The diagram dimensions are to be suitably amended for your application.

---



**CAUTION:** Connection to field wiring terminals must be reliably fixed having two independent means of mechanical support. Use a termination with cable support (figure below), or strain relief, cable clamp, etc.

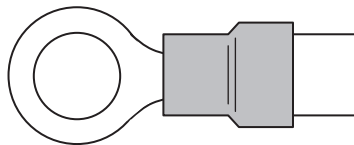

**CAUTION:** A double-pole disconnection device must be fitted to the incoming main power supply close to the inverter. Additionally, a protection device meet IEC947-1/IEC947-3 must be fitted at this point (protection device data shown in "Determining Wire and Fuse Sizes" on page 2-16).

---



**NOTE:** The above instructions, together with any other requirements highlighted in this manual, must be followed for continue LVD (European Low Voltage Directive) compliance.



# Index to Warnings and Cautions in This Manual

## Cautions and Warnings for Orientation and Mounting Procedures



**HIGH VOLTAGE:** Hazard of electrical shock. Disconnect incoming power before working on this control. Wait ten (10) minutes before removing the front cover.



**HIGH VOLTAGE:** Hazard of electrical shock. Never touch the naked PCB (printed circuit board) portions while the unit is powered up. Even for switch portion, the inverter must be powered OFF before you change.



**WARNING:** In the following examples involving a general-purpose inverter, a large peak current flows on the main power supply side, and is able to destroy the converter module. Where such situations are foreseen or the connected equipment must be highly reliable, install an AC reactor between the power supply and the inverter. Also, where influence of indirect lightning strike is possible, install a lightning conductor.:

...2-5

1. The unbalance factor of the power supply is 3% or higher.
2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
3. Abrupt power supply changes are expected, due to the conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.



**WARNING:** An inverter run by a private power generator may overheat the generator or suffer from a deformed output voltage waveform of the generator. Generally, the generator capacity should be ten times that of the inverter (kVA) in a PWM control system or six times greater in a PAM control system.

...2-6



**CAUTION:** Be sure to install the unit on flame-resistant material such as a steel plate. Otherwise, there is the danger of fire.

...2-7



**CAUTION:** Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.

...2-7



**CAUTION:** Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.

...2-7



**CAUTION:** Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.

...2-7



**CAUTION:** Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel.

...2-7



**CAUTION:** Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.

...2-7



**CAUTION:** Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt damage, etc. Otherwise, there is the danger of fire.

...2-8



**CAUTION:** Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire.












...2-8



**CAUTION:** In the case of important equipment, to shorten the non-operational time of inverter failure, please provide a backup circuit by commercial power supply or spare inverter.

...2-8

## Wiring – Warnings for Electrical Practice and Wire Specifications

-  **WARNING:** “USE 60/75°C Cu wire only” or equivalent. For models WJ200-001L, -002L, -004L, -007L, -015S, -022S, -004H, -007H, -015H, -022H and -030H. ...[2-15](#)
-  **WARNING:** “USE 75°C Cu wire only” or equivalent. For models WJ200-001S, -002S, -004S, -007S, -015L, -022L, -037L, -055L, -075L, -110L, -150L, -037H, -040H, -055H, -075H, -110H and -150H. ...[2-15](#)
-  **WARNING:** “Open Type Equipment.” ...[2-15](#)
-  **WARNING:** “Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 240V maximum when protected by Class J, CC, G or T fuses or circuit breaker having an interrupting rating not less than 100,000 rms symmetrical amperes, 240 volts maximum”. For models with suffix S or L. ...[2-15](#)
-  **WARNING:** “Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 480V maximum when protected by Class J, CC, G or T fuses or circuit breaker having an interrupting rating not less than 100,000 rms symmetrical amperes, 480 volts maximum.” For models with suffix H. ...[2-15](#)
-  **HIGH VOLTAGE:** Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire. ...[2-15](#)
-  **HIGH VOLTAGE:** Wiring work shall be carried out only by qualified personnel. Otherwise, there is a danger of electric shock and/or fire. ...[2-15](#)
-  **HIGH VOLTAGE:** Implement wiring after checking that the power supply is OFF. Otherwise, you may incur electric shock and/or fire. ...[2-15](#)
-  **HIGH VOLTAGE:** Do not connect wiring to an inverter operate an inverter that is not mounted according to the instructions given in this manual. Otherwise, there is a danger of electric shock and/or injury to personnel. ...[2-15](#)
-  **CAUTION:** Power terminal assignment is different compared to old models such as L100, L200 series, etc., Pay attention when wiring the power cable. ...[2-22](#)
-  **WARNING:** Make sure the input power to the inverter is OFF. If the drive has been powered, leave it OFF for ten minutes before continuing. ...[2-23](#)

## Wiring – Cautions for Electrical Practice



**CAUTION:** Fasten the screws with the specified fastening torque in the table ... [2-17](#)  
below. Check for any loosening of screws. Otherwise, there is the danger of fire.



**CAUTION:** Be sure that the input voltage matches the inverter specifications; ... [2-21](#)


- Single phase 200V to 240V 50/60Hz (up to 2.2kW) for SFEF model
- Single/Three phase 200V to 240V 50/60Hz (up to 2.2kW) for NFU model
- Three phase 200V to 240V 50/60Hz (7.5kW) for LFU model
- Three phase 380V to 480V 50/60Hz (up to 7.5kW) for HFx model



**CAUTION:** Be sure not to power a three-phase-only inverter with single phase power. Otherwise, there is the possibility of damage to the inverter and the danger of fire. ... [2-21](#)



**CAUTION:** Be sure not to connect an AC power supply to the output terminals. ... [2-21](#)  
Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire.

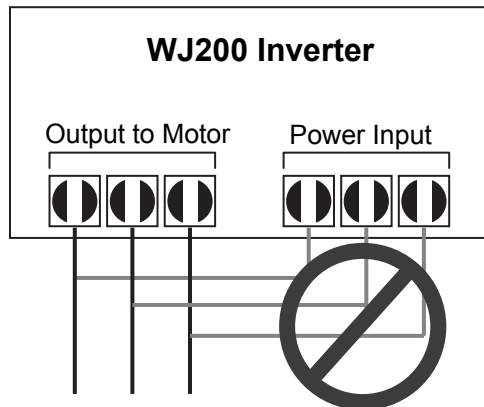



**CAUTION:** Remarks for using ground fault interrupter breakers in the main power supply: Adjustable frequency inverter with integrated CE-filters and shielded (screened) motor cables have a higher leakage current toward earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupters. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current. ... [2-21](#)

Please observe the following:

- Use only short time-invariant and pulse current-sensitive ground fault interrupters with higher trigger current.
- Other components should be secured with separate ground fault interrupters.
- Ground fault interrupters in the power input wiring of an inverter are not an absolute protection against electric shock.



**CAUTION:** Be sure to install a fuse in each phase of the main power supply to the inverter. Otherwise, there is the danger of fire. ... [2-21](#)



**CAUTION:** For motor leads, ground fault interrupter breakers and electromagnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire. ... [2-21](#)

## Powerup Test Caution Messages



**CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned. ... [2-24](#)



**CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, there is the danger of injury. ... [2-24](#)




**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury. ... [2-24](#)  
... [2-31](#)




**CAUTION:** Check the following before and during the Powerup test. Otherwise, there is the danger of equipment damage. ... [2-24](#)

- Is the shorting bar between the [+1] and [+] terminals installed? DO NOT power or operate the inverter if the jumper is removed.
- Is the direction of the motor rotation correct?
- Did the inverter trip during acceleration or deceleration?
- Were the rpm and frequency meter readings as expected?
- Were there any abnormal motor vibration or noise?


## Warnings for Configuring Drive Parameters

-  **WARNING:** When parameter b012, level of electronic thermal setting, is set to motor FLA rating (Full Load Ampere nameplate rating), the inverter provides solid state motor overload protection at 110% of motor FLA or equivalent. If parameter B012 exceeds the motor FLA rating, the motor may overheat and damaged. Parameter B012, level of electronic thermal setting, is a variable parameter. ... [3-48](#)


## Cautions for Configuring Drive Parameters


-  **CAUTION:** Be careful to avoid specifying a braking time that is long enough to cause motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" on page 4-24). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking. ... [3-27](#)





-  **CAUTION:** Do not change Debug mode for safety reasons. Otherwise unexpected performances may occur. ... [3-103](#)


## Warnings for Operations and Monitoring


-  **WARNING:** Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of electric shock. ... [4-3](#)


-  **WARNING:** Be sure not to operate electrical equipment with wet hands. Otherwise, there is the danger of electric shock. ... [4-3](#)







-  **WARNING:** While the inverter is energized, be sure not to touch the inverter terminals even when the motor is stopped. Otherwise, there is the danger of electric shock. ... [4-3](#)

-  **WARNING:** If the retry mode is selected, the motor may suddenly restart after a trip stop. Be sure to stop the inverter before approaching the machine (be sure to design the machine so that safety for personnel is secure even if it restarts.) Otherwise, it may cause injury to personnel. ... [4-3](#)









-  **WARNING:** If the power supply is cut OFF for a short period of time, the inverter may restart operating after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel. ... [4-3](#)

-  **WARNING:** The Stop Key is effective only when the stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel. ... [4-3](#)







-  **WARNING:** During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel. ... [4-3](#)

-  **WARNING:** Be sure not to touch the inside of the energized inverter or to put any conductive object into it. Otherwise, there is a danger of electric shock and/or fire. ... [4-3](#)
-  **WARNING:** If power is turned ON when the Run command is already active, the motor will automatically start and injury may result. Before turning ON the power, confirm that the RUN command is not present. ... [4-3](#)
-  **WARNING:** When the Stop key function is disabled, pressing the Stop key does not stop the inverter, nor will it reset a trip alarm. ... [4-3](#)
-  **WARNING:** Be sure to provide a separate, hard-wired emergency stop switch when the application warrants it. ... [4-3](#)
-  **WARNING:** If the power is turned ON and the Run command is already active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the Run command is not active. ... [4-3](#)
-  **WARNING:** After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active. Be sure to set the alarm reset after verifying that the Run command is OFF to prevent injury to personnel. ... [4-29](#)






## Cautions for Operations and Monitoring

-  **CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned. ... [4-2](#)
-  **CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, it may cause injury to personnel. ... [4-2](#)
-  **CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage. ... [4-2](#)
-  **CAUTION:** It is possible to damage the inverter or other devices if your application exceeds the maximum current or voltage characteristics of a connection point. ... [4-4](#)
-  **CAUTION:** Be sure to turn OFF power to the inverter before changing the short circuit bar position to change SR/SK. Otherwise, damage to the inverter circuitry may occur. ... [4-12](#)
-  **CAUTION:** Be careful not to turn PID clear ON and reset the integrator sum when the inverter is in Run mode (output to motor is ON). Otherwise, this could cause the motor to decelerate rapidly, resulting in a trip. ... [4-32](#)
-  **CAUTION:** The digital outputs (relay and/or open collector) available on the drive must not be considered as safety related signals. The outputs of the external safety relay must be used for integration into a safety related control/command circuit
-  **HIGH VOLTAGE:** Dangerous voltage exists even after the Safe Stop is activated. It does *NOT* mean that the main power has been removed.

## Warnings and Cautions for Troubleshooting and Maintenance


- WARNING:** Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock. ... [6-2](#)
-  **WARNING:** Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel. ... [6-2](#)
-  **WARNING:** Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C.board). Otherwise, there is a danger of fire due to wire breakage and/or injury to personnel. ... [6-2](#)
-  **CAUTION:** Do not connect the megger to any control circuit terminals such as intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter. ... [6-17](#)
-  **CAUTION:** Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground. ... [6-17](#)
-  **HIGH VOLTAGE:** Be careful not to touch wiring or connector terminals when working with the inverters and taking measurements. Be sure to place the measurement circuitry components above in an insulated housing before using them. ... [6-21](#)
-  **WARNING:** Do not rely upon the STO feature to disconnect the power from the motor circuit. It is required isolate the supply before any maintenance is carried out on the motor circuit. See appendix E for detail.

## General Warnings and Cautions

-  **WARNING:** Never modify the unit. Otherwise, there is a danger of electric shock and/or injury.
-  **CAUTION:** Withstand voltage test and insulation resistance tests (HIPOT) are executed before the units are shipped, so there is no need to conduct these tests before operation.
-  **CAUTION:** Do not attach or remove wiring or connectors when power is applied. Also, do not check signals during operation.
-  **CAUTION:** Be sure to connect the grounding terminal to earth ground.
-  **CAUTION:** When inspecting the unit, be sure to wait ten minutes after turning OFF the power supply before opening the cover.




**CAUTION:** Do not stop operation by switching OFF electromagnetic contactors on the primary or secondary side of the inverter.

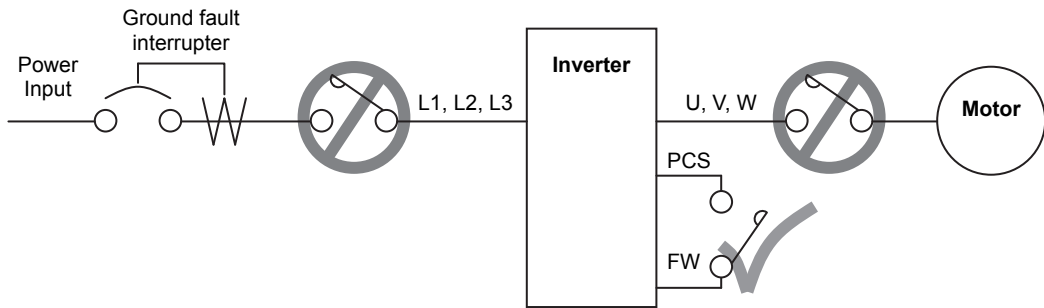

When there has been a sudden power failure while an operation instruction is active, then the unit may restart operation automatically after the power failure has ended. If there is a possibility that such an occurrence may harm humans, then install an electromagnetic contactor (Mgo) on the power supply side, so that the circuit does not allow automatic restarting after the power supply recovers. If the optional remote operator is used and the retry function has been selected, this will also cause automatic restarting when a Run command is active. So, please be careful.



**CAUTION:** Do not insert leading power factor capacitors or surge absorbers between the output terminals of the inverter and motor.

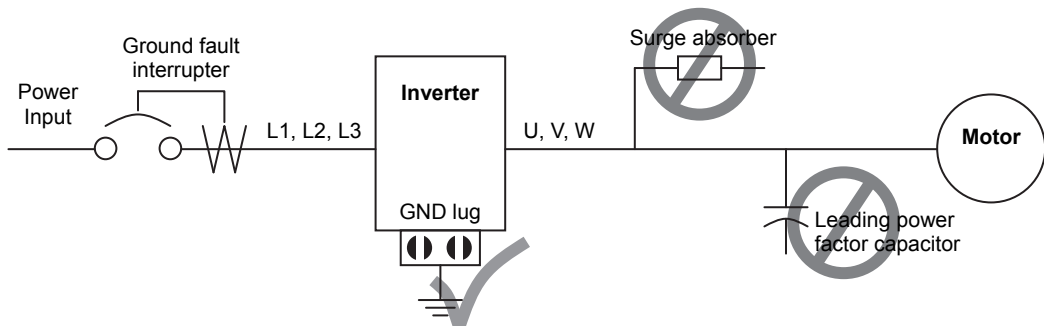

When there has been a sudden power failure while an operation instruction is active, then the unit may restart operation automatically after the power failure has ended. If there is a possibility that such an occurrence may harm humans, then install an electromagnetic contactor (Mgo) on the power supply side, so that the circuit does not allow automatic restarting after the power supply recovers. If the optional remote operator is used and the retry function has been selected, this will also cause automatic restarting when a Run command is active. So, please be careful.



**CAUTION: MOTOR TERMINAL SURGE VOLTAGE SUPPRESSION FILTER**  
(For the 400V CLASS)

In a system using an inverter with the voltage control PWM system, a voltage surge caused by the cable constants such as the cable length (especially when the distance between the motor and the inverter is 10m or more) and cabling method may occur at the motor terminals. A dedicated filter of the 400V class for suppressing this voltage surge is available. Be sure to install a filter in this situation.





### CAUTION: EFFECTS OF POWER DISTRIBUTION SYSTEM ON INVERTER

In the case below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

1. The unbalance factor of the power supply is 3% or higher.
2. the power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
3. Abrupt power supply changes are expected, due to conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.

Where these conditions exist or when the connected equipment must be highly reliable, you **MUST** install an input side AC-reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightning strike are possible, install a lightning conductor.




### CAUTION: SUPPRESSION FOR NOISE INTERFERENCE FROM INVERTER

The inverter uses many semiconductor switching elements such as transistors and IGBTs. Thus, a radio receiver or measuring instrument located near the inverter is susceptible to noise interference.

To protect the instruments from erroneous operation due to noise interference, they should be used well away from the inverter. It is also effective to shield the whole inverter structure.

The addition of an EMI filter on the input side of the inverter also reduces the effect of noise from the commercial power line on external devices.

Note that the external dispersion of noise from the power line can be minimized by connecting an EMI filter on the primary side of the inverter.

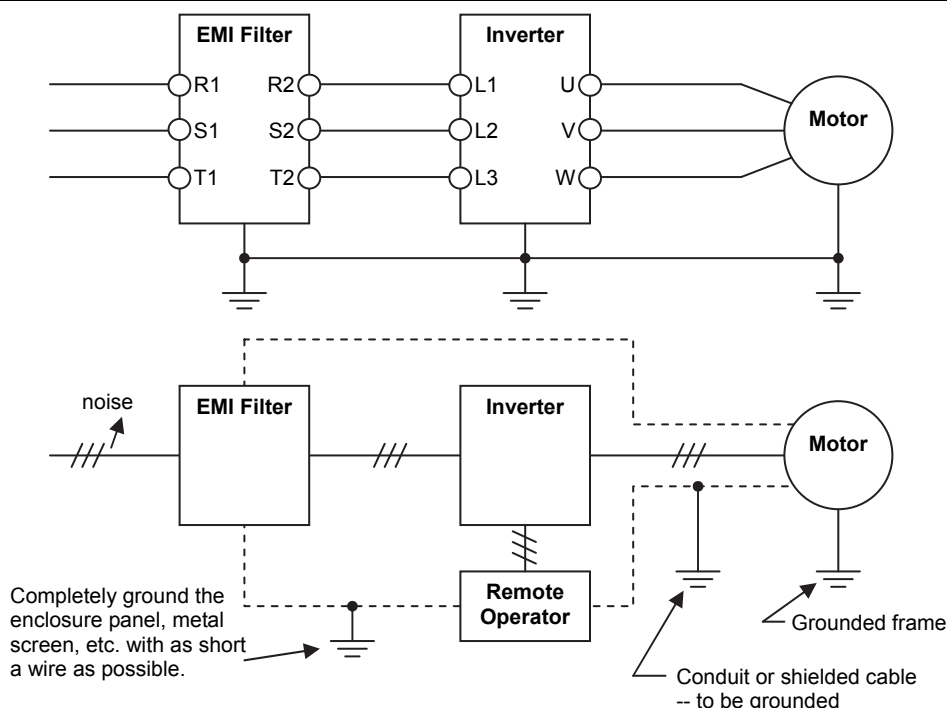

**CAUTION:** When the EEPROM error E08 occurs, be sure to confirm the setting values again.



**CAUTION:** When using normally closed active state settings (C011 to C017) for externally commanded Forward or Reverse terminals [FW] or [RV], the inverter may start automatically when the external system is powered OFF or disconnected from the inverter! So do not use normally closed active state settings for Forward or Reverse terminals [FW] or [RV] unless your system design protects against unintended motor operation.



**CAUTION:** In all the instrumentations in this manual, covers and safety devices are occasionally removed to describe the details. While operating the product, make sure that the covers and safety devices are placed as they were specified originally and operate it according to the instruction manual.



**CAUTION:** Do not discard the inverter with household waste. Contact an industrial waste management company in your area who can treat industrial waste without polluting the environment.



## UL® Cautions, Warnings and Instructions

### Warnings and Cautions for Troubleshooting and Maintenance

The warnings and instructions in this section summarizes the procedures necessary to ensure an inverter installation complies with Underwriters Laboratories® guidelines.



**WARNING:** Use 60/75°C Cu wire only. (for models: WJ200-001L, -002L, -004L, -007L, -015S, -022S, -004H, -007H, -015H, -022H and -030H)



**WARNING:** Use 75°C Cu wire only. (for models: WJ200-001S, -002S, -004S, -007S, -015L, -022L, -037L, -055L, -075L, -110L, -150L, -040H, -055H, -075H, -110H and -150H)



**WARNING:** Suitable for use on a circuit capable of delivering not more than 100,000 rms Symmetrical Amperes, 240 or 480V maximum.



**WARNING:** When protected by CC, G, J, or R class Fuses, or when Protected By A Circuit Breaker Having An Interrupting Rating Not Less Than 100,000 rms Symmetrical Amperes, 240 or 480 Volts Maximum.



**WARNING:** Install device in pollution degree 2 environment.



**WARNING:** Maximum Surrounding Air Temperature 50°C



**WARNING:** Solid state motor overload protection is provided in each model



**WARNING:** Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electric Code and any additional local codes



**WARNING:** Motor over temperature protection is not provided by the drive.

## Terminal symbols and Screw size

Inverter Model	Screw Size	Required Torque (N·m)	Wire range
WJ200-001S WJ200-002S WJ200-004S	M3.5	1.0	AWG16 (1.3mm <sup>2</sup> )
WJ200-007S	M4	1.4	AWG12 (3.3mm <sup>2</sup> )
WJ200-015S WJ200-022S	M4	1.4	AWG10 (5.3mm <sup>2</sup> )
WJ200-001L WJ200-002L WJ200-004L WJ200-007L	M3.5	1.0	AWG16 (1.3mm <sup>2</sup> )
WJ200-015L	M4	1.4	AWG14 (2.1mm <sup>2</sup> )
WJ200-022L	M4	1.4	AWG12 (3.3mm <sup>2</sup> )
WJ200-037L	M4	1.4	AWG10 (5.3mm <sup>2</sup> )
WJ200-055L WJ200-075L	M5	3.0	AWG6 (13mm <sup>2</sup> )
WJ200-110L	M6	5.9 to 8.8	AWG4 (21mm <sup>2</sup> )
WJ200-150L	M8	5.9 to 8.8	AWG2 (34mm <sup>2</sup> )
WJ200-004H WJ200-007H WJ200-015H	M4	1.4	AWG16 (1.3mm <sup>2</sup> )
WJ200-022H WJ200-030H	M4	1.4	AWG14 (2.1mm <sup>2</sup> )
WJ200-040H	M4	1.4	AWG12 (3.3mm <sup>2</sup> )
WJ200-055H WJ200-075H	M5	3.0	AWG10 (5.3mm <sup>2</sup> )
WJ200-110H WJ200-150H	M6	5.9 to 8.8	AWG6 (13mm <sup>2</sup> )

**Circuit Breaker and Fuse Sizes**

CONSTRUCTION DETAILS:(CONT'D)

Distribution fuse and circuit breaker size marking is included in the manual to indicate that the unit shall be connected with a Listed Cartridge Nonrenewable fuse or Inverse time circuit breaker, rated 600 Vac with the current ratings as shown in the table below or Type E Combination Motor Controller marking is included in the manual to indicate that the unit shall be connected with,LS Industrial System Co.,Ltd,Type E Combination Motor Controller MMS Series with the ratings as shown in the table below:

Model No.	Fuse		Inverse Time Circuit Breaker	Type E CMC
	Type	Rating(Maximum A)	Rating (Maximum A)	
WJ200-001S	Class J	10 A, AIC 200 kA	30A	MMS-32H, 240V,40A
WJ200-002S	Class J	10 A, AIC 200 kA		
WJ200-004S	Class J	10 A, AIC 200 kA		
WJ200-007S	Class J	20 A, AIC 200 kA		
WJ200-015S	Class J	30 A, AIC 200 kA		
WJ200-022S	Class J	30 A, AIC 200 kA		
WJ200-001L	Class J	10 A, AIC 200 kA	30A	MMS-32H, 240V,40A
WJ200-002L	Class J	10 A, AIC 200 kA		
WJ200-004L	Class J	10 A, AIC 200 kA		
WJ200-007L	Class J	15 A, AIC 200 kA		
WJ200-015L	Class J	15 A, AIC 200 kA		
WJ200-022L	Class J	20 A, AIC 200 kA		
WJ200-037L	Class J	30 A, AIC 200 kA	100A	MMS-100H, 240V,80A
WJ200-055L	Class J	60 A, AIC 200 kA		
WJ200-075L	Class J	60 A, AIC 200 kA		
WJ200-110L	Class J	80 A, AIC 200 kA		
WJ200-150L	Class J	80 A, AIC 200 kA	20A	MMS-32H, 480V,40A or MMS-63H, 480V,52A
WJ200-004H	Class J	10 A, AIC 200 kA		
WJ200-007H	Class J	10 A, AIC 200 kA		
WJ200-015H	Class J	10 A, AIC 200 kA		
WJ200-022H	Class J	10 A, AIC 200 kA		
WJ200-030H	Class J	15 A, AIC 200 kA		
WJ200-040H	Class J	15 A, AIC 200 kA		
WJ200-055H	Class J	30 A, AIC 200 kA		
WJ200-075H	Class J	30 A, AIC 200 kA		
WJ200-110H	Class J	50 A, AIC 200 kA		
WJ200-150H	Class J	50 A, AIC 200 kA	40A	

# Table of Contents

---

## **Safety Messages**

Hazardous High Voltage.....	i
General Precautions – Read These First!.....	ii
Index to Warnings and Cautions in This Manual.....	iv
General Warnings and Cautions.....	x
UL Cautions, Warnings and Instructions.....	xiii
Circuit Breaker and Fuse Sizes.....	xv

## **Table of Contents**

Revisions.....	xix
Contact Information.....	xx

## **Chapter 1: Getting Started**

Introduction.....	1-2
WJ200 Inverter Specifications.....	1-4
Introduction to Variable-Frequency Drives.....	1-18
Frequently Asked Questions.....	1-23

## **Chapter 2: Inverter Mounting and Installation**

Orientation to Inverter Features.....	2-2
Basic System Description.....	2-4
Step-by-Step Basic Installation.....	2-6
Powerup Test.....	2-23
Using the Front Panel Keypad.....	2-25

## **Chapter 3: Configuring Drive Parameters**

Choosing a Programmable Device.....	3-2
Using the Keypad Devices.....	3-3
“D” Group: Monitoring Functions.....	3-7
“F” Group: Main Profile Parameters.....	3-11
“A” Group: Standard Functions.....	3-12
“B” Group: Fine Tuning Functions.....	3-44
“C” Group: Intelligent Terminal Functions.....	3-83
“H” Group: Motor Constants Functions.....	3-104
: Sensorless Vector Control.....	3-107
: Auto-tuning Function.....	3-108
“P” Group: Other Parameters.....	3-111
: Simple Positioning.....	3-114

## **Chapter 4: Operations and Monitoring**

Introduction.....	4-2
Connecting to PLCs and Other Devices.....	4-4
Control Logic Signal Specifications.....	4-6
Intelligent Terminal Listing.....	4-10
Using Intelligent Input Terminals.....	4-12
Using Intelligent Output Terminals.....	4-51
Analog Input Operation.....	4-87

---

Pulse Train Input Operation .....	4-89
Analog Output Operation .....	4-90
<b>Chapter 5: Inverter System Accessories</b>	
Introduction .....	5-2
Component Description .....	5-3
<b>Chapter 6: Troubleshooting and Maintenance</b>	
Troubleshooting .....	6-2
Monitoring Trip Events, History, & Conditions .....	6-9
Restoring Factory Default Settings .....	6-15
Maintenance and Inspection .....	6-16
Warranty .....	6-23
<b>Appendix A: Glossary and Bibliography</b>	
Glossary .....	A-2
Bibliography .....	A-8
<b>Appendix B: Modbus Network Communications</b>	
Introduction .....	B-2
Connecting the Inverter to Modbus .....	B-3
Network Protocol Reference .....	B-5
Modbus Data Listing .....	B-24
<b>Appendix C: Drive parameter Setting Tables</b>	
Introduction .....	C-2
Parameter Settings for Keypad Entry .....	C-2
<b>Appendix D: EMC installation Guidelines</b>	
CE-EMC Installation Guidelines .....	D-2
Hitachi EMC Recommendations .....	D-6
<b>Appendix E: Safety (ISO13849-1)</b>	
Introduction .....	E-2
Stop Category defined in EN60204-1 .....	E-2
How it works .....	E-2
Activation .....	E-3
Installation .....	E-3
Wiring example .....	E-4
Components to be combined .....	E-6
Periodical check(proof test) .....	E-6
Warning and Precautions .....	E-7
EC DECLARATION OF CONFORMITY(Copy) .....	E-8
<b>Additional function For Version 2</b>	
PM Motor Drive .....	Ver.2-2
Dynamic Braking related functions .....	Ver.2-15
Data Read/Write selection .....	Ver.2-16
Inverter mode selection .....	Ver.2-16
Thermal detection system Error .....	Ver.2-17
Modbus Data Listing .....	Ver.2-18
Drive Parameter Setting Tables .....	Ver.2-48

### Additional function For Version 3

Inverter mode selection .....	Ver.3-2
Operation condition of speed detection .....	Ver.3-3
"Position feedback monitor (d030)" enabling at "simple positioning"-off.....	Ver.3-3
Frequency source monitor .....	Ver.3-3
Run source monitor .....	Ver.3-3
LAD cancel by setting ACC/DEC .....	Ver.3-4
Analog input O/OI monitor(always active) .....	Ver.3-4
Pulse train input monitor (always active).....	Ver.3-4
PID deviation monitor .....	Ver.3-5
PID output monitor .....	Ver.3-5
Over-current Trip Suppression: b027-.....	Ver.3-6
Output frequency range from 0.01Hz to 400Hz.....	Ver.3-7
Support of multiple pole 3 Phase Induction motors(Up to 48 pole motor).....	Ver.3-7
Creep pulse ratio(simple positioning).....	Ver.3-8
Frequency reference by pulse train input .....	Ver.3-10
Restarting simple positioning .....	Ver.3-11
Simple positioning & Brake control co-operation .....	Ver.3-14
Simple positioning(current position store at shut down).....	Ver.3-16
Simple positioning(preset function by PSET terminal) .....	Ver.3-16
Electronic thermal improve .....	Ver.3-17
IRDY old/new spec. selection .....	Ver.3-21
Initial value change of the PM motor control relations parameter.....	Ver.3-22
Modbus Mapping function.....	Ver.3-23
Holding register big endian · Little endian select.....	Ver.3-64
Electronic Thermal detection system Error.....	Ver.3-85
Modbus Data Listing .....	Ver.3-86
Drive Parameter Setting Tables .....	Ver.3-120

### Additional function For Version 3.1

Improvement of the reaction time of overload output signal.....	Ver.3.1-2
Improvement of speed detection with single-phase encoder.....	Ver.3.1-3
Addition of special monitor display and error .....	Ver.3.1-4
Special monitor display (-S-, -F**) ancellation .....	Ver.3.1-7
Increase of upper limit up of BRD Activation Level.....	Ver.3.1-7

### Additional function For Version 3.2

Additional output signal [GSS].....	Ver.3.2-2
-------------------------------------	-----------

### Index

A,B,C.....	2
D,E,F,G,H .....	3
I,J,K,L,M, .....	4
N,O,P .....	5
Q,R,S.....	6
T,U,V,W,X,Y,Z .....	7

## Revisions

**Revision History Table**

No.	Revision Comments	Date of Issue	Operation Manual No.
1	Initial release of manual NT325X.	2010/05	NT325X
2	Description was reviewed.	2012/03	NT325A
3	Section Ver.3.0 was added. I want to add functionality d062,d063,d130,d131,d133,d153,d155, F002,F202,F003,F203 A092,A292,A093,A293, b027,b083,b089,b120,b910~b913, C001~C007,C142,C143,C145,C146,C148,C149, C900,P014,P017,P059,P080,P081,P082,P083	2014/10	NT325CX
4	Section Ver.3.1 was added. I want to add functionality and Error Code. b096, b145~b148, C001~C007, C901~C903, P900, P901 E98 and E98 (※ The Ver3.1 is not available for Japan.)  Section Ver.3.2 was added. I want to add functionality C021,C022,C026	2018/02	NT325DX



**Contact Information**

Hitachi America, Ltd.  
Power and Industrial Division  
50 Prospect Avenue  
Tarrytown, NY 10591  
U.S.A.  
Phone: +1-914-631-0600  
Fax: +1-914-631-3672

Hitachi Australia Ltd.  
Level 3, 82 Waterloo Road  
North Ryde, N.S.W. 2113  
Australia  
Phone: +61-2-9888-4100  
Fax: +61-2-9888-4188

Hitachi Europe GmbH  
Niederkasseler Lohweg 191  
40547 Dusseldorf  
Germany  
Phone: +49-211-5283-0  
Fax: +49-211-5283-649

Hitachi Industrial Equipment Systems Co., Ltd.  
AKS Building, 3, kanda Neribeicho  
Chiyoda-ku, Tokyo, 101-0022  
Japan  
Phone: +81-3-4345-6910  
Fax: +81-3-4345-6067

Hitachi Asia Ltd.  
Industrial Components & Equipment  
Division  
No.30 Pioneer Crescent #10-15,  
West Park Bizcentral,  
Singapore 628560  
Phone: +65-6305-7400  
Fax: +65-6305-7401

Hitachi Industrial Equipment Systems Co., Ltd.  
Narashino Division  
1-1, Higashi-Narashino 7-chome  
Narashino-shi, Chiba 275-8611  
Japan  
Phone: +81-47-474-9921  
Fax: +81-47-476-9517

Hitachi Asia (Hong Kong) Ltd.  
7th Floor, North Tower  
World Finance Centre, Harbour City  
Canton Road, Tsimshatsui, Kowloon  
Hong Kong  
Phone: +852-2735-9218  
Fax: +852-2735-6793



---

**NOTE:** To receive technical support for the Hitachi inverter you purchased, contact the Hitachi inverter dealer from whom you purchased the unit, or the sales office or factory contact listed above. Please be prepared to provide the following inverter nameplate information:

1. Model
2. Date of purchase
3. Manufacturing number (MFG No.)
4. Symptoms of any inverter problem

If any inverter nameplate information is illegible, please provide your Hitachi contact with any other legible nameplate items. To reduce unpredictable downtime, we recommend that you stock a spare inverter.

---

---

# Getting Started



# 1

---

<b>In This Chapter...</b>	<b>page</b>
- <b>Introduction</b> .....	<b>2</b>
- <b>WJ200 Inverter Specifications</b> .....	<b>4</b>
- <b>Introduction to Variable-Frequency Drives</b> .....	<b>18</b>
- <b>Frequently Asked Questions</b> .....	<b>23</b>

---

---

# Introduction

## Main Features

Congratulation on your purchase of an WJ200 Series Hitachi inverter! This inverter drive features state-of-the-art circuitry and components to provide high performance. The housing footprint is exceptionally small, given the size of the corresponding motor. The Hitachi WJ200 product line includes more than a dozen inverter models to cover motor sizes from 1/8 horsepower to 20 horsepower, in either 240VAC or 480VAC power input versions.

The main features are:

- 200V and 400V class, 0.1 to 15kW inverters having dual rating
- US or EU versions available
- EzSQ (simple programming function) integrated
- Built-in RS485 MODBUS RTU as standard, other FieldBus optional
- New current suppressing function
- Sixteen programmable speed levels
- PID control adjusts motor speed automatically to maintain a process variable value
- Password protection to avoid unexpected parameter change
- Functional safety function to achieve STO (Safe Torque Off) in the safety level of ISO13849-1 cat.3 PL=d and IEC61508 SIL2.

The design in Hitachi inverters overcomes many of the traditional trade-offs between speed, torque and efficiency. The performance characteristics are:

- High starting torque of 200% at 0.5Hz
- Continuous operation at 100% torque within a 1:10 speed range (6/60Hz / 5/50Hz) without motor derating.
- Fan has ON/OFF selection to provide longer life for cooling fan.

A full line of accessories from Hitachi is available to complete your motor application:

- Integrated USB port for PC communication
  - Digital remote operator keypad
  - Integrated brake chopper
  - EMC filter (footprint type C1) optional
-



# WJ200 Inverter Specifications

## Model-specific tables for 200V and 400V class inverters

The following tables are specific to WJ200 inverters for the 200V and 400V class model groups. Note that “General Specifications” on page in this chapter apply to both voltage class groups. Footnotes for all specification tables follow the table below.

Item			Single-phase 200V class Specifications					
WJ200 inverters, 200V models			001SF	002SF	004SF	007SF	015SF	022SF
Applicable motor size *2	kW	VT	0.2	0.4	0.55	1.1	2.2	3.0
		CT	0.1	0.2	0.4	0.75	1.5	2.2
	HP	VT	1/4	1/2	3/4	1.5	3	4
		CT	1/8	1/4	1/2	1	2	3
Rated capacity (kVA)	200V	VT	0.4	0.6	1.2	2.0	3.3	4.1
		CT	0.2	0.5	1.0	1.7	2.7	3.8
	240V	VT	0.4	0.7	1.4	2.4	3.9	4.9
		CT	0.3	0.6	1.2	2.0	3.3	4.5
Rated input voltage			Single-phase: 200V-15% to 240V +10%, 50/60Hz $\pm$ 5%					
Rated output voltage *3			3-phase: 200 to 240V (proportional to input voltage)					
Rated output current (A)	VT		1.2	1.9	3.5	6.0	9.6	12.0
	CT		1.0	1.6	3.0	5.0	8.0	11.0
Starting torque *6			200% at 0.5Hz					
Braking	Without resistor		100%: $\leq$ 50Hz 50%: $\leq$ 60Hz				70%: $\leq$ 50Hz 50%: $\leq$ 60Hz	20%: $\leq$ 50Hz 20%: $\leq$ 60Hz
	With resistor		150%					100%
DC braking			Variable operating frequency, time, and braking force					
Cooling method			Self-cooling				Force ventilation	
Weight	kg		1.0	1.0	1.1	1.6	1.8	1.8
	lb		2.2	2.2	2.4	3.1	4.0	4.0

Footnotes for the preceding table and the tables that follow:

- Note1:** The protection method conforms to JIS C 0920 (IEC60529).
- Note2:** The applicable motor refers to Hitachi standard 3-phase motor (4p). When using other motors, care must be taken to prevent the rated motor current (50/60Hz) from exceeding the rated output current of the inverter.
- Note3:** The output voltage decreases as the main supply voltage decreases (except when using the AVR function). In any case, the output voltage cannot exceed the input power supply voltage.
- Note4:** To operate the motor beyond 50/60Hz, consult the motor manufacturer for the maximum allowable rotation speed.
- Note5:** For achieving approved input voltage rating categories:
- 460 to 480VAC – Over-voltage category 2
  - 380 to 460VAC – Over-voltage category 3
- To meet the Over-voltage category 3, insert an EN or IEC standard compliant isolation transformer that is earth grounded and star connected (for Low Voltage Directive).
- Note6:** At the rated voltage when using a Hitachi standard 3-phase, 4-pole motor.
- Note7:** The braking torque via capacitive feedback is the average deceleration torque at the shortest deceleration (stopping from 50/60Hz as indicated). It is not continuous regenerative braking torque. The average deceleration torque varies with motor loss. This value decreases when operating beyond 50Hz. If a large regenerative torque is required, the optional regenerative braking unit and a resistor should be used.
- Note8:** The frequency command is the maximum frequency at 9.8V for input voltage 0 to 10VDC, or at 19.6mA for input current 4 to 20mA. If this characteristic is not satisfactory for your application, contact your Hitachi representative.
- Note9:** If the inverter is operated outside the region shown in the graph in the derating curve, the inverter may be damaged or its service life may be shortened. Set **b083** Carrier Frequency Adjustment in accordance with the expected output current level. See derating curve section for the detailed information of the inverter operating range.
- Note10:** The storage temperature refers to the short-term temperature during transportation.
- Note11:** Conforms to the test method specified in JIS JIS C 60068-2-6 :2010(IEC 60068-2-6:2007). For the model types excluded in the standard specifications, contact your Hitachi sales representative.
- Note12:** Watt losses are calculated values based on specification of main semi-conductors. You must take suitable margin when designing cabinet based on these values. Otherwise there is a possibility of heating trouble.

## WJ200 Inverter Specifications, continued...

Item			Three-phase 200V class Specifications					
WJ200 inverters, 200V models			001LF	002LF	004LF	007LF	015LF	022LF
Applicable motor size *2	kW	VT	0.2	0.4	0.75	1.1	2.2	3.0
		CT	0.1	0.2	0.4	0.75	1.5	2.2
	HP	VT	1/4	1/2	1	1.5	3	4
		CT	1/8	1/4	1/2	1	2	3
Rated capacity (kVA)	200V	VT	0.4	0.6	1.2	2.0	3.3	4.1
		CT	0.2	0.5	1.0	1.7	2.7	3.8
	240V	VT	0.4	0.7	1.4	2.4	3.9	4.9
		CT	0.3	0.6	1.2	2.0	3.3	4.5
Rated input voltage			Three-phase: 200V-15% to 240V +10%, 50/60Hz ±5%					
Rated output voltage *3			Three-phase: 200 to 240V (proportional to input voltage)					
Rated output current (A)		VT	1.2	1.9	3.5	6.0	9.6	12.0
		CT	1.0	1.6	3.0	5.0	8.0	11.0
Starting torque *6			200% at 0.5Hz					
Braking	Without resistor		100%: ≤ 50Hz				70%: ≤ 50Hz	20%: ≤ 50Hz
	With resistor		50%: ≤ 60Hz				50%: ≤ 60Hz	20%: ≤ 60Hz
DC braking			150%					
DC braking			Variable operating frequency, time, and braking force					
Cooling method			Self-cooling			Force ventilation		
Weight		kg	1.0	1.0	1.1	1.2	1.6	1.8
		lb	2.2	2.2	2.4	2.6	3.5	4.0

Item			Three-phase 200V class Specifications					
WJ200 inverters, 200V models			037LF	055LF	075LF	110LF	150LF	
Applicable motor size *2	kW	VT	5.5	7.5	11	15	18.5	
		CT	3.7	5.5	7.5	11	15	
	HP	VT	7.5	10	15	20	25	
		CT	5	7.5	10	15	20	
Rated capacity (kVA)	200V	VT	6.7	10.3	13.8	19.3	20.7	
		CT	6.0	8.6	11.4	16.2	20.7	
	240V	VT	8.1	12.4	16.6	23.2	24.9	
		CT	7.2	10.3	13.7	19.5	24.9	
Rated input voltage			Three-phase: 200V-15% to 240V +10%, 50/60Hz ±5%					
Rated output voltage *3			Three-phase: 200 to 240V (proportional to input voltage)					
Rated output current (A)		VT	19.6	30.0	40.0	56.0	69.0	
		CT	17.5	25.0	33.0	47.0	60.0	
Starting torque *6			200% at 0.5Hz					
Braking	Without resistor		20%: ≤ 50Hz					
	With resistor		20%: ≤ 60Hz					
DC braking			100%	80%				
DC braking			Variable operating frequency, time, and braking force					
Cooling method			Force ventilation					
Weight		Kg	2.0	3.3	3.4	5.1	7.4	
		lb	4.4	7.3	7.5	11.2	16.3	

## WJ200 Inverter Specifications, continued...

Item			Three-phase 400V class Specifications					
WJ200 inverters, 400V models			004HF	007HF	015HF	022HF	030HF	040HF
Applicable motor size *2	kW	VT	0.75	1.5	2.2	3.0	4.0	5.5
		CT	0.4	0.75	1.5	2.2	3.0	4.0
	HP	VT	1	2	3	4	5	7.5
		CT	1/2	1	2	3	4	5
Rated capacity (kVA)	380V	VT	1.3	2.6	3.5	4.5	5.7	7.3
		CT	1.1	2.2	3.1	3.6	4.7	6.0
	480V	VT	1.7	3.4	4.4	5.7	7.3	9.2
		CT	1.4	2.8	3.9	4.5	5.9	7.6
Rated input voltage			Three-phase: 380V-15% to 480V +10%, 50/60Hz ±5%					
Rated output voltage *3			Three-phase: 380 to 480V (proportional to input voltage)					
Rated output current (A)		VT	2.1	4.1	5.4	6.9	8.8	11.1
		CT	1.8	3.4	4.8	5.5	7.2	9.2
Starting torque *6			200% at 0.5Hz					
Braking	Without resistor		100%: ≤ 50Hz 50%: ≤ 60Hz			70%: ≤ 50Hz 20%: ≤ 60Hz	20%: ≤ 50Hz 20%: ≤ 60Hz	
	With resistor		150%			100%		
DC braking			Variable operating frequency, time, and braking force					
Cooling method			Self-cooling			Force ventilation		
Weight		kg	1.5	1.6	1.8	1.9	1.9	2.1
		lb	3.3	3.5	4.0	4.2	4.2	4.6

Item			Three-phase 400V class Specifications					
WJ200 inverters, 400V models			055HF	075HF	110HF	150HF		
Applicable motor size *2	kW	VT	7.5	11	15	18.5		
		CT	5.5	7.5	11	15		
	HP	VT	10	15	20	25		
		CT	7.5	10	15	20		
Rated capacity (kVA)	380V	VT	11.5	15.1	20.4	25.0		
		CT	9.7	11.8	15.7	20.4		
	480V	VT	14.5	19.1	25.7	31.5		
		CT	12.3	14.9	19.9	25.7		
Rated input voltage			Three-phase: 380V-15% to 480V +10%, 50/60Hz ±5%					
Rated output voltage *3			Three-phase: 380 to 480V (proportional to input voltage)					
Rated output current (A)		VT	17.5	23.0	31.0	38.0		
		CT	14.8	18.0	24.0	31.0		
Starting torque *6			200% at 0.5Hz					
Braking	Without resistor		20%: ≤ 50Hz 20%: ≤ 60Hz					
	With resistor		80%					
DC braking			Variable operating frequency, time, and braking force					
Cooling method			Force ventilation					
Weight		kg	3.5	3.5	4.7	5.2		
		lb	7.7	7.7	10.4	11.5		



## General Specifications

The following table applies to all WJ200 inverters.

Item		General Specifications	
Protective housing *1		IP20	
Control method		Sinusoidal Pulse Width Modulation (PWM) control	
Carrier frequency		2kHz to 15kHz (derating required depending on the model)	
Output frequency range *4		0.1 to 400Hz	
Frequency accuracy		Digital command: $\pm 0.01\%$ of the maximum frequency Analog command: $\pm 0.2\%$ of the maximum frequency ( $25^{\circ}\text{C} \pm 10^{\circ}\text{C}$ )	
Frequency setting resolution		Digital: 0.01Hz; Analog: max. frequency/1000	
Volt./Freq. characteristic		V/f control (constant torque, reduced torque, free-V/F): base freq. 30Hz~400Hz adjustable, Sensorless vector control, Closed loop control with motor encoder feedback	
Overload capacity		Dual rating: CT(Heavy duty) : 60 sec. @150% VT(Normal duty) : 60 sec. @120%	
Acceleration/deceleration time		0.01 to 3600 seconds, linear and S-curve accel/decel, second accel/decel setting available	
Starting torque		200% @0.5Hz (sensorless vector control)	
Input signal	Freq. setting	Operator panel	Up and Down keys / Value settings
		External signal *8	0 to 10 VDC (input impedance 10k Ohms), 4 to 20mA (input impedance 100 Ohms), Potentiometer (1k to 2k Ohms, 2W)
		Via network	RS485 ModBus RTU, other network option
	FWD/REV run	Operator panel	Run/Stop (Forward/Reverse run change by command)
		External signal	Forward run/stop, Reverse run/stop
		Via network	RS485 ModBus RTU, other network option
Intelligent input terminal		<b>FW</b> (forward run command), <b>RV</b> (reverse run command), <b>CF1~CF4</b> (multi-stage speed setting), <b>JG</b> (jog command), <b>DB</b> (external braking), <b>SET</b> (set second motor), <b>2CH</b> (2-stage accel./decel. command), <b>FRS</b> (free run stop command), <b>EXT</b> (external trip), <b>USP</b> (startup function), <b>CS</b> (commercial power switchover), <b>SFT</b> (soft lock), <b>AT</b> (analog input selection), <b>RS</b> (reset), <b>PTC</b> (thermistor thermal protection), <b>STA</b> (start), <b>STP</b> (stop), <b>F/R</b> (forward/reverse), <b>PID</b> (PID disable), <b>PIDC</b> (PID reset), <b>UP</b> (remote control up function), <b>DWN</b> (remote control down function), <b>UDC</b> (remote control data clear), <b>OPE</b> (operator control), <b>SF1~SF7</b> (multi-stage speed setting; bit operation), <b>OLR</b> (overload restriction), <b>TL</b> (torque limit enable), <b>TRQ1</b> (torque limit changeover1), <b>TRQ2</b> (torque limit changeover2), <b>BOK</b> (Braking confirmation), <b>LAC</b> (LAD cancellation), <b>PCLR</b> (position deviation clear), <b>ADD</b> (add frequency enable), <b>F-TM</b> (force terminal mode), <b>ATR</b> (permission of torque command input), <b>KHC</b> (Cumulative power clear), <b>MI1~MI7</b> (general purpose inputs for EzSQ), <b>AHD</b> (analog command hold), <b>CP1~CP3</b> (multistage-position switches), <b>ORL</b> (limit signal of zero-return), <b>ORC</b> (trigger signal of zero-return), <b>SPD</b> (speed/position changeover), <b>GS1,GS2</b> (STO inputs, safety related signals), <b>485</b> (Starting communication signal), <b>PRG</b> (executing EzSQ program), <b>HLD</b> (retain output frequency), <b>ROK</b> (permission of run command), <b>EB</b> (rotation direction detection of B-phase), <b>DISP</b> (display limitation), <b>NO</b> (no function)	
Seven terminals, sink/source changeable by a short bar			
68 functions assignable			

Item		General Specifications
Output signal	Intelligent output terminal 48 functions assignable	<b>RUN</b> (run signal), <b>FA1~FA5</b> (frequency arrival signal), <b>OL,OL2</b> (overload advance notice signal), <b>OD</b> (PID deviation error signal), <b>AL</b> (alarm signal), <b>OTQ</b> (over/under torque threshold), <b>UV</b> (under-voltage), <b>TRQ</b> (torque limit signal), <b>RNT</b> (run time expired), <b>ONT</b> (power ON time expired), <b>THM</b> (thermal warning), <b>BRK</b> (brake release), <b>BER</b> (brake error), <b>ZS</b> (0Hz detection), <b>DSE</b> (speed deviation excessive), <b>POK</b> (positioning completion), <b>ODc</b> (analog voltage input disconnection), <b>OIDc</b> (analog current input disconnection), <b>FBV</b> (PID second stage output), <b>NDc</b> (network disconnect detection), <b>LOG1~LOG3</b> (Logic output signals), <b>WAC</b> (capacitor life warning), <b>WAF</b> (cooling fan warning), <b>FR</b> (starting contact), <b>OHF</b> (heat sink overheat warning), <b>LOC</b> (Low load), <b>MO1~MO3</b> (general outputs for EzSQ), <b>IRDY</b> (inverter ready), <b>FWR</b> (forward operation), <b>RVR</b> (reverse operation), <b>MJA</b> (major failure), <b>WCO</b> (window comparator O), <b>WCOI</b> (window comparator OI), <b>FREF</b> (frequency command source), <b>REF</b> (run command source), <b>SETM</b> (second motor in operation), <b>EDM</b> (STO (safe torque off) performance monitor), <b>OP</b> (option control signal), <b>NO</b> (no function)
	Monitor output (analog)	Output freq., output current, output torque, output voltage, input power, thermal load ratio, LAD freq., heat sink temperature, general output (EzSQ)
	Pulse train output (0~10Vdc, 32kHz max.)	<b>[PWM output]</b> Output freq., output current, output torque, output voltage, input power, thermal load ratio, LAD freq., heat sink temperature, general output (EzSQ) <b>[Pulse train output]</b> Output frequency, output current, pulse train input monitor
Alarm output contact		ON for inverter alarm (1c contacts, both normally open or closed available.)
Other functions		Free-V/f, manual/automatic torque boost, output voltage gain adjustment, AVR function, reduced voltage start, motor data selection, auto-tuning, motor stabilization control, reverse running protection, simple position control, simple torque control, torque limiting, automatic carrier frequency reduction, energy saving operation, PID function, non-stop operation at instantaneous power failure, brake control, DC injection braking, dynamic braking (BRD), frequency upper and lower limiters, jump frequencies, curve accel and decel (S, U, inversed U,EL-S), 16-stage speed profile, fine adjustment of start frequency, accel and decel stop, process jogging, frequency calculation, frequency addition, 2-stage accel/decel, stop mode selection, start/end freq., analog input filter, window comparators, input terminal response time, output signal delay/hold function, rotation direction restriction, stop key selection, software lock, safe stop function, scaling function, display restriction, password function, user parameter, initialization, initial display selection, cooling fan control, warning, trip retry, frequency pull-in restart, frequency matching, overload restriction, over current restriction, DC bus voltage AVR
Protective function		Over-current, over-voltage, under-voltage, overload, brake resistor overload, CPU error, memory error, external trip, USP error, ground fault detection at power on, temperature error, internal communication error, driver error, thermistor error, brake error, safe stop, overload at low speed, modbus communication error, option error, encoder disconnection, speed excessive, EzSQ command error, EzSQ nesting error, EzSQ execution error, EzSQ user trip
Operating environment	Temperature	Operating (ambient): -10 to 40°C(*10), / Storage: -20 to 65°C(*11)
	Humidity	20 to 90% humidity (non-condensing)
	Vibration *11	5.9m/s <sup>2</sup> (0.6G), 10 to 55 Hz
	Location	Altitude 1,000m or less, indoors (no corrosive gasses or dust)
Coating color		Black
Options		Remote operator unit, cables for the units, braking unit, braking resistor, AC reactor, DC reactor, EMC filter, fieldbus

## Signal Ratings

Detailed ratings are in “Control Logic Signal Specifications” in chapter 4.


Signal / Contact	Ratings
Built-in power for inputs	24VDC, 100mA maximum
Discrete logic inputs	27VDC maximum
Discrete logic outputs	50mA maximum ON state current, 27 VDC maximum OFF state voltage
Analog output	10bit / 0 to 10VDC, 2mA
Analog input, current	4 to 19.6 mA range, 20mA nominal
Analog input, voltage	0 to 9.8 VDC range, 10VDC nominal, input impedance 10k $\Omega$
+10V analog reference	10VDC nominal, 10mA maximum
Alarm relay contacts	250 VAC, 2.5A (R load) max., 0.2A (I load, P.F.=0.4) max. 100 VAC, 10mA min 30 VDC, 3.0A (R load) max., 0.7A (I load, P.F.=0.4) max.) 5 VDC, 100mA min.

## Derating Curves


The maximum available inverter current output is limited by the carrier frequency and ambient temperature.. Choosing a higher carrier frequency tends to decrease audible noise, but it also increases the internal heating of the inverter, thus decreasing (derating) the maximum current output capability. Ambient temperature is the temperature just outside the inverter housing—such as inside the control cabinet where the inverter is mounted. A higher ambient temperature decreases (derates) the inverter’s maximum current output capacity.

An inverter may be mounted individually in an enclosure or side-by-side with other inverter(s) as shown below. Side-by-side mounting causes greater derating than mounting inverters separately. Graphs for either mounting methods are included in this section. Refer to “Ensure Adequate Ventilation” on page 2-10 for minimum clearance dimensions for both mounting configurations.

**Individual mounting**

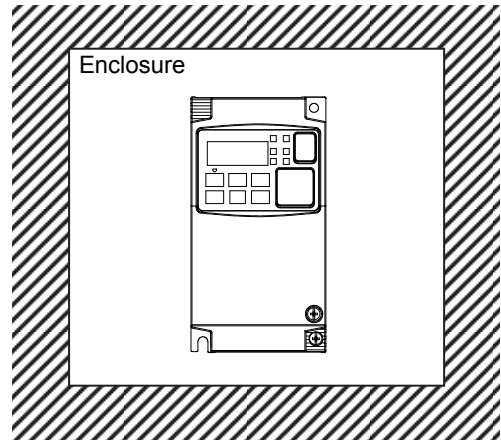

**Side-by-side mounting**

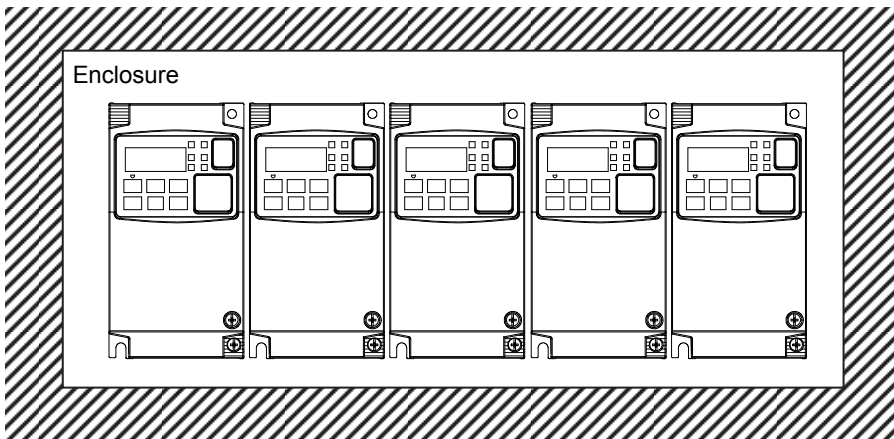




Derating curves, continued...


Models need derating

**WJ200-002L**

HD (1.6A)

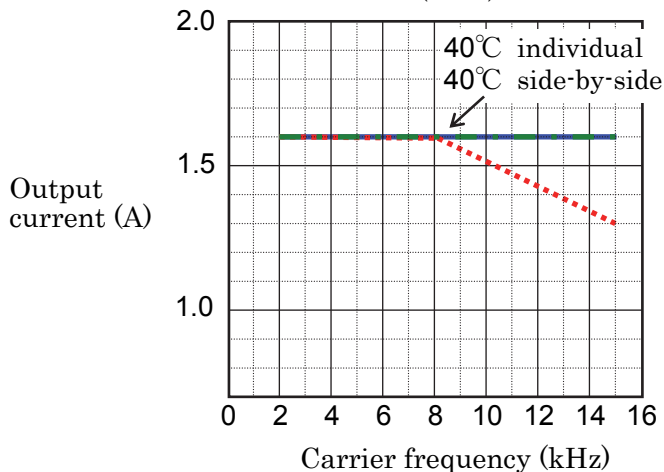


ND (1.9A)

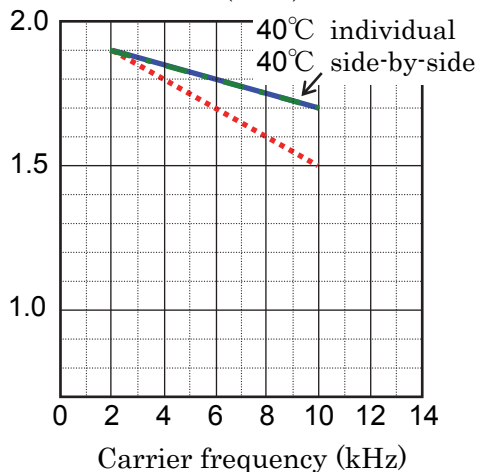


**WJ200-004S**

HD (3.0A)

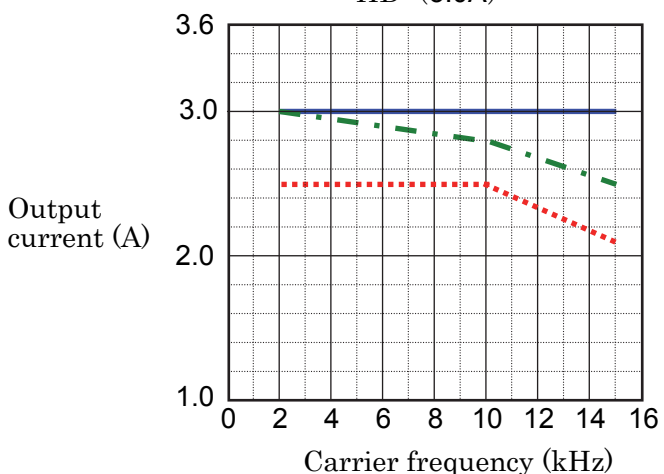


ND (3.5A)

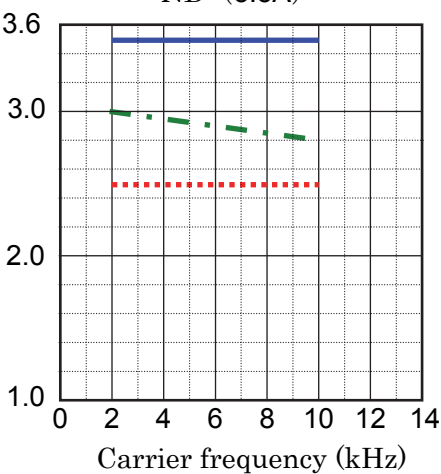


**WJ200-004L**

HD (3.0A)

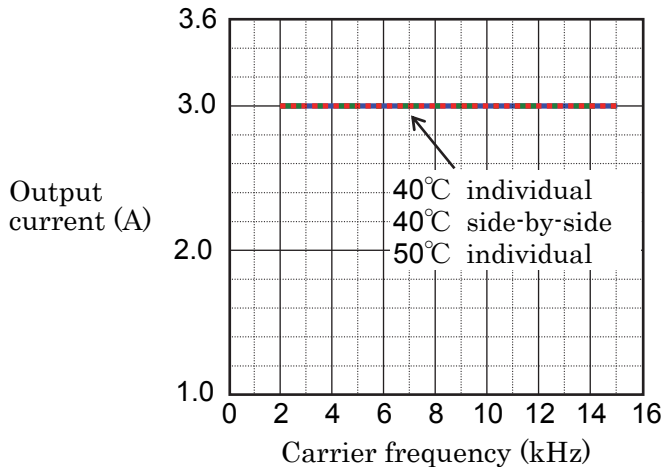


ND (3.5A)

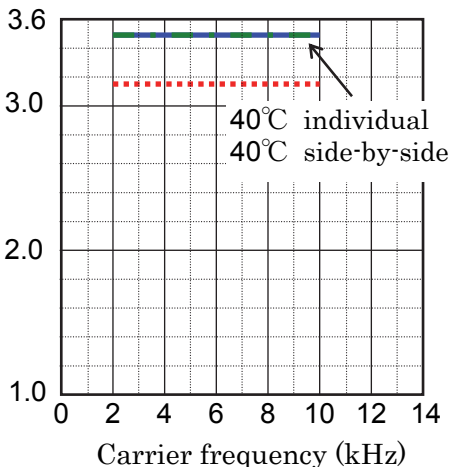


Derating curves, continued...

### WJ200-004H

HD (1.8A)

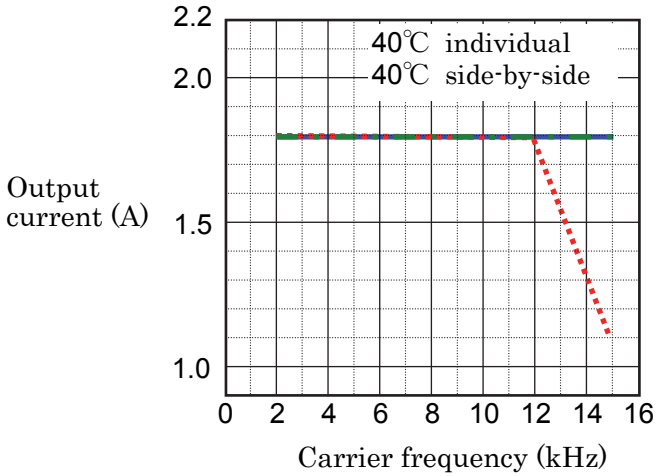


ND (2.1A)

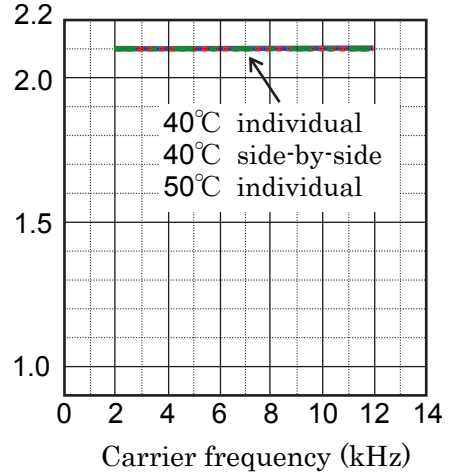


### WJ200-007S

HD (5.0A)

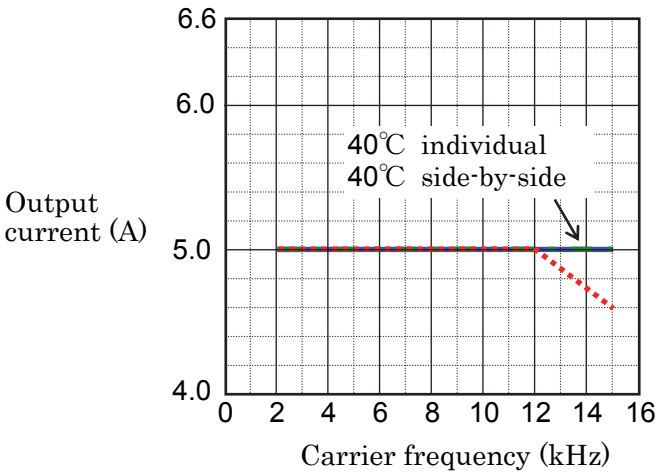


ND (6.0A)

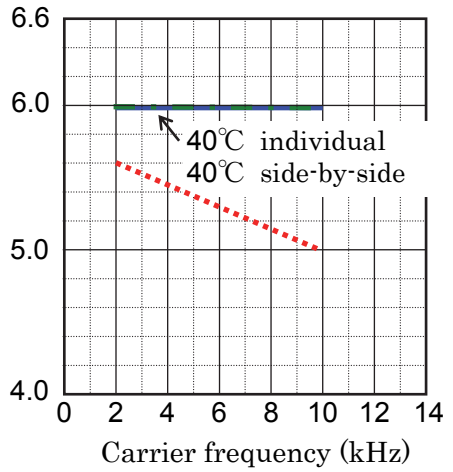


### WJ200-007H

HD (3.4A)

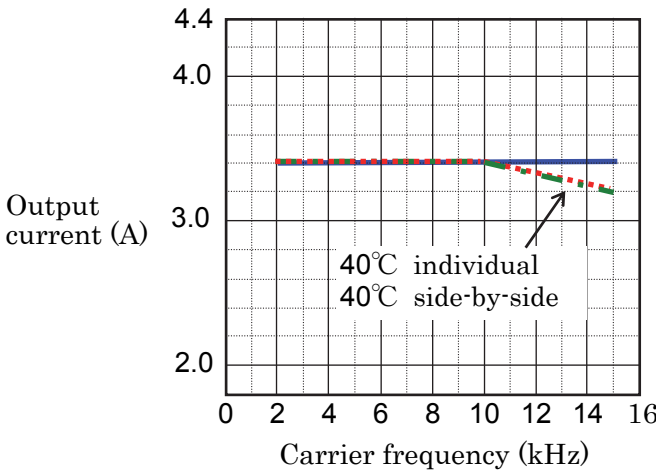


ND (4.1A)

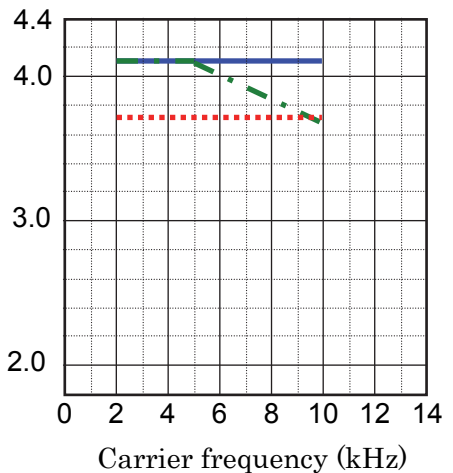


Derating curves, continued...

**WJ200-037L**

HD (17.5A)

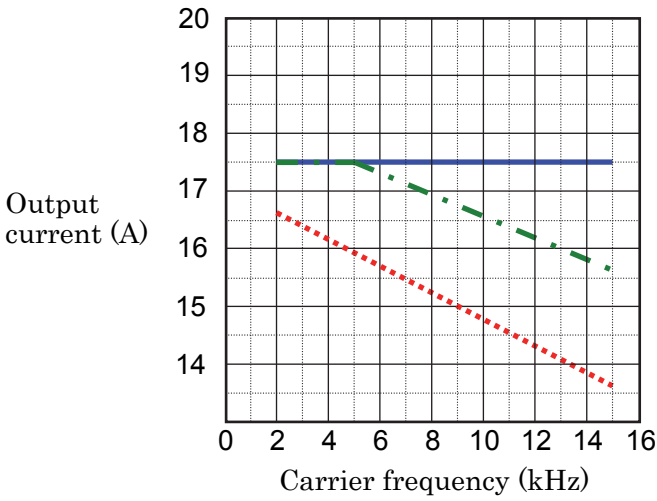


ND (19.6A)

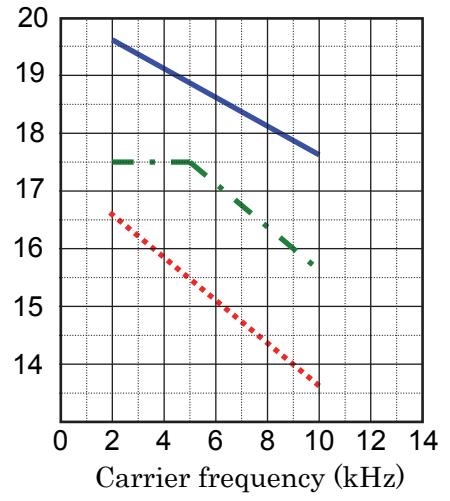


**WJ200-040H**

HD (9.2A)

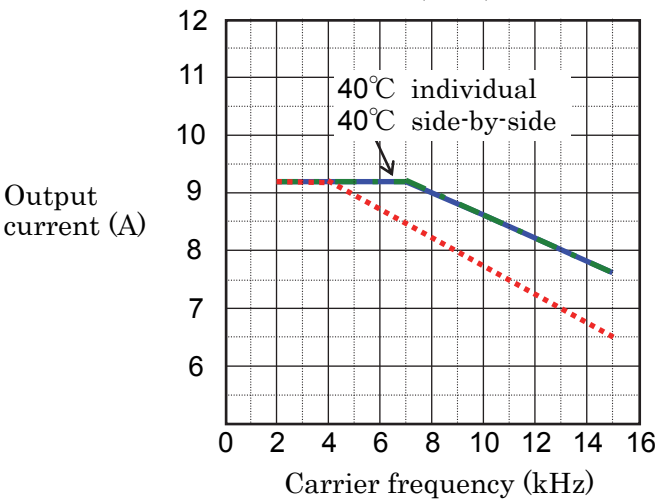


ND (11.1A)

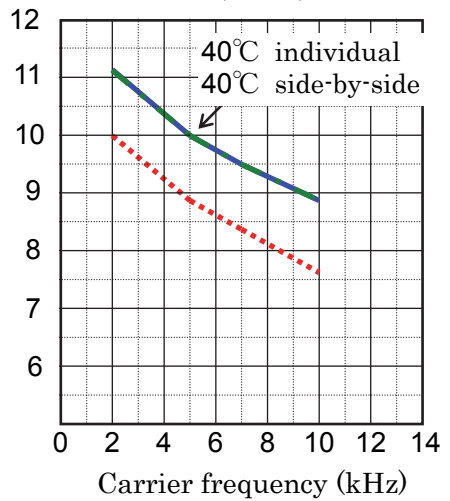


**WJ200-075L**

HD (33.0A)

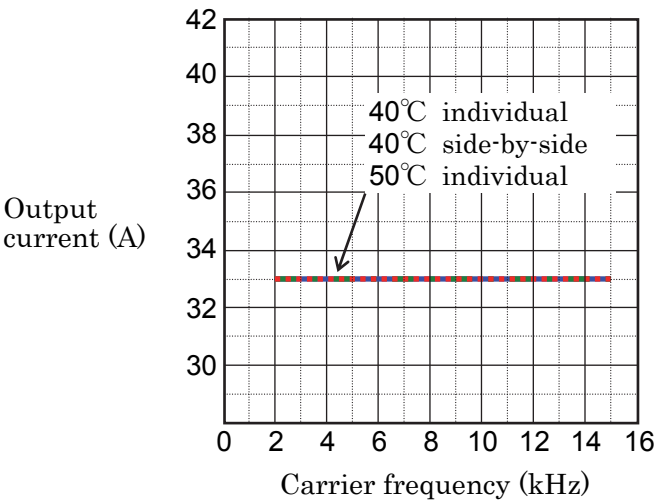

ND (40.0A)

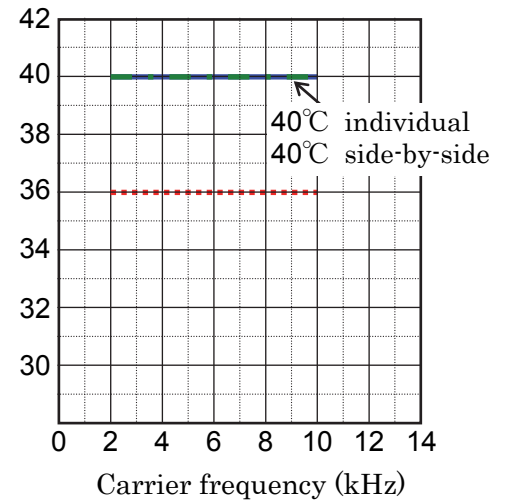





Derating curves, continued...

### WJ200-075H

HD (18.0A)

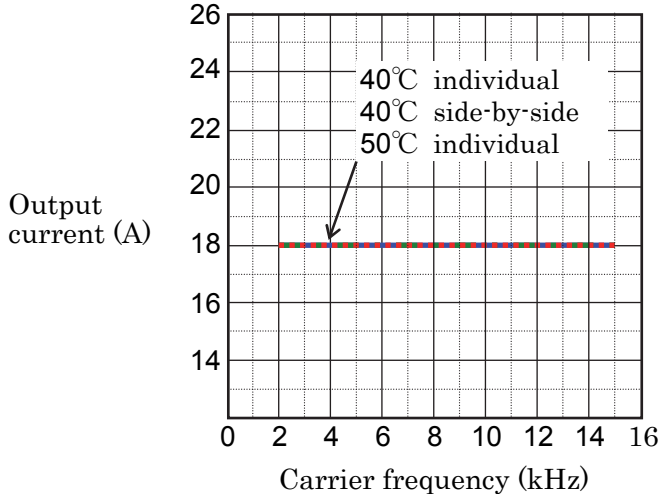


ND (23.0A)

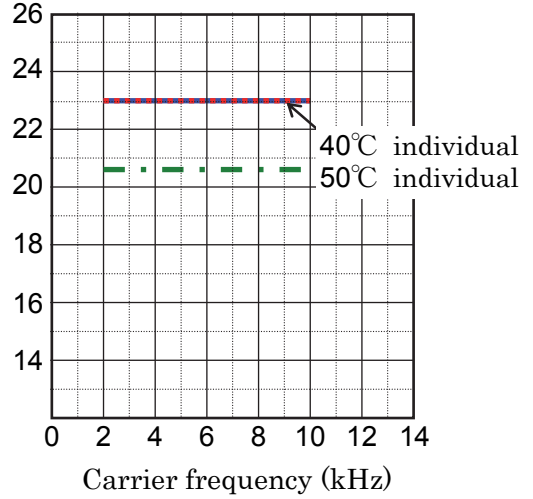


### WJ200-110L

HD (47.0A)

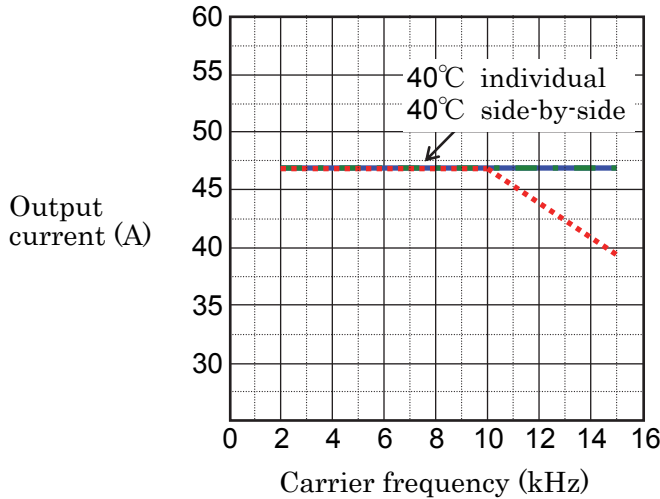


ND (56.0A)

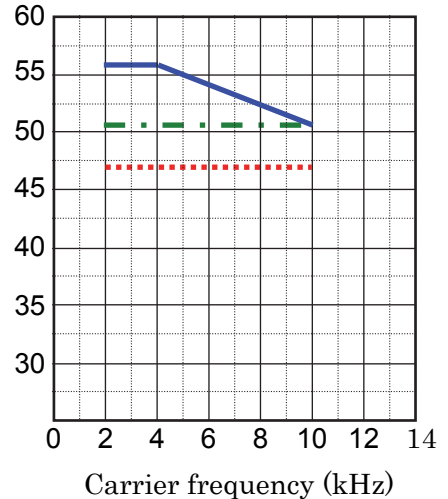


### WJ200-110H

HD (24.0A)

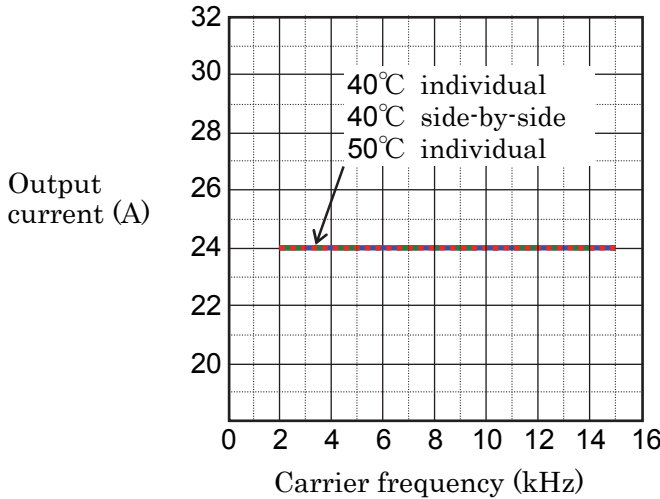


ND (31.0A)

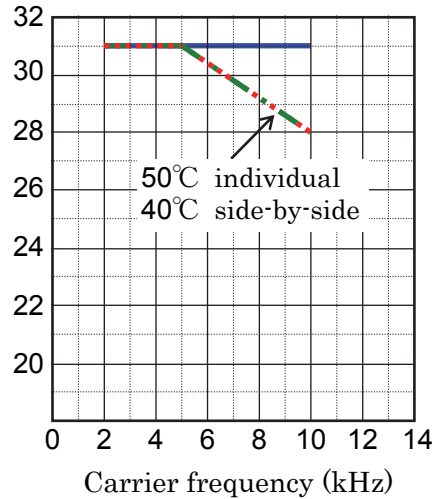


Derating curves, continued...

**WJ200-150L**

HD (60.0A)

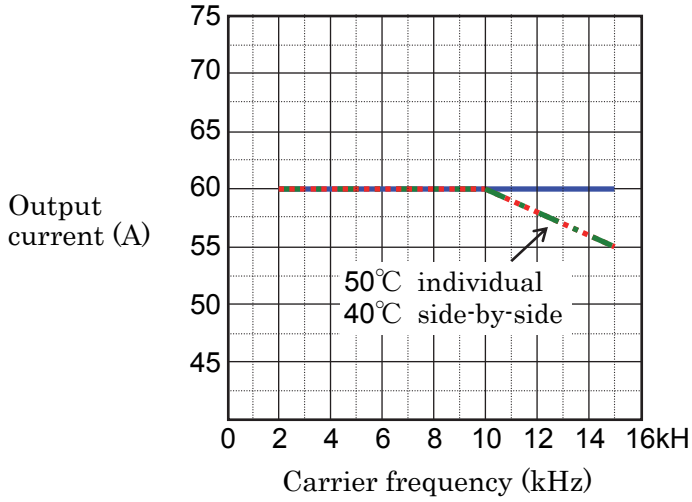


ND (69.0A)

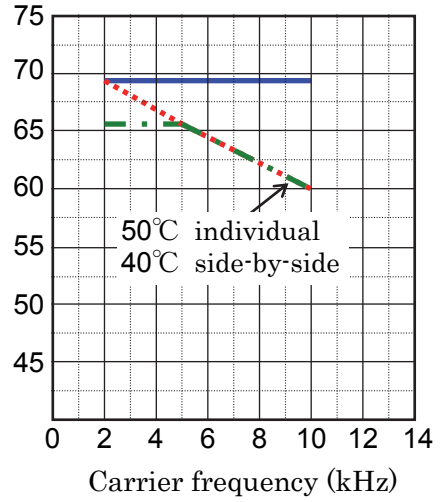


**WJ200-150H**

HD (31.0A)

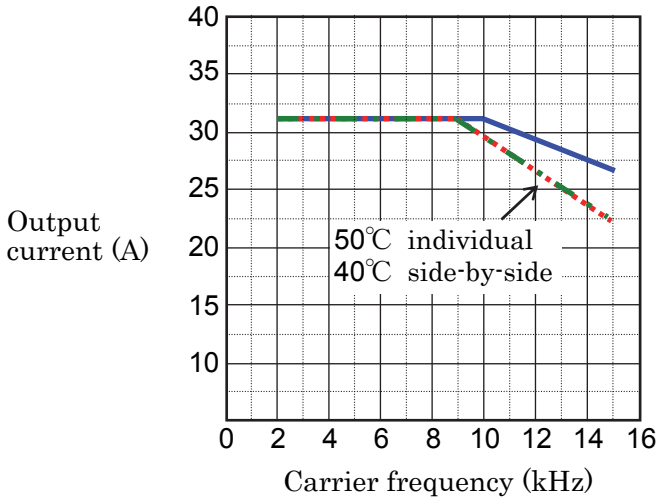

ND (38.0A)

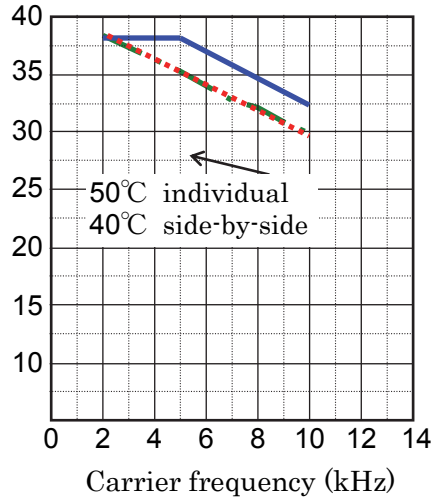

# Introduction to Variable-Frequency Drives

## The Purpose of Motor Speed Control for Industry


Hitachi inverters provide speed control for 3-phase AC induction motors. You connect AC power to the inverter, and connect the inverter to the motor. Many applications benefit from a motor with variable speed, in several ways:

- Energy savings – HVAC
- Need to coordinate speed with an adjacent process – textile and printing presses
- Need to control acceleration and deceleration (torque)
- Sensitive loads – elevators, food processing, pharmaceuticals

## What is an Inverter

The term *inverter* and *variable-frequency drive* are related and somewhat interchangeable. An electronic motor drive for an AC motor can control the motor's speed by *varying the frequency* of the power sent to the motor.


An inverter, in general, is a device that converts DC power to AC power. The figure below shows how the variable-frequency drive employs an internal inverter. The drive first converts incoming AC power to DC through a rectifier bridge, creating an internal DC bus voltage. Then the inverter circuit converts the DC back to AC again to power the motor. The special inverter can vary its output frequency and voltage according to the desired motor speed.

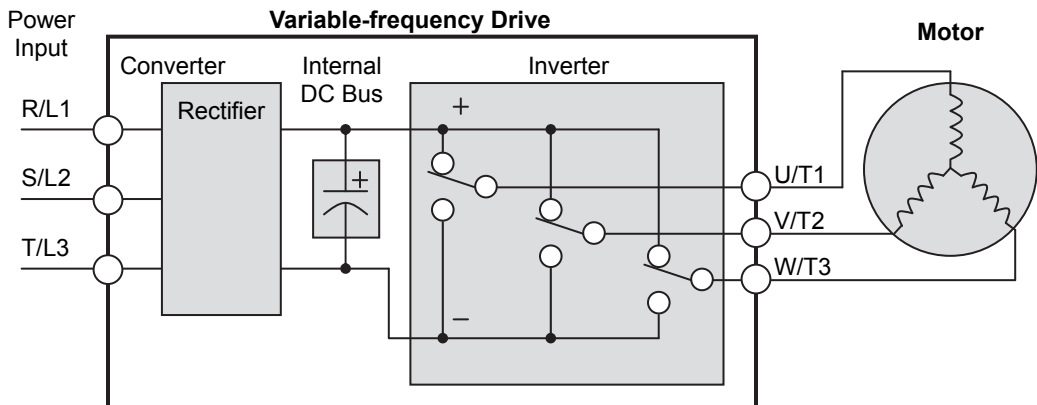

The simplified drawing of the inverter shows three double-throw switches. In Hitachi inverters, the switches are actually IGBTs (insulated gate bipolar transistors). Using a commutation algorithm, the microprocessor in the drive switches the IGBTs on and off at a very high speed to create the desired output waveforms. The inductance of the motor windings helps smooth out the pulses.

## Torque and Constant Volts/Hertz Operation

In the past, AC variable speed drives used an open loop (scalar) technique to control speed. The constant-volts-hertz operation maintains a constant ratio between the applied voltage and the applied frequency. With these conditions, AC induction motors inherently delivered constant torque across the operating speed range. For some applications, this scalar technique was adequate.

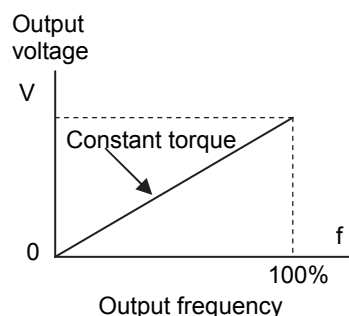

Today, with the advent of sophisticated microprocessors and digital signal processors (DSPs), it is possible to control the speed and torque of AC induction motors with unprecedented accuracy. The WJ200 utilizes these devices to perform complex mathematical calculations required to achieve superior performance. You can choose various torque curves to fit the needs of your application. Constant torque applies the same torque level across the frequency (speed) range. *Variable torque*, also called *reduced torque*, lowers the torque delivered at mid-level frequencies. A torque boost setting will add additional torque in the lower half of the frequency range for the constant and variable torque curves. With the *free-setting torque* curve feature, you can specify a series of data points that will define a custom torque curve to fit your application.

## Inverter Input and Three-phase Power

The Hitachi WJ200 Series of inverters includes two sub-groups: the 200V class and the 400V class inverters. The drive described in this manual may be used in either the United States or Europe, although the exact voltage level for commercial power may be slightly different from country to country. Accordingly, a 200V class inverter requires (nominal) 200 to 240VAC, and 400V class inverter requires from 380 to 480VAC. The 200V class inverters having a suffix of -SF accept single-phase 200V class input voltage, those with a suffix -LF three-phase power only. All 400V class inverters require three-phase power supply.



**TIP:** If your application only has single phase power available, refer to WJ200 inverter of 3HP or less (European version with a suffix of -SFE); they can accept single phase input power. Note: Larger models may be able to accept single-phase with derating. Contact your Hitachi distributor for assistance.

The common terminology for single phase power is line (L) and Neutral (N). Three-phase power connections are usually labeled Line 1 [R/L1], Line 2 [S/L2] and Line 3 [T/L3]. In any case, the power source should include an earth ground connection. That ground connection will need to connect to the inverter chassis and to the motor frame (see “Wire the Inverter Output to Motor” on page 2-21).


## Inverter Output to the Motor

The AC motor must be connected only to the inverter's output terminals. The output terminals are uniquely labeled (to differentiate them from the input terminals) with the designations U/T1, V/T2, and W/T3. This corresponds to typical motor lead connection designations T1, T2, and T3. It is often not necessary to connect a particular motor lead for a new application. The consequence of swapping any two of the three connections is the reversal of the motor direction. In applications where reversed rotation could cause equipment damage or personnel injury, be sure to verify direction of rotation before attempting full-speed operation.

For safety to personnel, you must connect the motor chassis ground to the ground connection at the bottom of the inverter housing.

Notice the three connections to the motor do not include one marked "Neutral" or "Return". The motor represents a balanced "Y" impedance to the inverter, so there is no need for a separate return. In other words, each of the three "Hot" connections serves also as a return for the other connections, because of their phase relationship.

The Hitachi inverter is a rugged and reliable device. The intention is for the inverter to assume the role of controlling power to the motor during all normal operations. Therefore, this manual instructs you not to switch off power to the inverter *while the motor is running* (unless it is an emergency stop). Also, do not install or use disconnect switches in the wiring from the inverter to the motor (except thermal disconnect). Of course, safety-related devices such as fuses must be in the design to break power during a malfunction, as required by NEC and local codes.

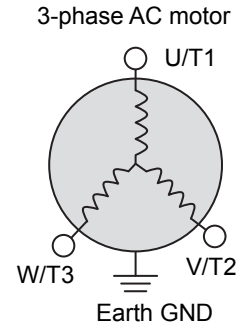

---

## Intelligent Functions and Parameters

Much of this manual is devoted to describing how to use inverter functions and how to configure inverter parameters. The inverter is micro-processor-controlled, and has many independent functions. The microprocessor has an on-board EEPROM for parameter storage. The inverter's front panel keypad provides access to all functions and parameters, which you can access through other devices as well. The general name for all these devices is the *digital operator*, *integrated operator*, or *digital operator panel*. Chapter 2 will show you how to get a motor running, using a minimal set of function commands or configuring parameters.

The optional read/write programmer will let you read and write inverter EEPROM contents from the programmer. This feature is particularly useful for OEMs who need to duplicate a particular inverter's settings in many other inverters in assembly-line fashion.

## Braking


In general, braking is a force that attempts to slow or stop motor rotation. So it is associated with motor deceleration, but may also occur even when the load attempts to drive the motor faster than the desired speed (overhauling). If you need the motor and load to decelerate quicker than their natural deceleration during coasting, we recommend installing a braking resistor. The dynamic braking unit (built into WJ200) sends excess motor energy into a resistor to slow the motor and load (See "Introduction" on page 5-2 and "Dynamic Braking" on page 5-5 for more information). For loads that continuously overhaul the motor for extended periods of time, the WJ200 may not be suitable (contact your Hitachi distributor).

The inverter parameters include acceleration and deceleration, which you can set to match the needs of the application. For a particular inverter, motor, and load, there will be a range of practically achievable accelerations and decelerations.


---

## Velocity Profiles

The WJ200 inverter is capable of sophisticated speed control. A graphical representation of that capability will help you understand and configure the associated parameters. This manual makes use of the velocity profile graph used in industry (shown at right). In the example, *acceleration* is a ramp to a set speed, and *deceleration* is a decline to a stop.

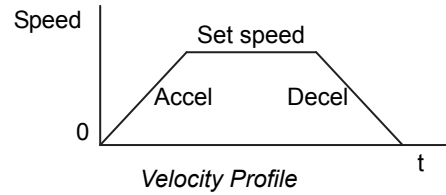


Acceleration and deceleration settings specify the time required to go from a stop to maximum frequency (or vice versa). The resulting slope (speed change divided by time) is the acceleration or deceleration. An increase in output frequency uses the acceleration slope, while a decrease uses the deceleration slope. The accel or decel time a particular speed change depends on the starting and ending frequencies.

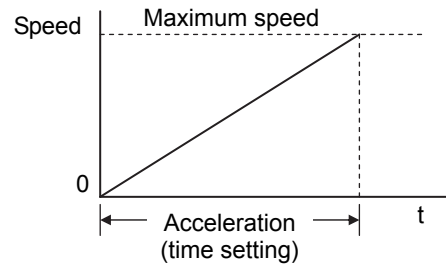


However, the slope is constant, corresponding to the full-scale accel or decel time setting. For example, the full-scale acceleration setting (time) may be 10 seconds – the time required to go from 0 to 60Hz.

The WJ200 inverter can store up to 16 preset speeds. And, it can apply separate acceleration and deceleration transitions from any preset to any other preset speed. A multi-speed profile (shown at right) uses two or more preset speeds, which you can select via intelligent input terminals. This external control can apply any preset speed at any time.

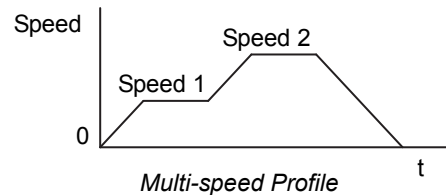

Alternatively, the selected speed is infinitely variable across the speed range. You can use the potentiometer control on the keypad for manual control. The drive accepts analog 0-10VDC signals and 4-20 mA control signals as well.

The inverter can drive the motor in either direction. Separate FW and RV commands select the direction of rotation. The motion profile example shows a forward motion followed by a reverse motion of shorter duration. The speed presets and analog signals control the magnitude of the speed, while the FWD and REV commands determine the direction before the motion starts.

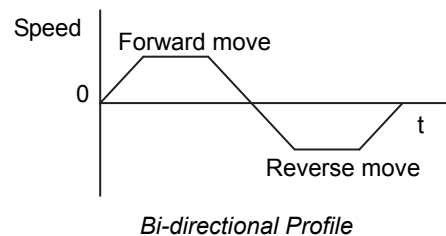

**NOTE:** The WJ200 can move loads in both directions. However, it is not designed for use in servo-type applications that use a bipolar velocity signal that determines direction.

## Frequently Asked Questions

- Q.** What is the main advantage in using an inverter to drive a motor, compared to alternative solutions?
- A.** An inverter can vary the motor speed with very little loss of efficiency, unlike mechanical or hydraulic speed control solutions. The resulting energy savings usually pays for the inverter in a relatively short time.
- Q.** The term “inverter” is a little confusing, since we also use “drive” and “amplifier” to describe the electronic unit that controls a motor. What does “inverter” mean?
- A.** The term *inverter*, *drive*, and *amplifier* are used somewhat interchangeably in industry. Nowadays, the term *drive*, *variable-frequency drive*, *variable-speed drive*, and *inverter* are generally used to describe electronic, microprocessor-based motor speed controllers. In the past, *variable-speed drive* also referred to various mechanical means to vary speed. *Amplifier* is a term almost exclusively used to describe drives for servo or stepper motors.
- Q.** Although the WJ200 inverter is a variable speed drive, can I use it in a fixed-speed application?
- A.** Yes, sometimes an inverter can be used simply as a “soft-start” device, providing controlled acceleration and deceleration to a fixed speed. Other functions of the WJ200 may be useful in such applications, as well. However, using a variable speed drive can benefit many types of industrial and commercial motor applications, by providing controlled acceleration and deceleration, high torque at low speeds, and energy savings over alternative solutions.
- Q.** Can I use an inverter and AC induction motor in a positioning application?
- A.** That depends on the required precision, and the slowest speed the motor must turn and still deliver torque. The WJ200 inverter will deliver full torque while turning the motor at 6Hz (180RPM). DO NOT use an inverter if you need the motor to stop and hold the load position without the aid of a mechanical brake (use a servo or stepper motion control system).
- Q.** Can the inverter be controlled and monitored via a network?
- A.** Yes. WJ200 inverters have built-in ModBus communications. See Appendix B for more information on network communications.
- Q.** Why does the manual or other documentation use terminology such as “200V class” instead of naming the actual voltage, such as “230 VAC”?
- A.** A specific inverter model is set at the factory to work across a voltage range particular to the destination country for that model. The model specifications are on the label on the side of the inverter. A European 200V class inverter (“EU” marking) has different parameter settings than a USA 200V class.



---

**NOTE:** The European 200V class inverter is for single phase input (-SFE), while the USA 200V class inverter is for 3 phase input (-LFU).

---



- Q. Why doesn't the motor have a neutral connection as a return to the inverter?
- A. The motor theoretically represents a "balanced Y" load if all three stator windings have the same impedance. The Y connection allows each of the three wires to alternatively serve as input or return on alternate half-cycle.
- Q. Does the motor need a chassis ground connection?
- A. Yes, for several reasons. Most importantly, this provides protection in the event of a short in the motor that puts a hazardous voltage on its housing. Secondly, motors exhibit leakage current that increase with aging. Lastly, a grounded chassis generally emits less electrical noise than an ungrounded one.
- Q. What type of motor is compatible with the Hitachi inverters?
- A. **Motor type** – It must be a three-phase AC induction motor. Use an inverter-grade motor that has at least 800V insulation for 200V class inverters, or 1600V insulation for 400V class.  
**Motor size** – In practice, it's better to find the right size motor for your application; then look for the inverter to match the motor.



---

**NOTE:** There may be other factors that will affect motor selection, including heat dissipation, motor operating speed profile, enclosure type, and cooling method.


---

- Q. How many poles should the motor have?
- A. Hitachi inverters can be configured to operate motors with 2, 4, 6, or 8 poles. The greater the number of the poles, the slower the top motor speed will be, but it will have higher torque at the base speed.
- Q. Will I be able to add dynamic (resistive) braking to my Hitachi WJ200 drive after the initial installation?
- A. Yes, the WJ200 inverter already has a dynamic braking circuit built in. Just add the resistor sized to meet the braking requirements. For more information, contact your nearest Hitachi representative.

- 
- Q.** How will I know if my application will require resistive braking?
- A.** For new applications, it may be difficult to tell before you actually test a motor/drive solution. In general, some application can rely on system losses such as friction to serve as the deceleration force, or otherwise can tolerate a long decel time. These applications will not need dynamic braking. However, applications with a combination of a high-inertia load and a required short decel time will need dynamic braking. This is a physics question that may be answered either empirically or through extensive calculations.
- Q.** Several options related to electrical noise suppression are available for the Hitachi inverters. How can I know if my application require any of these options?
- A.** The purpose of these noise filters is to reduce the inverter electrical noise so the operation of nearby electrical devices is not affected. Some applications are governed by particular regulatory agencies, and noise suppression is mandatory . in those cases, the inverter must have the corresponding noise filter installed. Other applications may not need noise suppression, unless you notice electrical interference with the operation of other devices.
- Q.** The WJ200 features a PID control. PID loops are usually associated with chemical processes, heating, or process industries in general. How could the PID loop feature be useful in my application?
- A.** You will need to determine the particular main variable in your application the motor affects. That is the process variable (PV) for the motor. Over time, a faster motor speed will cause a faster change in the PV than a slow motor speed will. By using the PID loop feature, the inverter commands the motor to run at the optimal speed required to maintain the PV at the desired value for current conditions. Using the PID loop feature will require an additional sensor and other wiring, and is considered an advanced application.
-

---

# Inverter Mounting and Installation

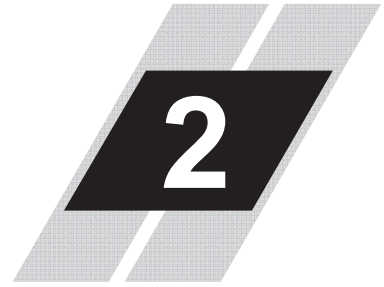

---

In This Chapter...	page
- Orientation to Inverter Features .....	2
- Basic System Description .....	4
- Step-by-Step Basic Installation .....	6
- Powerup Test.....	23
- Using the Front Panel Keypad .....	25

---

# Orientation to Inverter Features

## Unpacking and Inspection

Please take a few moments to unpack your new WJ200 inverter and perform these steps:

1. Look for any damage that may have occurred during transportation.
2. Verify the contents of the box include:
  - a. One WJ200 inverter
  - b. One WJ200 Basic manual
3. Inspect the specifications label on the side of the inverter. Make sure it matches the product part number you ordered.



## Main Physical Features

The WJ200 Series inverters vary in size according to the current output rating and motor size for each model number. All feature the same basic Keypad and connector interface for consistent ease of use. The inverter construction has a heat sink at the back of the housing. The larger models include a fan to enhance heat sink performance. The mounting holes are predrilled in the heat sink for your convenience. Smaller models have two mounting holes, while larger ones have four. Be sure to use all the mounting holes provided.

Never touch the heat sink during or just after operation; it can be very hot.

The electronics housing and front panel are built onto the front of the heat sink.

**Inverter Keypad** – The inverter uses a digital operator interface, or keypad. The four-digit display can show a variety of performance parameters. LEDs indicate whether the display units are Hertz or Amperes. Other LEDs indicate Power (external), and Run/Stop mode and Program/Monitor Mode status. Membrane keys Run and Stop/Reset control monitor operation. The ESC, SET,  $\Delta$  and  $\nabla$  keys allow an operator to navigate to the inverter's functions and parameter values. The SET key is used when changing a parameter.

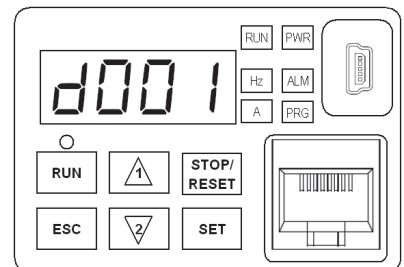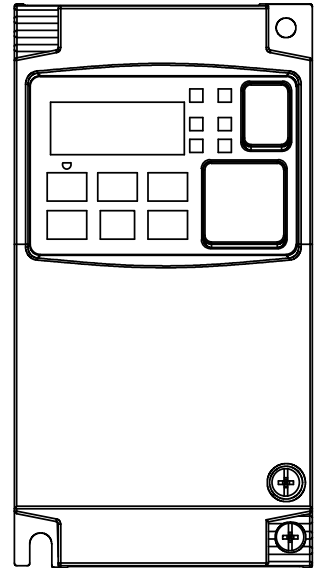

**Power Wiring Access** – First, ensure no power source is connected to the inverter. If power has been connected, verify that the Power LED is OFF and then wait ten minutes after power down to proceed. After removing the option PCB cover and terminal housing cover, the wiring blind cover that cover the power and motor wiring exits will be able to slide upward as shown below.


Notice the four wire exit slots in the wiring blind cover. This helps keep the power and motor wiring (to the left) separated from the signal-level logic or analog wiring (to the right).

Remove the wiring blind cover and as shown as set them aside in a secure place while wiring. Be sure to replace them afterward. Never operate the inverter with the wiring blind cover removed or the option PCB cover or terminal housing cover removed.

The power input and motor 3-phase wiring connect to the lower row of the terminals. The upper row of power terminals connect to optional braking units or DC link choke.

The following section in this chapter will describe system design and guide you through a step-by-step installation process. After the section on wiring, this chapter will show how to use the front panel keys to access functions and edit parameters.

When tightening the fixing screw for external option PCB cover and terminal cover use 2~3kgf-cm (0.2~0.3N-m) of tightening torque.

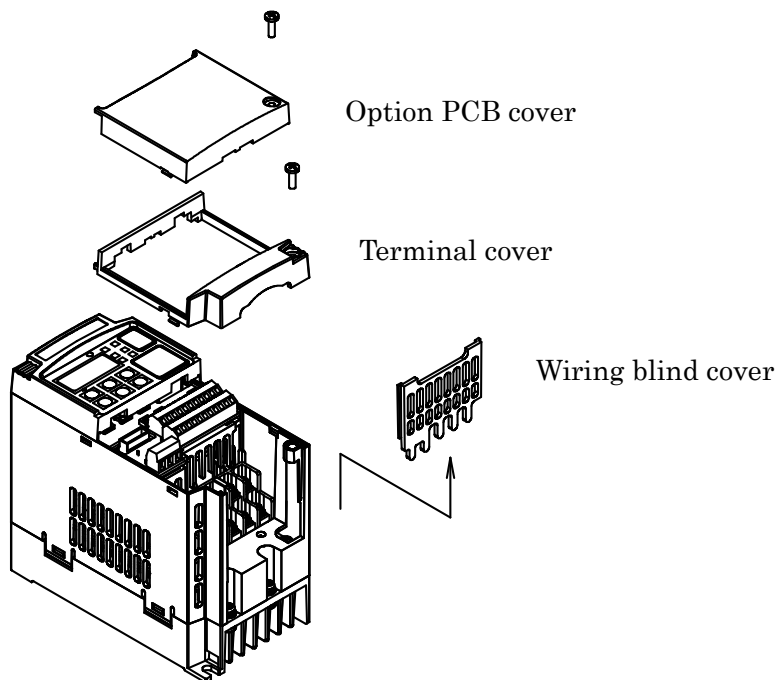

**NOTE:** Wiring blind cover can be removed without removing the terminal cover in the following models.


Single-phase 200V: 0.7 to 2.2kW

Three-phase 200V: 1.5 to 15kW

Three-phase 400V: All size

## Basic System Description

A motor control system will obviously include a motor and inverter, as well as a circuit breaker or fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure and table below show a system with all the optional components you might need in your finished application.

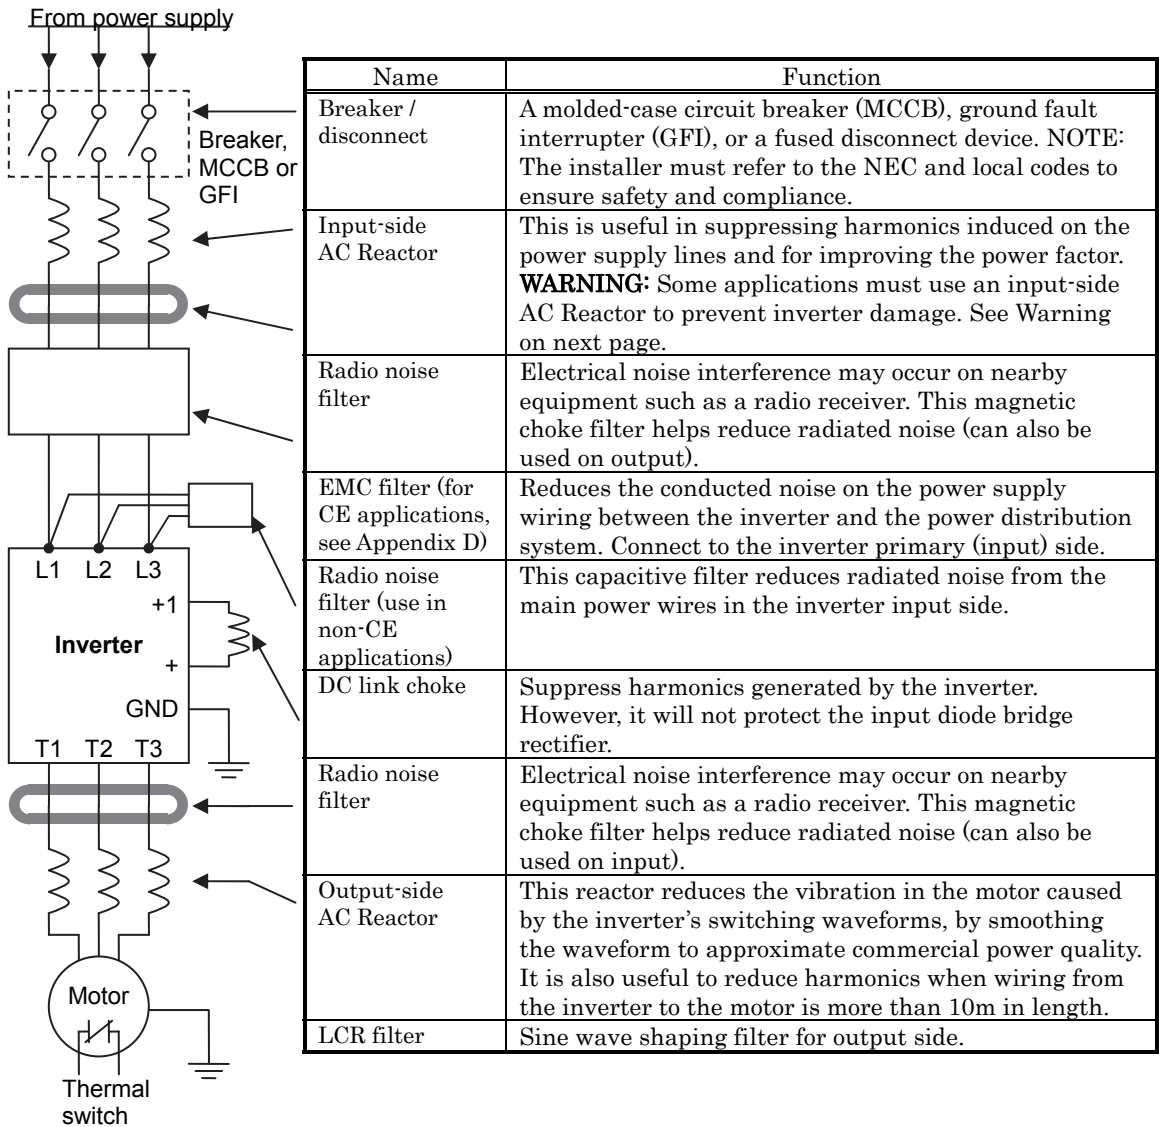

**NOTE:** Note that some components are required for regulatory agency compliance (see chapter 5 and Appendix D).



---

**WARNING:** In the cases below involving a general-purpose inverter, a large peak current can flow on the power supply side, sometimes destroying the converter module:

1. The unbalance factor of the power supply is 3% or higher.
2. The power supply capacity is at least 10 times greater than the inverter capacity (or the power supply capacity is 500kVA or more).
3. Abrupt power supply changes are expected, due to conditions such as:
  - a. Several inverters are interconnected with a short bus.
  - b. A thyristor converter and an inverter are interconnected with a short bus.
  - c. An installed phase advance capacitor opens and closes.

Where these conditions exist or when the connected equipment must be highly reliable, you **MUST** install an input-side AC reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightning strike are possible, install a lightning conductor.

---

## Step-by-Step Basic Installation

This section will guide you through the following basic steps of installation:

Step	Activity	Page
1	Choose a mounting location in compliance with the Warnings and Cautions. See NOTE below.	
2	Check the mounting location for adequate ventilation	
3	Cover the inverter's ventilation openings to prevent debris from entering.	
4	Check the inverter dimensions for footprint and mounting hole locations.	
5	Study the Cautions, Warnings, wire and fuse sizes, and terminal torque specifications before wiring the inverter.	
6	Connect wiring for the inverter power input.	
7	Wire the inverter output to the motor.	
8	Uncover the inverter's ventilation openings applied in Step 3.	
9	Perform the Powerup Test. (This step includes several sub steps.)	
10	Make observations and check your installation.	




**NOTE:** If the installation is in an EU country, study the EMC installation guidelines in Appendix D



**WARNING:** An inverter run by a private power generator may overheat the generator or suffer from a deformed output voltage waveform of the generator. Generally, the generator capacity should be ten times that of the inverter (kVA) in a PWM control system or six times greater in a PAM control system.



## Choosing a Mounting Location

 **Step 1:** Study the following caution messages associated with mounting the inverter. This is the time when mistakes are most likely to occur that will result in expensive rework, equipment damage, or personal injury.



---

**CAUTION:** Be sure to install the unit on flame-resistant material such as steel plate. Otherwise, there is the danger of fire.

---



---

**CAUTION:** Be sure not to place any flammable materials near the inverter. Otherwise, there is the danger of fire.

---



---

**CAUTION:** Be sure not to let the foreign matter enter vent openings in the inverter housing, such as wire clippings, spatter from welding, metal shavings, dust, etc. Otherwise, there is the danger of fire.

---



---

**CAUTION:** Be sure to install the inverter in a place that can bear the weight according to the specifications in the text (Chapter 1, Specifications Tables). Otherwise, it may fall and cause injury to personnel.

---



---

**CAUTION:** Be sure to install the unit on a perpendicular wall that is not subject to vibration. Otherwise, it may fall and cause injury to personnel.

---



---

**CAUTION:** Be sure not to install or operate an inverter that is damaged or has missing parts. Otherwise, it may cause injury to personnel.

---





---

**CAUTION:** Be sure to install the inverter in a well-ventilated room that does not have direct exposure to sunlight, a tendency for high temperature, high humidity or dew condensation, high levels of dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt damage, etc. Otherwise, there is the danger of fire.

---

## Ensure Adequate Ventilation

- Step 2:** To summarize the caution messages – you will need to find a solid, non-flammable, vertical surface that is in a relatively clean and dry environment. In order to ensure enough room for air circulation around the inverter to aid in cooling, it is recommended to maintain the specified clearance and the inverter specified in the below diagram.

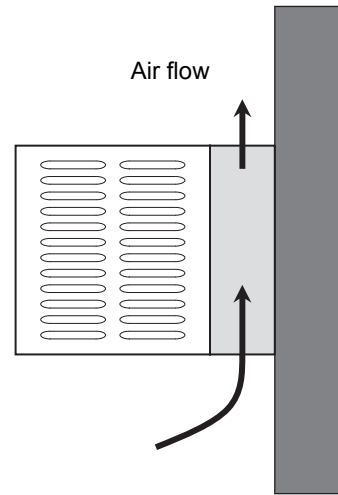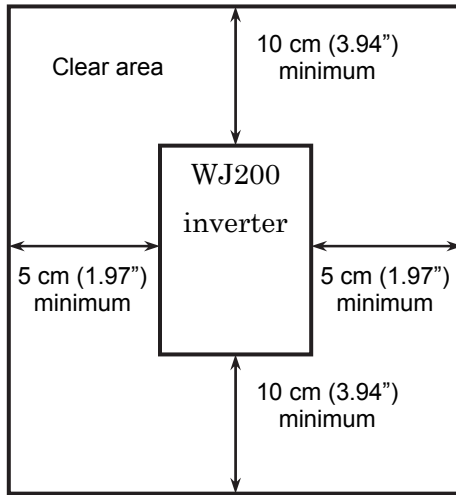


**CAUTION:** Be sure to maintain the specified clearance area around the inverter and to provide adequate ventilation. Otherwise, the inverter may overheat and cause equipment damage or fire.

## Keep Debris Out of Inverter Vents

- Step 3:** Before proceeding to the wiring section, it's a good time to *temporarily* covers the inverter's ventilation openings. Paper and masking tape are all that is needed. This will prevent harmful debris such as wire clippings and metal shavings from entering the inverter during installation.


Please observe this checklist while mounting the inverter:

1. The ambient temperature must be in the range of  $-10$  to  $50^{\circ}\text{C}$ .
2. Keep any other heat-producing equipment as far away from the inverter as possible.
3. When installing the inverter in an enclosure, maintain the clearance around the inverter and verify that its ambient is within specification when the enclosure door is closed.
4. Do not remove the front housing at any time during operation.

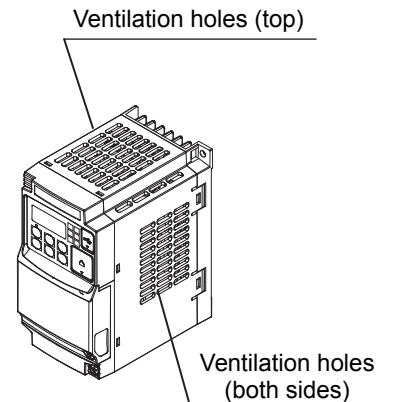

### Check Inverter Dimensions

**Step 4:** Locate the applicable drawing on the following pages for your inverter. Dimensions are given in millimeters (inches) format.

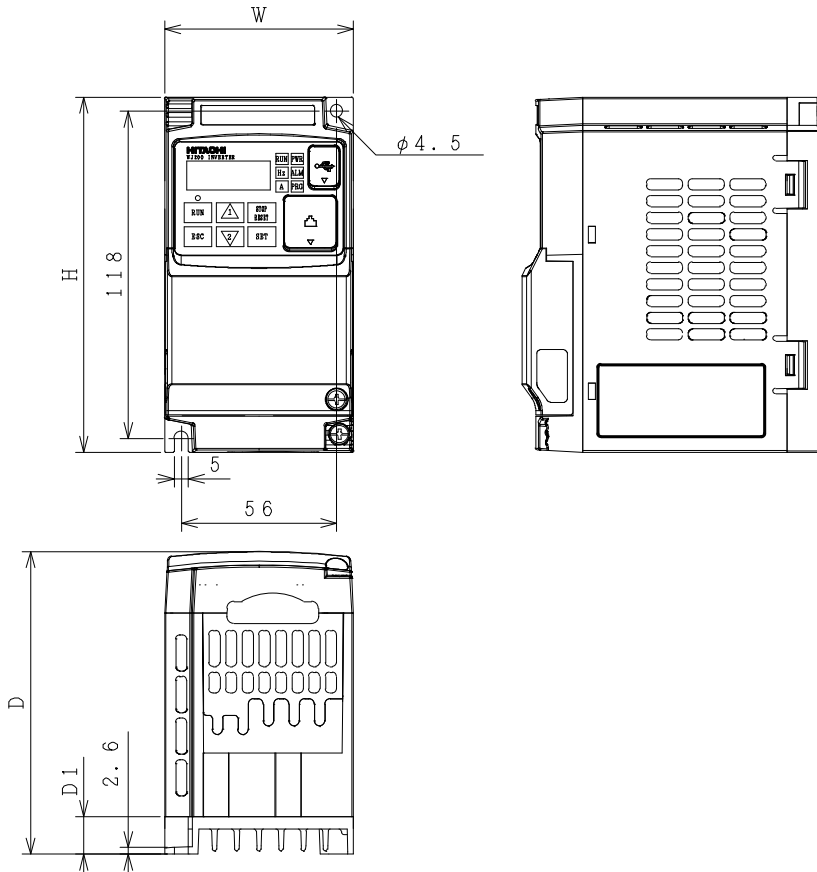


Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
Single-phase 200V	WJ200-001SF	68	128	109	13.5
	WJ200-002SF			122.5	27
	WJ200-004SF			109	13.5
3-phase 200V	WJ200-001LF	68	128	109	13.5
	WJ200-002LF			122.5	27
	WJ200-004LF			145.5	50
	WJ200-007LF			145.5	50




**NOTE:** Some inverter housing require two mounting screws, while other requires four. Be sure to use lock washers or other means to ensure screws do not loosen due to vibration.

Dimensional drawings, continued...

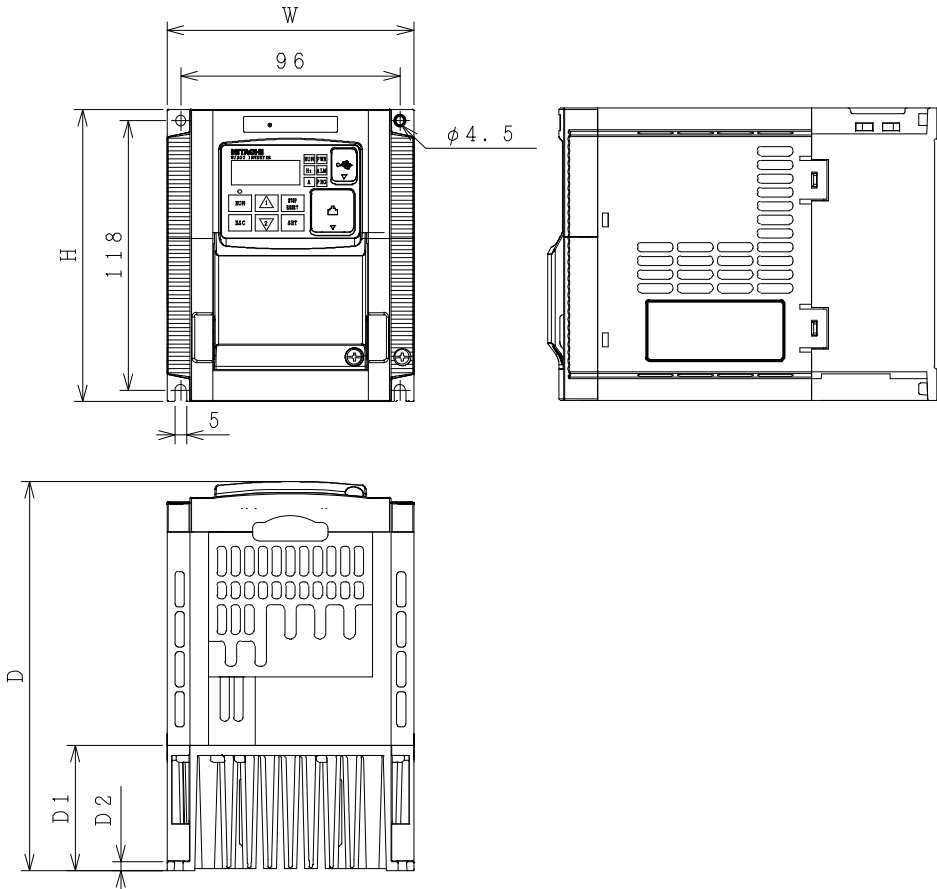


Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
Single-phase 200V	WJ200-007SF	108	128	170.5	55
	WJ200-015SF				
	WJ200-022SF				
3-phase 200V	WJ200-015LF				
	WJ200-022LF				
3-phase 400V	WJ200-004HF			143.5	28
	WJ200-007HF	170.5	55		
	WJ200-015HF				
	WJ200-022HF				
	WJ200-030HF				

Dimensional drawings, continued...

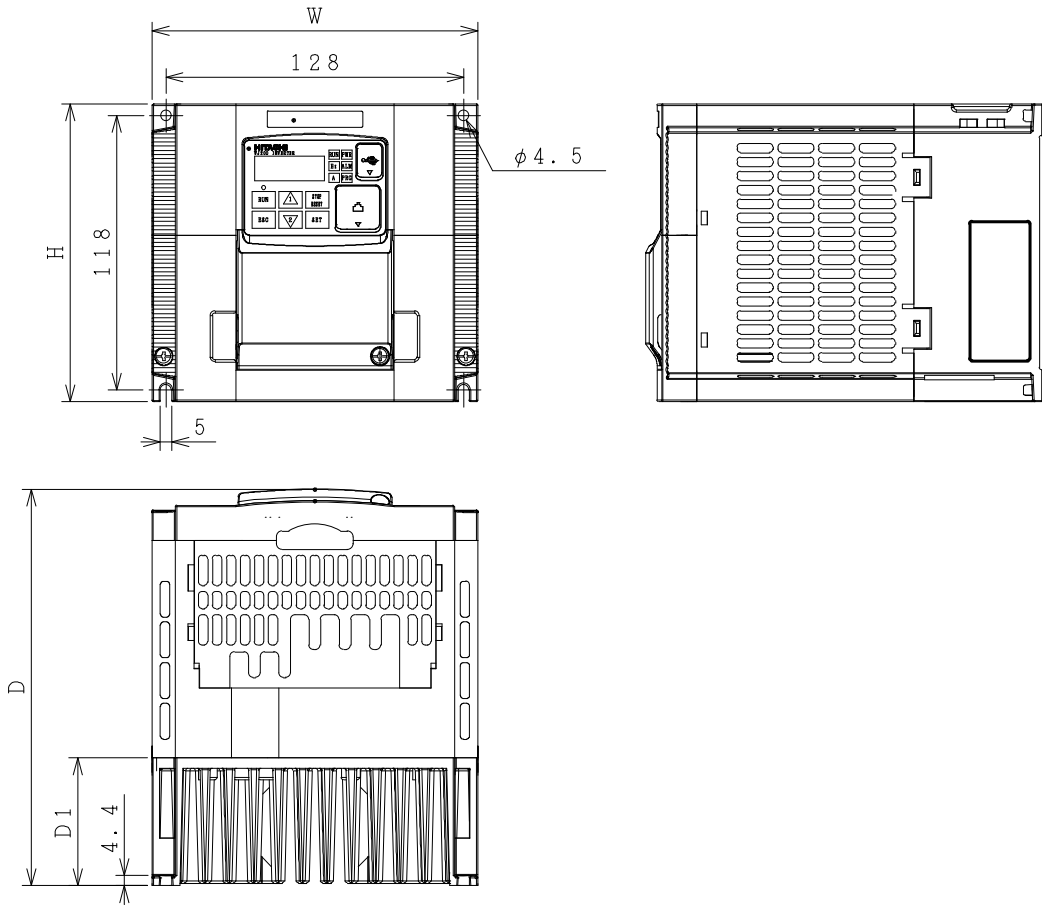


Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
3-phase 200V	WJ200-037LF	140	128	170.5	55
3-phase 400V	WJ200-040HF				

Dimensional drawings, continued...

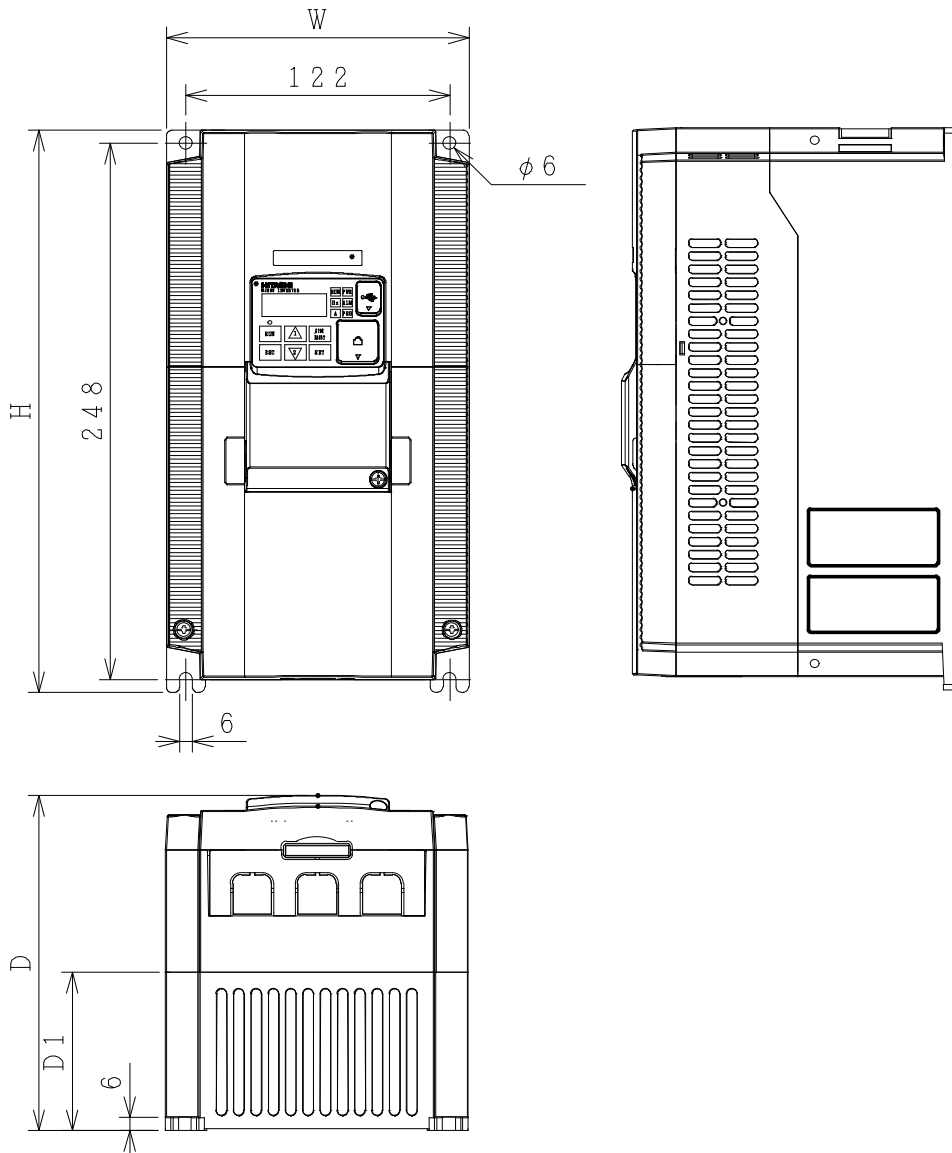



Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
3-phase 200V	WJ200-055LF	140	260	155	73.3
	WJ200-075LF				
3-phase 400V	WJ200-055HF				
	WJ200-075HF				

Dimensional drawings, continued...

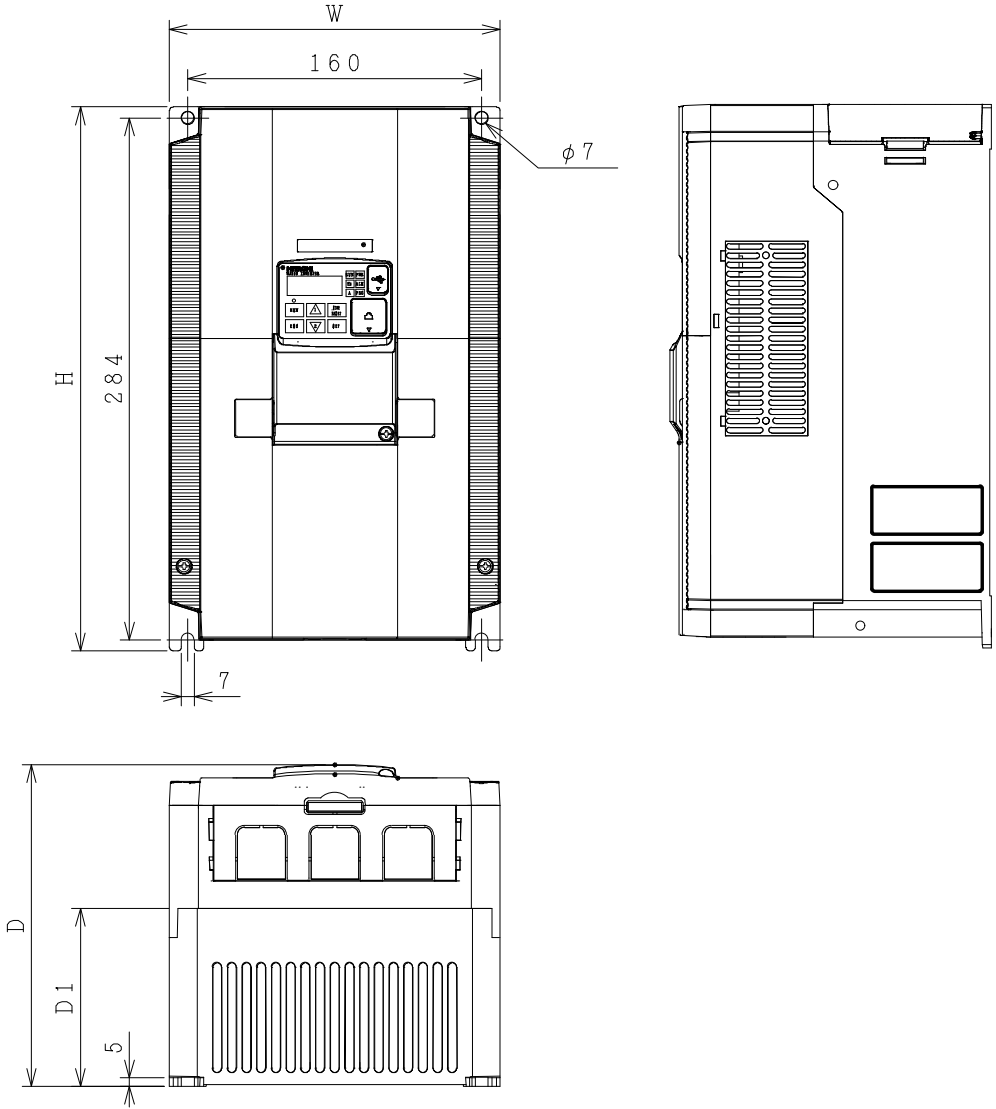

Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
3-phase 200V	WJ200-110LF	180	296	175	97
3-phase 400V	WJ200-110HF				
	WJ200-150HF				


Dimensional drawings, continued...

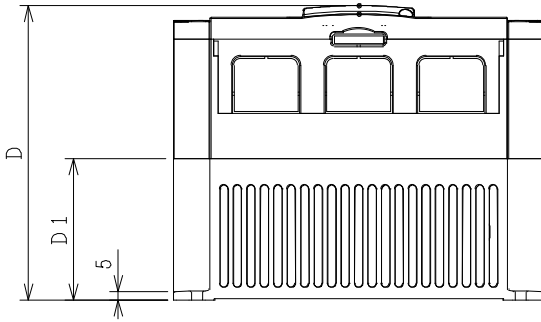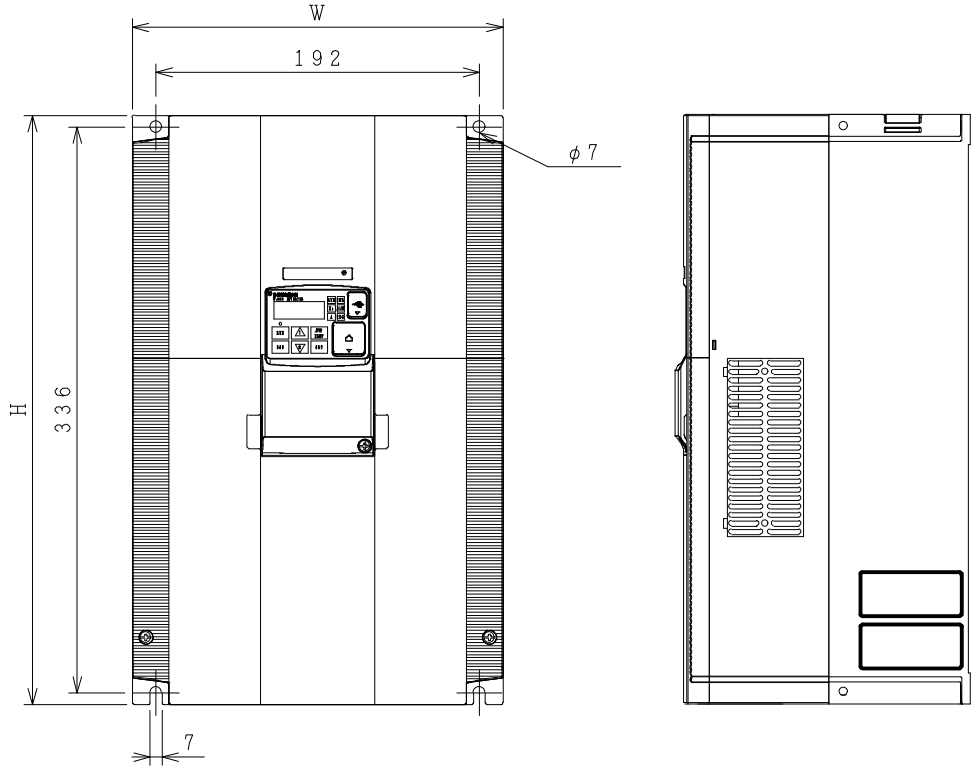

Power	Type	W (mm)	H (mm)	D (mm)	D1 (mm)
3-phase 200V	WJ200-150LF	220	350	175	84



## Prepare for Wiring

  **Step 5:** It is very important to perform the wiring steps carefully and correctly. Before proceeding, please study the caution and warning message herebelow.



---

**WARNING:** Use 60/75°C Cu wire only. (for models: WJ200-001L, -002L, -004L, -007L, -015S, -022S, -004H, -007H, -015H, -022H and -030H)

---



---

**WARNING:** Use 75°C Cu wire only. (for models: WJ200-001S, -002S, -004S, -007S, -015L, -022L, -037L, -055L, -075L, -110L, -150L, -040H, -055H, -075H, -110H and -150H)

---



---

**WARNING:** “Open Type Equipment.”

---



---

**WARNING:** “Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 240V maximum.” For models with suffix S or L.

---



---

**WARNING:** “Suitable for use on a circuit capable of delivering not more than 100k rms symmetrical amperes, 480V maximum.” For models with suffix H.

---



---

**HIGH VOLTAGE:** Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire.

---



---

**HIGH VOLTAGE:** Wiring work shall be carried out only by qualified personnel. Otherwise, there is a danger of electric shock and/or fire.

---



---

**HIGH VOLTAGE:** Implement wiring after checking that the power supply is OFF. Otherwise, you may incur electric shock and/or fire.

---



---

**HIGH VOLTAGE:** Do not connect wiring to an inverter or operate an inverter that is not mounted according to the instructions given in this manual. Otherwise, there is a danger of electric shock and/or injury to personnel.

---

## Determining Wire and Fuse Sizes

The maximum motor currents in your application determines the recommended wire size. The following table gives the wire size in AWG. The “Power Lines” column applies to the inverter input power, output wires to the motor, the earth ground connection, and any other components shown in the “Basic System Description” on page 2-4. The “Signal Lines” column applies to any wire connecting to the two green connectors just inside the front cover panel.

Motor Output				Inverter Model	Wiring		Applicable equipment
kW		HP			Power Lines	Signal Lines	Fuse (UL-rated, class J, 600V)
VT	CT	VT	CT				
0.2	0.1	¼	1/8	WJ200-001SF	AWG16 / 1.3mm <sup>2</sup> (75°C only)	18 to 28 AWG / 0.14 to 0.75 mm <sup>2</sup> shielded wire (see Note 4)	10A
0.4	0.2	½	¼	WJ200-002SF			
0.55	0.4	¾	½	WJ200-004SF			
1.1	0.75	1.5	1	WJ200-007SF	AWG12 / 3.3mm <sup>2</sup> (75°C only)	20A	
2.2	1.5	3	2	WJ200-015SF	AWG10 / 5.3mm <sup>2</sup>		
3.0	2.2	4	3	WJ200-022SF			
0.2	0.1	¼	1/8	WJ200-001LF	AWG16 / 1.3mm <sup>2</sup>	10A	
0.4	0.2	½	¼	WJ200-002LF			
0.75	0.4	1	½	WJ200-004LF			
1.1	0.75	1.5	1	WJ200-007LF			
2.2	1.5	3	2	WJ200-015LF	AWG14 / 2.1mm <sup>2</sup> (75°C only)	15A	
3.0	2.2	4	3	WJ200-022LF	AWG12 / 3.3mm <sup>2</sup> (75°C only)	20A	
5.5	3.7	7.5	5	WJ200-037LF	AWG10 / 5.3mm <sup>2</sup> (75°C only)	30A	
7.5	5.5	10	7.5	WJ200-055LF	AWG6 / 13mm <sup>2</sup> (75°C only)	60A	
11	7.5	15	10	WJ200-075LF			
15	11	20	15	WJ200-110LF	AWG4 / 21mm <sup>2</sup> (75°C only)	80A	
18.5	15	25	20	WJ200-150LF	AWG2 / 34mm <sup>2</sup> (75°C only)	80A	
0.75	0.4	1	½	WJ200-004HF	AWG16 / 1.3mm <sup>2</sup>	10A	
1.5	0.75	2	1	WJ200-007HF			
2.2	1.5	3	2	WJ200-015HF			
3.0	2.2	4	3	WJ200-022HF	AWG14 / 2.1mm <sup>2</sup>	15A	
4.0	3.0	5	4	WJ200-030HF			
5.5	4.0	7.5	5	WJ200-040HF	AWG12 / 3.3mm <sup>2</sup> (75°C only)	30A	
7.5	5.5	10	7.5	WJ200-055HF	AWG10 / 5.3mm <sup>2</sup> (75°C only)	50A	
11	7.5	15	10	WJ200-075HF			
15	11	20	15	WJ200-110HF	AWG6 / 13mm <sup>2</sup> (75°C only)	50A	
18.5	15	25	20	WJ200-150HF			

**Note 1:** Field wiring must be made by a UL-Listed and CSA-certified closed-loop terminal connector sized for the wire gauge involved. Connector must be fixed by using the crimping tool specified by the connector manufacturer.

**Note 2:** Be sure to consider the capacity of the circuit breaker to be used.

**Note 3:** Be sure to use a larger wire gauge if power line length exceeds 66ft. (20m).

**Note 4:** Use 18 AWG / 0.75mm<sup>2</sup> wire for the alarm signal wire ([AL0], [AL1], [AL2] terminals).

**Note 5:** Type E Combination Motor Controller marking is to indicate that the unit

shall be connected with, LS Industrial System Co., Ltd, Type E Combination Motor Controller MMS Series .

## Terminal Dimensions and Torque Specs

The terminal screw dimensions for all WJ200 inverters are listed in table below. This information is useful in sizing spade lug or ring lug connectors for wire terminations.



**WARNING:** Tighten the screws with the specified torque in the table below. Check for any loosening of screws. Otherwise, there is the danger of fire.

Types	Screw Diameter	Width (mm)	Tightening Torque (N•m)
WJ200 - 001S,002S,004S WJ200 - 001L,002L,004L,007L	M3.5	7.6	1.0
WJ200 - 007S,015S,022S WJ200 - 015L,022L,037L WJ200 - 004H,007H,015H,022H,030H,040H	M4	10	1.4
WJ200 - 055L,075L WJ200 - 055H,075H	M5	13	3.0
WJ200 - 110L WJ200 - 110H,150H	M6	17.5	3.9 to 5.1
WJ200 - 150L	M8	23	5.9 to 8.8




**CAUTION:** Fasten the screws with the specified fastening torque in the table below. Check for any loosening of screws. Otherwise, there is the danger of fire.

## Wire the Inverter Input to a Supply


**Step 6:** In this step, you will connect wiring to the input of the inverter. First, you must determine whether the inverter model you have required three-phase power only, or single-phase power only. All models have the same power connection terminals [R/L1], [S/L2], and [T/L3]. So you must refer to the specifications label (on the side of the inverter) for the acceptable power source types! For inverters that can accept single-phase power and are connected that way, terminal [S/L2] will remain unconnected.

Note the use of ring lug connectors for a secure connection.



**Single-phase 200V 0.1 to 0.4kW**  
**Three-phase 200V 0.1 to 0.75kW**

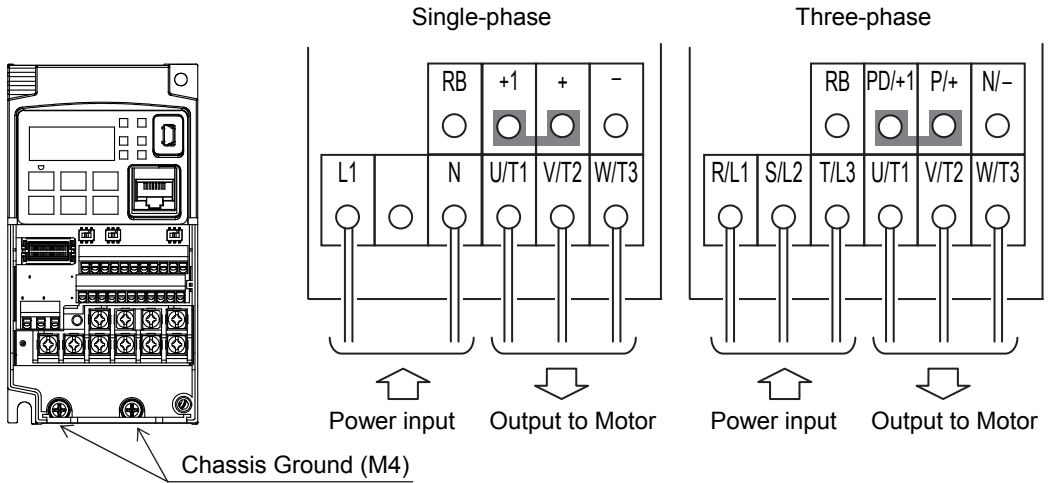



**Single-phase 200V 0.75 to 2.2kW**  
**Three-phase 200V 1.5, 2.2kW**  
**Three-phase 400V 0.4 to 3.0kW**

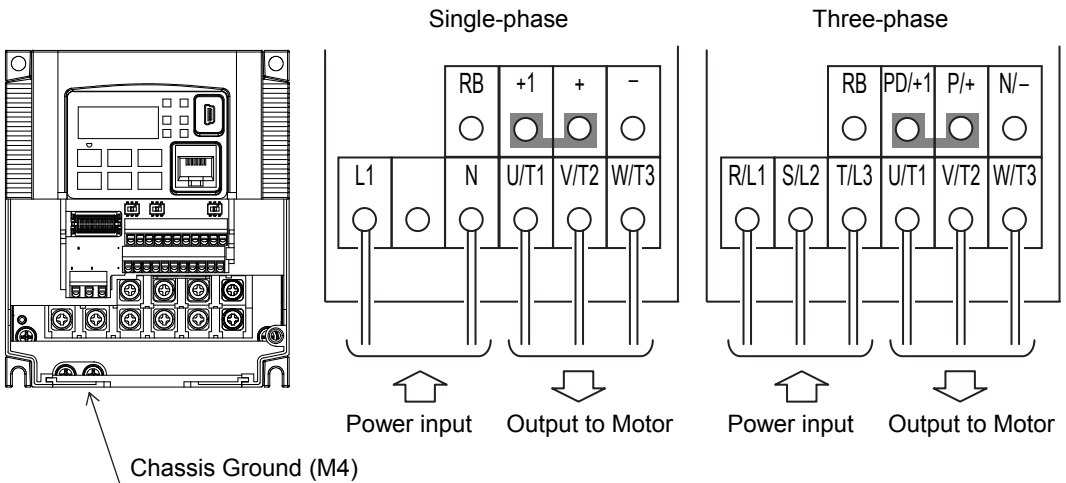



Three-phase 200V 3.7kW  
 Three-phase 400V 4.0kW

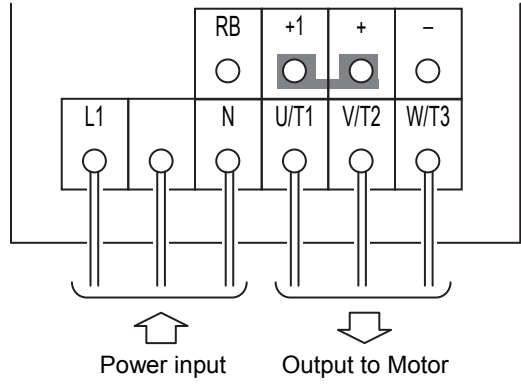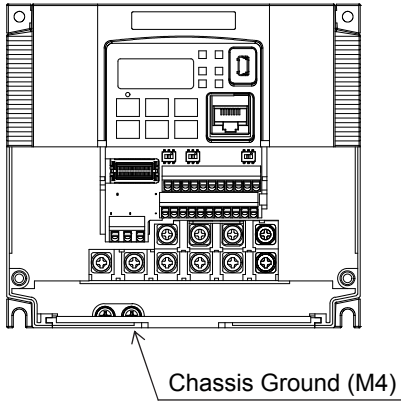



Three-phase 200V 5.5, 7.5kW  
 Three-phase 400V 5.5, 7.5kW

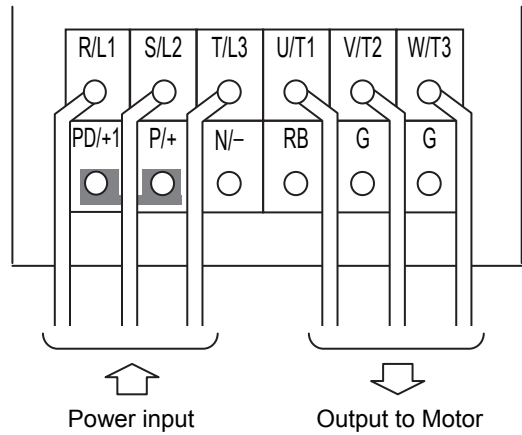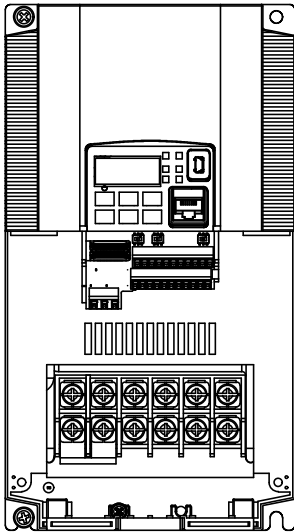

Three-phase 200V 11kW  
 Three-phase 400V 11, 15kW

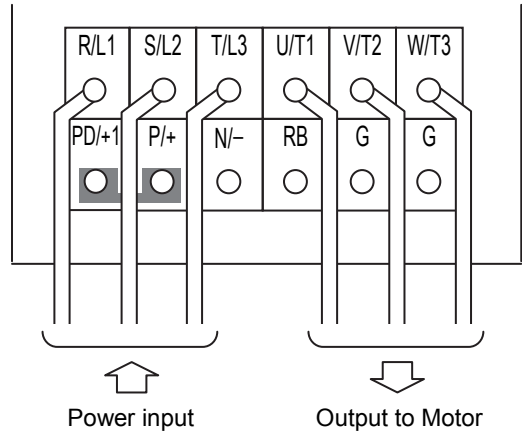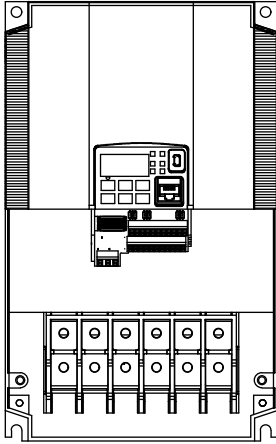

Three-phase 200V 15kW

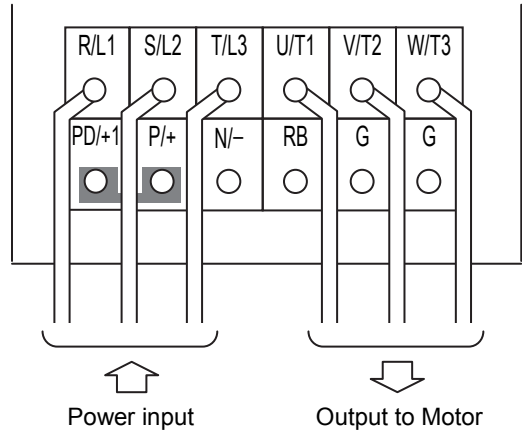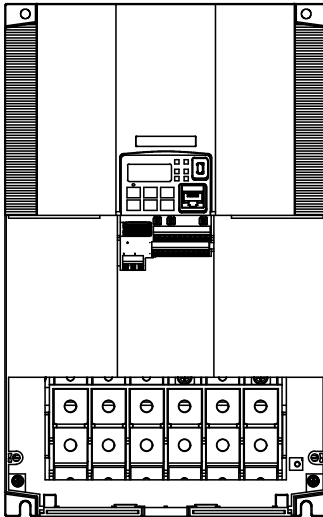

**NOTE:** An inverter powered by a portable power generator may receive a distorted power waveform, overheating the generator. In general, the generator capacity should be five times that of the inverter (kVA).



**CAUTION:** Be sure that the input voltage matches the inverter specifications:


- Single-phase 200 to 240 V 50/60 Hz (0.1kW~2.2kW) for SF models
- Three-phase 200 to 240 V 50/60 Hz (0.1kW~15kW) for LF models
- Three-phase 380 to 480 V 50/60Hz (0.4kW~15kW) for HF models



**CAUTION:** Be sure not to power a three-phase-only inverter with single-phase power. Otherwise, there is the possibility of damage to the inverter and the danger of fire.



**CAUTION:** Be sure not to connect an AC power supply to the output terminals. Otherwise, there is the possibility of damage to the inverter and the danger of injury and/or fire.

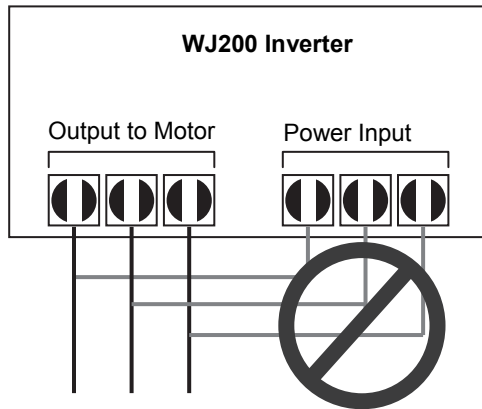

**CAUTION:** Remarks for using ground fault interrupter breakers in the main power supply: Adjustable frequency inverter with integrated CE-filters and shielded (screened) motor cables have a higher leakage current toward earth GND. Especially at the moment of switching ON this can cause an inadvertent trip of ground fault interrupters. Because of the rectifier on the input side of the inverter there is the possibility to stall the switch-off function through small amounts of DC current.

Please observe the following:

- Use only short time-invariant and pulse current-sensitive ground fault interrupters with higher trigger current.
- Other components should be secured with separate ground fault interrupters.
- Ground fault interrupters in the power input wiring of an inverter are not an absolute protection against electric shock.




**CAUTION:** Be sure to install a fuse in each phase of the main power supply to the inverter. Otherwise, there is the danger of fire.



**CAUTION:** For motor leads, ground fault interrupter breakers and electromagnetic contactors, be sure to size these components properly (each must have the capacity for rated current and voltage). Otherwise, there is the danger of fire.

## Wire the Inverter Output to Motor

 **Step 7:** The process of motor selection is beyond the scope of this manual. However, it must be an AC induction motor with three phases. It should also come with a chassis ground lug. If the motor does not have three power input leads, stop the installation and verify the motor type. Other guidelines for wiring the motor include:

- Use an inverter-grade motor for maximum motor life (1600V insulation).
- For standard motors, use the AC reactor accessory if the wiring between the inverter and motor exceeds 10 meters in length.

Simply connect the motor to the terminals [U/T1], [V/T2], and [W/T3] as shown in page 2-17 to 2-19. This is a good time to connect the chassis ground lug on the drive as well. The motor chassis ground must also connect to the same point. Use a star ground (single-point) arrangement, and never daisy-chain the grounds (point-to-point).

- Check the mechanical integrity of each wire crimp and terminal connection.
- Replace the housing partition that covers access to the power connections.



---

**CAUTION:** Power terminal assignment is different compared to old models such as L100, L200 series, etc.,. Pay attention when wiring the power cable

---

## Logic Control Wiring

After completing the initial installation and powerup test in this chapter, you may need to wire the logic signal connector for your application. For new inverter users/applications, we highly recommend that you first complete the powerup test in this chapter without adding any logic control wiring. Then you will be ready to set the required parameters for logic control as covered in Chapter 4, Operations and Monitoring.



---

**IMPORTANT!:** Please be sure to set the motor nameplate data into the appropriate parameters to ensure proper operation and protection of the motor:

 
- \* B012 is the motor overload protection value
- \* A082 is the motor voltage selection
- \* H003 is the motor kW capacity
- \* H004 is the number of motor poles

Please refer to the appropriate pages in this guide and the Instruction Manual for further details.

---




## Uncover the Inverter Vents


 **Step 8:** After mounting and wiring the inverter, remove any covers from the inverter housing. This includes material over the side ventilation ports.



**WARNING:** Make sure the input power to the inverter is OFF. If the drive has been powered, leave it OFF for ten minutes before continuing.

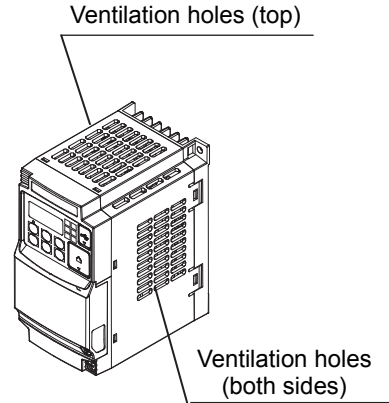

## Powerup Test

  **Step 9:** After wiring the inverter and motor, you're ready to do a powerup test. The procedure that follows is designed for the first-time use of the drive. Please verify the following conditions before conducting the powerup test:

- You have followed all the steps in this chapter up to this step.
- The inverter is new, and is securely mounted to a non-flammable vertical surface.
- The inverter is connected to a power source and a motor.
- No additional wiring of the inverter connectors or terminals has been done.
- The power supply is reliable, and the motor is a known working unit, and the motor nameplate ratings match the inverter ratings.
- The motor is securely mounted, and is not connected to any load.

### Goals for the Powerup Test

If there are any exceptions to the above conditions at this step, please take a moment to take any measures necessary to reach this basic starting point. The specific goals of this powerup test are:

1. Verify that the wiring to the power supply and motor is correct.
2. Demonstrate that the inverter and motor are generally compatible.
3. Get an introduction to the use of the built-in operator keypad.

The powerup test gives you an important starting to ensure a safe and successful application of the Hitachi inverter. We highly recommend performing this test before proceeding to the other chapters in this manual.

## Pre-test and Operational Precautions

The following instructions apply to the powerup test, or to any time the inverter is powered and operating. Please study the following instructions and messages before proceeding with the powerup test.

1. The power supply must have fusing suitable for the load. Check the fuse size chart presented in Step 5, if necessary.
2. Be sure you have access to a disconnect switch for the drive input power if necessary. However, do not turn OFF power during inverter operation unless it is an emergency.
3. Turn the keypad potentiometer to the minimum position (full counter-clockwise).



**CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.



**CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, there is the danger of injury.



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage and/or injury.



**CAUTION:** Check the following before and during the Powerup test. Otherwise, there is the danger of equipment damage.

- Is the shorting bar between the [+1] and [+] terminals installed? DO NOT power or operate the inverter if the jumper is removed.
- Is the direction of the motor rotation correct?
- Did the inverter trip during acceleration or deceleration?
- Were the rpm and frequency meter readings as expected?
- Were there any abnormal motor vibration or noise?

## Powering the Inverter

If you have followed all the steps, cautions and warnings up to this point, you're ready to apply power. After doing so, the following events should occur:

- The *POWER* LED will illuminate.
- The numeric (7-segment) LEDs will display a test pattern, then stop at **0.0**.
- The Hz LED will be ON.


If the motor starts running unexpectedly or any other problem occurs, press the STOP key. Only if necessary should you remove power to the inverter as a remedy.



**NOTE:** If the inverter has been previously powered and programmed, the LEDs (other than the POWER LED) may illuminate differently than as indicated above. If necessary, you can initialize all parameters to the factory default settings. See "[Restoring Factory Default Settings](#)" on page 6-14.

## Using the Front Panel Keypad

Please take a moment to familiarize yourself with the keypad layout shown in the figure below. The display is used in programming the inverter's parameters, as well as monitoring specific parameter values during operation.

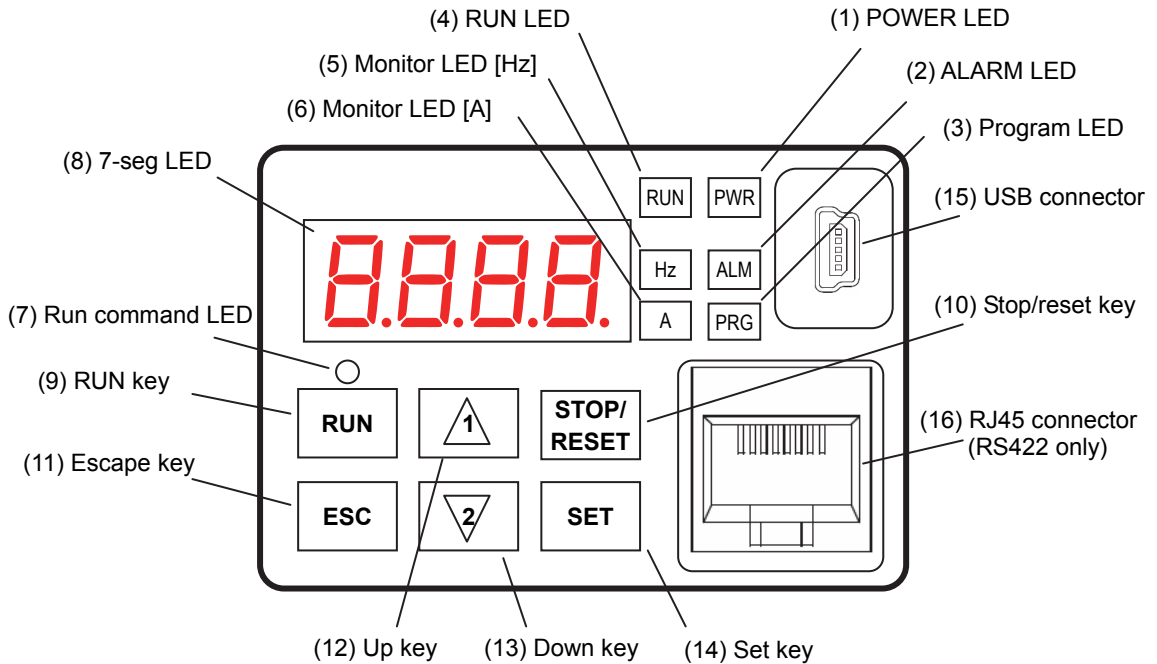


### Key and Indicator Legend

Items	Contents
(1) POWER LED	Turns ON (Green) while the inverter is powered up.
(2) ALARM LED	Turns ON (Red) when the inverter trips.
(3) Program LED	<ul style="list-style-type: none"> <li>➤ Turns ON (Green) when the display shows changeable parameter.</li> <li>➤ Blinks when there is a mismatch in setting.</li> </ul>
(4) RUN LED	Turns ON (Green) when the inverter is driving the motor.
(5) Monitor LED [Hz]	Turns ON (Green) when the displayed data is frequency related.
(6) Monitor LED [A]	Turns ON (Green) when the displayed data is current related.
(7) Run command LED	Turns ON (Green) when a Run command is set to the operator. (Run key is effective.)
(8) 7-seg LED	Shows each parameter, monitors etc.
(9) Run key	Makes inverter run.
(10) Stop/reset key	<ul style="list-style-type: none"> <li>➤ Makes inverter decelerates to a stop.</li> <li>➤ Reset the inverter when it is in trip situation</li> </ul>
(11) ESC key	<ul style="list-style-type: none"> <li>➤ Go to the top of next function group, when a function mode is shown</li> <li>➤ Cancel the setting and return to the function code, when a data is shown</li> <li>➤ Moves the cursor to a digit left, when it is in digit-to-digit setting mode</li> <li>➤ Pressing for 1 second leads to display data of <b>d00 I</b>, regardless of current display.</li> </ul>
(12) Up key	<ul style="list-style-type: none"> <li>➤ Increase or decrease the data.</li> </ul>
(13) Down key	<ul style="list-style-type: none"> <li>➤ Pressing the both keys at the same time gives you the digit-to-digit edit.</li> </ul>
(14) SET key	<ul style="list-style-type: none"> <li>➤ Go to the data display mode when a function code is shown</li> <li>➤ Stores the data and go back to show the function code, when data is shown.</li> <li>➤ Moves the cursor to a digit right, when it is in digit-to-digit display mode</li> </ul>
(15) USB connector	Connect USB connector (mini-B) for using PC communication
(16) RJ45 connector	Connect RJ45 jack for remote operator. (RS422 only)

## Keys, Modes, and Parameters

The purpose of the keypad is to provide a way to change modes and parameters. The term function applies to both monitoring modes and parameters. These are all accessible through function codes that are primary 4-character codes. The various functions are separated into related groups identifiable by the left-most character, as the table shows.

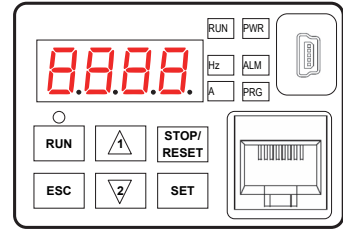


Function Group	Type (Category) of Function	Mode to Access	PRG LED Indicator
"D"	Monitoring functions	Monitor	○
"F"	Main profile parameters	Program	●
"A"	Standard functions	Program	●
"B"	Fine tuning functions	Program	●
"C"	Intelligent terminal functions	Program	●
"H"	Motor constant related functions	Program	●
"P"	Pulse train input, torque, EzSQ, and communication related functions	Program	●
"U"	User selected parameters	Program	●
"E"	Error codes	—	—

You can see from the following page how to monitor and/or program the parameters.

## Keypad Navigation Map


The WJ200 Series inverter drives have many programmable functions and parameters. Chapter 3 will cover these in detail, but you need to access just a few items to perform the powerup test. The menu structure makes use of function codes and parameter codes to allow programming and monitoring with only a 4-digit display and keys and LEDs. So, it is important to become familiar with the basic navigation map of parameters and functions in the diagram below. You may later use this map as a reference.

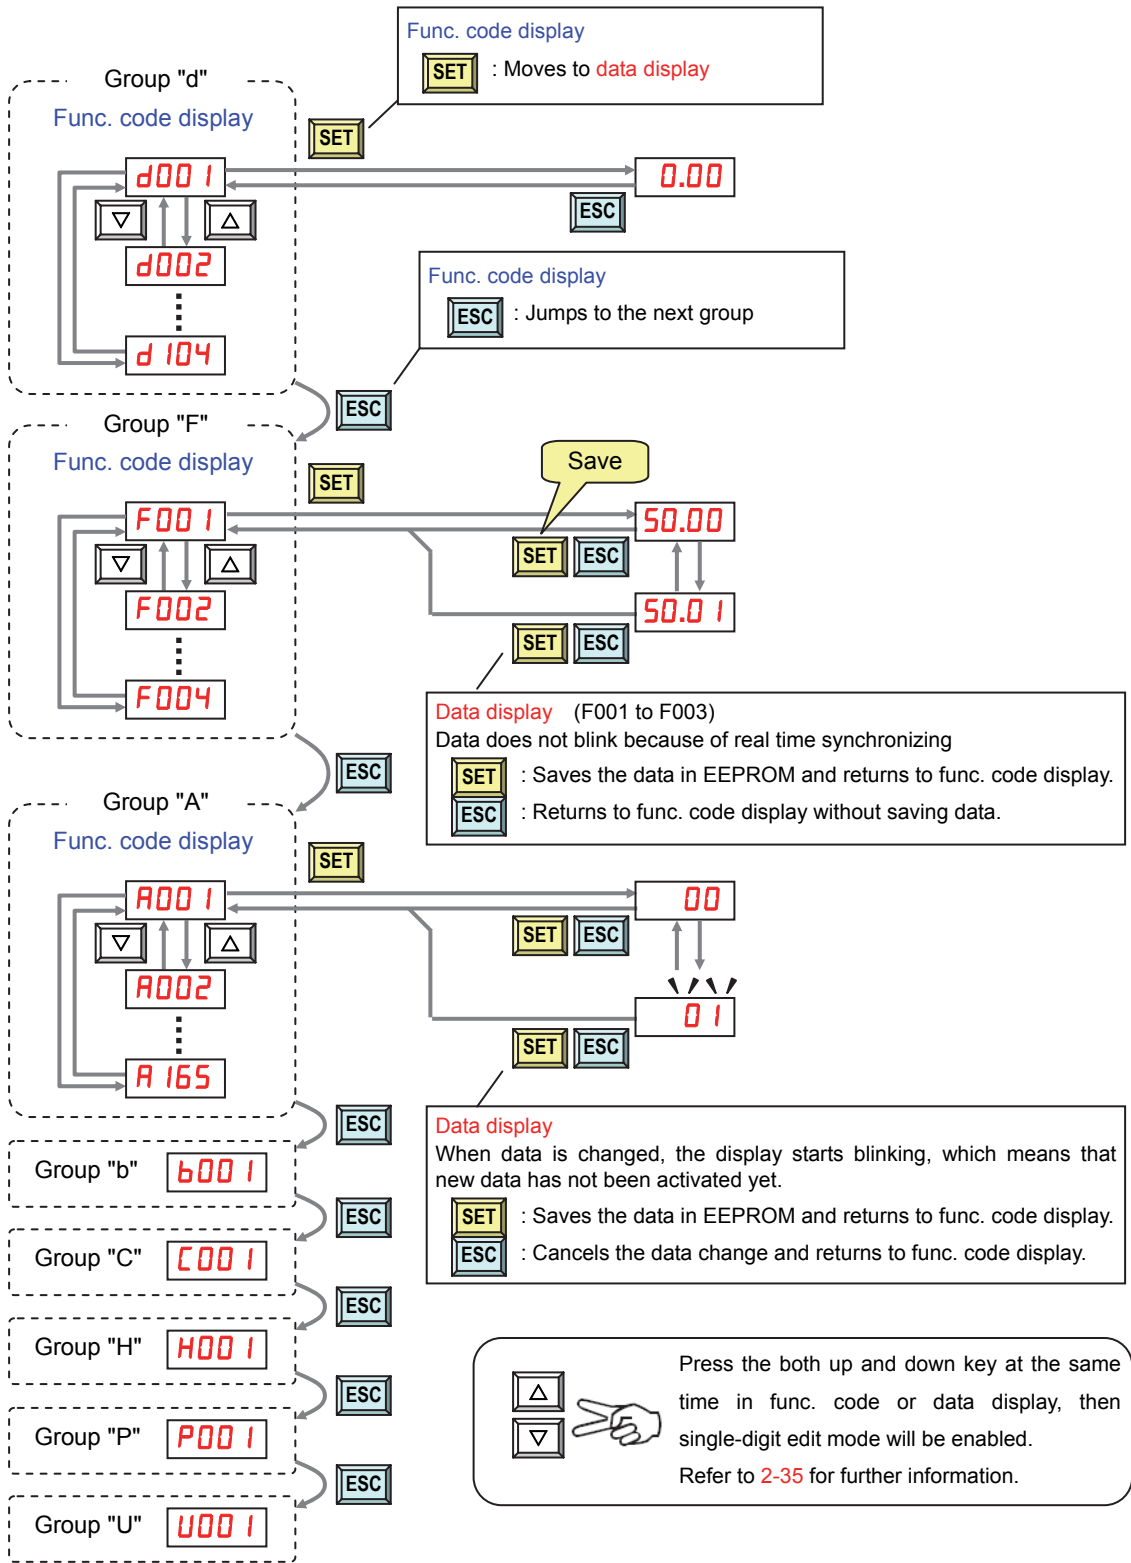

**NOTE:** Pressing the [ESC] key will make the display go to the top of next function group, regardless the display contents. (e.g. *A02 1* → [ESC] → *b00 1*)

[Setting example]

After power ON, changing from 0.00 display to change the **b0B3** (carrier frequency) data.

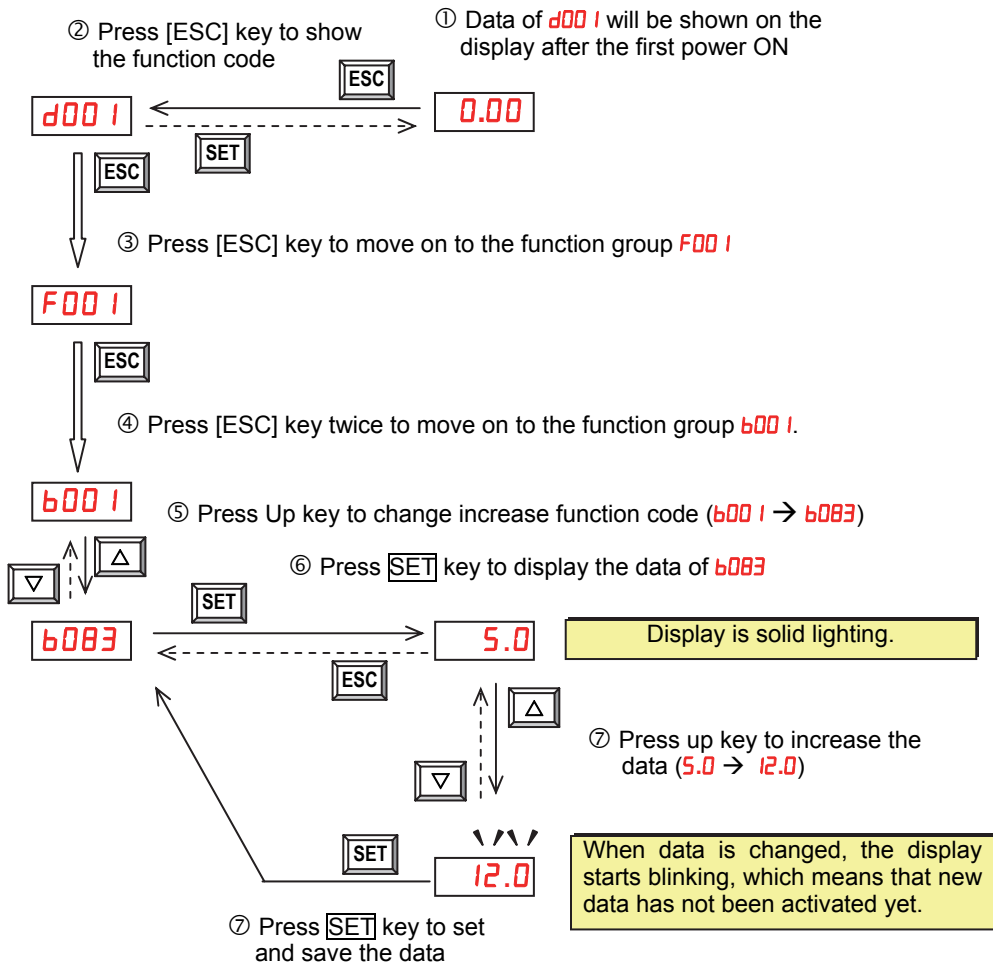

[SET] :Fix and stores the data and moves back to the function code  
 [ESC] :Cancels the change and moves back to the function code



Function code **dxxx** are for monitor and not possible to change.

Function codes **Fxxx** other than **F004** are reflected on the performance just after changing the data (before pressing [SET] key), and there will be no blinking.

	When a function code is shown...	When a data is shown...
[ESC] key	Move on to the next function group	Cancels the change and moves back to the function code
[SET] key	Move on to the data display	Fix and stores the data and moves back to the function code
[Δ] key	Increase function code	Increase data value
[▽] key	Decrease function code	Decrease data value

**Note**

Keep pressing for more than 1 second leads to d001 display, regardless the display situation. But note that the display will circulates while keep pressing the [ESC] key because of the original function of the key. (e.g. **F001** → **A001** → **b001** → **C001** → ... → displays **50.00** after 1 second)

## Selecting Functions and Editing Parameters

To prepare to run the motor in the powerup test, this section will show how to configure the necessary parameters:

1. Select the digital operator as the source of motor speed command (**A001=02**).
2. Select the digital operator as the source of the RUN command (**A002=02**).
3. Set the motor base frequency (**A003**) and AVR voltage of the motor (**A002**).
4. Set the motor current for proper thermal protection (**b0 i2**).
5. Set the number of poles for the motor (**H004**).

The following series of programming tables are designed for successive use. Each table uses the previous table's final state as the starting point. Therefore, start with the first and continue programming until the last one. If you get lost or concerned that some of the other parameters setting may be incorrect, refer to "[Restoring Factory Default Settings](#)" on page 6-8.

**Prepare to Edit Parameters** – This sequence begins with powering ON the inverter, then it shows how to navigate to the "A" Group parameters for subsequent settings. You can also refer to the "[Keypad Navigation Map](#)" on page 2-26 for orientation throughout the steps.


Action	Display	Func./Parameter
Turn ON the inverter		Inverter output frequency displayed (0Hz in stop mode)
Press the  key.		"d" group selected
Press the  key 2 times.		"A" group selected

**1. Select the digital operator for Speed Command** – The inverter output frequency can be set from several sources, including an analog input, memory setting, or the network, for example. The powerup test uses the keypad as the speed control source for your convenience. Note that the default setting depends on the country.

Action	Display	Func./Parameter
(Starting point)		"A" Group selected Speed command source setting
Press the  key		00...Potentiometer of ext. operator 01...Control terminals 02...Digital operator (F001) 03...ModBus network etc.
Press the  /  key to select		02...Digital operator (selected)
Press the  key to store		Stores parameter, returns to "A001"

**2. Select the digital operator for RUN Command –**

To RUN command causes the inverter to accelerate the motor to the selected speed. The Run command can arrive from various sources, including the control terminals, the Run key on the keypad or the network. In the figure to the right, notice the Run Key Enable LED, just above the Run key. If the LED is ON, the Run key is already selected as the source, and you may skip this step. Note that the default setting depends on the country.

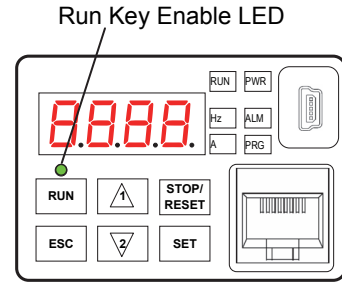

If the Potentiometer Enable LED is OFF, follow these steps below (the table resumes action from the end of the previous table).

Action	Display	Func./Parameter
(Starting point)	<b>AD01</b>	Speed command source setting
Press the <b>▲</b> key	<b>AD02</b>	Run command source setting
Press the <b>SET</b> key	<b>01</b>	01...Control terminal 02...Digital operator 03...ModBus network input etc.
Press the <b>▲</b> / <b>▼</b> key to select	<b>02</b>	02... Digital operator (selected)
Press the <b>SET</b> key to store	<b>AD02</b>	Stores parameter, returns to "AD02"



**NOTE:** After completing the steps above, the Run Key Enable LED will be ON. This does not mean the motor is trying to run; it means that the RUN key is now enabled. DO NOT press the RUN key at this time – complete the parameter setup first.



**3. Set the Motor Base Frequency and AVR voltage of the motor** – The motor is designed to operate at a specific AC frequency. Most commercial motors are designed for 50/60 Hz operation. First, check the motor specifications. Then follow the steps below to verify the setting or correct it for your motor. **DO NOT** set it greater than 50/60 Hz unless the motor manufacturer specifically approves operation at the higher frequency.

Action	Display	Func./Parameter
(Starting point)	<b>R002</b>	Run command source setting
Press the <b>△</b> key once.	<b>R003</b>	Base frequency setting
Press the <b>SET</b> key.	<b>60.0</b> or <b>50.0</b>	Default value for the base frequency. US = 60 Hz, Europe = 50 Hz
Press the <b>△</b> / <b>▽</b> key to select	<b>60.0</b>	Set to your motor specs (your display may be different)
Press the <b>SET</b> key.	<b>R003</b>	Store parameter, returns to “R003”



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.

**Set the AVR Voltage Setting** – The inverter has an Automatic Voltage Regulation (AVR) function. It adjusts the output voltage to match the motor’s nameplate voltage rating. The AVR smoothes out fluctuation in the input power source, but note that it does not boost the voltage in the event of a brown-out. Use the AVR setting (**R0B2**) that most closely matches the one for your motor.

- 200V class: 200 / 215 / 220 / 230 / 240 VAC
- 400V class: 380 / 400 / 415 / 440 / 460 / 480 VAC

To set the motor voltage, follow the steps on the following table.

Action	Display	Func./Parameter
(Starting point)	<b>R003</b>	Base frequency setting
Press the <b>△</b> key and hold until →	<b>R0B2</b>	AVR voltage select
Press the <b>SET</b> key.	<b>R230</b> or <b>R400</b>	Default value for AVR voltage: 200V class = 230VAC 400V class = 400VAC (HFE) = 460VAC (HFU)
Press the <b>△</b> / <b>▽</b> key to select	<b>R2 15</b>	Set to your motor specs (your display may be different)
Press the <b>SET</b> key.	<b>R0B2</b>	Store parameter, returns to “R0B2”

**4. Set the Motor Current** – The inverter has thermal overload protection that is designed to protect the inverter and motor from overheating due to an excessive load. The inverter's uses the motor's current rating to calculate the time-based heating effect. This protection depends on using correct current rating for your motor. The level of electronic thermal setting, parameter **b0 12**, is adjustable from 20% to 100% of the inverter's rated current. A proper configuration will also help prevent unnecessary inverter trip events.

Read the motor's current rating on its manufacturer's nameplate. Then follow the steps below to configure the inverter's overload protection setting.

Action	Display	Func./Parameter
(Starting point)	<b>A0B2</b>	AVR voltage select
Press the <b>ESC</b> key.	<b>b00 1</b>	First "B" Group parameter selected
Press the <b>△</b> key and hold until →	<b>b0 12</b>	Level of electronic thermal setting
Press the <b>SET</b> key.	<b>b 160</b>	Default value will be 100% of inverter rated current
Press the <b>△</b> / <b>▽</b> key to select	<b>b 140</b>	Set to your motor specs (your display may be different)
Press the <b>SET</b> key.	<b>b0 12</b>	Store parameter, returns to "b0 12"

**5. Set the Number of Motor Poles** – The motor’s internal winding arrangement determines its number of magnetic poles. The specification label on the motor usually indicates the number of poles. For proper operation, verify the parameter setting matches the motor poles. Many industrial motors have four poles, corresponding to the default setting in the inverter (**H004**).

Follow the steps in the table below to verify the motor poles setting and change if necessary (the table resumes action from the end of the previous table.)

Action	Display	Func./Parameter
(Starting point)	<b>60 12</b>	Level of electronic thermal setting
Press the <b>ESC</b> key two times	<b>H00 1</b>	“H” Group selected
Press the <b>△</b> key three times	<b>H004</b>	Motor poles parameter
Press the <b>SET</b> key.	<b>H004</b>	2 = 2 poles 4 = 4 poles (default) 6 = 6 poles 8 = 8 poles 10 = 10 poles
Press the <b>△</b> / <b>▽</b> key to select	<b>H004</b>	Set to your motor specs (your display may be different)
Press the <b>SET</b> key.	<b>H004</b>	Store parameter, returns to “H004”

This step concludes the parameter setups for the inverter. You are almost ready to run the motor for the first time!




**TIP:** If you became lost during any of these steps, first observe the state of the PRG LED. Then study the “[Keypad Navigation Map](#) on page 2-26 to determine the current state of the keypad controls and display. As long as you do not press the SET key, no parameter will be changed by keypad entry errors. Note that power cycling the inverter causes it to power up Monitor Mode, displaying the value for **d00 1** (output frequency).

The next section will show you how to monitor a particular parameter from the display. Then you will be ready to run the motor.

## Monitoring Parameters with the Display

After using the keypad for parameter editing, it's a good idea to switch the inverter from Program Mode to Monitor Mode. The PRG LED will be OFF, and the Hertz or Ampere LED indicates the display units.

For the powerup test, monitor the motor speed indirectly by viewing the inverter's output frequency. The output frequency must not be confused with base frequency (50/60 Hz) of the motor, or the carrier frequency (switching frequency of the inverter, in the kHz range). The monitoring functions are in the "D" list, located near the top left of the ["Keypad Navigation Map"](#) on page 2-26.

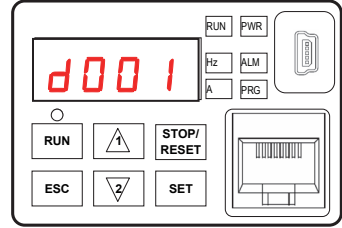

**Output frequency (speed) set** – Resuming keypad operation from the previous table, follow the steps below.

Action	Display	Func./Parameter
(Starting point)	<b>H004</b>	Motor poles parameter
Press the <b>ESC</b> key four times	<b>F001</b>	<b>F001</b> is selected
Press the <b>SET</b> key.	<b>6100</b>	Set frequency displayed

## Running the Motor

If you have programmed all the parameters up to this point, you're ready to run the motor! First, review this checklist:

1. Verify the power LED is ON. If not, check the power connections.
2. Verify the Run Key Enable LED is ON. If it is OFF, check the **A002** setting.
3. Verify the PRG LED is OFF. If it is ON, review the instructions above.
4. Make sure the motor is disconnected from any mechanical load.
5. Now, press the RUN key on the keypad. The RUN LED will turn ON.
6. Press the **[Δ]** key for a few seconds. The motor should start turning.
7. Press the STOP key to stop the motor rotation.


## Single-Digit Edit Mode

If a target function code or data is far from current data, using the single-digit edit mode makes it quicker. Pressing the up key and down key at the same time leads you to go into the digit-to-digit changing mode.

While in Single-digit edit mode (single digit is blinking):

**[SET]** : Move cursor to right or set the func.code/data (lowest digit only)

**[ESC]** : Move cursor to left.

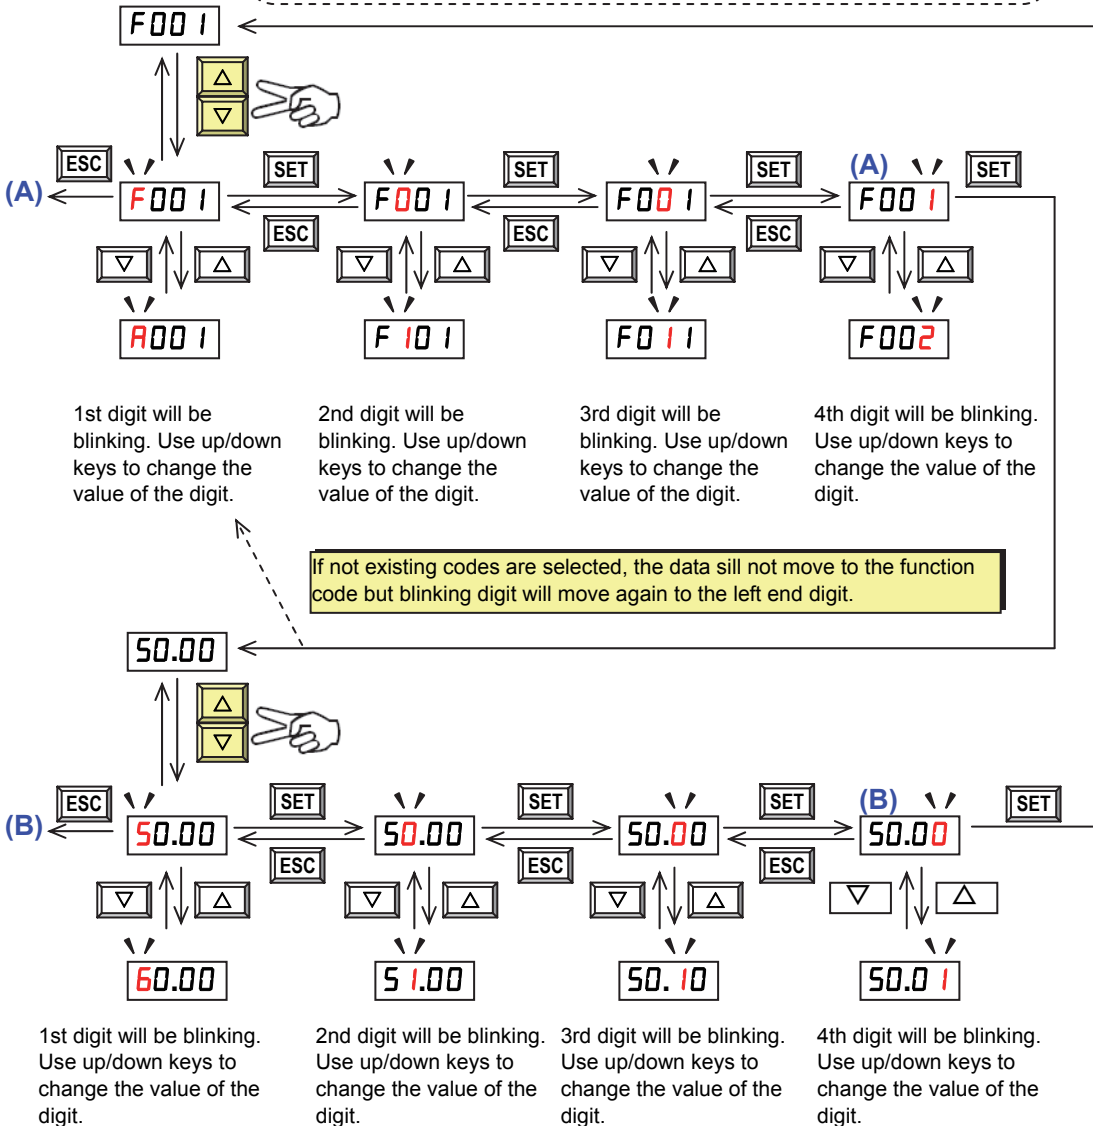


(Note) When pressing [ESC] with cursor on the highest digit, the cursor will jump to the lowest digit. ((A) and (B) in above figure.)



(Note) When pressing up key and down key at the same time in single-digit edit mode, the single-digit edit mode is disabled and goes back to normal mode.

## Powerup Test Observations and Summary

 **Step 10:** Reading this section will help you make some useful observations when first running the motor.

**Error Codes** – If the inverter displays an error code (format is “E xx”), see “Monitoring Trip Events, History, & Conditions” on page 6-5 to interpret and clear the error.

**Acceleration and Deceleration** – The WJ200 inverter has programmable acceleration and deceleration value. The test procedure left these at the default value, 10 seconds. You can observe this by setting the frequency *F001* at about half speed before running the motor. Then press RUN, and the motor will take 5 seconds to reach a steady speed. Press the STOP key to see a 5 second deceleration to a STOP.

**State of Inverter at Stop** – If you adjust the motor’s speed to zero, the motor will slow to a near stop, and the inverter turns the outputs OFF. The high-performance WJ200 can rotate at a very slow speed with high torque output, but not zero (must use servo systems with position feedback for that feature). This characteristic means you must use a mechanical brake for some applications.


**Interpreting the Display** – First, refer to the output frequency display readout. The maximum frequency setting (parameter *A044*) defaults to 50 Hz or 60 Hz (Europe and United States, respectively) for your application.

Example: Suppose a 4-pole motor is rated for 60 Hz operation, so the inverter is configured to output 60 Hz at full scale. Use the following formula to calculate the rpm.

$$\text{Speed in RPM} = \frac{\text{Frequency} \times 60}{\text{Pairs of poles}} = \frac{\text{Frequency} \times 120}{\# \text{ of poles}} = \frac{60 \times 120}{4} = 1800 \text{ RPM}$$

The theoretical speed for the motor is 1800 RPM (speed of torque vector rotation). However, the motor cannot generate torque unless its shaft turns at a slightly different speed. This difference is called slip. So it’s common to see a rated speed of approximately 1750 RPM on a 60 Hz, 4-pole motor. Using a tachometer to measure shaft speed, you can see the difference between the inverter output frequency and the actual motor speed. The slip increases slightly as the motor’s load increases. This is why the inverter output value is called “frequency”, since it is not exactly equal to motor speed.

**Run/Stop Versus Monitor/Program Modes** – The Run LED on the inverter is ON in Run Mode, and OFF in Stop Mode. The Program LED is ON when the inverter is in Program Mode, and OFF for Monitor Mode. All four mode combinations are possible. The diagram to the right depicts the modes and the mode transitions via keypad.

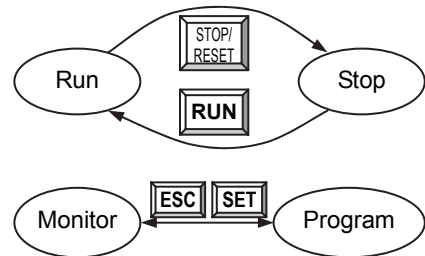

**NOTE:** Some factory automation devices such as PLCs have alternative Run/Program modes; the device is in either one mode or the other. In the Hitachi inverter, however, Run Mode alternates with Stop Mode, and Program Mode alternates with Monitor Mode. This arrangement lets you program some value while the inverter is operating – providing flexibility for maintenance personnel.

# Configuring Drive Parameters



## 3

In This Chapter...	page
- <b>Choosing a Programming Device</b> .....	2
- <b>Using the Keypad Devices</b> .....	3
- <b>“D” Group: Monitoring Functions</b> .....	7
- <b>“F” Group: Main Profile Parameters</b> .....	11
- <b>“A” Group: Standard Functions</b> .....	12
- <b>“B” Group: Fine Tuning Functions</b> .....	44
- <b>“C” Group: Intelligent Terminal Functions</b> .....	83
- <b>“H” Group: Motor Constants Functions</b> .....	104
: <b>Sensorless Vector Control</b> .....	107
: <b>Auto-tuning Function</b> .....	108
- <b>“P” Group: Other Parameters</b> .....	111
: <b>Simple Positioning</b> .....	114

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

---

# Choosing a Programming Device

## Introduction

Hitachi variable frequency drives (inverters) use the latest electronics technology for getting the right AC waveform to the motor at the right time. The benefits are many, including energy savings and higher machine output or productivity. The flexibility required to handle a broad range of applications has required ever more configurable options and parameters – inverter are now a complex industrial automation component. And this can make a product seem difficult to use, but the goal of this chapter is to make this easier for you.

As the powerup test in Chapter 2 demonstrated, you do not have to program very many parameters to run the motor. In fact, most applications would benefit only from programming just a few, specific parameters. This chapter will explain the purpose of each set of parameters, and help you choose the ones that are important to your application.

If you are developing a new application for the inverter and a motor, finding the right parameters to change is mostly an exercise in optimization. Therefore, it is okay to begin running the motor with a loosely tuned system. By making specific, individual changes and observing their effects, you can achieve a finely tuned system.

## Introduction of Inverter Programming


The front panel keypad is the first and best way to get to know the inverter's capabilities. Every function or programmable parameter is accessible from the keypad.

---



## Using the Keypad Devices

The WJ200 Series inverter front keypad contains all the elements for both monitoring and programming parameters. The keypad layout is pictured below. All other programming devices for the inverter have a similar key arrangement and function.

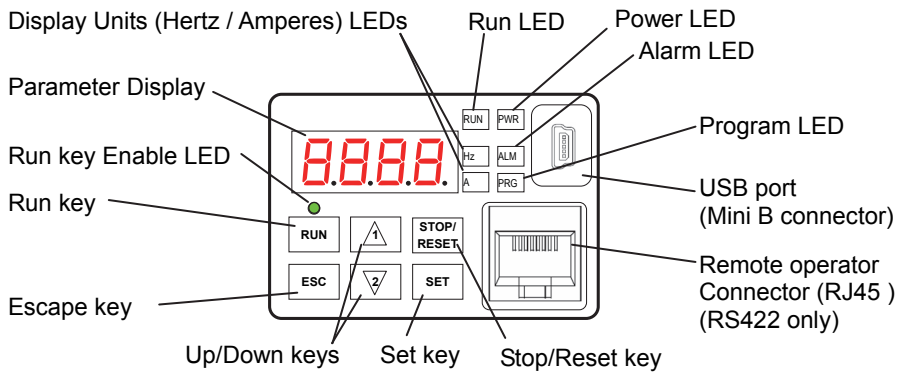


### Key and Indicator Legend


- **Run LED** – ON when the inverter output is ON and the motor is developing torque (Run Mode), and OFF when the inverter output is OFF (Stop Mode).
- **Program LED** – This LED is ON when the inverter is ready for parameter editing (Program Mode). It is OFF when the parameter display is monitoring data (Monitor Mode).
- **Run Key Enable LED** – This LED is ON when the inverter is ready to respond to the Run key, OFF when the Run key is disabled.
- **Run Key** – Press this key to run the motor (the Run Enable LED must be ON first). Parameter **F004**, Keypad Run Key Routing, determines whether the Run key generates a Run FWD or Run REV command.
- **Stop/Reset Key** – Press this key to stop the motor when it is running (uses the programmed deceleration rate). This key will also reset an alarm that has tripped.
- **Parameter Display** – A 4-digit, 7-segment display for parameters and function codes.
- **Display Units, Hertz/Amperes** – One of these LEDs will be ON to indicate the units associated with the parameter display.
- **Power LED** – This is ON when the power input to the inverter is ON.
- **Alarm LED** – ON when an inverter trip is active (alarm relay contact will be closed).
- **Escape Key** – This key is used to escape from the current situation.
- **Up/Down keys** – Use these keys alternatively to move up or down the lists of parameter and functions shown in the display, and increment/decrement values.
- **Set key** – This key is used to navigate through the lists of parameters and functions for setting and monitoring parameter values. When the unit is in Program Mode and you have edited a parameter value, press the Set key to write the new value to the EEPROM.

## Operational Modes

The RUN and PRG LEDs tell just part of the story; Run Mode and Program Modes are independent modes, not opposite modes. In the state diagram to the right, Run alternates with Stop, and Program Mode alternates with Monitor Mode. This is a very important ability, for it shows that a technician can approach a running machine and change some parameters without shutting down the machine.

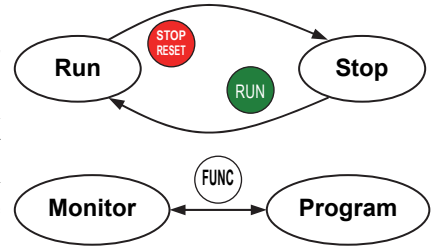

The occurrence of a fault during operation will cause the inverter to enter Trip Mode as shown. An event such as an output overload will cause the inverter to exit the Run Mode and turn OFF its output to the motor. In the Trip Mode, any request to run the motor is ignored. You must clear the error by pressing the Stop/Reset switch. See “[Monitoring Trip Events, History, & Conditions](#)” on page 6-8.

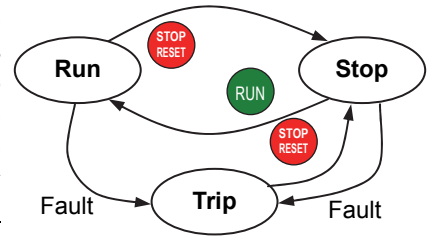

## Run Mode Edit


The inverter can be in Run Mode (inverter output is controlling motor) and still allow you to edit certain parameters. This is useful in applications that must run continuously, you need some inverter parameter adjustment.

The parameter tables in this chapter have a column titled “Run Mode Edit”. An Ex mark **X** means the parameter cannot be edited; a Check mark **✓** means the parameter can be edited. The Software Lock Setting (parameter **b031**) determines when the Run Mode access permission is in effect and access permission in other conditions, as well. It is the responsibility of the user to choose a useful and safe software lock setting for the inverter operating conditions and personnel. Please refer to “Software Lock Mode” on page 3-53 for more information.

	<b>Run Mode Edit</b>	
	<b>X</b>	
	<b>✓</b>	

## Control Algorithms

The motor control program in the WJ200 inverter has two sinusoidal PWM switching algorithms. The intent is that you select the best algorithm for the motor and load characteristics of your application. Both algorithms generate the frequency output in a unique way. Once configured, the algorithm is the basis for other parameter settings as well (see “[Torque Control Algorithms](#)” on page 3-22). Therefore, choose the best algorithm early in your application design process.

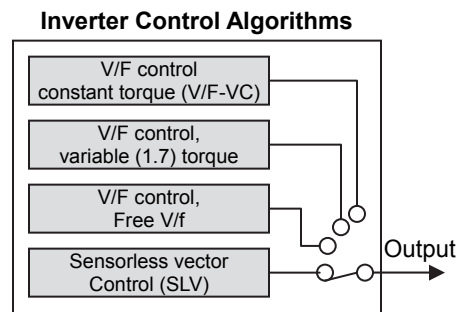

## Dual Rating Selection

The WJ200 series inverter has Dual Rating, so that it can work in two different types of load condition, Constant torque application and Variable torque application. Select parameter **b049** depending on your application.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b049</b>	Dual Rating Selection	00... (CT mode) / 01... (VT mode)	<b>X</b>	00	–

When changed, the rated output current and related items are changed automatically. Differences between HD and ND are described below.

	HD	ND
Usage	For heavy load with high torque required at start, acceleration or deceleration	For normal load without high torque required.
Applications	Elevators, cranes, conveyers, etc.	fans, pumps, air-conditionings
Rated current (example)	1.0A (3-phase 200V 0.1kW)	1.2A (3-phase 200V 0.1kW)
Overload current	150% 60 sec.	120% 60 sec.

Initial values of HD and ND are different shown as below table. Be sure to note that when the dual rating selection b049 is changed except H003/H203, those initial values are also changed. (Even if currently set value is within the range of both HD and ND, data is initialized when b049 is changed.)

Name	Func. code	HD		ND	
		Range	initial data	Range	initial data
V/f characteristic curve	A044 A244	00: Const. torque 01: Reduced torque 02: Free V/F 03: SLV	00: Const. tq.	00: Const. torque 01: Reduced tq. 02: Free V/F	00: Const. tq.
DC braking force for deceleration	A054	0 to 100 (%)	0 (%)	0 to 70 %	50 (%)
DC braking force at start	A057	0 to 100 (%)	0 (%)	0 to 70 %	0 (%)
Carrier frequency during DC braking	A059	2.0 to 15.0(kHz)	5.0(kHz)	2.0 to 10.0(kHz)	2.0(kHz)
Overload restriction level	b022 b222	(0.20 to 2.00) × Rated current (A)	1.50× Rated current (A)	(0.20 to 1.50) × Rated current (A)	1.20× Rated current (A)
Overload restriction level 2	b025				
Carrier frequency	b083	2.0 to 15.0(kHz)	10.0(kHz)	2.0 to 10.0(kHz)	2.0(kHz)
Motor capacity	H003 H203	0.1 to 15(kW)	Depends on type	0.2 to 18.5(kW)	One size up to HD

When HD is selected, following parameters are not displayed.

Func. code	Name	Func. code	Name
d009	Torque command monitor	C058	Over/under-torque level (FW,RG)
d010	Torque bias monitor	C059	Output mode of Over/under-torque
d012	Torque monitor	H001	Auto-tuning selection
b040	Torque limit selection	H002/H202	Motor constant selection
b041	Torque limit (1)	H005/H205	Motor speed response constant
b042	Torque limit (2)	H020/H220	Motor constant R1
b043	Torque limit (3)	H021/H221	Motor constant R2
b044	Torque limit (4)	H022/H222	Motor constant L
b045	Torque LAD STOP selection	H023/H223	Motor constant Io
b046	Reverse run protection	H024/H224	Motor constant J
C054	Over-torque/under-torque selection	P037	Torque bias value
C055	Over/under-torque level (FW,PW)	P038	Torque bias polar selection
C056	Over/under-torque level (RV,RG)	P039	Speed limit of Torque control (FW)
C057	Over/under-torque level (RV,PW)	P040	Speed limit of Torque control (RV)



When ND is selected, following functions are not displayed in intelligent terminals.


Intelligent input terminals		Intelligent output terminals	
40:TL	Torque Limit Selection	07:OTQ	Over/under Torque Signal
41:TRQ1	Torque limit switch 1	10:TRQ	Torque Limited Signal
42:TRQ1	Torque limit switch 2	-	-
52:ATR	Enable torque command input	-	-

## “D” Group: Monitoring Functions

You can access important parameter values with the “D” Group monitoring functions, whether the inverter is in Run Mode or Stop Mode. After selecting the function code number for the parameter you want to monitor, press the Function key once to show the value on the display. In functions **d005** and **d006**, the intelligent terminals use individual segments of the display to show ON/OFF status.

If the inverter display is set to monitor a parameter and powerdown occurs, the inverter stores the present monitor function setting. For your convenience, the display automatically returns to the previously monitored parameter upon the next powerup.

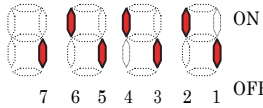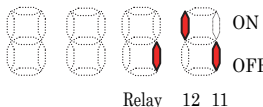Func. Code	“d” Function		Run Mode Edit	Units
	Name	Description		
<b>d001</b>	Output frequency monitor	Real time display of output frequency to motor from 0.00 to 400.0Hz If <b>b163</b> is set high, output frequency ( <b>F001</b> ) can be changed by up/down key with d001 monitoring.	–	Hz
<b>d002</b>	Output current monitor	Filtered display of output current to motor, range is 0.0 to 655.3 ampere (~99.9 ampere for 1.5kW and less)	–	A
<b>d003</b>	Rotation direction monitor	Three different indications: “F” ...Forward “□” ...Stop “r” ...Reverse	–	–
<b>d004</b>	Process variable (PV), PID feedback monitor	Displays the scaled PID process variable (feedback) value ( <b>A075</b> is scale factor), Range is 0.00 to 99.99 (0.00 to 99.99) / 100.0 to 999.9 (100.0 to 999.9) / 1000. to 9999. (1000 to 9999) / 1000 to 9999 (10000 to 99990) / ┌100 to ┌999 (100,000 to 999,000)	–	% times constant
<b>d005</b>	Intelligent input terminal status	Displays the state of the intelligent input terminals:  Terminal numbers	–	–
<b>d006</b>	Intelligent output terminal status	Displays the state of the intelligent output terminals:  Relay 12 11	–	–

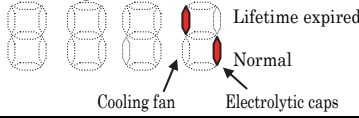Func. Code	"d" Function		Run Mode Edit	Units
	Name	Description		
d007	Scaled output frequency monitor	Displays the output frequency scaled by the constant in <b>b086</b> . Decimal point indicates range: 0 to 3999	-	Hz times constant
d008	Actual frequency monitor	Displays the actual frequency, range is -400 to 400 Hz	-	Hz
d009	Torque command monitor	Displays the torque command, range is -200 to 200 %	-	%
d010	Torque bias monitor	Displays the torque bias value, range is -200 to 200 %	-	%
d012	Output torque monitor	Displays the output torque, range is -200 to 200 %	-	%
d013	Output voltage monitor	Voltage of output to motor, Range is 0.0 to 600.0V	-	V
d014	Input power monitor	Displays the input power, range is 0 to 999.9 kW	-	KW
d015	Watt-hour monitor	Displays watt-hour of the inverter, Range is 0. to 9999.(0 to 9999) / 1000 to 9999 (10000 to 99999) / ┌100 to ┌999 (100,000 to 999,000)	-	
d016	Elapsed RUN time monitor	Displays total time the inverter has been in RUN mode in hours. Range is 0. to 9999.(0 to 9999) / 1000 to 9999 (10000 to 99999) / ┌100 to ┌999 (100,000 to 999,000)	-	hours
d017	Elapsed power-on time monitor	Displays total time the inverter has been powered up in hours. Range is 0. to 9999.(0 to 9999) / 1000 to 9999 (10000 to 99999) / ┌100 to ┌999 (100,000 to 999,000)	-	hours
d018	Heat sink temperature monitor	Temperature of the cooling fin, range is -20~150	-	°C
d022	Life check monitor	Displays the state of lifetime of electrolytic capacitors on the PWB and cooling fan. 	-	-
d023	Program counter monitor [EzSQ]	Range is 0 to 1024	-	-
d024	Program number monitor [EzSQ]	Range is 0 to 9999	-	-
d025	User monitor 0 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647	-	-
d026	User monitor 1 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647	-	-
d027	User monitor 2 [EzSQ]	Result of EzSQ execution, range is -2147483647~2147483647	-	-
d029	Positioning command monitor	Displays the positioning command, range is -268435455~+268435455	-	-
d030	Current position monitor	Displays the current position, range is -268435455~+268435455	-	-
d050	Dual monitor	Displays two different data configured in <b>b160</b> and <b>b161</b> .	-	-

"d" Function			Run Mode Edit	Units
Func. Code	Name	Description		
<b>d060</b>	Inverter mode monitor	Displays currently selected inverter mode : I - L:IM CT mode/ I - U:IM VT mode/ P:PM	-	-
<b>d102</b>	DC bus voltage monitor	Voltage of inverter internal DC bus, Range is 0.0 to 999.9 / 1000.	-	V
<b>d103</b>	BRD load ratio monitor	Usage ratio of integrated brake chopper, range is 0.0~100.0%	-	%
<b>d104</b>	Electronic thermal monitor	Accumulated value of electronic thermal detection, range is from 0.0~100.0%	-	%

## Trip Event and History Monitoring

The trip event and history monitoring feature lets you cycle through related information using the keypad. See "[Monitoring Trip Events, History, & Conditions](#)" on page 6-5 for more details.

"d" Function			Run Mode Edit	Units
Func. Code	Name	Description		
<b>d080</b>	Trip counter	Number of trip events, Range is 0. to 9999. (0 to 9999) / 1000 to 6553 (10000 to 65530)	-	events
<b>d081</b>	Trip monitor 1	Displays trip event information: <ul style="list-style-type: none"> <li>• Error code</li> <li>• Output frequency at trip point</li> <li>• Motor current at trip point</li> <li>• DC bus voltage at trip point</li> <li>• Cumulative inverter operation time at trip point</li> <li>• Cumulative power-ON time at trip point</li> </ul>	-	-
<b>d082</b>	Trip monitor 2		-	-
<b>d083</b>	Trip monitor 3		-	-
<b>d084</b>	Trip monitor 4		-	-
<b>d085</b>	Trip monitor 5		-	-
<b>d086</b>	Trip monitor 6		-	-
<b>d090</b>	Warning monitor	Displays the warning code	-	-

---

## Local Monitoring with keypad connected

The WJ200 inverter's serial port may be connected to an external digital operator. During those times, the inverter keypad keys will not function (except for the Stop key). However, the inverter's 4-digit display still provides the Monitor Mode function, displaying any of the parameters **d001** to **d060**. Function **b150**, Monitor Display Select for Networked Inverter, determines the particular **d00x** parameter displayed. Refer to the previous table.


When monitoring the inverter with external keypad connected, please note the following:

- The inverter display will monitor **d00x** functions according to **b150** setting when a device is already connected to the inverter's serial port at inverter powerup.
  - When external keypad is connected, the inverter keypad will also display error codes for inverter trip events. Use the Stop key or inverter Reset function to clear the error. Refer to "[Error Codes](#)" on page 6-8 to interpret the error codes.
  - The Stop key can be disabled, if you prefer, by using function **b087**.
-



## “F” Group: Main Profile Parameters

The basic frequency (speed) profile is defined by parameters contained in the “F” Group as shown to the right. The set running frequency is in Hz, but acceleration and deceleration are specified in the time duration of the ramp (from zero to maximum frequency, or from maximum frequency to zero). The motor direction parameter determines whether the keypad Run key produces a FWD or REV command. This parameter does not affect the intelligent terminal [FW] and [REV] functions, which you configure separately.

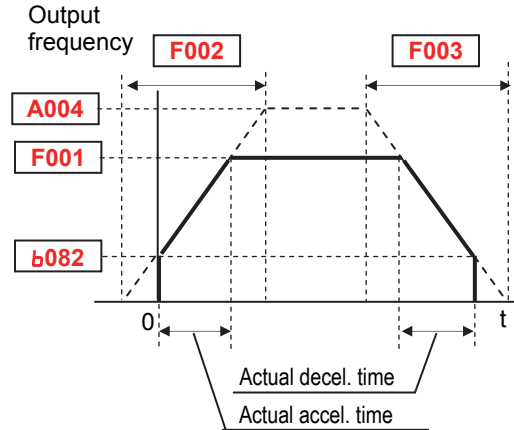

Acceleration 1 and Deceleration 1 are the standard default accel and decel values for the main profile. Accel and decel values for an alternative profile are specified by using parameters **Ax92** through **Ax93**. The motor direction selection (**F004**) determines the direction of rotation as commanded only from the keypad. This setting applies to any motor profile (1st or 2nd) in use at t particular time.

“F” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>F001</b>	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004) 0.0 to 100.0[%] if enables PID	✓	0.0	Hz
<b>F002</b>	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
<b>F202</b>	Acceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
<b>F003</b>	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
<b>F203</b>	Deceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
<b>F004</b>	Keypad RUN key routing	Two options; select codes: <b>00</b> ...Forward <b>01</b> ...Reverse	✗	00	-

Acceleration and deceleration can be set via EzSQ as well via the following parameter.

“P” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>P031</b>	Acceleration/Deceleration setting source selection	Two options; select codes: <b>00</b> ...Via operator <b>03</b> ...Via EzSQ	✗	00	-

## “A” Group: Standard Functions

The inverter provides flexibility in how you control Run/Stop operation and set the output frequency (motor speed). It has other control sources that can override the **A001** / **A002** settings. Parameter **A001** sets the source selection for the inverter’s output frequency. Parameter **A002** selects the Run command source (for FW or RV Run commands). The default settings use the input terminals for –FE (European) models, and the keypad for –FU (USA) models.

Func. Code	“A” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A001</b>	Frequency source	Eight options; select codes: <b>00</b> ...POT on ext. operator <b>01</b> ...Control terminal <b>02</b> ...Function F001 setting <b>03</b> ...Modbus network input <b>04</b> ...Option <b>06</b> ...Pulse train input <b>07</b> ...via EzSQ <b>10</b> ...Calculate function output	✗	01	–
<b>A201</b>	Frequency source, 2 <sup>nd</sup> motor		✗	01	–
<b>A002</b>	Run command source	Four options; select codes: <b>01</b> ...Control terminal <b>02</b> ...Run key on keypad, or digital operator	✗	01	–
<b>A202</b>	Run command source, 2 <sup>nd</sup> motor	<b>03</b> ...Modbus network input <b>04</b> ...Option	✗	01	–

**Frequency Source Setting** – For parameter **A001**, the following table provides a further description of each option, and a reference to other page(s) for more information.

Code	Frequency Source	Refer to page(s)...
<b>00</b>	POT on ext. operator – The range of rotation of the knob matches the range defined by <b>b082</b> (start frequency) to <b>A004</b> (max. frequency), when external operator is used	-
<b>01</b>	Control terminal – The active analog input signal on analog terminals [O] or [OI] sets the output frequency	4-70, 3-16, 3-40, 3.83
<b>02</b>	Function <b>F001</b> setting – The value in <b>F001</b> is a constant, used for the output frequency	3-11
<b>03</b>	ModBus network input – The network has a dedicated register for inverter output frequency	B-24
<b>04</b>	Option – Select when an option card is connected and use the frequency source from the option	(manual of each option)
<b>06</b>	Pulse train input – The pulse train given to EA terminal. The pulse train must be 10Vdc, 32kHz max.	3-114
<b>07</b>	Via EzSQ – The frequency source can be given by the EzSQ function, when it is used	(EzSQ manual)
<b>10</b>	Calculate function output – The Calculated function has user-selectable analog input sources (A and B). The output can be the sum, difference, or product (+, -, x) of the two outputs.	3-41

**Run Command Source Setting** – For parameter **A002**, the following table provides a further description of each option, and a reference to other page(s) for more information.

Code	Run Command Source	Refer to page(s)...
<b>01</b>	Control terminal – The [FW] or [RV] input terminals control Run/Stop operation	4-16
<b>02</b>	Keypad Run key – The Run and Stop keys provide control	2-23
<b>03</b>	ModBus network input – The network has a dedicated coil for Run/Stop command and a coil for FW/RV	B-24
<b>04</b>	Option – Select when an option card is connected and use the frequency source from the option	(manual of each option)

**A001/A002 Override Sources** – The inverter allows some sources to override the setting for output frequency and Run command in **A001** and **A002**. This provides flexibility for applications that occasionally need to use a different source, leaving the standard settings in **A001/A002**.


The inverter has other control sources that can temporarily override the parameter **A001** setting, forcing a different output frequency source. The following table lists all frequency source setting methods and their relative priority (“1” is the highest priority).

Priority	A001 Frequency Source Setting Method	Refer to page...
1	[CF1] to [CF4] Multi-speed terminals	4-17
2	[OPE] Operator Control intelligent input	4-35
3	[F-TM] intelligent input	4-42
4	[AT] terminal	4-28
5	<b>A001</b> Frequency source setting	3-10

The inverter also has other control sources that can temporarily override the parameter **A002** setting, forcing a different Run command source. The following table lists all Run command setting methods and their relative priority (“1” is the highest priority).

Priority	A002 Run Command Setting Method	Refer to page...
1	[OPE] Operator Control intelligent input	4-35
2	[F-TM] intelligent input	4-42
3	<b>A002</b> Run command source setting	3-10

The figure below shows the correlation diagram of all frequency source setting methods and their relative priority.

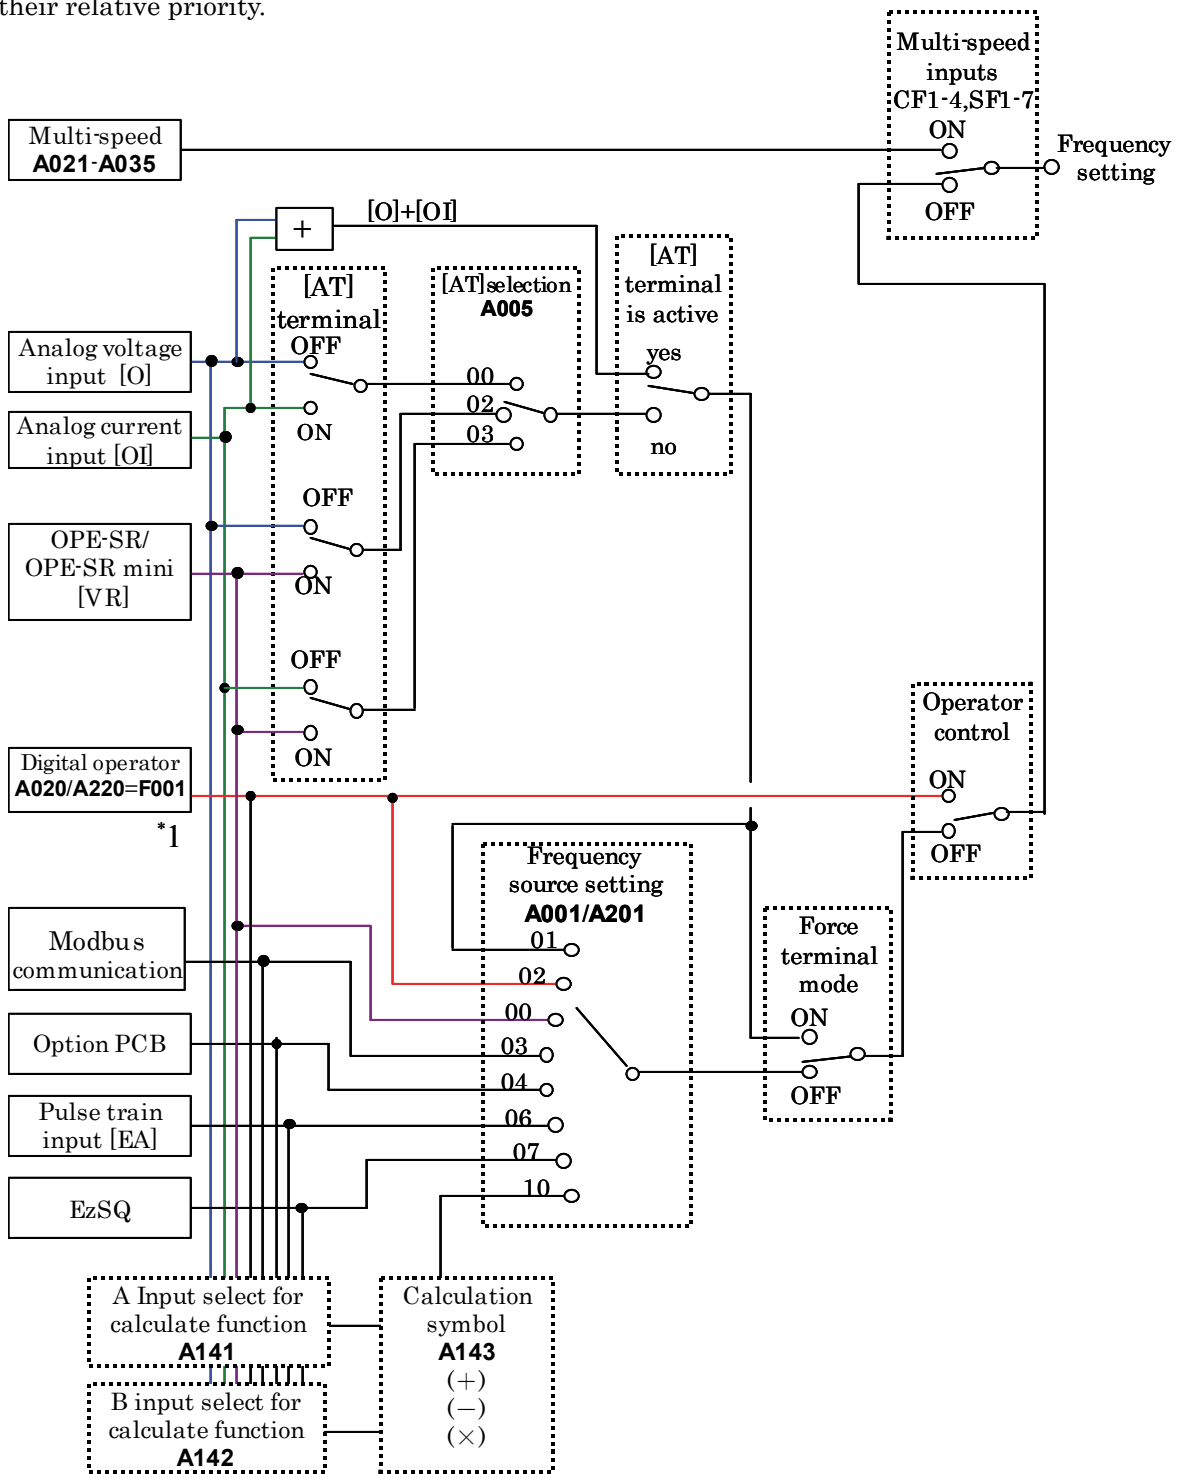


### Frequency calculate function

**Note 1:** You can set the inverter output frequency with function **F001** only when you have specified "02" for the frequency source setting **A001**. If the setting of function **A001** is other than "02", function **F001** operates as the frequency command monitoring function. And by setting the frequency set in monitoring active (**b163=01**), you can change the inverter output frequency with function **d001** or **d007**.

### Basic Parameter Settings

These settings affect the most fundamental behavior of the inverter – the outputs to the motor. The frequency of the inverter’s AC output determines the motor speed. You may select from three different sources for the reference speed. During application development you may prefer using the potentiometer, but you may switch to an external source (control terminal setting) in the finished application, for example.

The base frequency and maximum frequency settings interact according to the graph below (left). The inverter output operation follows the constant V/f curve until it reaches the full-scale output voltage at the base frequency. This initial straight line is the constant-torque part of the operating characteristic. The horizontal line over to the maximum frequency serves to let the motor run faster, but at a reduced torque. This is the constant-power operating range. If you want the motor to output constant torque over its entire operating range (limited to the motor nameplate voltage and frequency rating), then set the base frequency and maximum frequency equal as shown (below right).

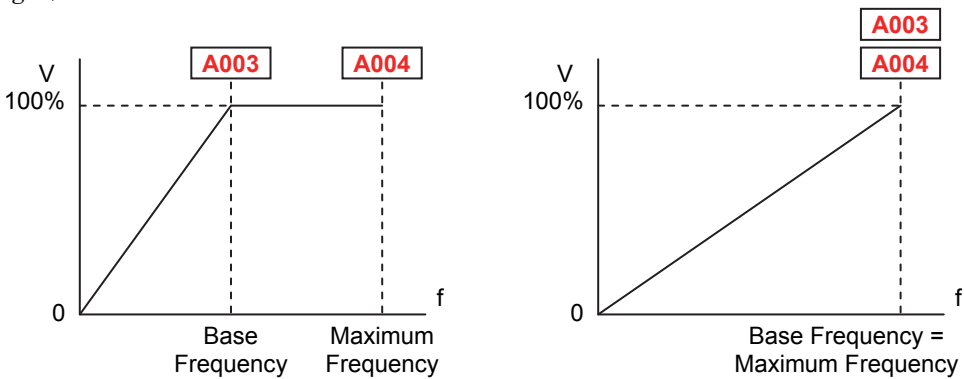


**NOTE:** The “2nd motor” settings in the table in this chapter store an alternate set of parameters for a second motor. The inverter can use the 1st set or 2nd set of parameters to generate the output frequency to the motor.

Func. Code	“A” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A003</b>	Base frequency	Settable from 30 Hz to the maximum frequency( <b>A004</b> )	✗	50.0	Hz
<b>A203</b>	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency( <b>A204</b> )	✗	50.0	Hz
<b>A004</b>	Maximum frequency	Settable from the base frequency to 400 Hz	✗	50.0	Hz
<b>A204</b>	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400 Hz	✗	50.0	Hz


## Analog Input Settings

The inverter has the capability to accept an external analog input that can command the output frequency to the motor. Voltage input (0-10 V) and current input (4-20mA) are available on separate terminals ([O] and [OI] respectively). Terminal [L] serves as signal ground for the two analog inputs. The analog input settings adjust the curve characteristics between the analog input and the frequency output.

**Adjusting [O-L] characteristics** – In the graph to the right, **A013** and **A014** select the active portion of the input voltage range. Parameters **A011** and **A012** select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin (**A011** and **A013** > 0), then **A015** defines whether the inverter outputs 0Hz or the **A011**-specified frequency when the analog input value is less than the **A013** setting. When the input voltage is greater than the **A014** ending value, the inverter outputs the ending frequency specified by **A012**.

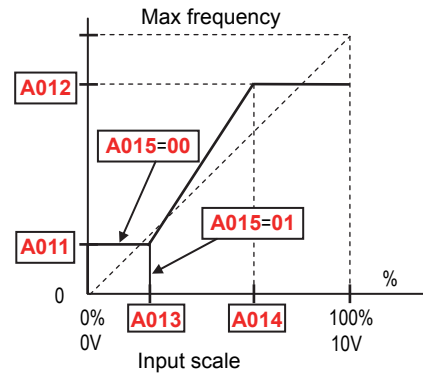

**Adjusting [OI-L] characteristics** – In the graph to the right, **A103** and **A104** select the active portion of the input current range. Parameters **A101** and **A102** select the start and end frequency of the converted output frequency range, respectively. Together, these four parameters define the major line segment as shown. When the line does not begin at the origin (**A101** and **A103** > 0), then **A105** defines whether the inverter outputs 0Hz or the **A101**-specified frequency when the analog input value is less than the **A103** setting. When the input voltage is greater than the **A104** ending value, the inverter outputs the ending frequency specified by **A102**.

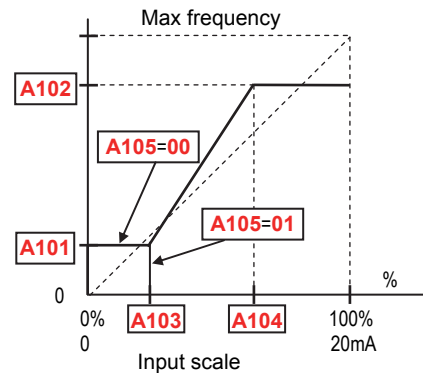

If [AT] is not assigned to any of the intelligent input terminal, inverter recognizes the input [O]+[OI].

**Adjusting [VR-L] characteristics** – This is used when an optional operator is used. Refer to parameters **A161** ~ **A165** for the details.

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A005</b>	[AT] selection	Three options; select codes: <b>00</b> ...Select between [O] and [OI] at [AT] (ON=OI, OFF=O)	✗	00	–
<b>A011</b>	[O] input active range start frequency	<b>02</b> ...Select between [O] and external POT at [AT] (ON=POT, OFF=O) <b>03</b> ...Select between [OI] and external POT at [AT] (ON=POT, OFF=OI) The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	✗	0.00	Hz
<b>A012</b>	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.0 to 400.0	✗	0.00	Hz
<b>A013</b>	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	✗	0.	%
<b>A014</b>	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	✗	100.	%
<b>A015</b>	[O] input start frequency enable	Two options; select codes: <b>00</b> ...Use offset ( <b>A011</b> value) <b>01</b> ...Use 0Hz	✗	01	–
<b>A016</b>	Analog input filter	Range n = 1 to 31, 1 to 30 : × 2ms filter 31: 500ms fixed filter with ± 0.1kHz hys.	✗	8.	Spl.


**A016: External Frequency Filter Time Constant** – This filter smoothes the analog input signal for the inverter's output frequency reference.

- **A016** sets the filter range from n=1 to **30**. This is a simple moving average calculation, where n (number of samples) is variable.
- **A016=31** is a special value. It configures the inverter to use a movable deadband feature. Initially the inverter uses the 500ms of filter time constant. Then, the deadband is employed for each subsequent average of 16 samples. The deadband works by ignoring small fluctuations in each new average: less than ±0.1Hz change. When a 30-sample average exceeds this deadband, then the inverter applies that average to the output frequency reference, and it also becomes the new deadband comparison point for subsequent sample averages.

The example graph below shows a typical analog input waveform. The filter removes the noise spikes. When a speed change (such as level increase) occurs, the filter naturally has a delayed response. Due to the deadband feature (**A016=31**), the final output changes only when the 30-sample average moves past the deadband threshold.



**TIP:** The deadband feature is useful in applications that requires a very stable output frequency but use an analog input for the speed reference. Example application: A grinding machine uses a remote potentiometer for operator speed input. After a setting change, the grinder maintains a very stable speed to deliver a uniform finished surface.

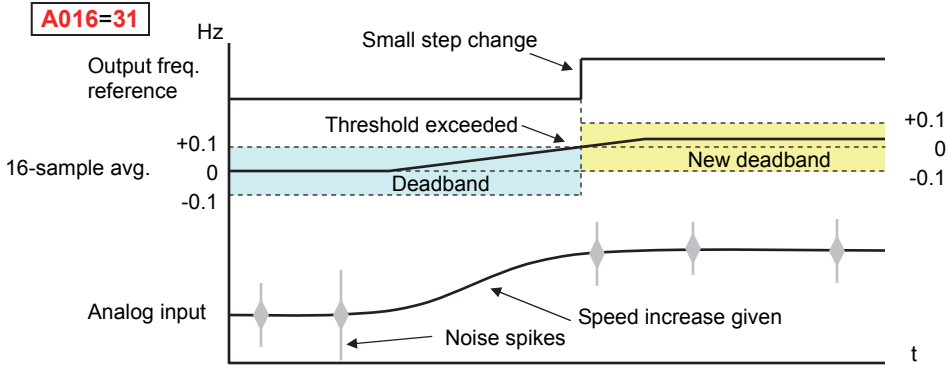

### EzSQ Related Settings

The WJ200 series inverter has capability to execute EzSQ program like SJ700 series inverters. Parameters **A017** is for the EzSQ performance. Please refer to the EzSQ section for the detailed explanation.



## Multi-speed and Jog Frequency Setting

**Multi-speed** – The WJ200 inverter has the capability to store and output up to 16 preset frequencies to the motor (**A020** to **A035**). As in traditional motion terminology, we call this *multi-speed profile* capability. These preset frequencies are selected by means of digital inputs to the inverter. The inverter applies the current acceleration or deceleration setting to change from the current output frequency to the new one. The first multi-speed setting is duplicated for the second motor settings (the remaining 15 multi-speeds apply only to the first motor).

Func. Code	“A” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A019</b>	Multi-speed operation selection	Select codes: <b>00</b> ...Binary operation (16 speeds selectable with 4 terminals)	✗	00	-
<b>A020</b>	Multi-speed freq. 0	<b>01</b> ...Bit operation (8 speeds selectable with 7 terminals)  Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz <b>A020</b> = Speed 0 (1st motor)	✓	6.0	Hz
<b>A220</b>	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start frequency to 400Hz <b>A220</b> = Speed 0 (2nd motor)	✓	6.0	Hz
<b>A021</b> to <b>A035</b>	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is 0.0 / start frequency to 400 Hz. <b>A021</b> =Speed 1 ~ <b>A035</b> =Speed15	✓	0.0	Hz
<b>C169</b>	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	✗	0.	ms

There are two ways for speed selection, which are “binary operation” and “bit operation”.

For binary operation (**A019=00**), you can select 16 speeds by combination of 4 digital inputs. And for bit operation (**A019=01**), you can select 8 speeds by using 7 digital inputs. Please refer to the following figures for detailed explanation.

## (1) Binary operation (“1”=ON)

Speed	Param.	CF4	CF3	CF2	CF1
Speed 0	<b>A020</b>	0	0	0	0
Speed 1	<b>A021</b>	0	0	0	<b>1</b>
Speed 2	<b>A022</b>	0	0	<b>1</b>	0
Speed 3	<b>A023</b>	0	0	<b>1</b>	<b>1</b>
Speed 4	<b>A024</b>	0	<b>1</b>	0	0
Speed 5	<b>A025</b>	0	<b>1</b>	0	<b>1</b>
Speed 6	<b>A026</b>	0	<b>1</b>	<b>1</b>	0
Speed 7	<b>A027</b>	0	<b>1</b>	<b>1</b>	<b>1</b>
Speed 8	<b>A028</b>	<b>1</b>	0	0	0
Speed 9	<b>A029</b>	<b>1</b>	0	0	<b>1</b>
Speed 10	<b>A030</b>	<b>1</b>	0	<b>1</b>	0
Speed 11	<b>A031</b>	<b>1</b>	0	<b>1</b>	<b>1</b>
Speed 12	<b>A032</b>	<b>1</b>	<b>1</b>	0	0
Speed 13	<b>A033</b>	<b>1</b>	<b>1</b>	0	<b>1</b>
Speed 14	<b>A034</b>	<b>1</b>	<b>1</b>	<b>1</b>	0
Speed 15	<b>A035</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>

## (2) Bit operation (“1”=ON, “X”=regardless the condition (ON or OFF))

Speed	Param.	SF7	SF6	SF5	SF4	SF3	SF2	SF1
Speed 0	<b>A020</b>	0	0	0	0	0	0	0
Speed 1	<b>A021</b>	X	X	X	X	X	X	<b>1</b>
Speed 2	<b>A022</b>	X	X	X	X	X	<b>1</b>	0
Speed 3	<b>A023</b>	X	X	X	X	<b>1</b>	0	0
Speed 4	<b>A024</b>	X	X	X	<b>1</b>	0	0	0
Speed 5	<b>A025</b>	X	X	<b>1</b>	0	0	0	0
Speed 6	<b>A026</b>	X	<b>1</b>	0	0	0	0	0
Speed 7	<b>A027</b>	<b>1</b>	0	0	0	0	0	0

**Jog Frequency** – The jog speed setting is used whenever the Jog command is active. The jog speed setting range is arbitrarily limited to 10 Hz, to provide safety during manual operation. The acceleration to the jog frequency is instantaneous, but you can choose from three modes for the best method for stopping the jog operation.

Func. Code	Name	“A” Function Description	Run Mode Edit	Defaults	
				Initial data	Units
<b>A038</b>	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	6.00	Hz
<b>A039</b>	Jog stop mode	Define how end of jog stops the motor; six options: <b>00</b> ...Free-run stop (invalid during run) <b>01</b> ...Controlled deceleration (invalid during run) <b>02</b> ...DC braking to stop(invalid during run) <b>03</b> ...Free-run stop (valid during run) <b>04</b> ...Controlled deceleration (valid during run) <b>05</b> ...DC braking to stop(valid during run)	✗	04	–

Note 1: For jogging operation, turn JG terminal ON at first and then turn FW or RV terminal on.

Note 2: When jogging stop mode A039=02 or 05, DC braking data is needed.

Note 3: During jogging operation, frequency can be set with output frequency setting F001.

## Torque Control Algorithms




The inverter generates the motor output according to the V/f algorithm selected. Parameter **A044** selects the inverter algorithm for generating the frequency output, as shown in the diagram to the right (**A244** for 2nd motor). The factory default is **00** (constant torque).

Review the following description to help you choose the best torque control algorithm for your application.

The built-in V/f curves are oriented toward developing constant torque or variable torque characteristics (see graphs below). You can select either constant torque or reduced torque V/f control.

**Constant and Variable (Reduced) Torque** – The graph at right shows the constant torque characteristic from 0Hz to the base frequency **A003**. The voltage remains constant for output frequencies higher than the base frequency.

### Inverter Torque Control Algorithms

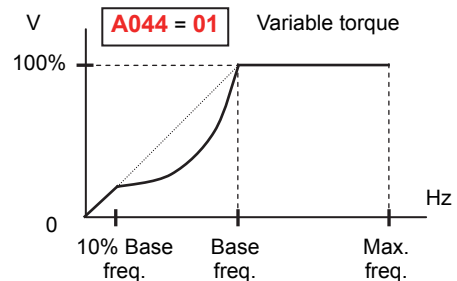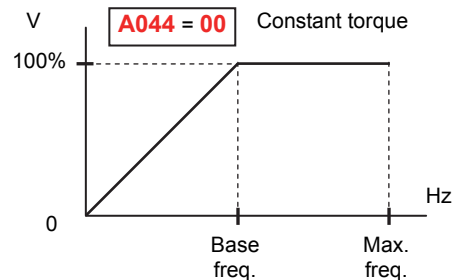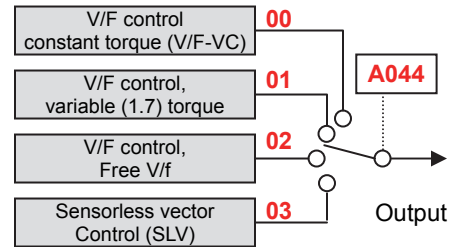

The graph above (right) shows the variable (reduced) torque curve, which has a constant torque characteristic from 0Hz to 10% of the base frequency. This helps to achieve higher torque at low speed with reduced torque curve at higher speeds.


**Sensorless Vector Control** – You can achieve high torque performance (200% torque at 0.5Hz of output frequency) without motor speed feedback (encoder feedback), which is so-called sensorless vector control (SLV control).

**Free V/F Control** – The free V/F setting function allows you to set an arbitrary V/F characteristics by specifying the voltages and frequencies (**b100~b113**) for the seven points on the V/F characteristic curve.

The free V/F frequencies 1 to 7 set by this function must always be in the collating sequence of “1<2<3<4<5<6<7”.

Since all the free V/F frequencies are set to 0Hz as default (factory setting), specify their arbitrary values (being set with free-setting V/F frequency 7). The inverter does not operate the free V/F characteristics with the factory setting.


Enabling the free V/F characteristics setting function disables the torque boost selection (A041/A241), base frequency setting (A003/A203), and maximum frequency setting (A004/A204) automatically. (The inverter regard the value of free-setting V/F frequency 7 (b112) as the maximum frequency.)

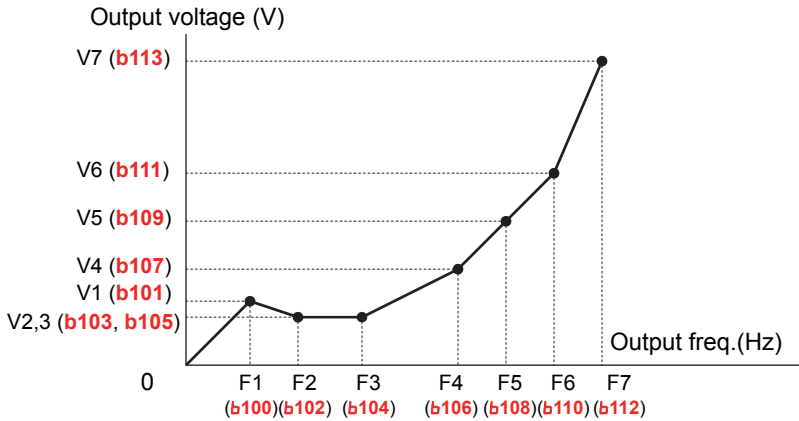

Item	Code	Set range	Remarks
Free-setting V/F freq. (7)	<b>b112</b>	0 to 400 (Hz)	Setting of the output freq. at each breakpoint of the V/F characteristic curve
Free-setting V/F freq. (6)	<b>b110</b>	Free-setting V/F freq.5 to freq.7 (Hz)	
Free-setting V/F freq. (5)	<b>b108</b>	Free-setting V/F freq.4 to freq.6 (Hz)	
Free-setting V/F freq. (4)	<b>b106</b>	Free-setting V/F freq.3 to freq.5 (Hz)	
Free-setting V/F freq. (3)	<b>b104</b>	Free-setting V/F freq.2 to freq.4 (Hz)	
Free-setting V/F freq. (2)	<b>b102</b>	Free-setting V/F freq.1 to freq.3 (Hz)	
Free-setting V/F freq. (1)	<b>b100</b>	0 to Free-setting V/F freq.2 (Hz)	
Free-setting V/F volt. (7)	<b>b113</b>	0.0 to 800.0 (V)	Setting of the output voltage at each breakpoint of the V/F characteristic curve *1)
Free-setting V/F volt. (6)	<b>b111</b>		
Free-setting V/F volt. (5)	<b>b109</b>		
Free-setting V/F volt. (4)	<b>b107</b>		
Free-setting V/F volt. (3)	<b>b105</b>		
Free-setting V/F volt. (2)	<b>b103</b>		
Free-setting V/F volt. (1)	<b>b101</b>		

\*1) Even if the voltage higher than input is set as a free-setting V/F voltage 1 to 7, the inverter output voltage cannot exceed the inverter input voltage or that specified by the AVR voltage selection. Carefully note that selecting an inappropriate control system (V/F characteristics) may result in overcurrent during motor acceleration or deceleration or vibration of the motor or other machine driven by the inverter.


**Manual Torque Boost** – The Constant and Variable Torque algorithms feature an adjustable *torque boost* curve. When the motor load has a lot of inertia or starting friction, you may need to increase the low frequency starting torque characteristics by boosting the voltage above the normal V/f ratio (shown at right). The function attempts to compensate for voltage drop in the motor primary winding in the low speed range.

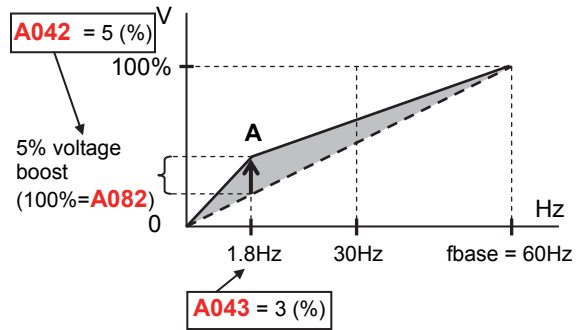

The boost is applied from zero to the base frequency. You set the breakpoint of the boost (point A on the graph) by using parameters **A042** and **A043**. The manual boost is calculated as an addition to the standard V/f curve.

Be aware that running the motor at a low speed for a long time can cause motor overheating. This is particularly true when manual torque boost is ON, or if the motor relies on a built-in fan for cooling.

**Voltage gain** – Using parameter **A045** you can modify the voltage gain of the inverter (see graph at right). This is specified as a percentage of the full scale output voltage. The gain can be set from 20% to 100%. It should be adjusted in accordance with the motor specifications. Gain can be changed even during operation in V/f mode, and while stopped in SLV mode. When the setting is changed, reset (RS terminal on/off) is to be executed so that the motor constants are re-calculated.

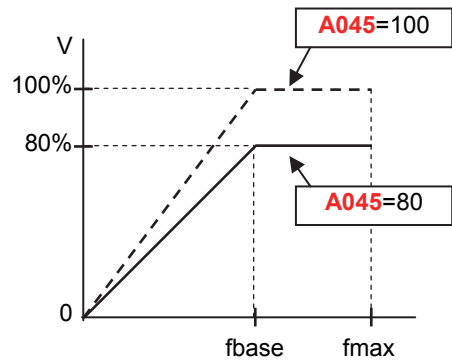

After the setting is done, please be sure to reset (terminal RS on/off) to recalculate the motor constant.

Refrain from change the setting value suddenly (within 10%). Inverter may overvoltage trip due to the rapid change of output voltage.

**Voltage compensation gain and slip compensation gain** – Using parameters **A046** and **A047**, you can obtain better performance under automatic torque boost mode (**A041=01**). See following table for the concept of adjustment, including other parameters.


Symptom	Adjustment	Adjust item
Motor torque is not enough at low speed (The motor does not rotate at low speed)	Increase the voltage setting for manual torque boost, step by step	<b>A042 / A242</b>
	Increase the voltage compensation gain for automatic torque boost, step by step	<b>A046 / A246</b>
	Increase the slip compensation gain for automatic torque boost, step by step	<b>A047 / A247</b>
	Reduce carrier frequency	<b>b083</b>
Motor speed decreases (stalls) when a	Increase the slip compensation gain for	<b>A047 / A247</b>

load is given to the motor	automatic torque boost, step by step	
Motor speed increases when a load is given to the motor	Decrease the slip compensation gain for automatic torque boost, step by step	<b>A047 / A247</b>
The inverter trips due to overcurrent when a load is given to the motor	Decrease the voltage setting for manual torque boost, step by step	<b>A042 / A242</b>
	Decrease the voltage compensation gain for automatic torque boost, step by step	<b>A046 / A246</b>
	Decrease the slip compensation gain for automatic torque boost, step by step	<b>A047 / A247</b>

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A041</b>	Torque boost select	Two options: <b>00</b> ...Manual torque boost	✗	00	–
<b>A241</b>	Torque boost select, 2 <sup>nd</sup> motor	<b>01</b> ...Automatic torque boost	✗	00	–
<b>A042</b>	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve, range is 0.0 to 20.0%	✓	1.0	%
<b>A242</b>	Manual torque boost value, 2 <sup>nd</sup> motor		✓	1.0	%
<b>A043</b>	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost, range is 0.0 to 50.0%	✓	5.0	%
<b>A243</b>	Manual torque boost frequency, 2 <sup>nd</sup> motor		✓	5.0	%
<b>A044</b>	V/f characteristic curve	Four available V/f curves: <b>00</b> ...Constant torque <b>01</b> ...Reduced torque (1.7) <b>02</b> ...Free V/F <b>03</b> ...Sensorless vector (SLV)	✗	00	–
<b>A244</b>	V/f characteristic curve, 2 <sup>nd</sup> motor		✗	00	–
<b>A045</b>	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	100.	%
<b>A245</b>	V/f gain, 2 <sup>nd</sup> motor		✓	100.	%
<b>A046</b>	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	–
<b>A246</b>	Voltage compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	–
<b>A047</b>	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	–
<b>A247</b>	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	–

## DC Braking (DB) Settings

**Normal DC braking performance**— The DC braking feature can provide additional stopping torque when compared to a normal deceleration to a stop. DC braking is particularly useful at low speeds when normal deceleration torque is minimal.

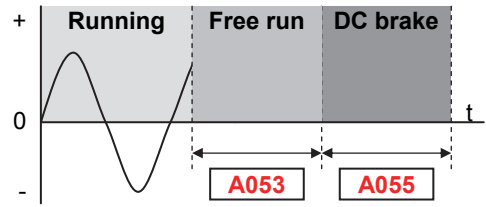


When you set **A051** to **01** (Enable during stop), and the RUN command (FW/RV signal) turns OFF, the inverter injects a DC voltage into the motor windings during deceleration below a frequency you can specify (**A052**).


The braking power (**A054**) and duration (**A055**) can both be set. You can optionally specify a wait time before DC braking (**A053**), during which the motor will free run.

**DC Braking – Frequency Detection** — You can instead set DC braking to operate during RUN mode only, by setting **A051** to **02** (Frequency detection). In this case DC braking operates when the output frequency comes down to the one you specified in **A052** while the RUN command is still active. Refer to the graphs figures below.

External DB and Internal DC braking are invalid during the frequency detection mode.

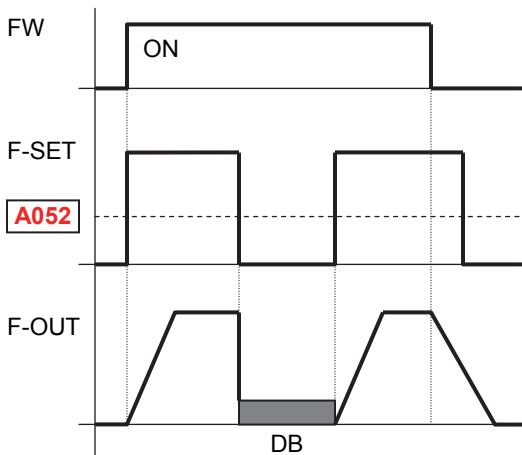

Ex.1) Step change in F-SET.

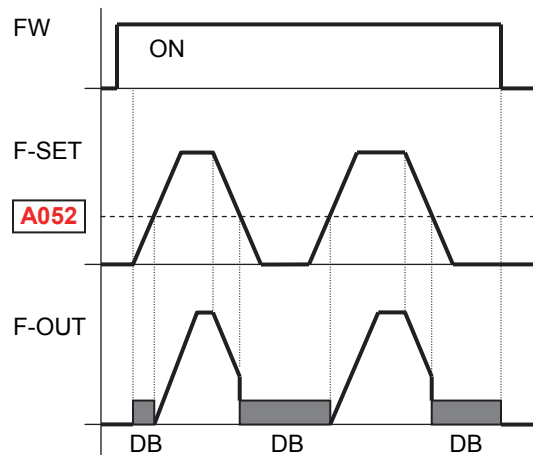

Ex.2) Analog change in F-SET.

Example 1, (above left) shows the performance with **A051=02** with a step-changing frequency reference. In this case, when the reference goes to 0, the inverter immediately starts DC braking because the set point drops below the value specified in **A052**. DC braking continues until the set point exceeds **A052**. There will be no DC braking at next downward transition because the FW input is OFF.

Example 2, (above right) shows a gradually changing frequency reference, for example by analog input. In this case, there will be a DC braking period at starting because the frequency set point is lower than the value specified in **A052**.





**CAUTION:** Be careful to avoid specifying a braking time that is long enough to cause motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" in chapter 4). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.

DC braking performance at start can also be set separately (**A057** and **A058**).  
And carrier frequency of DC braking performance can also be set separately (**A059**).




**CAUTION:** Be careful to avoid specifying a braking carrier frequency that is high enough to cause inverter and motor overheating. If you use DC braking, we recommend using a motor with a built-in thermistor, and wiring it to the inverter's thermistor input (see "Thermistor Thermal Protection" in chapter 4). Also refer to the motor manufacturer's specifications for duty-cycle recommendations during DC braking.

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A051</b>	DC braking enable	Three options; select codes: <b>00</b> ...Disable <b>01</b> ...Enable during stop <b>02</b> ...Frequency detection	✗	00	–
<b>A052</b>	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency ( <b>b082</b> ) to 60Hz	✗	0.5	Hz
<b>A053</b>	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 sec.	✗	0.0	sec.
<b>A054</b>	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	✗	50.	%
<b>A055</b>	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	0.5	sec.
<b>A056</b>	DC braking / edge or level detection for [DB] input	Two options; select codes: <b>00</b> ...Edge detection <b>01</b> ...Level detection	✗	01	–
<b>A057</b>	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	✗	0.	%
<b>A058</b>	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	0.0	sec.
<b>A059</b>	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	✗	5.0	sec.


## Frequency-related Functions

**Frequency Limits** – Upper and lower limits can be imposed on the inverter output frequency. These limits will apply regardless of the source of the speed reference. You can configure the lower frequency limit to be greater than zero as shown in the graph. The upper limit must not exceed the rating of the motor or capability of the machinery. The maximum frequency setting (**A004/A204**) takes precedence over frequency upper limit (**A061/A261**).

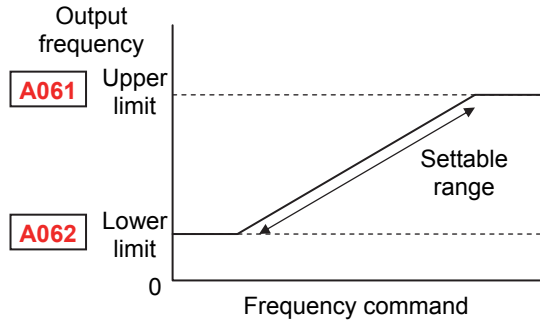


Func. Code	“A” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A061</b>	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency ( <b>A004</b> ).	✗	0.00	Hz
<b>A261</b>	Frequency upper limit, 2nd motor	Range is from frequency lower limit ( <b>A062</b> ) to maximum frequency ( <b>A004</b> ). 0.0 setting is disabled >0.0 setting is enabled Sets a limit on output frequency less than the maximum frequency ( <b>A204</b> ). Range is from frequency lower limit ( <b>A262</b> ) to maximum frequency ( <b>A204</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz
<b>A062</b>	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A061</b> )	✗	0.00	Hz
<b>A262</b>	Frequency lower limit, 2nd motor	0.0 setting is disabled >0.0 setting is enabled Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A261</b> ) 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz

**Jump Frequencies** – Some motors or machines exhibit resonances at particular speed(s), which can be destructive for prolonged running at those speeds. The inverter has up to three *jump frequencies* as shown in the graph. The hysteresis around the jump frequencies causes the inverter output to skip around the sensitive frequency values.

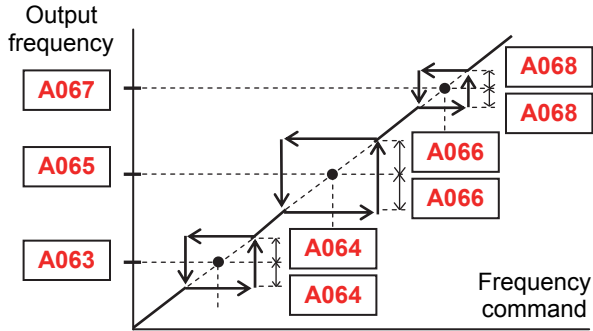

"A" Function			Run Mode Edit	Defaults		
Func. Code	Name	Description		Initial data	Units	
A063 A065 A067	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency)	✗	0.0 0.0 0.0	Hz	
A064 A066 A068	Jump freq. width (hysteresis) 1 to 3	Range is 0.0 to 400.0 Hz Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz		✗		0.5 0.5 0.5

**Acceleration stop/Deceleration stop** – The acceleration stop and deceleration stop frequency setting allows you to make the inverter wait, upon starting the motor or upon decelerating the motor, until the motor slip becomes less when the motor load causes a large moment of inertia. Use this function if the inverter trips because of overcurrent when starting or decelerating the motor. This function operates with every acceleration and deceleration pattern, regardless the acceleration and deceleration curve selection (**A097** and **A098**). Instead of setting **A069,A070,A154** and **A155**, acceleration and deceleration can be held by intelligent input configured as "83:HLD".

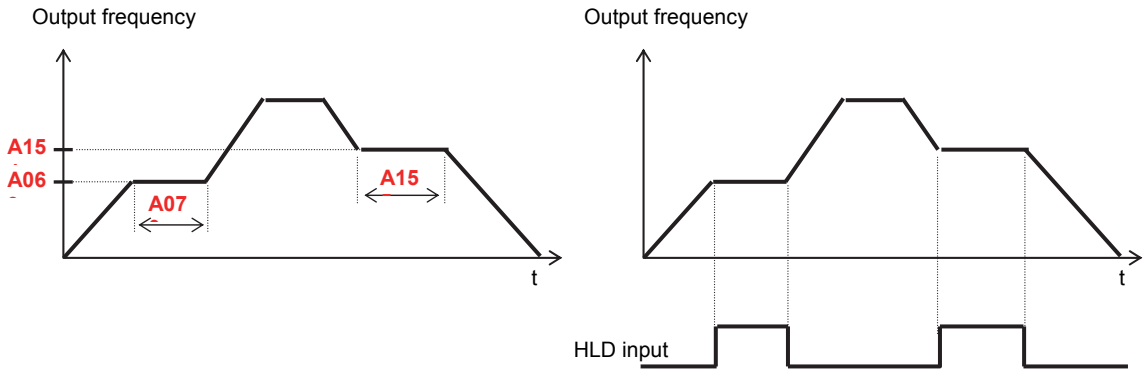

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A069</b>	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	✗	0.00	Hz
<b>A070</b>	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds	✗	0.0	sec.
<b>A154</b>	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	✗	0.0	Hz
<b>A155</b>	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds	✗	0.0	sec.

## PID Control

When enabled, the built-in PID loop calculates an ideal inverter output value to cause a loop feedback process variable (PV) to move closer in value to the set point (SP). The frequency command serves as the SP. The PID loop algorithm will read the analog input for the process variable (you specify the current or voltage input) and calculate the output.


"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A071</b>	PID enable	Enables PID function, three option codes: <b>00</b> ...PID Disable	✗	00	–
<b>A072</b>	PID proportional gain	<b>01</b> ...PID Enable <b>02</b> ...PID Enable with reverse output Proportional gain has a range of 0.00 to 25.00	✓	1.0	–
<b>A073</b>	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds Derivative time constant has a range of 0.0 to 100 seconds	✓	1.0	sec
<b>A074</b>	PID derivative time constant		✓	0.00	sec
<b>A075</b>	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	✗	1.00	–
<b>A076</b>	PV source	Selects source of Process Variable (PV), option codes: <b>00</b> ...[OI] terminal (current in) <b>01</b> ...[O] terminal (voltage in) <b>02</b> ...ModBus network <b>03</b> ...Pulse train input <b>10</b> ...Calculate function output	✗	00	–
<b>A077</b>	Reverse PID action	Two option codes: <b>00</b> ...PID input = SP-PV <b>01</b> ...PID input = -(SP-PV)	✗	00	–
<b>A078</b>	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	✗	0.0	%
<b>A079</b>	PID feed forward selection	Selects source of feed forward gain, option codes: <b>00</b> ...Disabled <b>01</b> ...[O] terminal (voltage in) <b>02</b> ...[OI] terminal (current in)	✗	00	–
<b>A156</b>	PID sleep function action threshold	Sets the threshold for the action, set range 0.0~400.0 Hz	✗	0.00	Hz
<b>A157</b>	PID sleep function action delay time	Sets the delay time for the action, set range 0.0~25.5 sec	✗	0.0	sec




**NOTE:** The setting **A073** for the integrator is the integrator's time constant  $T_i$ , not the gain. The integrator gain  $K_i = 1/T_i$ . When you set **A073** = 0, the integrator is disabled.

In standard operation, the inverter uses a reference source selected by parameter **A001** for the output frequency, which may be a fixed value (**F001**), a variable set by the front panel potentiometer, or value from an analog input (voltage or current). To enable PID operation, set **A071=01**. This causes the inverter to calculate the target freq, or setpoint.

A calculated target frequency can have a lot of advantages. It lets the inverter adjust the motor speed to optimize some other process of interest, potentially saving energy as well. Refer to the figure below. The motor acts upon the external process. To control that external process, the inverter must monitor the process variable. This requires wiring a sensor to either the analog input terminal [O] (voltage) or terminal [OI] (current).

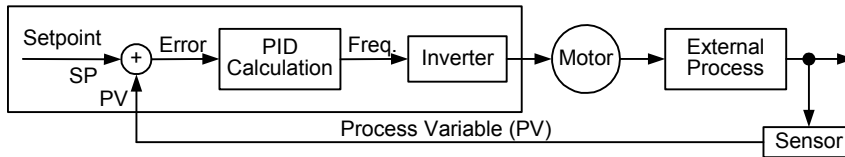

When enabled, the PID loop calculates the ideal output frequency to minimize the loop error. This means we no longer command the inverter to run at a particular frequency, but we specify the ideal value for the process variable. That ideal value is called the setpoint, and is specified in the units of the external process variable. For a pump application it may be gallons/minute, or it could be air velocity or temperature for an HVAC unit. Parameter **A075** is a scale factor that relates the external process variable units to motor frequency. The figure below is a more detailed diagram of the function.

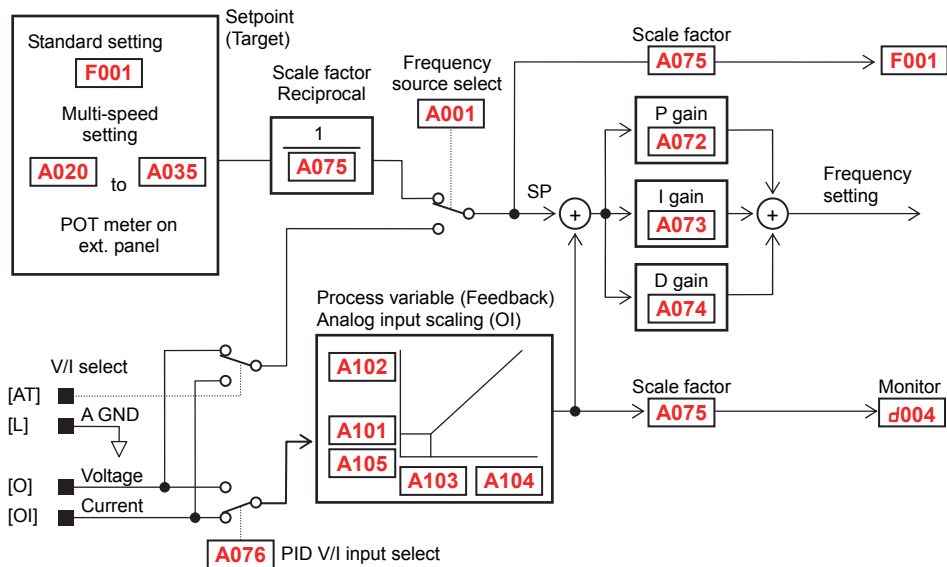


## PID Loop Configuration

The inverter's PID loop algorithm is configurable for various applications.


**PID Output Limit** - The PID loop controller has a built-in output limit function. This function monitors the difference between the PID setpoint and the loop output (inverter output frequency), measured as a percentage of the full scale range of each. The limit is specified by parameter **A078**.

- When the difference  $|\text{Setpoint} - \text{loop output}|$  is smaller than or equal to the **A078** limit value, the loop controller operates in its normal linear range.
- When the difference  $|\text{Setpoint} - \text{loop output}|$  is larger than the **A078** limit value, the loop controller changes the output frequency as needed so that the difference does not exceed the limit.

The diagram below shows PID setpoint changes and the related output frequency behavior when a limit value in **A078** exists.

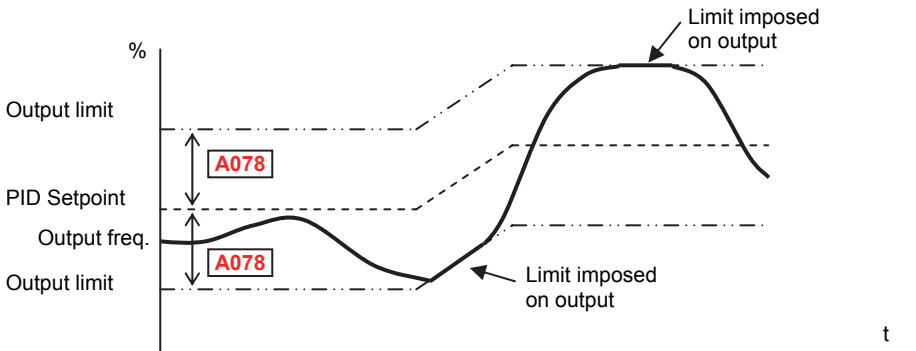


**Deviation (error) Inversion** - In typical heating loops or ventilation loops, an increase in energy into the process results in an *increasing* PV. In this case, the Loop Error =  $(SP - PV)$ . For cooling loops, an increase in energy into the process results in a *decreasing* PV. In this case, the Loop Error =  $-(SP - PV)$ . Use **A077** to configure the error term.

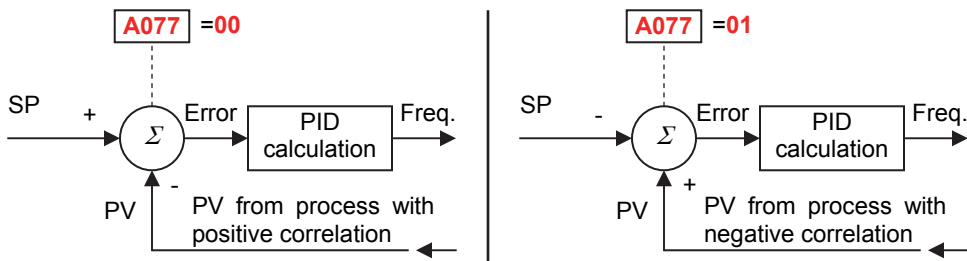

**PID deviation output** – If PID deviation "ε" exceeds the value in **C044**, output signal configured as **04** (OD) is activated.

**PID feedback comparison output** – If PID feedback is out of the range between **C052** and **C053** output signal configured as **31** (FBV) is activated.

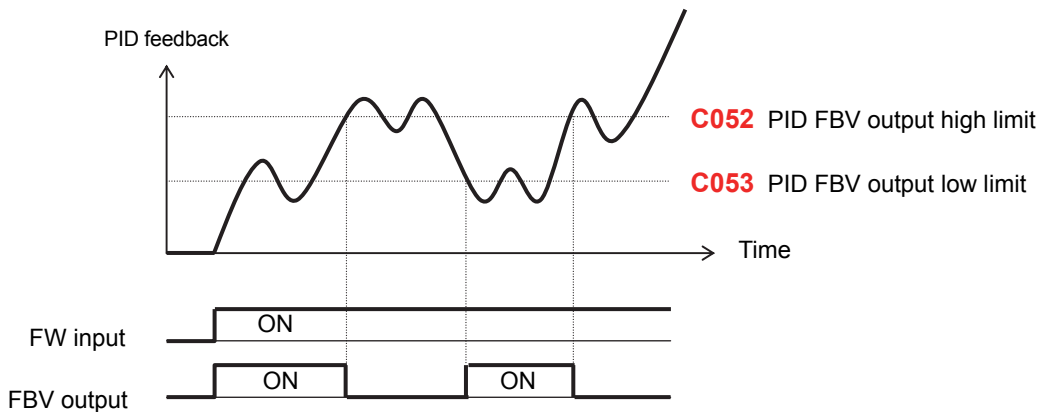


**PID scaling** – When PID scale parameter (**A075**) is set, following variables are scaled.

(monitored) = (variable) × (A075)

d004	F001	A011	A012	A020	A220	A021	A022
A023	A024	A025	A026	A027	A028	A029	A030
A031	A032	A033	A034	A035	A101	A102	A145

## PID Sleep Function

The inverter shuts off the output when the PID output becomes less than the specified value (**A156**) in case of PID is set enabled, or shuts off when the frequency command becomes less than the specified value in case of PID is set disabled. And if the PID output or frequency command exceeds the specified value (**A156**) for a specified period (**A157**), inverter automatically restarts the operation. This is the PID sleep function.

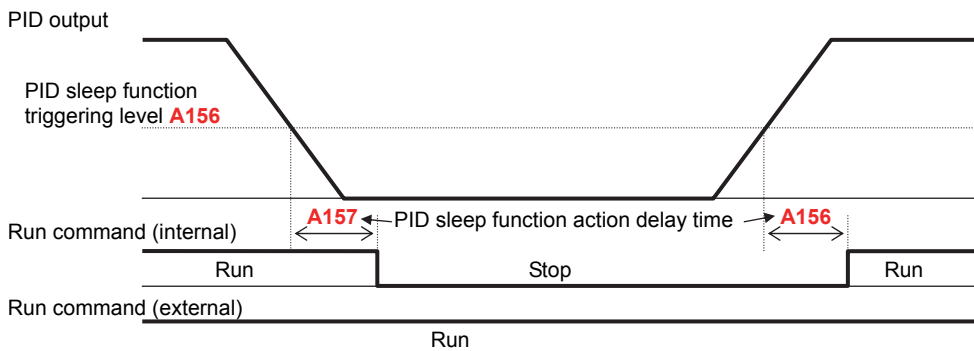

- ✓ PID Sleep function is always enabled, even the PID function is disabled.



## Automatic Voltage Regulation (AVR) Function

The automatic voltage regulation (AVR) feature keeps the inverter output waveform at a relatively constant amplitude during power input fluctuations. This can be useful if the installation is subject to input voltage fluctuations. However, the inverter cannot boost its motor output to a voltage higher than the power input voltage. If you enable this feature, be sure to select the proper voltage class setting for your motor.

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A081</b>	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three option codes:	✗	02	–
<b>A281</b>	AVR function select, 2 <sup>nd</sup> motor	<b>00</b> ...AVR enabled <b>01</b> ...AVR disabled <b>02</b> ...AVR enabled except during deceleration	✗	02	–
<b>A082</b>	AVR voltage select	200V class inverter settings: .....200/215/220/230/240 400V class inverter settings: .....380/400/415/440/460/480	✗	230/ 400	V
<b>A282</b>	AVR voltage select, 2 <sup>nd</sup> motor		✗	230/ 400	V
<b>A083</b>	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 sec.	✗	0.300	sec
<b>A084</b>	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	✗	100.	%

Note: The motor behave as generator during deceleration and the energy is regenerated to the drive. As a result, the DC voltage in the inverter increases and cause over-voltage trip when exceeding the OV level. When the voltage is set high, deceleration time can be set shorter thanks to the energy consumption due to the incensement of loss in inverter. In order to set deceleration time shorter without over-voltage trip, please try to set AVR off during deceleration or to tune the AR filter time constant and AVR deceleration gain.

## Energy Savings Mode / Optional Accel/Decel

**Energy Saving Mode** – This function allows the inverter to deliver the minimum power necessary to maintain speed at any given frequency. This works best when driving variable torque characteristic loads such as fans and pumps. Parameter **A085=01** enables this function and **A086** controls the degrees of its effect. A setting of 0.0 yields slow response but high accuracy, while a setting of 100 will yield a fast response with lower accuracy.

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A085</b>	Energy-saving operation mode	Two option codes: <b>00</b> ...Normal operation <b>01</b> ...Energy-saving operation	✗	00	–
<b>A086</b>	Energy-saving mode tuning	Range is 0.0 to 100 %.	✗	50.0	%

The acceleration time is controlled so that the output current below the level set by the Overload Restriction Function if enabled (Parameters **b021**, **b022**, and **b023**). If Overload Restriction is not enabled, then the current limit used is 150% of the inverter's rated output current.

The deceleration time is controlled so that the output current is maintained below 150% of the inverter's rated current, and the DC bus voltage is maintained below the OV Trip level (400V or 800V).



**NOTE:** If the load exceeds the rating of the inverter, the acceleration time may be increased.



**NOTE:** If using a motor with a capacity that is one size smaller than the inverter rating, enable the Overload Restriction function (**b021**) and set the Overload Restriction Level (**b022**) to 1.5 times the motor nameplate current.




**NOTE:** Be aware that the acceleration and deceleration times will vary, depending on the actual load conditions during each individual operation of the inverter.



**NOTE:** When analog input is a source of frequency command, be sure to set analog filter **A016=31** (500ms). Otherwise, there can be the case that this energy saving function doesn't work well.

## Second Acceleration and Deceleration Functions

The WJ200 inverter features two-stage acceleration and deceleration ramps. This gives flexibility in the profile shape. You can specify the frequency transition point, the point at which the standard acceleration (**F002**) or deceleration (**F003**) changes to the second acceleration (**A092**) or deceleration (**A093**). Or, you can use intelligent input [2CH] to trigger this transition. These profile options are also available for the second motor settings. Select a transition method via **A094** as depicted below. Be careful not to confuse the *second acceleration/deceleration settings* with settings for the *second motor*!

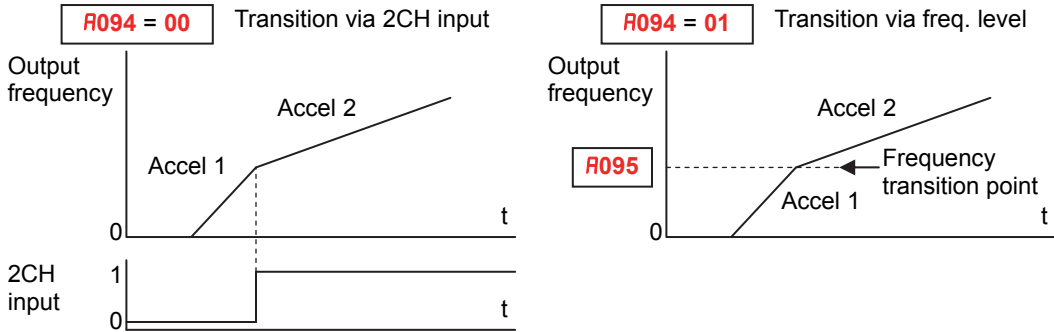

Func. Code	"A" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A092</b>	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.01 to 3600 sec.	✓	10.00	sec
<b>A292</b>	Acceleration time (2), 2 <sup>nd</sup> motor		✓	10.00	sec
<b>A093</b>	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.01 to 3600 sec.	✓	10.00	sec
<b>A293</b>	Deceleration time (2), 2 <sup>nd</sup> motor		✓	10.00	sec
<b>A094</b>	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel: <b>00</b> ...2CH input from terminal <b>01</b> ...Transition frequency <b>02</b> ...Forward and reverse	✗	00	-
<b>A294</b>	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor		✗	00	-
<b>A095</b>	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	✗	0.0	Hz
<b>A295</b>	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		✗	0.0	Hz
<b>A096</b>	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.0 to 400.0 Hz	✗	0.0	Hz
<b>A296</b>	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor		✗	0.0	Hz




**NOTE:** For **A095** and **A096** (and for 2nd motor settings), if you set a very rapid Acc1 or Dec1 time (less than 1.0 second), the inverter may not be able to change rates to Acc2 or Dec2 before reaching the target frequency. In that case, the inverter decreases the rate of Acc1 or Dec1 in order to achieve the second ramp to the target frequency.

**Accel/Decel**

Standard acceleration and deceleration is linear. The inverter CPU can also calculate an S-curve acceleration or deceleration curve as shown. This profile is useful for favoring the load characteristics in particular applications.

Curve settings for acceleration and deceleration are independently selected. To enable the S-curve, use function **A097** (acceleration) and **A098** (deceleration).

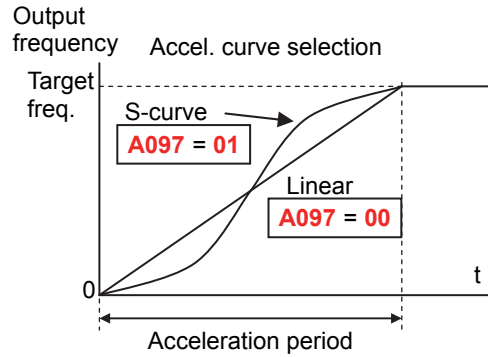


Func. Code	"A" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A097</b>	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options: <b>00</b> ...linear <b>01</b> ...S-curve <b>02</b> ...U-curve <b>03</b> ...Inverse U-curve <b>04</b> ...EL S-curve Set the characteristic curve of Dec1 and Dec2, options are same as above ( <b>A097</b> )	✗	01	-
<b>A098</b>	Deceleration curve selection		✗	01	-
<b>A131</b>	Acceleration curve constant	Range is 01 to 10. Range is 01 to 10.	✗	02	-
<b>A132</b>	Deceleration curve constant		✗	02	-
<b>A150</b>	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	✗	10.	%
<b>A151</b>	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	✗	10.	%
<b>A152</b>	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	✗	10.	%
<b>A153</b>	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	✗	10.	%

See next page for the details.

(1) Acceleration / deceleration pattern summary

Setting	00	01	02	03	04
Curve	Linear	S-curve	U-curve	Inverse U-curve	EL S-curve
<b>A097</b> (Accel. pattern)					
<b>A098</b> (Decel. pattern)					
Remarks	Standard pattern.	Effective for preventing the collapse of cargo carried by lift or conveyor for example.	Effective for the tension control of winding machine, to prevent cutting the object to be wound, for example.		Effective for lift application because of the shock less start and stop.


(2) **A131** Curve constant (swelling)

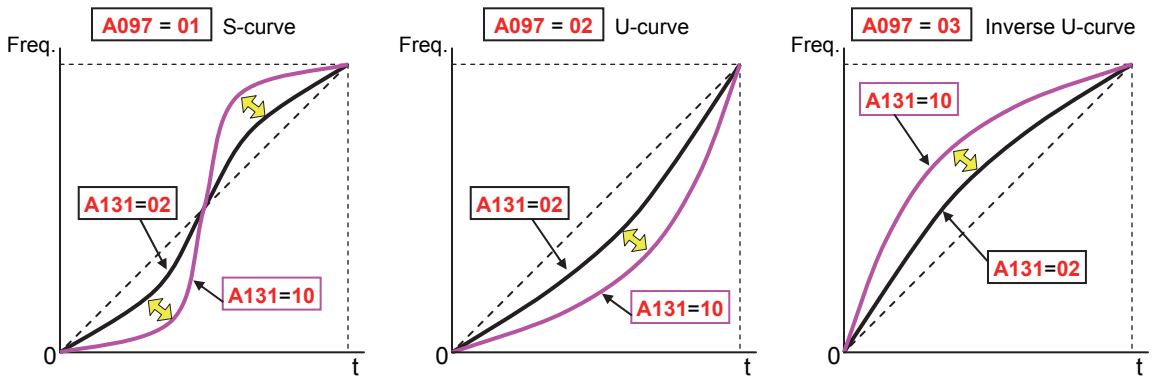

Large **A131** value will result in a big swelling. **A132** is the same concept as above.

(3) **A150~A153** Curvature of EL-S-curve

When using EL-S-curve pattern, you can set the curvatures individually for acceleration and deceleration. If all the curvatures are set to 50%, the EL-S-curve pattern will be equivalent to the S-curve pattern.

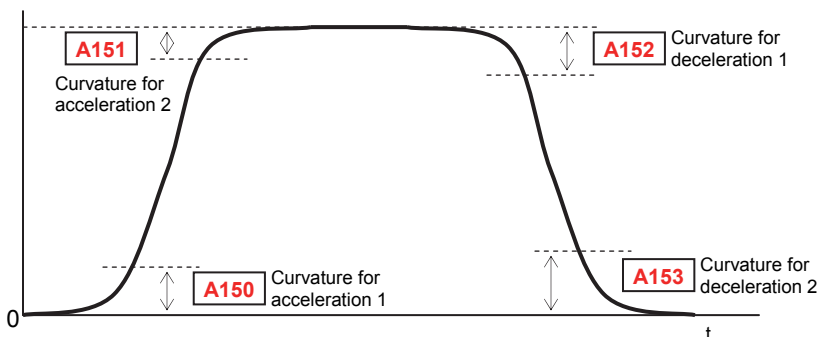

For use of EL-S curve be sure to use select frequency source as multi-speed, to avoid nuisance change of frequency during acceleration and deceleration.

## Additional Analog Input Settings


**Input Range Settings** – The parameters in the following table adjust the input characteristics of the analog current input. When using the inputs to command the inverter output frequency, these parameters adjust the starting and ending ranges for the current, as well as the output frequency range. Related characteristic diagrams are located in “Analog Input Settings” on page 3-16.

Analog sampling setting is the value specified in **A016**.

Func. Code	“A” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>A101</b>	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	✗	0.00	Hz
<b>A102</b>	[OI] input active range end frequency		✗	0.0	Hz
<b>A103</b>	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	✗	20.	%
<b>A104</b>	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	✗	100.	%
<b>A105</b>	[OI] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A101</b> value) <b>01</b> ...Use 0Hz	✗	00	–


Refer to parameter **A011** to **A015** for analog voltage input.

**Analog Input Calculate Function** – The inverter can mathematically combine two input sources into one value. The Calculate function can either add, subtract, or multiply the two selected sources. This provides the flexibility needed by various applications. You can use the result for the output frequency setting (use **A001=10**) or for the PID Process Variable (PV) input (use **A075=03**).

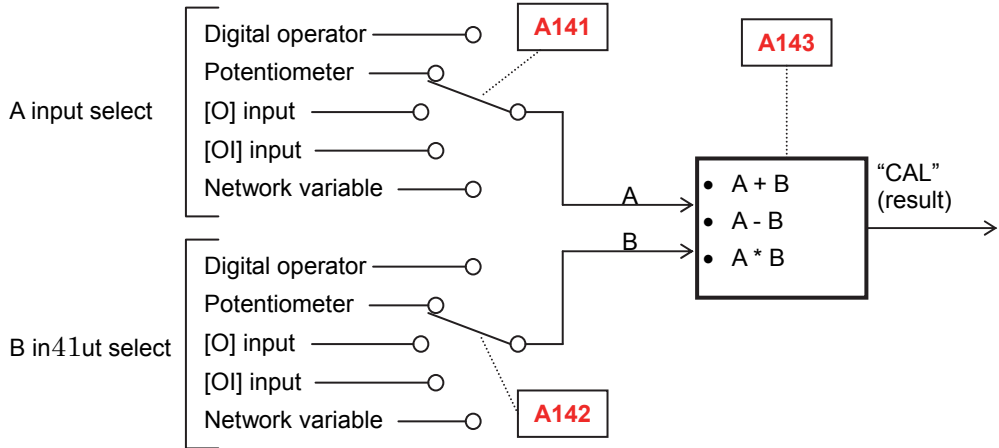

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A141</b>	A input select for calculate function	Seven options: 00...Operator 01...VR 02...Terminal [O] input	✗	02	-
<b>A142</b>	B input select for calculate function	03...Terminal [OI] input 04...RS485 05...Option 07...Pulse train input	✗	03	-
<b>A143</b>	Calculation symbol	Calculates a value based on the A input source ( <b>A141</b> selects) and B input source ( <b>A142</b> selects). Three options: 00...ADD (A input + B input) 01...SUB (A input - B input) 02...MUL (A input * B input)	✗	00	-

**Add Frequency** – The inverter can add or subtract an offset value to the output frequency setting which is specified by **A001** (will work with any of the five possible sources). The ADD Frequency is a value you can store in parameter **A145**. the ADD Frequency is summed with or subtracted from the output frequency setting only when the [ADD] terminal is ON. Function **A146** selects whether to add or subtract. By configuring an intelligent input as the [ADD] terminal, your application can selectively apply the fixed value in **A145** to offset (positively or negatively) the inverter output frequency in real time.

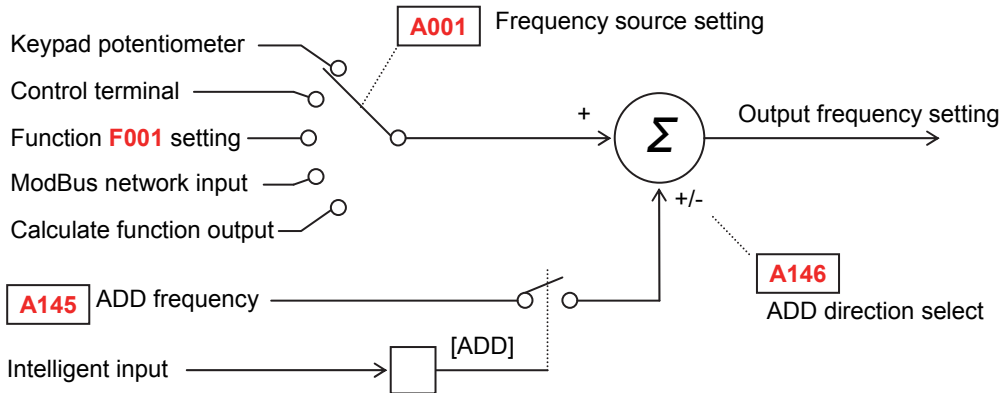

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A145</b>	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz Two options: <b>00</b> ...Plus (adds <b>A145</b> value to the output frequency setting) <b>01</b> ...Minus (subtracts <b>A145</b> value from the output frequency setting)	✓	0.00	Hz
<b>A146</b>	ADD direction select		✗	00	–



**Input Range Settings** – The parameters in the following table adjust the input characteristics of the VR (POT meter on external operator) input. When using the inputs to command the inverter output frequency, these parameters adjust the starting and ending ranges for the current, as well as the output frequency range. Related characteristic diagrams are located in “Analog Input Settings” in this chapter.

Analog sampling setting is the value specified in **A016**.

“A” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A161</b>	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	✗	0.00	Hz
<b>A162</b>	[VR] input active range end frequency		✗	0.00	Hz
<b>A163</b>	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.% The ending point (offset) for the current input range, range is 0. to 100.%	✗	0.	%
<b>A164</b>	[VR] input active range end %		✗	100.	%
<b>A165</b>	[VR] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A161</b> value) <b>01</b> ...Use 0Hz	✗	01	–

Refer to parameter **A011** to **A015** for analog voltage input.

## “B” Group: Fine Tuning Functions

The “B” Group of functions and parameters adjust some of the more subtle but useful aspects of motor control and system configuration.

### Automatic Restart Mode


The restart mode determines how the inverter will resume operation after a fault causes a trip event. The five options provide advantages for your applications. Frequency matching allows the inverter to read the motor speed by virtue of its residual magnetic flux and restart the output at the corresponding frequency. The inverter can attempt a restart a certain number of times depending on the particular trip event:

- Over-current trip, restart up to 3 times
- Over-voltage trip, restart up to 3 times

When the inverter reaches the maximum number of restarts (3), you must power cycle the inverter to reset its operation.

Other parameters specify the allowable under-voltage level and the delay time before restarting. The proper settings depend on the typical fault conditions for your application, the necessity of restarting the process in unattended situations, and whether restarting is always say.

#### Power failure < allowable power fail Time (b002), Inverter resumes

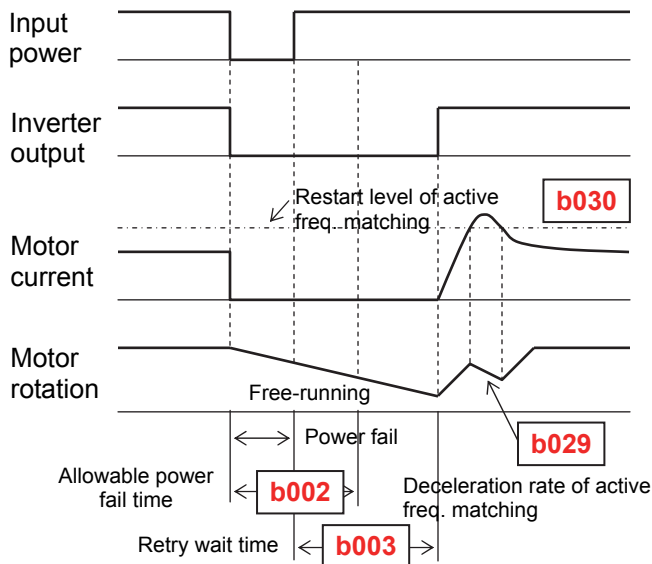

Overload restriction (b021~b028) is not valid when active frequency matching is activated.

If the actual power failure time is longer than the b002 set value, the inverter does not resume and the motor will coast to stop.

If the actual power failure time is shorter than the b002 set value, inverter resumes from the set frequency in b011.

The resumption mode is called “active frequency matching” and the inverter performs reduced voltage start to avoid over-current trip.

If the motor current exceeds the b030 set value during this period, the inverter decelerates according to the b029 set value and helps to reduce the motor current.

When the motor current is less than b030, the inverter increases motor speed toward the set speed. The inverter continues this retry process until the motor speed comes to the previous set speed.

## Automatic restart (retry) related parameters.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b001</b>	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes: <b>00</b> ...Alarm output after trip, no automatic restart <b>01</b> ...Restart at 0Hz <b>02</b> ...Resume operation after frequency matching <b>03</b> ...Resume previous freq. after freq. matching, then decelerate to stop and display trip info <b>04</b> ...Resume operation after active freq. matching	×	00	–
<b>b002</b>	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	×	1.0	sec.
<b>b003</b>	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	×	1.0	sec.
<b>b004</b>	Instantaneous power failure / under-voltage trip alarm enable	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable <b>02</b> ...Disable during stop and decelerates to a stop	×	00	–
<b>b005</b>	Number of restarts on power failure / under-voltage trip events	Two option codes: <b>00</b> ...Restart 16 times <b>01</b> ...Always restart	×	00	–
<b>b007</b>	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	×	0.00	Hz
<b>b008</b>	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes: <b>00</b> ...Alarm output after trip, no automatic restart <b>01</b> ...Restart at 0Hz <b>02</b> ...Resume operation after frequency matching <b>03</b> ...Resume previous freq. after active freq. matching, then decelerate to stop and display trip info <b>04</b> ...Resume operation after active freq. matching	×	00	–
<b>b010</b>	Number of retry on over voltage / over current trip	Range is 1 to 3 times	×	3	times

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b011</b>	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	<b>X</b>	1.0	sec

## Active Frequency Matching Restart

Goal of the active frequency matching is the same as normal frequency matching. Difference is the method. Please select the suitable one for your application.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b028</b>	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.2*inverter rated current to 2.0*inverter rated current, resolution 0.1	×	Rated current	A
<b>b029</b>	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1	×	0.5	sec.
<b>b030</b>	Start freq. of active freq. matching	Three option codes: <b>00</b> ...freq at previous shutoff <b>01</b> ...start from max. Hz <b>02</b> ...start from set frequency	×	00	-

## Electronic Thermal Overload Alarm Setting

The thermal overload detection protects the inverter and motor from overheating due to an excessive load. It uses a current/inverse time curve to determine the trip point. Each parameters must be set according to motor FLA rating (Full Load Ampere nameplate rating) and cooling method / characteristics. If each parameters are set to inappropriate value, the motor may overheat.

First, use **b013** to select the torque characteristic that matches your load. This allows the inverter to utilize the best thermal overload characteristic for your application.

The torque developed in a motor is directly proportional to the current in the windings, which is also related to the heat generated (and temperature, over time).


Therefore, you must set the thermal overload threshold in terms of current (amperes) for parameter **b012**. The range is 20% to 100% of the rated current for each inverter model. If the current exceeds the level you specify, the inverter will trip and log an event (error **E 05**) in the history table. The inverter turns the motor output OFF when tripped. Separate settings are available for the second motor (if applicable) as shown in the following table.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b012</b>	Level of electronic thermal	Set a level between 20% and 100% for the rated inverter current.	✗	Rated current for each inverter model *1	A
<b>b212</b>	Level of electronic thermal, 2 <sup>nd</sup> motor		✗		A
<b>b013</b>	Electronic thermal characteristic	Select from three curves, option codes: <b>00</b> ...Reduced torque <b>01</b> ...Constant torque <b>02</b> ...Free setting	✗	01	-
<b>b213</b>	Electronic thermal characteristic, 2 <sup>nd</sup> motor		✗	01	-
<b>b015</b>	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	✗	0.0	Hz
<b>b016</b>	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	✗	0.00	Amps
<b>b017</b>	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	✗	0.0	Hz
<b>b018</b>	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	✗	0.00	Amps
<b>b019</b>	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	✗	0.0	Hz
<b>b020</b>	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	✗	0.00	Amps




**WARNING:** When parameter **b012**, level of electronic thermal setting, is set to motor FLA rating (Full Load Ampere nameplate rating), the inverter provides solid state motor overload protection at 110% of motor FLA or equivalent. If parameter **b012** exceeds the motor FLA rating, the motor may overheat and be damaged. Parameter **b012**, level of electronic thermal setting, is a variable parameter. The motor FLA rating will change by base frequency and the motor voltage.

**Electronic thermal characteristic curve:** The characteristic curve depends on dual rate setting in **b049** as follows.

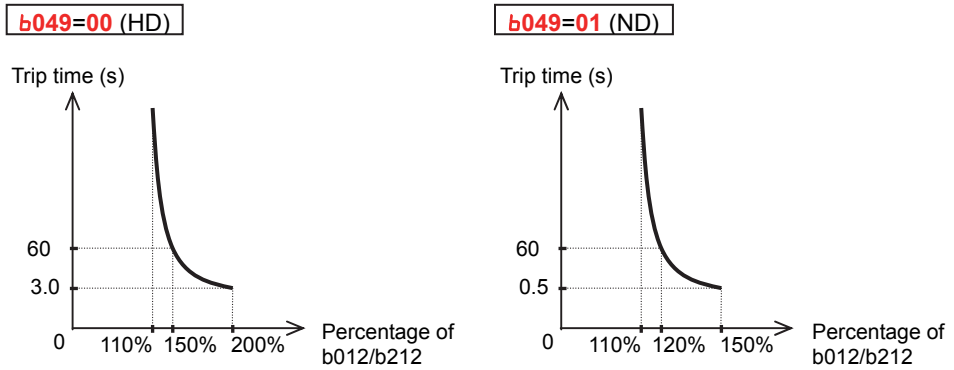


**Electronic thermal characteristic:** The characteristic curve is unique, but reduction rate depending on frequency is selected in **b013**.

• **Reduced Torque (b013=00)**

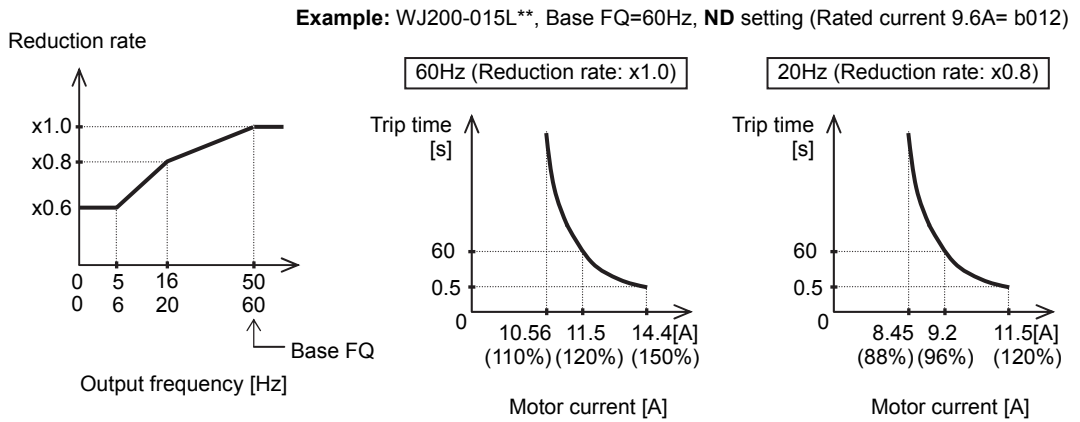


• **Constant Torque (b013=01)**

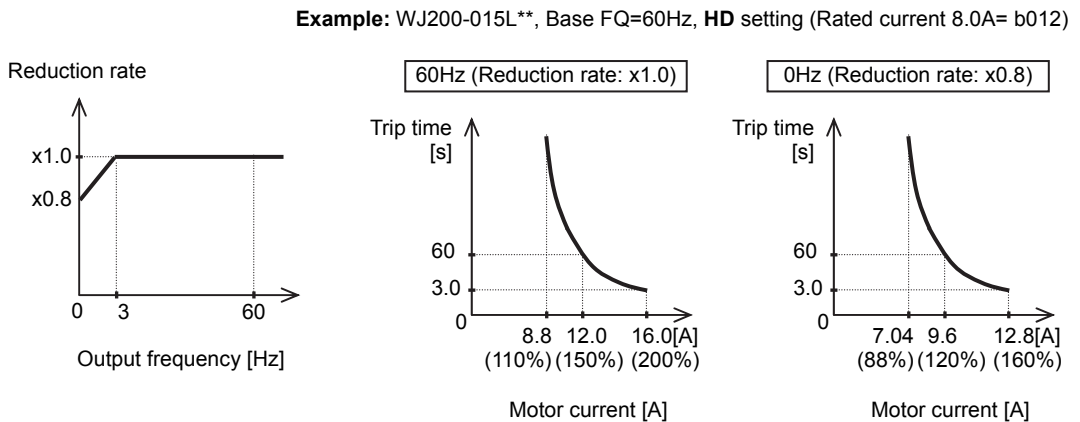


- Free setting (b013=02)

Reduction rate

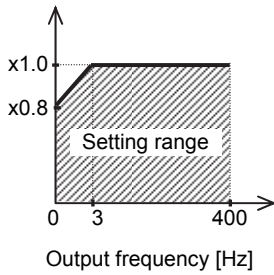

Output current [A]

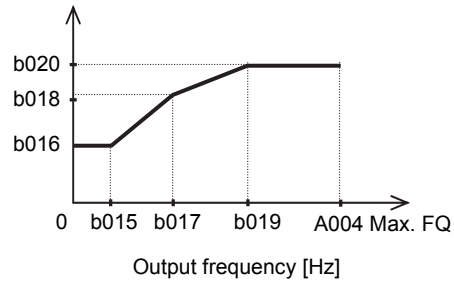

**NOTE:** To define free setting of electronic thermal (b013=13), parameters b015 to b020 need to be configured in the order shown below:

- Frequency : b019 ⇨ b017 ⇨ b015
- Current : b020 ⇨ b018 ⇨ b016


**Electronic Thermal Warning Output:** You can configure this function so that the inverter outputs a warning signal before the electronic thermal protection operates against motor overheating. You can also set the threshold level to output a warning signal with the electronic thermal warning level setting in function “C061”.

To output the warning signal, assign parameter “13” (THM) to one of the intelligent output terminals [11] to [12] (C021 to C022), or to the relay output terminal (C026).



## Current limitation Related Functions

**Overload Restriction: b022** If the inverter's output current exceeds a preset current level you specify during acceleration or constant speed, the overload restriction feature automatically reduces the output frequency during powering drive (and can increase the speed during regeneration) to restrict the overload. This feature does not generate an alarm or trip event. You can instruct the inverter to apply overload restriction only during constant speed, thus allowing higher currents for acceleration. Or, you may use the same threshold for both acceleration and constant speed.

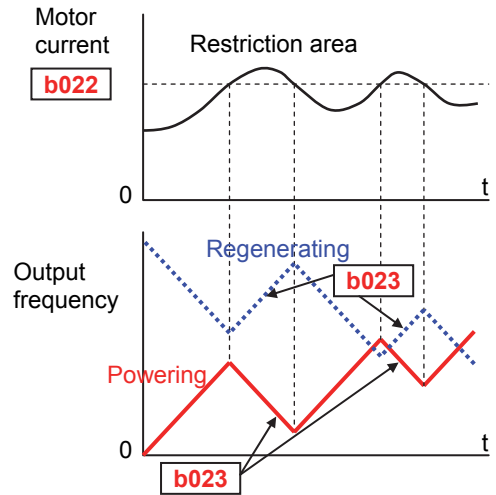


You can specify two types of overload restriction operation by setting functional items **b021**, **b022**, **b023**, and **b024**, **b025**, **b026** separately. To switch between these two is done by assigning "39 (OLR)" to an intelligent input terminal and make it ON/OFF.

When the inverter detects an overload, it must decelerate the motor to reduce the current until it is less than the threshold. You can choose the rate of deceleration that the inverter uses to lower the output current.

**Over-current Trip Suppression: b027** – The Over-current Trip Suppression function monitors the motor current and actively changes the output frequency profile to maintain the motor current within the limits. Although "LAD" refers to "linear acceleration / deceleration", the inverter only "STOPS" the acceleration and deceleration ramp so that it will not cause an over-current trip event.

The graph at right shows an inverter output profile that starts acceleration to a constant speed. At two different points during the acceleration, motor current increases and exceeds the fixed level of Over-current Trip Suppression level.

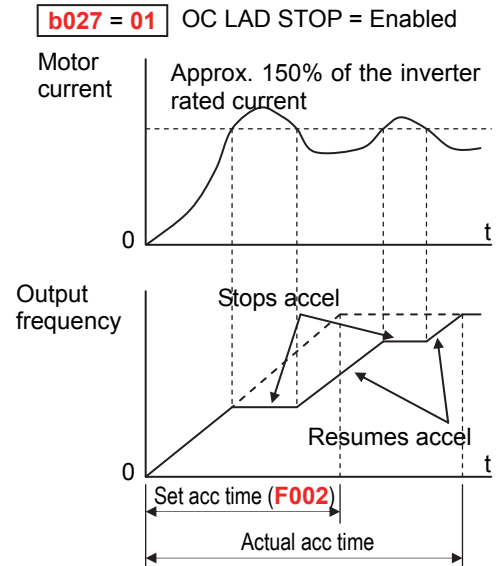

When the Over-current Trip Suppression feature is enabled by **b027 = 01**, the inverter stops the acceleration ramp in each case until the motor current level is again less than the threshold value, which is approximately 180% of the rated current of the inverter.

When using the Over-current Trip Suppression feature, please note the following:

- When the feature is enabled (**b027 = 01**), the actual acceleration may be longer than the value set by parameters **F002/F202** in some cases.
- The Over-current Trip Suppression feature does not operate by maintaining a constant motor current. So it is still possible to have an over-current trip event during extreme acceleration.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b021</b>	Overload restriction operation mode	Select the operation mode during overload conditions, four options, option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	01	–
<b>b221</b>	Overload restriction operation mode, 2 <sup>nd</sup> motor		✗	01	–
<b>b022</b>	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	Rated current x 1.5	Amps
<b>b222</b>	Overload restriction level, 2 <sup>nd</sup> motor		✗	Rated current x 1.5	Amps
<b>b023</b>	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	1.0	sec.
<b>b223</b>	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor		✗	1.0	sec.
<b>b024</b>	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	01	–
<b>b025</b>	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	Rated current x 1.5	Amps
<b>b026</b>	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	1.0	sec.
<b>b027</b>	OC suppression selection *	Two option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled <b>02</b> ...Enable with voltage reduction	✗	00	–

## Software Lock Mode

The software lock function keeps personnel from accidentally changing parameters in the inverter memory. Use **b031** to select from various protection levels.

The table below lists all combinations of **b031** option codes and the ON/OFF state of the [SFT] input. Each Check ✓ or Ex ✗ indicates whether the corresponding parameter(s) can be edited. The Standard Parameters column below shows access is permitted for some lock modes. These refer to the parameter tables throughout this chapter, each of which includes a column titled *Run Mode Edit* as shown to the right.

	<b>Run Mode Edit</b>	
	✗	
	✓	

The marks (Check ✓ or Ex ✗) under the “Run Mode Edit” column title indicate whether access applies to each parameter as defined in the table below. In some lock modes, you can edit only **F001** and the Multi-speed parameter group that includes **A020**, **A220**, **A021–A035**, and **A038** (Jog). However, it does not include **A019**, Multi-speed operation selection. The editing access to **b031** itself is unique, and is specified in the right-most two columns below.

b031 Lock Mode	[SFT] Intelligent Input	Standard Parameters		F001 and Multi-Speed	b031	
		Stop	Run	Stop and Run	Stop	Run
00	OFF	✓	Run mode edit access	✓	✓	✗
	ON	✗	✗	✗	✓	✗
01	OFF	✓	Run mode edit access	✓	✓	✗
	ON	✗	✗	✓	✓	✗
02	(ignored)	✗	✗	✗	✓	✗
03	(ignored)	✗	✗	✓	✓	✗
10	(ignored)	✓	High level access	✓	✓	✓



**NOTE:** Since the software lock function **b031** is always accessible, this feature is not the same as password protection used in other industrial control devices. So if you want to use password function, use parameter **b037** together with the **b031**. See section 4-104 for detailed explanation of the password function.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b031</b>	Software lock mode selection	Prevents parameter changes, in five options, option codes: <b>00</b> ...all parameters except <b>b031</b> are locked when [SFT] terminal is ON <b>01</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked when [SFT] terminal is ON <b>02</b> ...all parameters except <b>b031</b> are locked <b>03</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked <b>10</b> ...High level access including <b>b031</b>  <i>See appendix C for the accessible parameters in this mode.</i>	<b>X</b>	01	-



**NOTE:** To disable parameter editing when using **b031** lock modes **00** and **01**, assign the [SFT] function to one of the intelligent input terminals. See "Software Lock" in chapter 4

## Motor Cable Length Parameter

To achieve higher motor control performance, the WJ200 inverter has the Motor Cable Length Parameter setting **b033**. Normally there is no need to adjust this parameter, however in case of long motor cable and/or shielded cable, where there is a comparatively higher earth capacitance, set this parameter higher to achieve better motor control performance.

Note that the parameter is indicative and no formula to calculate the suitable value. Normally, longer the motor cable, bigger the set value. Please adjust depending on your system.

For 11 and 15kW inverter, it is not needed to set b033.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b033</b>	Motor cable length parameter	Set range is 5 to 20.	<b>X</b>	10.	-

## Run/power ON warning time

Inverter outputs the operation time over (RNT) or the plug-in time over (ONT) signal when the time specified as the run/power ON warning time (**b034**) is exceeded.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b034</b>	Run/power ON warning time	Range is, <b>0</b> :Warning disabled <b>1</b> . to <b>9999</b> : 10~99,990 hrs (unit: 10) <b>1000</b> to <b>6553</b> : 100,000~655,350 hrs (unit: 100)	✘	0.	Hrs.

### (1) Operation time over (RNT) signal

To use this signal function, assign function "11 (RNT)" to one of the intelligent output terminals [11] to [12] (**C021** to **C022**), or to the alarm relay output (**C026**). Specify the run/power-ON warning time (**b034**).

### (2) Plug-in time over (ONT) signal

To use this signal function, assign function "12 (ONT)" to one of the intelligent output terminals [11] to [12] (**C021** to **C022**), or to the alarm relay output (**C026**). Specify the run/power-ON warning time (**b034**).

## Rotation restriction related parameters

**Rotation direction restriction: b035** – The rotation direction restriction function allows you to restrict the direction of the motor rotation. This function is effective regardless of the specification of operation command input device (e.g., control terminal or integrated operator). If an operation command to drive the motor in a restricted direction is given, the inverter (display) shows (□□□□).

**Reverse run protection: b046** – The reverse run protection function is effective when "03 (sensorless vector control)" or "04 (0-SLV)" is specified for the V/F characteristic selection (**A044**). For control reasons, especially during motor operation at low speed, the inverter may output a frequency that instructs the motor to rotate in the direction opposite to that specified by the operation command.


"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b035</b>	Rotation direction restriction	Three option codes: <b>00</b> ...No restriction <b>01</b> ...Reverse rotation is restricted <b>02</b> ...Forward rotation is restricted	✘	<b>00</b>	–
<b>b046</b>	Reverse run protection	Two option codes: <b>00</b> ...No protection <b>01</b> ...Reverse rotation is restricted	✘	<b>00</b>	–

## Reduced voltage start

The reduced voltage start function enables you to make the inverter increase the output voltage gradually when starting the motor.

Set a small value for the reduced voltage start selection (**b036**) if you intend to increase the start torque. On the other hand, setting a small value will cause the inverter to perform full-voltage starting and to easily trip because of overcurrent.

Func. Code	Name	"b" Function Description	Run Mode Edit	Defaults	
				Initial data	Units
<b>b036</b>	Reduced voltage start selection	Set range, <b>0</b> (disabling the function), <b>1</b> (approx. 6ms) to <b>255</b> (approx. 1.5s)	✗	2	–

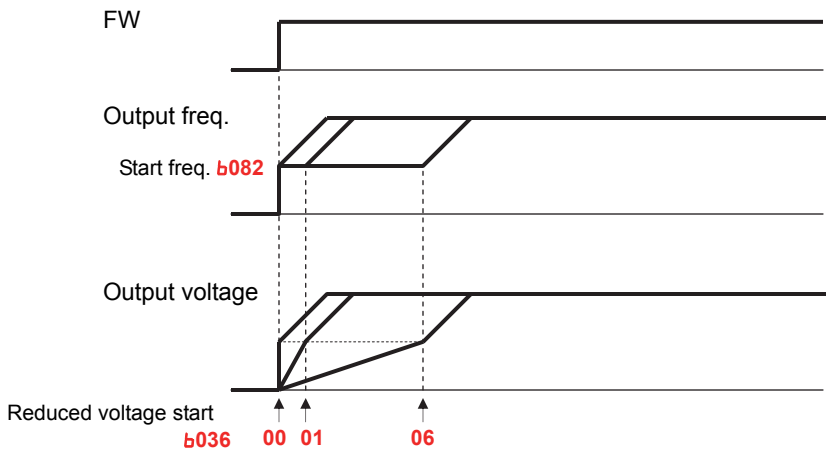

## Display related parameters

**Function code display restriction: b037** – The function code display restriction allows you to arbitrarily switch the display mode or the display content on the integrated operator.

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b037</b>	Function code display restriction	Six option codes: <b>00</b> ...Full display <b>01</b> ...Function-specific display <b>02</b> ...User setting (and <b>b037</b> ) <b>03</b> ...Data comparison display <b>04</b> ...Basic display <b>05</b> ...Monitor display only	<b>X</b>	00	–

### (1) Function-specific display mode (b037=01)

If a specific function has not been selected, the monitor does not show the parameters concerning the specific function. Following table lists the details of display conditions.

No.	Displayed conditions		Displayed func. codes when condition fulfilled.
1	2nd motor	C001...C007=08	F202, F203, A201 to A204, A220, A244, A245, A261, A262, A281, A282, A292 to A296, b212, b213, b221 to b223, C241, H202 to H204, H206
2	EzSQ	A017=01,02	d023 to d027, P100 to P131
3	Sensorless vector control	A044=03	d009, d010, d012, b040 to b046, C054 to C059, H001, H005, H020 to H024, H030 to H034, P033, P034, P036 to P040
4	Sensorless vector control for 2nd motor	C001...C007=08 AND A244=03	d009, d010, d012, b040 to b046, C054 to C059, H001, H205, H220 to H224, H230 to H234, P033, P034, P036 to P040
5	Free V/F control	A044=02 OR C001...C007=08 AND A244=02	b100 to b113
6	Free setting of electronic-thermal	b013=02 OR C001...C007=08 AND b213=02	b015 to b020
7	VC or VP <sup>1.7</sup> control	A044=00,01	A041 to A043, A046, A047
8	VC or VP <sup>1.7</sup> control for 2nd motor	C001...C007=08 AND A244=00,01	A241 to A243, A246, A247
9	DC breaking	A051=01,02 OR C001...C007=07	A052 to A059
10	PID	A071=01,02	d004, A072 to A079, A156, A157, C044, C052, C053
11	EzCOM	C096=01,02	C098 to C100, P140 to P155
12	Curving accel/deceleration	A097, A098=01...04	A131, A132, A150 to A153
13	Controlled deceleration	b050=01,02,03	b051 to b054
14	Breaking	b120=01	b121 to b127
15	Decel. overvolt. suppress	b130=01,02	b131 to b134
16	Simple positioning	P003=01	d008, P004, P011, P012, P015, P026, P027, P060 to P073, P075, P077, H050, H051

(2) User setting display mode (**b037=02**)

The monitor displays only the codes and items that are arbitrarily assigned to user parameters (**U001~U032**), except codes **d001**, **F001** and **b037**.

Refer to User parameter (**U001~U032**) section for the detail.

(3) Data comparison display mode (**b037=03**)

The monitor displays only the parameters that have been changed from the factory settings. All monitoring indications **dxxx** and code **F001**, **b190**, **b191** are always displayed.

(4) Basic display mode (**b037=04**)

The monitor displays basic parameters. (The monitor display is the factory setting.)  
The following table lists the parameters that can be displayed in basic display mode.

No.	Code displayed	Item
1	<b>d001 ~ d104</b>	Monitoring indication
2	<b>F001</b>	Output frequency setting
3	<b>F002</b>	Acceleration time (1)
4	<b>F003</b>	Deceleration time (1)
5	<b>F004</b>	Keypad Run key routing
6	<b>A001</b>	Frequency source
7	<b>A002</b>	Run command source
8	<b>A003</b>	Base frequency
9	<b>A004</b>	Maximum frequency
10	<b>A005</b>	[AT] selection
11	<b>A020</b>	Multi-speed frequency 0
12	<b>A021</b>	Multi-speed frequency 1
13	<b>A022</b>	Multi-speed frequency 2
14	<b>A023</b>	Multi-speed frequency 3
15	<b>A044</b>	V/F characteristic curve selection
16	<b>A045</b>	V/F gain
17	<b>A085</b>	Energy saving operation mode
18	<b>b001</b>	Restart mode on power failure / under volt. trip
19	<b>b002</b>	Allowable undervoltage power failure time
20	<b>b008</b>	Restart mode on over volt. / over current trip
21	<b>b011</b>	Retry wait time on over volt. / over current trip
22	<b>b037</b>	Function code display restriction
23	<b>b083</b>	Carrier frequency
24	<b>b084</b>	Initialization mode (parameters or trip history)
25	<b>b130</b>	Decel. overvoltage suppression enable
26	<b>b131</b>	Decel. overvoltage suppression level
27	<b>b180</b>	Initialization trigger
28	<b>b190</b>	Password A setting
29	<b>b191</b>	Password A for authentication
30	<b>C021</b>	Output [11] function
31	<b>C022</b>	Output [12] function
32	<b>C036</b>	Alarm relay active state

**Initial display selection: b038** – The initial display selection function allows you to specify data displayed on the integrated operator on powerup. The table below lists the display items selectable. (The factory setting is **01 [d001]**.)



---

**Panel display selection: b150** – When an external operator is connected to WJ200 via RS-422 port, the display is locked and shows only one parameter configured by **b150**.

**Automatic return to the initial display: b164** – 10 min. after the last key operation, display returns to the initial parameter set by **b038**.

**Frequency conversion coefficient setting: b086** – By setting **b086**, converted output frequency is monitored in **d007**. ( $d007 = d001 \times b086$ )

**Frequency set in monitoring: b163** – If **01** is set in **b163**, frequency can be changed by up/down key in monitor display **d001** and **d007**.

**Action selection in case of external operator disconnection: b165** – When an external operator is disconnected, the inverter behaves according to **b165** setting.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b038</b>	Initial display selection	<b>000</b> ...Func. code that SET key pressed last displayed. (*) <b>001~030</b> ... <b>d001~d030</b> displayed <b>201</b> ... <b>F001</b> displayed <b>202</b> ...B display of LCD operator	✗	001	–
<b>b086</b>	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for <b>d007</b> monitor, range is 0.01 to 99.99	✗	1.00	–
<b>b150</b>	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in: <b>d001 ~ d030</b>	✗	001	–
<b>b160</b>	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be monitored in d050. The two parameters are switched by up/down keys. Set range: <b>d001 ~ d030</b>	✗	001	–
<b>b161</b>	2nd parameter of Dual Monitor		✗	002	–
<b>b163</b>	Frequency set in monitoring	Two option codes: <b>00</b> ...Freq. set disabled <b>01</b> ...Freq. set enabled	✓	00	–
<b>b164</b>	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✓	00	–
<b>b165</b>	Ex. operator com. loss action	Five option codes: <b>00</b> ...Trip <b>01</b> ...Trip after deceleration to a stop <b>02</b> ...Ignore <b>03</b> ...Coasting (FRS) <b>04</b> ...Decelerates to a stop	✓	02	–

(\*) note: If the power is off with displaying "000" after the set, b038 comes when power is on again.

## User Parameter Registration

Parameter group “U” is the user parameter. Any function code can be chosen to register on this parameter up to 32. When display mode is set to be “user parameter” (**b037= 02**) then is **U001** to **U032** and **d001**, **F001**, **b037** are displayed.

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b037</b>	Function code display restriction	Six option codes: <b>00</b> ...Full display <b>01</b> ...Function-specific display <b>02</b> ...User setting (and <b>b037</b> ) <b>03</b> ...Data comparison display <b>04</b> ...Basic display <b>05</b> ...Monitor display only	<b>X</b>	00	-
<b>U001</b> <input type="checkbox"/> <b>U032</b>	User parameters 1 to 32	Set range, “no”, <b>d001-P183</b>	<b>X</b>		-

## Automatic User Parameter Registration

The automatic user parameter setting function allows you to make the inverter automatically record changed function codes in **U001** to **U032**. You can use the stored function codes as a history of data change. To enable this function, select “**01**” (enabling automatic user parameter setting) for the **b039**.

When any data is changed and SET key is pressed, the function code will be stored in **U001** to **U032** sequentially.

The latest data is in **U001**, and the oldest one is in **U032**.

Stored function codes in **U001** to **U032** are not duplicated. If duplicated function code is changed, old existing function code is deleted. If number of changed function code exceeds 32, the oldest one in **U032** is deleted.

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b039</b>	Automatic user parameter registration	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	<b>X</b>	00	-
<b>U001</b> - <b>U032</b>	User parameters 1 to 32	Set range, “no”, <b>d001-P183</b>	<b>X</b>		-

## Torque Limit Function

Torque limit function allows you to limit the motor output when **03** (SLV) is set for the V/F characteristics set at parameter **A044**. You can select one of the following modes with the torque limit selection (**b040**).

(1) Quadrant-specific setting mode (**b040=00**)

In this mode, individual torque limit value to be applied to four quadrants (i.e. forward powering, reverse regeneration, reverse powering and forward regeneration) are set as the torque limits 1 to 4 (**b041** to **b044**), respectively.

(2) Terminal-switching mode(**b040=01**)

In this mode, the torque limit values set in the torque limits 1 to 4 (**b041** to **b044**) are switched from one another according to the combination of the states of torque limit switch terminals 1 and 2 (TRQ1 and TRQ2) assigned to intelligent input terminals. A single selected torque limit is valid in all the operating states.

(3) Analog voltage input mode(**b040=02**)

In this mode, the torque limit value is set by a voltage applied to the control circuit terminal O. The voltage range 0 to 10V corresponds to the torque limit value range 0 to 200%. A single selected torque limit is valid in all the operating states.

If parameter “**40** (TL: whether to enable torque limitation)” has been assigned to any intelligent input terminal, the torque limit mode selected by the setting of **b040** is enabled only when the TL terminal is turned ON. When the TL terminal is turned OFF, torque limit settings are invalid, and the maximum torque setting is applied as a torque limit.

If the TL function has not been assigned to the intelligent input terminal, the torque limit mode selected by the setting of **b040** is always enabled.

Each torque limit value used for this function is expressed as a ratio of the maximum torque generated when the inverter outputs its maximum current on the assumption that the maximum torque is 200%.


Note that each torque limit value does not represent an absolute value of torque. The actual output torque varies depending on the motor.

If the torque limited signal function (TRQ) is assigned to an intelligent output terminal, the TRQ signal will turn ON when the torque limit function operates.

100% torque is referred to inverter rated current. Absolute torque value is up the motor to be combined.


Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b040</b>	Torque limit selection	Three option codes: <b>00</b> ...Quadrant-specific setting mode <b>01</b> ...Terminal-switching mode <b>02</b> ...Analog voltage input mode(O) <b>03</b> ...Option board	✗	00	—
<b>b041</b>	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b042</b>	Torque limit 2 (rev/regen.)	Torque limit level in reverse regen. quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b043</b>	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b044</b>	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b045</b>	Torque LAD STOP selection	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	00	—

When "00" is specified for the torque limit selection (**b040**), the torque limits 1 to 4 apply as shown to the top right.

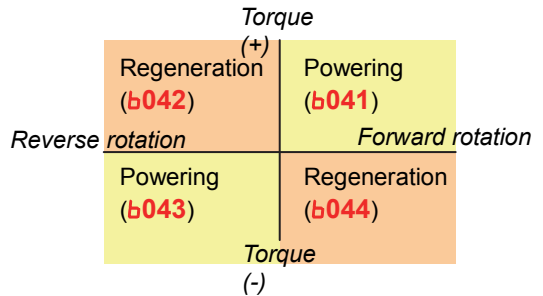

When "00" is specified for the torque limit selection (**b040**), the torque limit 1 to 4 are set as shown to the bottom right. The torque limit 1 to 4 are switched by the torque limit switches 1 and 2 assigned to intelligent input terminals 7 and 8, respectively for example:


When applying the torque limit function to the motor operation at low speed, also use the overload restriction function to get more stable performance.

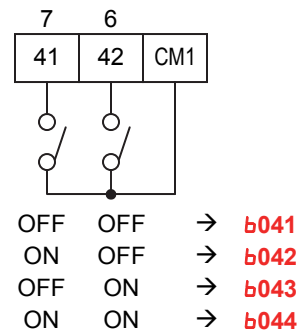

Related parameters: Over torque / under torque signal

## Controlled Stop Operation at Power Loss

Controlled stop operation at power loss helps avoid tripping or free-running (coasting) of the motor when power is lost while in run mode. The inverter controls the internal DC bus voltage while decelerating the motor, and brings the motor to a controlled stop.

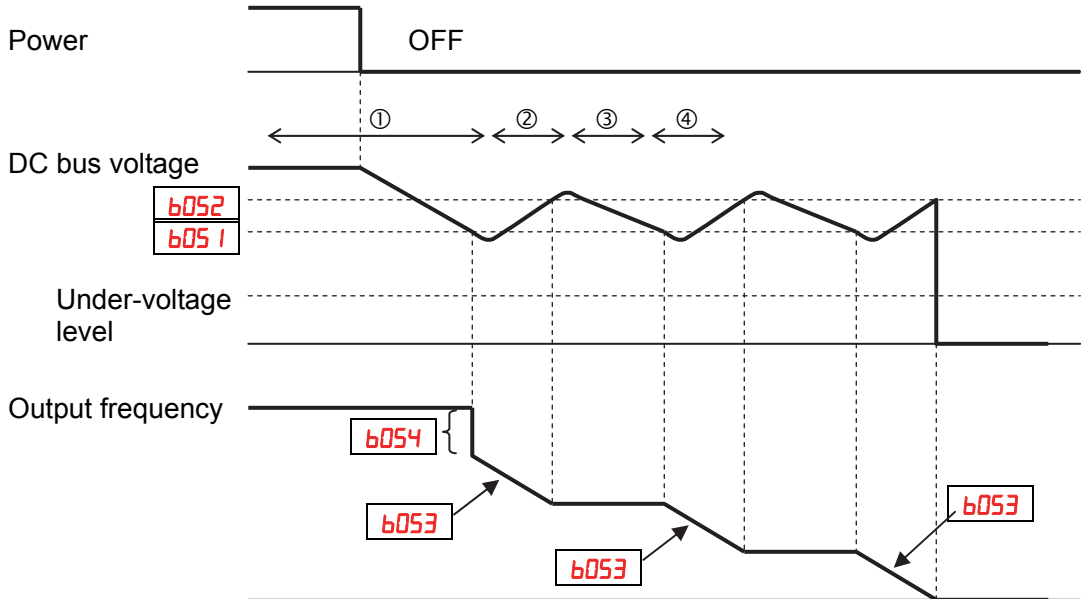

Should power be lost while the inverter is in run mode, this function will have the following effect:

- ① When the internal DC bus voltage of the inverter comes down to the set level of **B051**, the inverter decreases the output frequency by the amount set in **B054**. (During this interval the DC bus voltage rises due to regeneration, so does not reach the UV level.)
- ② The inverter then continues deceleration according to the value set in **b053**. If the DC bus voltage rises up to the set value of **b052**, the inverter stops deceleration to avoid OV tripping.
- ③ During this interval, the DC bus voltage decreases again due to lack of input power.
- ④ When the DC bus voltage comes down to the set value of **b051**, the inverter starts deceleration according to the set value of **b053** again. This process will be repeated as needed until the motor is brought to a stop.



---

**NOTE:** If the DC bus voltage comes down to the UV level during this operation, the inverter trips with under-voltage and motor will free-run (coast) to a stop.

---



---

**NOTE:** If the set value of **b052**<**b051**, then the inverter internally swaps the **b052** and **b051** values. However the displayed values are not changed.

---



---

**NOTE:** This function cannot be interrupted until it is completed. So if the power is restored during this operation, wait until the operation is done (motor stops) and then give the run command.

---

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b050</b>	Controlled deceleration on power loss	Four option codes: <b>00</b> ...Disable <b>01</b> ...Decelerates to a stop <b>02</b> ...Decelerates to a stop with DC bus voltage controlled <b>03</b> ...Decelerates to a stop with DC bus voltage controlled, then restart	✗	00	-
<b>b051</b>	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	✗	220.0/ 440.0	V
<b>b052</b>	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	✗	360.0/ 720.0	V
<b>b053</b>	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0	✗	1.0	sec
<b>b054</b>	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	✗	0.0	Hz



## Window Comparator, Analog disconnection


The window comparator function outputs signals when the values of analog inputs O and OI are within the maximum and minimum limits specified for the window comparator. You can monitor analog inputs with reference to arbitrary levels (to find input terminal disconnection and other errors).

You can specify a hysteresis width for the maximum-limit and minimum-limit levels of the window comparator. You can also specify limit levels and a hysteresis width individually for analog inputs O and OI.

You can fix the analog input data to be applied to an arbitrary value when WCO or WCOI is output. For this purpose, specify a desired value as the operation level at O/OI disconnection (**b070/b071/b072**). When “no” is specified, the analog input data is reflected as input.

Output values of ODC and OIDC are the same as those of WCO and WCOI, respectively.

Func. Code	Name	Description	Run Mode Edit	Defaults	
				Initial data	Units
<b>b060</b>	Maximum-limit level of window comparator (O)	Set range, 0.to100. {lower limit: $b061 + b062 \times 2$ } (%)	✗	100.	%
<b>b061</b>	Minimum-limit level of window comparator (O)	Set range, 0.to100. {upper limit: $b060 - b062 \times 2$ } (%)	✓	0.	%
<b>b062</b>	Hysteresis width of window comparator (O)	Set range, 0.to10. {upper limit: $(b060 - b061) / 2$ } (%)	✓	0.	%
<b>b063</b>	Maximum-limit level of window comparator (OI)	Set range, 0.to100. {lower limit: $b064 + b065 \times 2$ } (%)	✓	100.	%
<b>b064</b>	Minimum-limit level of window comparator (OI)	Set range, 0.to100. {upper limit: $b063 - b065 \times 2$ } (%)	✓	0.	%
<b>b065</b>	Hysteresis width of window comparator (OI)	Set range, 0.to10. {upper limit: $(b063 - b064) / 2$ } (%)	✓	0.	%
<b>b070</b>	Operation level at O disconnection	Set range, 0 to 100%, or “no” (ignore)	✗	no	–
<b>b071</b>	Operation level at OI disconnection	Set range, 0 to 100%, or “no” (ignore)	✗	no	–

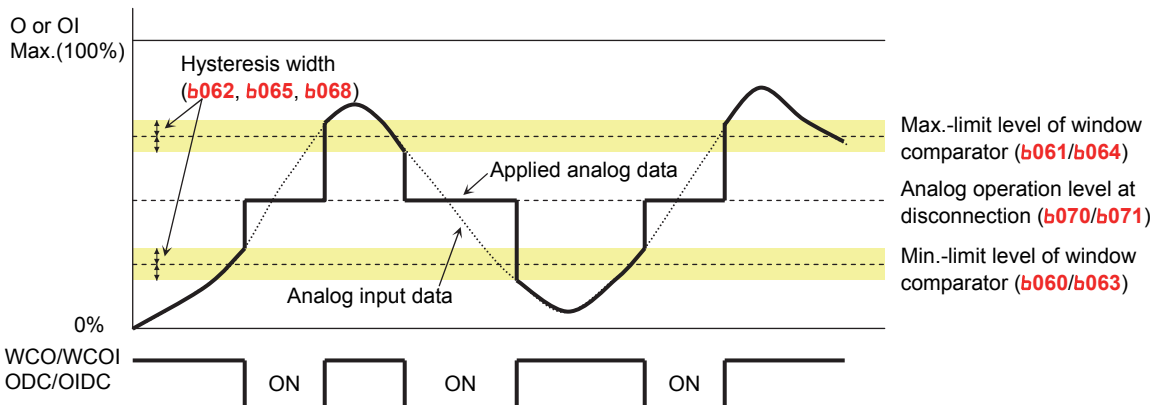

## Ambient Temperature Setting

Sets the ambient temperature where the inverter is installed, so to calculate internally the lifetime of cooling fan. Incorrect data will result in an incorrect calculation result.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b075</b>	Ambient temperature setting	Set range is, -10~50 °C	✓	40	°C

## Watt-hour related

When the watt-hour monitoring function is selected, the inverter displays the watt-hour value of electric power given to the inverter. You can also convert the value to be displayed to gain data by setting the cumulative input power display gain setting (**b079**). Value displayed by function **d015** is expressed as follows:

$$\mathbf{d015} = \frac{\text{Watt-hour (kWh)}}{\text{Watt-hour gain setting (b079)}}$$

The watt-hour input gain can be set within the range 1 to 1000 in step of 1.

You can clear the watt-hour data by specifying "01" for the watt-hour clearance function (**b078**) and pressing the STR key. You can also clear the watt-hour data at an intelligent input terminal by assigning parameter "53" (KHC: watt-hour clearance) to the terminal.

When the watt-hour display gain setting (**b078**) is set to "1000", the watt-hour data up to 999000 (kWh) can be displayed.

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b078</b>	Watt-hour clearance	Two option codes: <b>00</b> ...OFF <b>01</b> ...ON (press STR then clear)	✓	00	-
<b>b079</b>	Watt-hour display gain	Set range is, 1~1000.	✓	1.	-

## Carrier frequency (PWM) related

**Carrier frequency adjustment: b083** – The internal *switching frequency* of the inverter circuitry (also called the *chopper frequency*). It is called the carrier frequency because the lower AC power frequency of the inverter “rides” the carrier. The faint, high-pitched sound you hear when the inverter is in Run Mode is characteristic of switching power supplies in general. The carrier frequency is adjustable from 2.0kHz to 15kHz. The audible sound decreases at the higher frequencies, but RFI noise and leakage current may be increased. Refer to the specification derating curves in Chapter 1 to determine the maximum allowable carrier frequency setting for your particular inverter and environmental conditions. Refer also to **b089** for automatic carrier frequency reduction.




**NOTE:** The carrier frequency setting must stay within specified limits for inverter-motor applications that must comply with particular regulatory agencies. For example, European CE-approved application requires the carrier to be 3kHz or less.

**Automatic carrier frequency reduction: b089** – The automatic carrier frequency reduction automatically reduces the carrier frequency according to the increase in output current. To enable this function, specify “01” for automatic carrier frequency reduction selection (**b089**).

When the output current increases to 60%, 72%, 84%, or 96% of the rated current, this function reduces the carrier frequency to 12, 9, 6, or 3 kHz, respectively. This function restores the original carrier frequency when the output decreases to 5% lower than each reduction start level.

The rate of carrier frequency reduction is 2kHz per second. The maximum limit of carrier frequency change by this function is the value specified for the carrier frequency setting (**b083**); the minimum limit is 3 kHz. Note: If 3 kHz or less freq. has been specified for **b083**, this function is disabled regardless of the setting of **b089**.

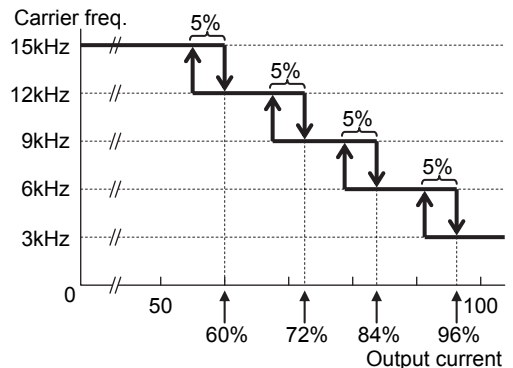

[Remark: Above graph is for schematic concept and the profile is a subject to change reflecting the temperature test.]

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b083</b>	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	✗	10.0	kHz
<b>b089</b>	Automatic carrier frequency reduction	Three option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled, depending on the output current <b>02</b> ...Enabled, depending on the heat-sink temperature	✗	01	–

## Miscellaneous Settings

The miscellaneous settings include scaling factors, initialization modes, and others. This section covers some of the most important settings you may need to configure.

**Start frequency adjustment: b082** – When the inverter starts to run, the output frequency does not ramp from 0Hz. Instead, it steps directly to the *start frequency* (b082), and the ramp proceeds upward from there.

**Initialization related: b084, b085, b094, b180** – These functions allow you to restore the factory default settings. Please refer to “[Restoring Factory Default Settings](#)” in chapter 6.

**Stop key enable function: b087** – This function allows you to decide whether the stop key on the integrated operator is enabled or not.

**Dynamic Braking related functions: b090, b095, b096,** – These parameters are for using the internal brake chopper so to get more regeneration torque of the motor.

**Cooling Fan Control: b092** – You can select the performance of the cooling fan (if your inverter model includes a fan). This function controls whether the cooling fan stops or keeps on running after the inverter stops the motor. This can result in an additional energy saving and extends fan life.

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b082</b>	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	×	0.50	Hz
<b>b084</b>	Initialization mode (parameters or trip history)	Select initialized data, five option codes: <b>00</b> ...Initialization disabled <b>01</b> ...Clears Trip history <b>02</b> ...Initializes all Parameters <b>03</b> ...Clears Trip history and initializes all parameters <b>04</b> ...Clears Trip history and initializes all parameters and EzSQ program	×	00	–
<b>b085</b>	Country for initialization	Select default parameter values for country on initialization, two option codes: <b>00</b> ...area A <b>01</b> ...area B	×	01	–
<b>b087</b>	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes: <b>00</b> ...Enabled <b>01</b> ...Disabled always <b>02</b> ...Enabled only for trip reset	×	00	–
<b>b090</b>	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to 100%. 0%: Function disabled >0%: Enabled, per value	×	0.0	%

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b092</b>	Cooling fan control	Selects when the fan is ON during inverter operation, three options: <b>00</b> ...Fan is always ON <b>01</b> ...Fan is ON during run, OFF during stop (5 minute delay from ON to OFF) <b>02</b> ...Fan is temperature controlled	✕	01	–
<b>b093</b>	Clear elapsed time of cooling fan	Two option codes: <b>00</b> ...Count <b>01</b> ...Clear	✕	00	–
<b>b094</b>	Initialization target data	Select initialized parameters, four option codes: <b>00</b> ...All parameters <b>01</b> ...All parameters except in/output terminals and communication. <b>02</b> ...Only registered parameters in Uxxx. <b>03</b> ...All parameters except registered parameters in Uxxx and <b>b037</b> .	✕	00	–
<b>b095</b>	Dynamic braking control (BRD) selection	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable during run only <b>02</b> ...Enable always	✕	00	–
<b>b096</b>	BRD activation level	Range is: (200V class): 330 to 380V(up to 390V:Ver. 3.1 or after) (400V class): 660 to 760V (up to 780V:Ver. 3.1 or after)	✕	360/ 720	V
<b>b180</b>	Initialization trigger (*)	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: <b>00</b> ...Initialization disable <b>01</b> ...Perform initialization	✕	00	–

(\*) Note: When 01 is set on b180, and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting. WJ200 doesn't have a method to trigger the initialization by key action as the other Hitachi inverter models have.

**Stop Mode / Restart Mode Configuration: b091/b088** – You can configure how the inverter performs a standard stop (each time Run FWD and REV signals turn OFF). Setting **b091** determines whether the inverter will control the deceleration, or whether it will perform a free-run stop (coast to a stop). When using the free-run stop selection, it is imperative to also configure how you want the inverter to resume control of motor speed. Setting **b088** determines whether the inverter will ensure the motor always resumes at 0 Hz, or whether the motor resumes from its current coasting speed (also called *active frequency matching*). The run command may turn OFF briefly, allowing the motor to coast to a slower speed from which normal operation can resume.

In most applications a controlled deceleration is desirable, corresponding to **b091=00**. However, applications such as HVAC fan control will often use a free-run stop (**b091=01**). This practice decreases dynamic stress on system components, prolonging system life. In this case, you will typically set **b088=01** in order to resume from the current speed after a free-run stop (see diagram down below: active frequency matching resume). Note that using the default setting, **b088=00**, can cause trip events when the inverter attempts to force the load quickly to zero speed.



---



**NOTE:** Other events can cause (or be configured to cause) a free-run stop, such as power loss (see “Automatic Restart Mode” on page 3-44), or an intelligent input terminal [FRS] signal. If all free-run stop behavior is important to your application (such as HVAC), be sure to configure each event accordingly.

---

An additional parameter further configures all instances of a free-run stop. Parameter **b003**, Retry Wait Time Before Motor Restart, sets the minimum time the inverter will free-run. For example, if **b003** = 4 seconds (and **b091=01**) and the cause of the free-run stop lasts 10 seconds, the inverter will free-run (coast) for a total of 14 seconds before driving the motor again.

The figure at below right describes how active frequency matching resume operates. After waiting the time set in **b003**, the inverter tries to catch the speed of the motor shaft and outputs the speed set in **b030**. At this time, if the motor current rises up to the value set in **b028**, the inverter decreases the frequency according to the deceleration time set in **b029**, and finally comes to the required speed. Following are the related parameters for this control.

Code	Parameter contents
<b>b028</b>	Current level of active frequency matching
<b>b029</b>	Deceleration rate of active frequency matching
<b>b030</b>	Start freq. of active freq. matching
<b>b088</b>	Restart mode after FRS
<b>b091</b>	Stop mode selection

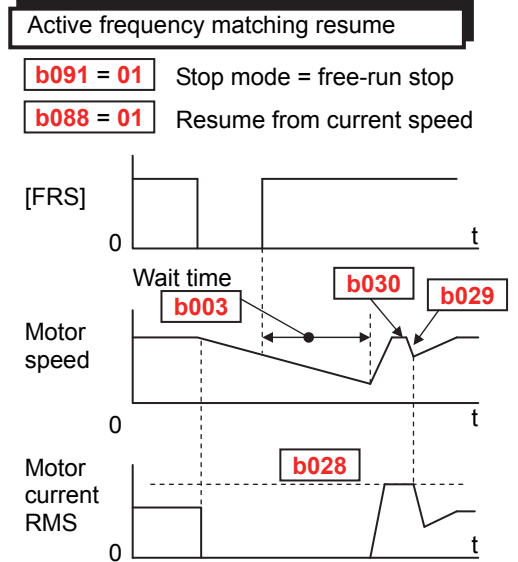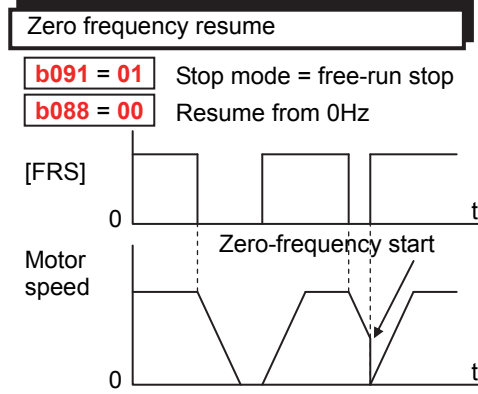

Func. Code	Name	"b" Function Description	Run Mode Edit	Defaults	
				Initial data	Units
<b>b088</b>	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options: <b>00</b> ...Restart from 0Hz <b>01</b> ...Restart from frequency detected from real speed of motor (freq. matching) <b>02</b> ...Restart from frequency detected from real speed of motor (active freq. matching)	✗	00	-
<b>b091</b>	Stop mode selection	Select how the inverter stops the motor, two option codes: <b>00</b> ...DEC (decelerate to stop) <b>01</b> ...FRS (free-run to stop)	✗	00	-

## Free-V/F Settings Related

Please refer to chapter 3 for detailed explanation of the function.


Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b100</b>	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b102</b>	✘	0.	Hz
<b>b101</b>	Free V/F setting, voltage.1	Set range, 0 ~ 800V	✘	0.0	V
<b>b102</b>	Free V/F setting, freq.2	Set range, value of <b>b100</b> ~ <b>b104</b>	✘	0.	Hz
<b>b103</b>	Free V/F setting, voltage.2	Set range, 0 ~ 800V	✘	0.0	V
<b>b104</b>	Free V/F setting, freq.3	Set range, value of <b>b102</b> ~ <b>b106</b>	✘	0.	Hz
<b>b105</b>	Free V/F setting, voltage.3	Set range, 0 ~ 800V	✘	0.0	V
<b>b106</b>	Free V/F setting, freq.4	Set range, value of <b>b104</b> ~ <b>b108</b>	✘	0.	Hz
<b>b107</b>	Free V/F setting, voltage.4	Set range, 0 ~ 800V	✘	0.0	V
<b>b108</b>	Free V/F setting, freq.5	Set range, value of <b>b106</b> ~ <b>b110</b>	✘	0.	Hz
<b>b109</b>	Free V/F setting, voltage.5	Set range, 0 ~ 800V	✘	0.0	V
<b>b110</b>	Free V/F setting, freq.6	Set range, value of <b>b108</b> ~ <b>b112</b>	✘	0.	Hz
<b>b111</b>	Free V/F setting, voltage.6	Set range, 0 ~ 800V	✘	0.0	V
<b>b112</b>	Free V/F setting, freq.7	Set range, <b>b110</b> ~ 400	✘	0.	Hz
<b>b113</b>	Free V/F setting, voltage.7	Set range, 0 ~ 800V	✘	0.0	V



## Brake Control Function Related

The brake control function allows you to make the inverter control an external brake used for a lift or other machines. To enable this function, specify “01” (enabling the brake control function) for the Brake Control Enable (**b120**). This function operates as described below.

- (1) When the inverter receives an operation command, it starts the output and accelerates the motor up to the Brake Release Frequency Setting.
- (2) After the Brake Release Frequency Setting is reached, the inverter waits for the braking wait time (**b121**), and then outputs the brake release signal (BOK). However, if the inverter output current has not reached the brake release current (**b126**), the inverter does not output the brake release signal, but trips and outputs a brake error signal (BER).
- (3) When the braking confirmation signal (BOK) has been assigned to an intelligent input terminal (that is, when “44” is specified for one of “C001” to “C007”), the inverter waits for the Brake Wait Time for Confirmation (**b124**) without accelerating the motor after receiving the brake release signal. If the inverter does not receive the braking confirmation signal within the braking confirmation time (**b124**), it trips with the braking error signal (BER) output. When the braking confirmation signal (BOK) has not been assigned to any intelligent input terminal, the Brake Wait Time for Confirmation (**b124**) is invalid. In such cases, the inverter proceeds to the operation described in item (4) after the output of the brake release signal.
- (4) After the input of the braking confirmation signal (or the output of the brake release signal [when the BOK signal function is disabled]), the inverter waits for the Brake Wait Time for Acceleration (**b122**), and then starts accelerating the motor up to the set acceleration frequency.
- (5) When the operation command is turned off, the inverter decelerates the motor down to the braking frequency (**b125**), and then turns off the brake release signal (BRK).

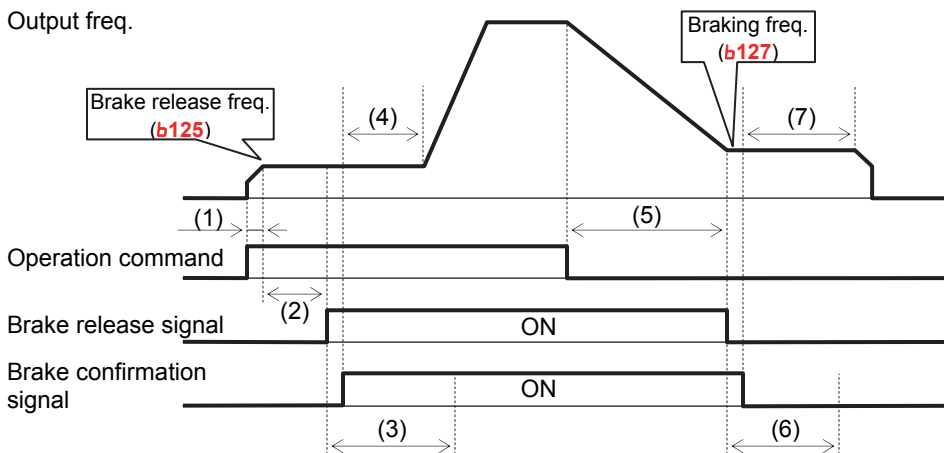

- (1) Time to reach Brake release freq.
- (2) Brake Wait Time for Release (**b121**)
- (3) Brake Wait Time for Confirmation (**b124**)
- (4) Brake Wait Time for Acceleration (**b122**)
- (5) Time to decelerate down to Braking freq
- (6) Brake Wait Time for Confirmation (**b124**)
- (7) Brake Wait Time for Stopping (**b123**)

- (6) When the braking confirmation signal (BOK) has been assigned to an intelligent input terminal (that is, when “44” is specified for one of “C001” to “C007”), the inverter waits, after turning off the brake release signal, until the braking confirmation is turned off at least for the Brake Wait Time for Confirmation (**b124**) without decelerating the motor. If the braking confirmation signal is not turned off within the Brake Wait Time for Confirmation (**b124**), the inverter trips with the braking error signal (BER) output. When the braking confirmation signal (BOK) has not been assigned to any intelligent input terminal, the Brake Wait Time for Confirmation (**b124**) is invalid. In such cases, the inverter proceeds to the operation described in item (7) after the brake release signal is turned off.
- (7) After the braking confirmation signal (or the brake release signal [when the BOK signal function is disabled]) is turned off, the inverter waits for the Brake Wait Time for Stopping (**b123**), and then starts decelerating the motor down to 0Hz.



**NOTE:** The above timing chart shows the operation on the assumption that the braking confirmation signal “44” (BOK) is assigned to one of the terminal 1 to 7 (C001~C007). If the BOK signal is not assigned to any terminal, the Brake Wait Time for Acceleration (**b122**) begins when the brake release signal is turned on, and the Brake Wait Time for Stopping (**b123**) begins when the brake release signal is turned off.

When using the brake control function, assign the following signal functions to intelligent input and output terminals as needed.

- ① To input a signal indicating that the brake is released from the external brake to the inverter, assign the braking confirmation signal (**44**: BOK) to one of the terminal 1~7 (**C001~C007**)
- ② Assign the brake release signal (**19**: BRK), which is a brake-releasing command, to one of the output terminal 11~12 (**C021~C022**). To output a signal when braking is abnormal, assign the brake error signal (**20**: BER) to an output terminal.


When using the brake control function, you are recommended to select the sensorless vector control (**A044=03**) that ensures a high torque performance.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b120</b>	Brake control enable (refer to chapter ver.3)	Three option codes: <b>00</b> ...Disable <b>01</b> ...P012=00:Enable/ P012=02:Enable with DC breaking at positioning end <b>02</b> ...P012=00:Enable/ P012=02:Enable without DC breaking at positioning end	✗	00	-
<b>b121</b>	Brake Wait Time for Release	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b122</b>	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b123</b>	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b124</b>	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b125</b>	Brake release freq.	Set range: 0 to 400Hz	✗	0.00	Sec
<b>b126</b>	Brake release current	Set range: 0~200% of inverter rated current	✗	(rated current)	A
<b>b127</b>	Braking freq. setting	Set range: 0 to 400Hz	✗	0.00	Hz

### DC Bus AVR (Automatic Voltage Regulation) for Deceleration Settings

This function is to achieve stable DC bus voltage in case of deceleration. DC bus voltage rises due to regeneration during deceleration. When this function is activated (**b130=01** or **02**), inverter controls the deceleration time so that the DC bus voltage not to go up to the overvoltage trip level, and leads to the trip-less operation during deceleration.

Please note that the actual deceleration time can be longer in this case.

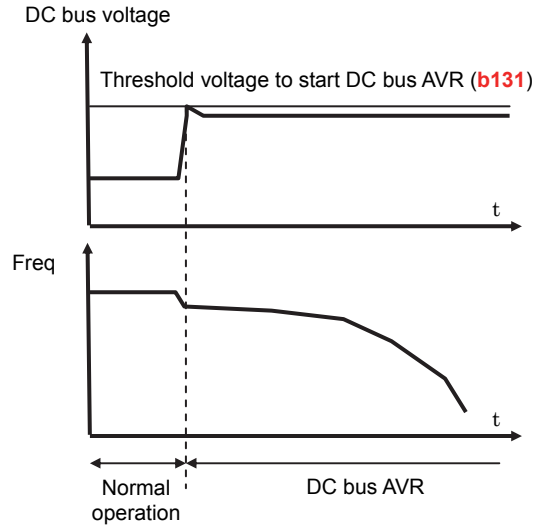

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b130</b>	Deceleration overvoltage suppression enable	<b>00</b> ...Disabled <b>01</b> ...Enabled <b>02</b> ...Enabled with accel.	✗	00	-
<b>b131</b>	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 200V class...330 to 395 400V class...660 to 790	✗	380 /760	V
<b>b132</b>	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: 0.10 ~ 30.00 sec.	✗	1.00	sec
<b>b133</b>	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	0.20	-
<b>b134</b>	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0	✓	1.0	sec

## STO (Safe Torque Off) Trip Setting

In addition to the shutting off the output by hardware, inverter trips by means of software. Please refer to the appendix E for detailed information. When safety function is used for the purpose of emergency stop, it is recommended to set "01".

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b145</b>	GS input mode (refer to chapter ver.3.1)	Seven option codes: 00...No trip (Hardware shutoff only) 01...E37 02... E98/E99/-S- 03... E99/-S- 04... -S- 05... E99/-S-/-F** 06... -S-/-F** (02 to 06:Ver. 3.1 or after)	<b>X</b>	00	-

## Inverter Mode Setting

After switched Inverter mode to PM (Permanent magnetic) mode, Permanent magnetic motor control is available. (Factory default is IM (Induction motor) mode)

PM mode is available only CT (HD) mode. (Parameter b049=00)

The mode is not changed only Inverter mode set (parameter b171). After changed the Inverter mode, execute "Restoring Factory Default Settings"(parameter b180), then the Parameter is initialized, the inverter mode is changed. (This initialization needs no parameter change of b084 like "Restoring Factory Default Settings".)

Current preset Mode can be monitored d060 display.


If you need such "Clears Trip history" or "Restoring Factory Default Settings" again at PM mode, please set b084,b085,b094 parameters, then set b171, so that Initialization will be executed.

b171 parameter setting is not required.

If you change from PM mode to IM mode, use b171, b180 parameter setting & the procedure.

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b171</b>	Inverter mode selection	Three option codes: <b>00</b> ...No function <b>01</b> ...Std. IM (Induction Motor) <b>03</b> ...PM(Permanent Magnet Motor)	<b>X</b>	00	-

Function	Standard mode	
	HD	ND
Rating	HD	ND
Max. freq. (A004)	400Hz	400Hz
Start freq. (b082)	0.10 to 9.99 (Hz)	0.10 to 9.99 (Hz)
Carrier freq. (b083)	2.0 to 15.0 (kHz)	2.0 to 10.0 (kHz)
V/f characteristic curve (A044)	00: Const. torque 01: Reduced torque 02: Free V/f 03: SLV	00: Const. torque 01: Reduced torque 02: Free V/f

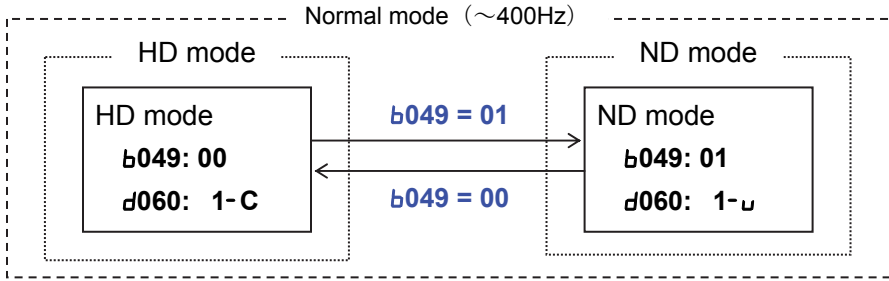


## Password Function

The WJ200 inverter has password function to prevent from changing parameters or to hide a part of parameters. There are two passwords for **b037** (Function Code Display Restriction) and **b031** (Software Lock) corresponding to password A and password B.

If password is forgotten, there is no way to delete password. Please be careful to set password.

### ◆ Overview of password function (Example of password A)

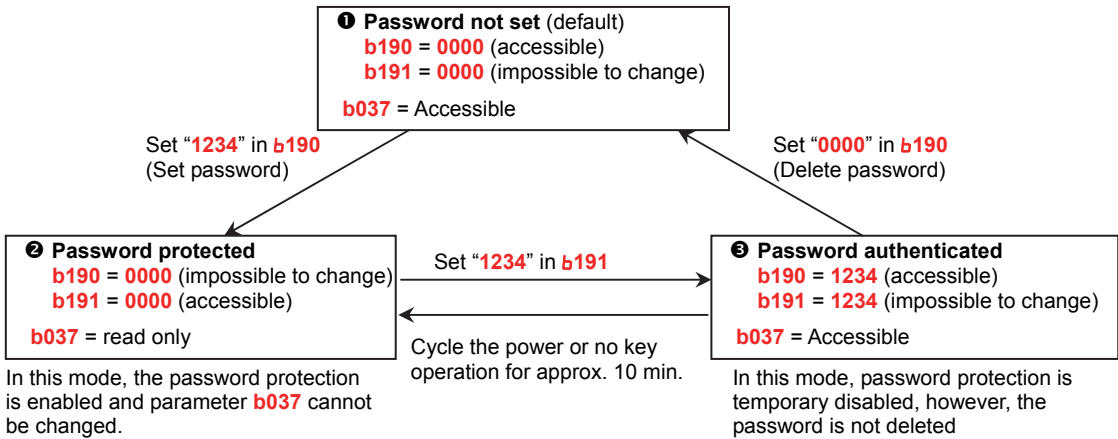


### ◆ Function Code Display Restriction Function and Software Lock Function

Target of password	Function description	Applied parameters for setting password
Function Code Display Restriction <b>b037</b> (password A)	Depending on the value in <b>b037</b> , a part of function codes are not displayed. (Displayed parameters can be changed.)	<b>b190, b191</b>
Software Lock <b>b031</b> (password B)	Depending on the value in <b>b031</b> , all or a part of parameters can not be changed. (All the function codes and data are displayed.)	<b>b192, b193</b>

### ◆ How to Set Password

- (1) Set parameter **b037** and/or **b031** depending on your demand
- (2) Set password in **b190** and/or **b192** ("0000" is not available.)

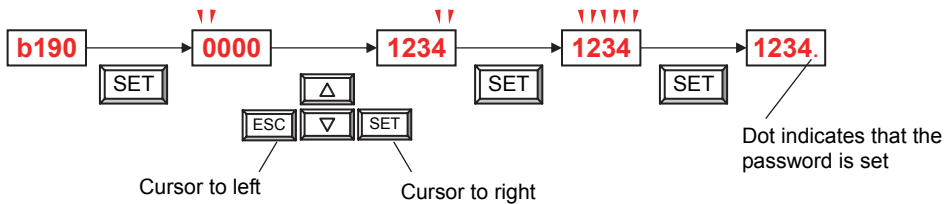


- (3) Password has been set and locked.  
 Parameter **b037** and/or **b031** cannot be changed.

◆ **How to authenticate Password**

For a person who knows the password, unlock password protection as follows.

(4) Set password in **b191** and/or **b193**.

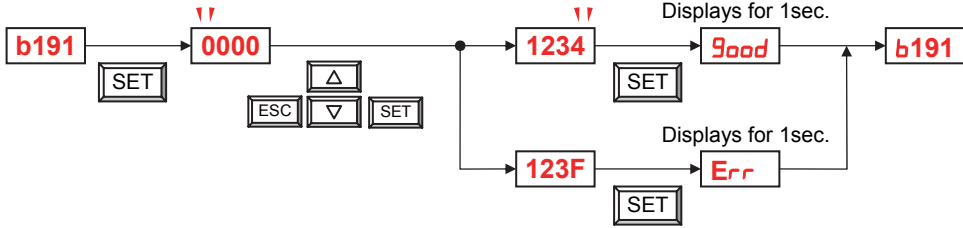

(5) If entered password is matched, “**Good** (Good)” is displayed for 1 second and password protection is unlocked temporary. If cycling the power or no key operation lasts 10 min., password protection is enabled again automatically. If entered password is unmatched, “**Err** (Error)” is displayed and protection is not unlocked.

◆ **How to change Password**

(6) Make password authentication as above (4).

(7) Set new password in **b190** and/or **b192**




(8) After changing the password, password protection is enabled automatically.

◆ **How to delete Password**

(9) Make password authentication as above (4).

(10) Set “**0000**” in **b190** and/or **b192**

(11) Password has been deleted and all the password information are cleared

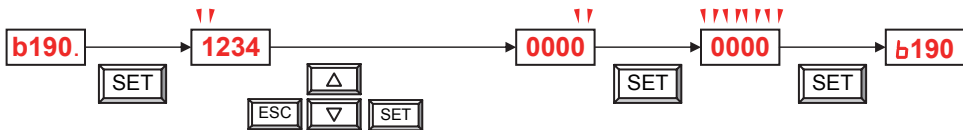



## “C” Group: Intelligent Terminal Functions

The seven input terminals [1], [2], [3], [4], [5], [6], and [7] can be configured for any of 72 different functions. The next two tables show how to configure the seven terminals. The inputs are logical, in that they are either OFF or ON. We define these states as OFF=0, and ON=1.

The inverter comes with default options for the seven terminals. These settings are initially unique, each one having its own setting. Note that European and US versions have different default settings. You can use any option on any terminal, and even use the same option twice to create a logical OR (though usually not required).



**NOTE:** Terminals [3] and [4] have the ability to be logical inputs, and to be safety inputs in case of safe stop function is selected.



**NOTE:** Terminal [5] has the ability to be a logical input, and to be an analog input for a thermistor device when PTC function (option code 19) is assigned to that terminal.

### Input Terminal Configuration

Functions and Options – The *function codes* in the following table let you assign one of seventy-two options to any of the seven logic inputs for the XJ200 inverters. The functions **C001** through **C007** configure the terminals [1] through [7] respectively. The “value” of these particular parameters is not a scalar value, but it is a discrete number that selects one option from many available *options*.

For example, if you set function **C001=00**, you have assigned option **00** (Forward Run) to terminal [1]. The option codes and the specifics of how each one works are in Chap. 4.

Func. Code	Name	“C” Function Description	Run Mode Edit	Defaults	
				Initial data	Units
<b>C001</b>	Input [1] function	Select input terminal [1] function, 68 options (see next section)	×	00 [FW]	–
<b>C002</b>	Input [2] function	Select input terminal [2] function, 68 options (see next section)	×	01 [RV]	–
<b>C003</b>	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	×	12 [EXT]	–
<b>C004</b>	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	×	18 [RS]	–
<b>C005</b>	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	×	02 [CF1]	–
<b>C006</b>	Input [6] function	Select input terminal [6] function, 68 options (see next section)	×	03 [CF2]	–
<b>C007</b>	Input [7] function	Select input terminal [7] function, 68 options (see next section)	×	06 [JG]	–

The input logic conversion is programmable for each of the seven inputs default to normally open (active high), but you can select normally closed (active low) in order to invert the sense of the logic.

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C011</b>	Input [1] active state	Select logic conversion, two option codes: <b>00</b> ...normally open [NO] <b>01</b> ...normally closed [NC]	✗	00	–
<b>C012</b>	Input [2] active state		✗	00	–
<b>C013</b>	Input [3] active state		✗	00	–
<b>C014</b>	Input [4] active state		✗	00	–
<b>C015</b>	Input [5] active state		✗	00	–
<b>C016</b>	Input [6] active state		✗	00	–
<b>C017</b>	Input [7] active state		✗	00	–



**NOTE:** An input terminal configured for option code **18** ([RS] Reset command) cannot be configured for normally closed operation.

Note: This response time is disregarded when power-on or reset. For example, when the power is up when FW terminal is on, then the operation starts regardless this response time as soon as the internal reset process is completed.

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C160</b>	Input [1] response time	Sets response time of each input terminal, set range: <b>0</b> (x 2 [ms]) to <b>200</b> (x 2 [ms]) (0 to 400 [ms])	✗	1.	–
<b>C161</b>	Input [2] response time		✗	1.	–
<b>C162</b>	Input [3] response time		✗	1.	–
<b>C163</b>	Input [4] response time		✗	1.	–
<b>C164</b>	Input [5] response time		✗	1.	–
<b>C165</b>	Input [6] response time		✗	1.	–
<b>C166</b>	Input [7] response time		✗	1.	–

## Intelligent Input Terminal Overview

Each of the seven intelligent terminals may be assigned any of the options in the following table. When you program one of the option codes for terminal assignments **C001** to **C007**, the respective terminal assumes the function role of that option code. The terminal functions have a symbol or abbreviation that we use to label a terminal using that function. For example, the "Forward Run" command is [FW]. The physical label on the terminal block connector is simply **1**, **2**, **3**, **4**, **5**, **6**, or **7**. However, schematic examples in this manual also use the terminal symbol (such as [FW]) to show the assigned option. The option codes for **C011** to **C017** determines the active state of the logical input (active high or active low).

**Input Function Summary Table** – This table shows all thirty-one intelligent input functions at a glance. Detailed description of these functions, related parameters and settings, and example wiring diagrams are in “Using Intelligent Input Terminals” on page 4-12.

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	FW	FORWARD Run/Stop	ON	Inverter is in Run Mode, motor runs forward
			OFF	Inverter is in Stop Mode, motor stops
01	RV	Reverse Run/Stop	ON	Inverter is in Run Mode, motor runs reverse
			OFF	Inverter is in Stop Mode, motor stops
02	CF1 *1	Multi-speed Select, Bit 0 (LSB)	ON	Binary encoded speed select, Bit 0, logical 1
			OFF	Binary encoded speed select, Bit 0, logical 0
03	CF2	Multi-speed Select, Bit 1	ON	Binary encoded speed select, Bit 1, logical 1
			OFF	Binary encoded speed select, Bit 1, logical 0
04	CF3	Multi-speed Select, Bit 2	ON	Binary encoded speed select, Bit 2, logical 1
			OFF	Binary encoded speed select, Bit 2, logical 0
05	CF4	Multi-speed Select, Bit 3 (MSB)	ON	Binary encoded speed select, Bit 3, logical 1
			OFF	Binary encoded speed select, Bit 3, logical 0
06	JG	Jogging	ON	Inverter is in Run Mode, output to motor runs at jog parameter frequency
			OFF	Inverter is in Stop Mode
07	DB	External DC braking	ON	DC braking will be applied during deceleration
			OFF	DC braking will not be applied
08	SET	Set (select) 2nd Motor Data	ON	The inverter uses 2nd motor parameters for generating frequency output to motor
			OFF	The inverter uses 1st (main) motor parameters for generating frequency output to motor
09	2CH	2-stage Acceleration and Deceleration	ON	Frequency output uses 2nd-stage acceleration and deceleration values
			OFF	Frequency output uses standard acceleration and deceleration values
11	FRS	Free-run Stop	ON	Causes output to turn OFF, allowing motor to free run (coast) to stop
			OFF	Output operates normally, so controlled deceleration stop motor
12	EXT	External Trip	ON	When assigned input transitions OFF to ON, inverter latches trip event and displays <b>E 12</b>
			OFF	No trip event for ON to OFF, any recorded trip events remain in history until reset
13	USP	Unattended Start Protection	ON	On powerup, the inverter will not resume a Run command (mostly used in the US)
			OFF	On powerup, the inverter will resume a Run command that was active before power loss
14	CS	Commercial power source switchover	ON	Motor can be driven by commercial power
			OFF	Motor is driven via the inverter
15	SFT	Software Lock	ON	The keypad and remote programming devices are prevented from changing parameters
			OFF	The parameters may be edited and stored
16	AT	Analog Input Voltage/Current Select	ON	Refer to “Analog Input Settings” on page 3-13.
			OFF	
18	RS	Reset Inverter	ON	The trip condition is reset, the motor output is turned OFF, and powerup reset is asserted
			OFF	Normal power-ON operation
19	PTC	PTC thermistor Thermal Protection (C005 only)	ANLG	When a thermistor is connected to terminal [5] and [L], the inverter checks for over-temperature and will cause trip event and turn OFF output to motor
			OPEN	A disconnect of the thermistor causes a trip event, and the inverter turns OFF the motor

Input Function Summary Table

Option Code	Terminal Symbol	Function Name	Description	
20	STA	Start (3-wire interface)	ON	Starts the motor rotation
			OFF	No change to present motor status
21	STP	Stop (3-wire interface)	ON	Stops the motor rotation
			OFF	No change to present motor status
22	F/R	FWD, REV (3-wire interface)	ON	Selects the direction of motor rotation: ON = FWD. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
			OFF	Selects the direction of motor rotation: OFF = REV. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
23	PID	PID Disable	ON	Temporarily disables PID loop control. Inverter output turns OFF as long as PID Enable is active ( <b>A071=01</b> )
			OFF	Has no effect on PID loop operation, which operates normally if PID Enable is active ( <b>A071=01</b> )
24	PIDC	PID Reset	ON	Resets the PID loop controller. The main consequence is that the integrator sum is forced to zero
			OFF	No effect on PID controller
27	UP	Remote Control UP Function (motorized speed pot.)	ON	Accelerates (increases output frequency) motor from current frequency
			OFF	Output to motor operates normally
28	DWN	Remote Control Down Function (motorized speed pot.)	ON	Decelerates (decreases output frequency) motor from current frequency
			OFF	Output to motor operates normally
29	UDC	Remote Control Data Clearing	ON	Clears the UP/DWN frequency memory by forcing it to equal the set frequency parameter F001. Setting <b>C101</b> must be set=00 to enable this function to work
			OFF	UP/DWN frequency memory is not changed
31	OPE	Operator Control	ON	Forces the source of the output frequency setting <b>A001</b> and the source of the Run command <b>A002</b> to be from the digital operator
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
32	SF1	Multi-speed Select, Bit operation Bit 1	ON	Bit encoded speed select, Bit 1, logical 1
			OFF	Bit encoded speed select, Bit 1, logical 0
33	SF2	Multi-speed Select, Bit operation Bit 2	ON	Bit encoded speed select, Bit 2, logical 1
			OFF	Bit encoded speed select, Bit 2, logical 0
34	SF3	Multi-speed Select, Bit operation Bit 3	ON	Bit encoded speed select, Bit 3, logical 1
			OFF	Bit encoded speed select, Bit 3, logical 0
35	SF4	Multi-speed Select, Bit operation Bit 4	ON	Bit encoded speed select, Bit 4, logical 1
			OFF	Bit encoded speed select, Bit 4, logical 0
36	SF5	Multi-speed Select, Bit operation Bit 5	ON	Bit encoded speed select, Bit 5, logical 1
			OFF	Bit encoded speed select, Bit 5, logical 0
37	SF6	Multi-speed Select, Bit operation Bit 6	ON	Bit encoded speed select, Bit 6, logical 1
			OFF	Bit encoded speed select, Bit 6, logical 0
38	SF7	Multi-speed Select, Bit operation Bit 7	ON	Bit encoded speed select, Bit 7, logical 1
			OFF	Bit encoded speed select, Bit 7, logical 0
39	OLR	Overload Restriction Source Changeover	ON	Perform overload restriction
			OFF	Normal operation
40	TL	Torque Limit Selection	ON	Setting of <b>b040</b> is enabled
			OFF	Max. torque is limited with 200%
41	TRQ1	Torque limit switch 1	ON	Torque limit related parameters of Powering/regen, and FW/RV modes are selected by the combinations of these inputs.
			OFF	
42	TRQ2	Torque limit switch 2	ON	
			OFF	

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
44	BOK	Brake confirmation	ON	Brake wait time ( <b>b124</b> ) is valid
			OFF	Brake wait time ( <b>b124</b> ) is not valid
46	LAC	LAD cancellation	ON	Set ramp times are ignored. Inverter output immediately follows the freq. command.
			OFF	Accel. and/or decel. is according to the set ramp time
47	PCLR	Pulse counter clear	ON	Clear the position deviation data
			OFF	Maintain the position deviation data
50	ADD	ADD frequency enable	ON	Adds the <b>A145</b> (add frequency) value to the output frequency
			OFF	Does not add the <b>A145</b> value to the output frequency
51	F-TM	Force Terminal Mode	ON	Force inverter to use input terminals for output frequency and Run command sources
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
52	ATR	Enable torque command input	ON	Torque control command input is enabled
			OFF	Torque control command input is disabled
53	KHC	Clear watt-hour data	ON	Clear watt-hour data
			OFF	No action
56	MI1	General purpose input (1)	ON	General purpose input (1) is made ON under EzSQ
			OFF	General purpose input (1) is made OFF under EzSQ
57	MI2	General purpose input (2)	ON	General purpose input (2) is made ON under EzSQ
			OFF	General purpose input (2) is made OFF under EzSQ
58	MI3	General purpose input (3)	ON	General purpose input (3) is made ON under EzSQ
			OFF	General purpose input (3) is made OFF under EzSQ
59	MI4	General purpose input (4)	ON	General purpose input (4) is made ON under EzSQ
			OFF	General purpose input (4) is made OFF under EzSQ
60	MI5	General purpose input (5)	ON	General purpose input (5) is made ON under EzSQ
			OFF	General purpose input (5) is made OFF under EzSQ
61	MI6	General purpose input (6)	ON	General purpose input (6) is made ON under EzSQ
			OFF	General purpose input (6) is made OFF under EzSQ
62	MI7	General purpose input (7)	ON	General purpose input (7) is made ON under EzSQ
			OFF	General purpose input (7) is made OFF under EzSQ
65	AHD	Analog command hold	ON	Analog command is held
			OFF	Analog command is not held
66	CP1	Multistage-position switch (1)	ON	Multistage position commands are set according to the combination of these switches.
			OFF	
67	CP2	Multistage-position switch (2)	ON	
			OFF	
68	CP3	Multistage-position switch (3)	ON	
			OFF	
69	ORL	Limit signal of homing	ON	Limit signal of homing is ON
			OFF	Limit signal of homing is OFF
70	ORG	Trigger signal of homing	ON	Starts homing operation
			OFF	No action
73	SPD	Speed/position changeover	ON	Speed control mode
			OFF	Position control mode

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
77	GS1 *	GS1 input	ON	EN60204-1 related signals: Signal input of "Safe torque off" function.
			OFF	
78	GS2 *	GS2 input	ON	
			OFF	
81	485	Start EzCOM	ON	Starts EzCOM
			OFF	No execution
82	PRG	Executing EzSQ program	ON	Executing EzSQ program
			OFF	No execution
83	HLD	Retain output frequency	ON	Retain the current output frequency
			OFF	No retention
84	ROK	Permission of Run command	ON	Run command permitted
			OFF	Run command is not permitted
85	EB	Rotation direction detection (C007 only)	ON	Forward rotation
			OFF	Reverse rotation
86	DISP	Display limitation	ON	Only a parameter configured in <b>b038</b> is shown
			OFF	All the monitors can be shown
255	no	No function	ON	(input ignored)
			OFF	(input ignored)

## Output Terminal Configuration

The inverter provides configuration for logic (discrete) and analog outputs, shown in the table below.

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C021</b>	Output [11] function [EDM assignable]	49 programmable functions available for logic (discrete) outputs (see next section)	✗	00 [RUN]	-
<b>C022</b>	Output [12] function		✗	01 [FA1]	-
<b>C026</b>	Alarm relay function	49 programmable functions available for logic (discrete) outputs (see next section)	✗	05 [AL]	-
<b>C027</b>	[EO] terminal selection (Pulse/PWM output)	13 programmable functions: <b>00</b> ...Output frequency (PWM) <b>01</b> ...Output current (PWM) <b>02</b> ...Output torque (PWM) <b>03</b> ...Output frequency (Pulse train) <b>04</b> ...Output voltage (PWM) <b>05</b> ...Input power (PWM) <b>06</b> ...Electronic thermal load ratio (PWM) <b>07</b> ...LAD frequency (PWM) <b>08</b> ...Output current (Pulse train) <b>10</b> ...Heat sink temperature (PWM) <b>12</b> ...General output (PWM) <b>15</b> ...Pulse train input monitor <b>16</b> ...Option(PWM)	✗	07 [LAD]	-
<b>C028</b>	[AM] terminal selection (Analog voltage output 0...10V)	11 programmable functions: <b>00</b> ...Output frequency <b>01</b> ...Output current <b>02</b> ...Output torque <b>04</b> ...Output voltage <b>05</b> ...Input power <b>06</b> ...Electronic thermal load ratio <b>07</b> ...LAD frequency <b>10</b> ...Heat sink temperature <b>11</b> ...Output torque (with code) <b>13</b> ...General output <b>16</b> ...Option	✗	07 [LAD]	-
<b>C030</b>	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	Rated current	A
<b>C047</b>	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	1.00	-

The output logic conversion is programmable for terminal [11], [12] and the alarm relay terminal. The open-collector output terminal [11] and [12] defaults to normally open (active low), but you can select normally closed (active high) for the terminal in order to invert the sense of the logic. You can invert the logical sense of the alarm relay output as well.

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C031</b>	Output [11] active state	Select logic conversion, two option codes: <b>00</b> ...normally open [NO] <b>01</b> ...normally closed [NC]	✗	00	–
<b>C032</b>	Output [12] active state		✗	00	–
<b>C036</b>	Alarm relay active state		✗	01	–

You can also adjust the output with ON/OFF delays.

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C130</b>	Output [11] on delay	Set range is 0.0 to 100.0 sec.	✗	0.0	Sec.
<b>C131</b>	Output [11] off delay		✗	0.0	Sec.
<b>C132</b>	Output [12] on delay		✗	0.0	Sec.
<b>C133</b>	Output [12] off delay		✗	0.0	Sec.
<b>C140</b>	Relay output on delay		✗	0.0	Sec.
<b>C141</b>	Relay output off delay		✗	0.0	Sec.



**NOTE:** If you are using the output terminal OFF delay feature (any of **C145**, **C149** > 0.0 sec.), the [RS] (reset) terminal affects the ON-to-OFF transition slightly. Normally (with using OFF delays), the [RS] input causes the motor output and the logic outputs to turn OFF together, immediately. However, when any output uses an OFF delay, then after the [RS] input turns ON, that output will remain ON for an additional 1 sec. period (approximate) before turning OFF.



**Output Function Summary Table** – This table shows all functions for the logical outputs (terminals [11], [12] and [AL]) at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in “Using Intelligent Output Terminals” in chapter 4.

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	RUN	Run Signal	ON	When the inverter is in Run Mode
			OFF	When the inverter is in Stop Mode
01	FA1	Frequency Arrival Type 1–Constant Speed	ON	When output to motor is at the set frequency
			OFF	When output to motor is OFF, or in any acceleration or deceleration ramp
02	FA2	Frequency Arrival Type 2–Over frequency	ON	When output to motor is at or above the set freq., even if in accel ( <b>C042</b> ) or decel ( <b>C043</b> ) ramps
			OFF	When output to motor is OFF, or at a level below the set frequency
03	OL	Overload Advance Notice Signal 1	ON	When output current is more than the set threshold ( <b>C041</b> ) for the overload signal
			OFF	When output current is less than the set threshold for the deviation signal
04	OD	Output Deviation for PID Control	ON	When PID error is more than the set threshold for the deviation signal
			OFF	When PID error is less than the set threshold for the deviation signal
05	AL	Alarm Signal	ON	When an alarm signal has occurred and has not been cleared
			OFF	When no alarm has occurred since the last cleaning of alarm(s)
06	FA3	Frequency Arrival Type 3–Set frequency	ON	When output to motor is at the set frequency, during accel ( <b>C042</b> ) and decel ( <b>C043</b> ).
			OFF	When output to motor is OFF, or is not at a level of the set frequency
07	OTQ	Over/under Torque Signal	ON	Estimated motor torque exceeds the specified level
			OFF	Estimated motor torque is lower than the specified level
09	UV	Undervoltage	ON	Inverter is in Undervoltage
			OFF	Inverter is not in Undervoltage
10	TRQ	Torque Limited Signal	ON	Torque limit function is executing
			OFF	Torque limit function is not executing
11	RNT	Run Time Expired	ON	Total running time of the inverter exceeds the specified value
			OFF	Total running time of the inverter does not exceed the specified value
12	ONT	Power ON time Expired	ON	Total power ON time of the inverter exceeds the specified value
			OFF	Total power ON time of the inverter does not exceed the specified value
13	THM	Thermal Warning	ON	Accumulated thermal count exceeds the <b>C061</b> set value
			OFF	Accumulated thermal count does not exceed the <b>C061</b> set value
19	BRK	Brake Release Signal	ON	Output for brake release
			OFF	No action for brake
20	BER	Brake Error Signal	ON	Brake error has occurred
			OFF	Brake performance is normal
21	ZS	Zero Hz Speed Detection Signal	ON	Output frequency falls below the threshold specified in <b>C063</b>
			OFF	Output frequency is higher than the threshold specified in <b>C063</b>

Output Function Summary Table

Option Code	Terminal Symbol	Function Name	Description	
22	DSE	Speed Deviation Excessive	ON	Deviation of speed command and actual speed exceeds the specified value <b>P027</b> .
			OFF	Deviation of speed command and actual speed does not exceed the specified value <b>P027</b> .
23	POK	Positioning Completion	ON	Positioning is completed
			OFF	Positioning is not completed
24	FA4	Frequency Arrival Type 4—Over frequency	ON	When output to motor is at or above the set freq., even if in accel ( <b>C045</b> ) or decel ( <b>C046</b> ) ramps
			OFF	When output to motor is OFF, or at a level below the set frequency
25	FA5	Frequency Arrival Type 5—Set frequency	ON	When output to motor is at the set frequency, during accel ( <b>C045</b> ) and decel ( <b>C046</b> ).
			OFF	When output to motor is OFF, or is not at a level of the set frequency
26	OL2	Overload Advance Notice Signal 2	ON	When output current is more than the set threshold ( <b>C111</b> ) for the overload signal
			OFF	When output current is less than the set threshold for the deviation signal
27	ODC	Analog Voltage Input Disconnect Detection	ON	When the [O] input value < <b>b070</b> setting (signal loss detected)
			OFF	When no signal loss is detected
28	OIDC	Analog Current input Disconnect Detection	ON	When the [OI] input value < <b>b071</b> setting (signal loss detected)
			OFF	When no signal loss is detected
31	FBV	PID Second Stage Output	ON	Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit ( <b>C053</b> )
			OFF	Transitions to OFF when the PID Process Variable (PV) exceeds the PID High Limit ( <b>C052</b> ), and transitions to OFF when the inverter goes from Run Mode to Stop Mode
32	NDc	Network Disconnect Detection	ON	When the communications watchdog timer (period specified by <b>C077</b> ) has time out
			OFF	When the communications watchdog timer is satisfied by regular communications activity
33	LOG1	Logic Output Function 1	ON	When the Boolean operation specified by <b>C143</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C143</b> has a logical "0" result
34	LOG2	Logic Output Function 2	ON	When the Boolean operation specified by <b>C146</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C146</b> has a logical "0" result
35	LOG3	Logic Output Function 3	ON	When the Boolean operation specified by <b>C149</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C149</b> has a logical "0" result
39	WAC	Capacitor Life Warning Signal	ON	Lifetime of internal capacitor has expired.
			OFF	Lifetime of internal capacitor has not expired.
40	WAF	Cooling Fan Warning Signal	ON	Lifetime of cooling fan has expired.
			OFF	Lifetime of cooling fan has not expired.
41	FR	Starting Contact Signal	ON	Either FW or RV command is given to the inverter
			OFF	No FW or RV command is given to the inverter, or both are given to the inverter


Output Function Summary Table

Option Code	Terminal Symbol	Function Name	Description	
42	OHF	Heat Sink Overheat Warning	ON	Temperature of the heat sink exceeds a specified value (C064)
			OFF	Temperature of the heat sink does not exceed a specified value (C064)
43	LOC	Low load detection	ON	Motor current is less than the specified value (C039)
			OFF	Motor current is not less than the specified value (C039)
44	MO1	General Output 1	ON	General output 1 is ON
			OFF	General output 1 is OFF
45	MO2	General Output 2	ON	General output 2 is ON
			OFF	General output 2 is OFF
46	MO3	General Output 3	ON	General output 3 is ON
			OFF	General output 3 is OFF
50	IRDY	Inverter Ready Signal	ON	Inverter can receive a run command
			OFF	Inverter cannot receive a run command
51	FWR	Forward Rotation	ON	Inverter is driving the motor in forward direction
			OFF	Inverter is not driving the motor in forward direction
52	RVR	Reverse Rotation	ON	Inverter is driving the motor in reverse direction
			OFF	Inverter is not driving the motor in reverse direction
53	MJA	Major Failure Signal	ON	Inverter is tripping with major failure
			OFF	Inverter is normal, or is not tripping with major failure
54	WCO	Window Comparator for Analog Voltage Input	ON	Analog voltage input value is inside of the window comparator
			OFF	Analog voltage input value is outside of the window comparator
55	WCOI	Window Comparator for Analog Current Input	ON	Analog current input value is inside of the window comparator
			OFF	Analog current input value is outside of the window comparator
58	FREF	Frequency Command Source	ON	Frequency command is given from the operator
			OFF	Frequency command is not given from the operator
59	REF	Run Command Source	ON	Run command is given from the operator
			OFF	Run command is not given from the operator
60	SETM	2 <sup>nd</sup> Motor Selection	ON	2 <sup>nd</sup> motor is being selected
			OFF	2 <sup>nd</sup> motor is not being selected
62	EDM	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	ON	STO is being performed
			OFF	STO is not being performed
63	OPO	Option card output	ON	(output terminal for option card)
			OFF	(output terminal for option card)
64	GSS (Ver.3.2 or after)	GS synchronization output	ON	GS1/2 signal is synchronized
			OFF	GS1/2 signal is NOT synchronized
255	no	Not used	ON	-
			OFF	-

## Low Load Detection Parameters

The following parameters work in conjunction with the intelligent output function, when configured. The output mode parameter (**C038**) sets the mode of the detection at which the low load detection signal [LOC] turns ON. Three kinds of modes can be selected. The detection level parameter (**C039**) is to set the level of the low load.

This function is for generating an early warning logic output, without causing either a trip event or a restriction of the motor current (those effects are available on other functions).

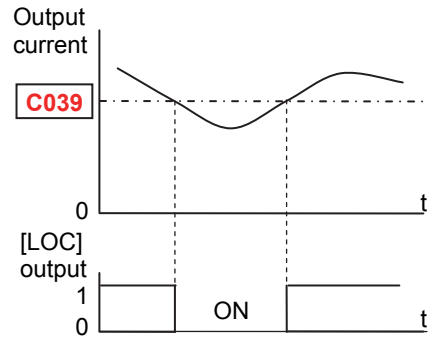

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C038</b>	Output mode of low current detection	Two option codes: <b>00</b> ...During acceleration, deceleration and constant speed <b>01</b> ...During constant speed only	<b>X</b>	01	-
<b>C039</b>	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	<b>X</b>	INV rated current	A

## Output Function Adjustment Parameters




**Overload Warning Output** - The following parameters work in conjunction with the intelligent output function, when configured. The overload level parameter (**C041**) sets the motor current level at which the overload signal [OL] turns ON. The range of setting is from 0% to 200% of the rated current for the inverter. This function is for generating an early warning logic output, without causing either a trip event or a restriction of the motor current (those effects are available on other functions).

**Frequency Arrival Output** - The frequency arrival signal, [FA1] or [FA2], is intended to indicate when the inverter output has reached (arrived at) the target frequency. You can adjust the timing of the leading and trailing edges of the signal via two parameters specified to acceleration and deceleration ramps, **C042** and **C043**. Refer also to chapter 4.

**PID FBV Output** - The Error for the PID loop is the magnitude (absolute value) of the difference between the Set point (desired value) and Process Variable (actual value). The PID output deviation signal [OD] (output terminal function option code **04**) indicates when the error magnitude has exceeded a magnitude you define.

**Over/Under-torque Output** – The inverter outputs the over/under-torque signal when it detects that the estimated motor output torque exceeds the specified level. To enable this function, assign parameter “**07**” (OTQ: over/under-torque signal) to an intelligent output terminal. Over-torque or under-torque can be selected by function **C054**.

This function is effective only when the V/F characteristic curve selection “**A044**” or “**A244**” is the sensorless vector control or 0Hz range sensorless vector control. With any other V/F characteristic curve is selected, the output of the OTQ signal is unpredictable. When using the inverter for a lift, use the OTQ signal as the trigger to stop braking. Use the frequency arrival signal as the trigger to start braking.

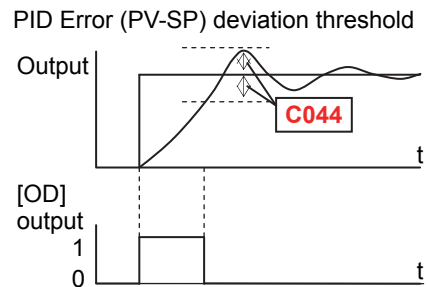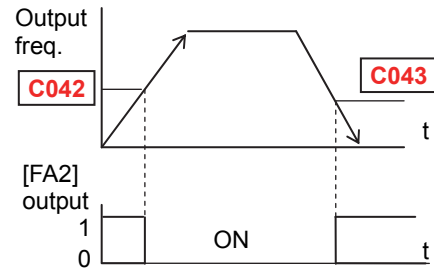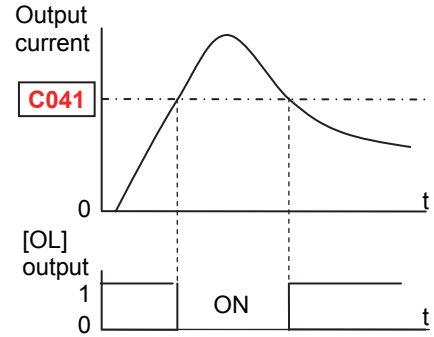

**Electronic Thermal Warning Output** –Please refer to page 3-48 for detailed information.

**Zero speed detection Output** – The inverter outputs the 0Hz speed detection signal when the inverter output frequency falls below the threshold frequency specified in the zero speed detection level (**C063**).

To use this function, assign parameter “**21**” to one of the intelligent output terminals [11] to [12] (**C021** to **C022**), or to the alarm relay output terminal (**C026**).

This function applies to the inverter output frequency when the V/F characteristic curve selection is based on the constant torque (VC), reduced torque (VP), free-V/F, sensorless vector control.

**Heat Sink Overheat Warning Output** – The inverter monitors the temperature of its heat sink, and outputs the heat sink overheat warning (OHF) signal when the temperature exceeds the heat sink overheat warning level specified in parameter **C064**.

Func. Code	“C” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C040</b>	Output mode of overload warning	Two option codes: <b>00</b> ...During accel., decel. and constant speed <b>01</b> ...During constant speed only	✗	01	
<b>C041</b>	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✗	Rated current x 1.15	
<b>C241</b>	Overload warning level, 2 <sup>nd</sup> motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✗	Rated current x 1.15	
<b>C042</b>	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	✗	0.0	
<b>C043</b>	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	✗	0.0	
<b>C044</b>	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	✗	3.0	
<b>C045</b>	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	✗	0.00	
<b>C046</b>	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	✗	0.00	
<b>C052</b>	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	✗	100.0	%

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C053</b>	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	✗	0.0	%
<b>C054</b>	Over-torque/under-torque selection	Two option codes: <b>00</b> ...Over-torque <b>01</b> ...Under-torque	✗	00	–
<b>C055</b>	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	✗	100.	%
<b>C056</b>	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	✗	100.	%
<b>C057</b>	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	✗	100.	%
<b>C058</b>	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	✗	100.	%
<b>C059</b>	Signal output mode of Over/under-torque	Two option codes: <b>00</b> ...During accel., decel. and constant speed <b>01</b> ...During constant speed only	✗	01	–
<b>C061</b>	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	✗	90	%
<b>C063</b>	Zero speed detection level	Set range is 0.0 to 100.0Hz	✗	0.00	Hz
<b>C064</b>	Heat sink overheat warning	Set range is 0 to 110 °C	✗	100.	°C
<b>C111</b>	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	Rated current x 1.15	A

## Network Communications Settings

The following table lists parameters that configure the inverter's serial communications port. The settings affect how the inverter communication with a digital operator (such as SRW-0EX), as well as a ModBus network (for networked inverter applications). The settings cannot be edited via the network, in order to ensure network reliability. Refer to "ModBus Network Communications" on page B-1 for more information on controlling any monitoring your inverter from a network.


Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C071</b>	Communication speed	Eight option codes: <b>03</b> ...2,400 bps <b>04</b> ...4,800 bps <b>05</b> ...9,600 bps <b>06</b> ...19,200 bps <b>07</b> ...38,400 bps <b>08</b> ...57,600 bps <b>09</b> ...76,800 bps <b>10</b> ...115,200 bps	✗	05	baud
<b>C072</b>	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	✗	1.	-
<b>C074</b>	Communication parity	Three option codes: <b>00</b> ...No parity <b>01</b> ...Even parity <b>02</b> ...Odd parity	✗	00	-
<b>C075</b>	Communication stop bit	Two option codes: <b>1</b> ...1 bit <b>2</b> ...2 bit	✗	1	bit
<b>C076</b>	Communication error select	Selects inverter response to communications error. Five options: <b>00</b> ...Trip <b>01</b> ...Decelerate to a stop and trip <b>02</b> ...Disable <b>03</b> ...Free run stop (coasting) <b>04</b> ...Decelerates to a stop	✗	02	-
<b>C077</b>	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 sec 0.0 = disabled	✗	0.00	sec.
<b>C078</b>	Communication wait time	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms	✗	0.	msec.
<b>C096</b>	Communication selection	Three option codes: <b>01</b> ...Modbus-RTU <b>03</b> ...EzCOM <b>03</b> ...EzCOM<Administrator>	✗	00	-



## Analog Input Signal Calibration Settings

The functions in the following table configure the signals for the analog input terminals. Note that these settings do not change the current/voltage or sink/source characteristics – only the zero and span (scaling) of the signals.

These parameters are already adjusted before the shipment, and therefore it is not recommended to do the adjustment at the customer.

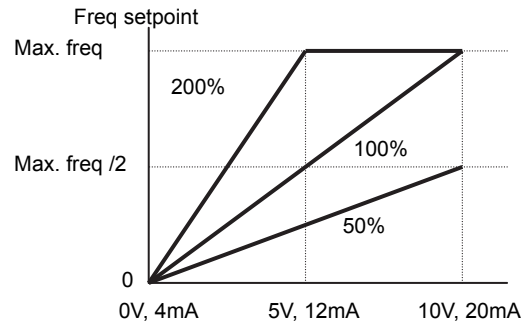

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C081</b>	O input span calibration	Scale factor between the external frequency command on terminals L-O (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%
<b>C082</b>	OI input span calibration	Scale factor between the external frequency command on terminals L-OI (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%
<b>C085</b>	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	✓	100.0	%



**NOTE:** When you restore factory default settings, the values will change to those listed above. Be sure to manually reconfigure the values for your application, if needed, after restoring factory defaults.

## Miscellaneous Functions

The following table contains miscellaneous functions not in other function groups.

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>C091</b>	Debug mode enable *	Factory use only. Do not change.			
<b>C101</b>	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle. Two option codes: <b>00</b> ...Clear last frequency (return to default frequency <b>F001</b> ) <b>01</b> ...Keep last frequency adjusted by UP/DWN	×	00	–
<b>C102</b>	Reset selection	Determines response to Reset input [RS]. Four option codes: <b>00</b> ...Cancel trip state at input signal ON transition, stops inverter if in Run Mode <b>01</b> ...Cancel trip state at signal OFF transition, stops inverter if in Run Mode <b>02</b> ...Cancel trip state at input ON transition, no effect if in Run Mode <b>03</b> ...Clear the memories only related to trip status	×	00	–
<b>C103</b>	Restart mode after reset	Determines the restart mode after reset is given, three option codes: <b>00</b> ...Start with 0 Hz <b>01</b> ...Start with freq. matching <b>02</b> ...Start with active freq. matching	×	00	–
<b>C104</b>	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes: <b>00</b> ...0 Hz <b>01</b> ...Original setting (in the EEPROM memory at power on)	×	00	–



**CAUTION:** Do not change the debug mode for safety reasons. Otherwise unexpected performances may occur.


## Analog Output Calibration Related Functions

These functions are for adjustment of analog output FM and AM. The outputs are adjusted at factory before the shipment, and therefore basically no need to adjust at the customer. But in case you need to change the gain depending on your system (i.e. analog meter specification), you can use these functions for the adjustment.

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C105</b>	EO gain adjustment	Set range is 50 to 200%	✓	100.	%
<b>C106</b>	AM gain adjustment	Set range is 50 to 200%	✓	100.	%
<b>C109</b>	AM bias adjustment	Set range is 0 to 100%	✓	0.	%

## Output Logic and Timing

**Logic Output Function** – The inverter has a built-in logic output feature. Select any two operands out of all intelligent output options except LOG1~LOG3 and their operator out of AND, OR, or XOR (exclusive OR). The terminal symbol for the new output is [LOG]. Use **C021**, **C022** or **C026** to route the logical result to terminal [11], [12] or the relay terminals. LOG1-LOG3, no, OPO cannot be the operand.

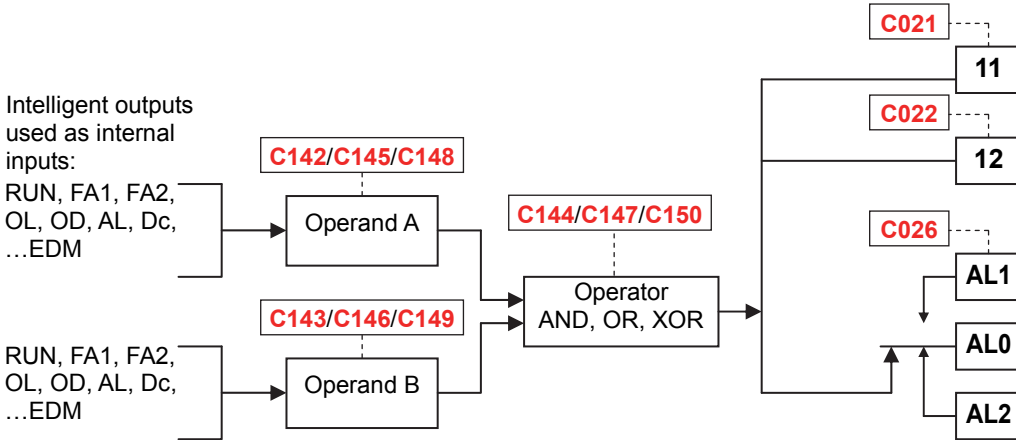

The following table shows all four possible input combinations with each of the three available logic operations.

Operand		Operator		
A	B	AND	OR	XOR
0	0	0	0	0
0	1	0	1	1
1	0	0	1	1
1	1	1	1	0

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C142</b>	Logic output 1 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✘	00	–
<b>C143</b>	Logic output 1 operand B			00	–
<b>C144</b>	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options: <b>00</b> ...[LOG] = A AND B <b>01</b> ...[LOG] = A OR B <b>02</b> ...[LOG] = A XOR B	✘	00	–
<b>C145</b>	Logic output 2 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✘	00	–
<b>C146</b>	Logic output 2 operand B			00	–
<b>C147</b>	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options: <b>00</b> ...[LOG] = A AND B <b>01</b> ...[LOG] = A OR B <b>02</b> ...[LOG] = A XOR B	✘	00	–
<b>C148</b>	Logic output 3 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✘	00	–
<b>C149</b>	Logic output 3 operand B			00	–
<b>C150</b>	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options: <b>00</b> ...[LOG] = A AND B <b>01</b> ...[LOG] = A OR B <b>02</b> ...[LOG] = A XOR B	✘	00	–

## Other Functions

To avoid the miss-input of the multi-speed due to the time rug, waiting time to fix the multi-speed can be set by C169. When input is detected, data is fixed after the time defined with C169.




**CAUTION:** Do not change Debug mode for safety reasons. Otherwise unexpected performances may occur.

# “H” Group: Motor Constants Functions

The “H” Group parameters configure the inverter for the motor characteristics. You must manually set **H003** and **H004** values to match the motor. Parameter **H006** is factory-set. If you want to reset the parameters to the factory default settings, use the procedure in “Restoring Factory Default Settings” on in section 6.. Use **A044** to select the torque control algorithm as shown in the diagram.

**Inverter Torque Control Algorithms**

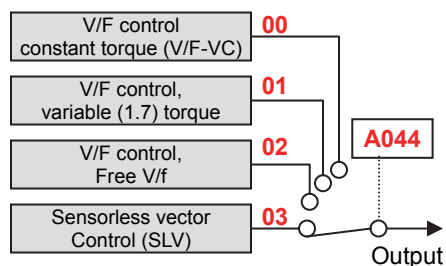

Please refer to chapter 4 for detailed explanation of the auto-tuning.

Func. Code	“H” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>H001</b>	Auto-tuning selection	Three option codes: 00...Disabled 01...Enabled with motor stop 02...Enabled with motor rotation	✗	00	–
<b>H002</b>	Motor constant selection	Two option codes: 00...Hitachi standard motor 02...Auto tuned data	✗	00	–
<b>H202</b>	Motor constant selection, 2 <sup>nd</sup> motor		✗	00	–
<b>H003</b>	Motor capacity	Twelve selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/ 5.5/7.5/11/15/18.5	✗	Specified by the capacity of each inverter model	kW
<b>H203</b>	Motor capacity, 2 <sup>nd</sup> motor		✗		kW
<b>H004</b>	Motor poles setting	Five selections: 2 / 4 / 6 / 8 / 10	✗	4	poles
<b>H204</b>	Motor poles setting, 2 <sup>nd</sup> motor		✗	4	poles
<b>H005</b>	Motor speed response constant	Set range is 1 to 1000	✓	100.	–
<b>H205</b>	Motor speed response constant, 2 <sup>nd</sup> motor		✓	100.	–
<b>H006</b>	Motor stabilization constant	Motor constant (factory set), range is 0 to 255	✓	100.	–
<b>H206</b>	Motor stabilization constant, 2 <sup>nd</sup> motor		✓	100.	–
<b>H020</b>	Motor constant R1 (Hitachi motor)	0.001~65.535 ohms	✗	Specified by the capacity of each inverter mode	Ohm
<b>H220</b>	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)		✗		Ohm
<b>H021</b>	Motor constant R2 (Hitachi motor)	0.001~65.535 ohms	✗		Ohm
<b>H221</b>	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		✗		Ohm
<b>H022</b>	Motor constant L (Hitachi motor)	0.01~655.35mH	✗	Specified by	mH

Func. Code	"H" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
H222	Motor constant L, 2 <sup>nd</sup> motor (Hitachi motor)		×	the capacity of each inverter mode	mH
H023	Motor constant I0 (Hitachi motor)	0.01~655.35A	×		A
H223	Motor constant I0, 2 <sup>nd</sup> motor (Hitachi motor)		×		A
H024	Motor constant J (Hitachi motor)	0.001~9999 kgm <sup>2</sup>	×		kgm <sup>2</sup>
H224	Motor constant J, 2 <sup>nd</sup> motor (Hitachi motor)		×		kgm <sup>2</sup>
H030	Motor constant R1 (Auto tuned data)	0.001~65.535 ohms	×		ohm
H230	Motor constant R1, 2 <sup>nd</sup> motor (Auto tuned data)		×		ohm
H031	Motor constant R2 (Auto tuned data)	0.001~65.535 ohms	×		ohm
H231	Motor constant R2, 2 <sup>nd</sup> motor (Auto tuned data)		×		ohm
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	×		mH
H232	Motor constant L, 2 <sup>nd</sup> motor (Auto tuned data)		×		mH
H033	Motor constant I0 (Auto tuned data)	0.01~655.35A	×		A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)		×		A
H034	Motor constant J (Auto tuned data)	0.001~9999 kgm <sup>2</sup>	×		kgm <sup>2</sup>
H234	Motor constant J, 2 <sup>nd</sup> motor (Auto tuned data)		×	kgm <sup>2</sup>	
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	×	0.2	Times
H051	Slip compensation I gain for V/f control with FB	0.-1000.	×	2.	(s)

## Motor Constants Selection

Adjust the motor constant settings to the motor to be driven by the inverter.

When using a single inverter to drive multiple motors in the control mode based on VC, VP, or free V/F characteristics, calculate the total capacity of the motors, and specify a value close to the total capacity for the motor capacity selection (**H003/H203**).

When the automatic torque boost function is used, the motor constant settings that do not match with the motor may result in a reduced motor torque, or unstable motor operation.

You can select the motor constants that are used when the control mode is the sensorless vector control (hereafter "SLV") from the following three types.

(1) Motor constants of Hitachi standard induction motor

When **H002/H202=00**, motor constants in **H020/H220** to **H024/H224** are taken. The initial values in **H020/H220** to **H024/H224** are Hitachi standard motor's values.

(2) Motor constants obtained by off-line auto-tuning

When **H002/H202=02**, motor constants in **H030/H230** to **H034/H234** are taken, which are obtained by off-line auto-tuning.

(3) Arbitrarily set motor constants

In above (1) and (2) cases, motor constants can be adjusted manually. According to value of **H002/H202**, change motor constants in **H020/H220** to **H024/H224** or **H030/H230** to **H034/H234** if necessary.

- \*1) Convert the inertia (J) to the motor shaft value. Bigger J value will result in a quicker in motor response and quicker in torque increase. Smaller J value will result in the opposite way.
- \*2) In the SLV modes, inverter may give out reverse to given operation command in the low speed range as a nature of those controls. In case there is a specific inconvenience for example reverse rotation damages the machine, enable the reverse run protection (**b046**).



## Sensorless Vector Control

This sensorless vector control enables the inverter to accurately operate the motor with a high starting torque, even at low speed. It estimates and controls the motor speed and output torque based on the inverter output voltage, output current, and the set motor constants on the inverter. To use this function, specify “03” for the V/F characteristic curve selection (**A044/A2444**).

In prior to use this function, be sure to make optimum setting of the motor constants, which is described before.

When using this function, observe the following precautions:

- (1) If you use the inverter to drive a motor of which the capacity is two class lower than the maximum applicable capacity of the inverter, you may not be able to obtain adequate motor characteristics.
- (2) If you cannot obtain the desired characteristics from the motor driven under the SLV control, readjust the motor constants according to the symptom, as described in the table below.

Status	Symptom	Adjustment method	Adjustment item
Powering	Momentary speed variation is negative	Increase the motor constant R2 step by step from the set value up to 1.2 times of the set value	<b>H021/H221</b>
	Momentary speed variation is positive	Decrease the motor constant R2 step by step from the set value up to 0.8 times of the set value	<b>H021/H221</b>
Regeneration	Torque is insufficient at low speed (~ few Hz)	Increase the motor constant R1 step by step from the set value up to 1.2 times of the set value	<b>H020/H220</b>
		Increase the motor constant lo step by step from the set value up to 1.2 times of the set value	<b>H023/H223</b>
Starting	Motor generates an impact at start	Reduce the motor constant J from the set value	<b>H024/H224</b>
	Motor runs backward for short moment at start	Decrease the speed response factor	<b>H005/H205</b>
Decelerating	Motor runs unsteadily	Set 01 (enable) on reverse run protection function (b046)	<b>b046</b>
		Decrease the speed response factor	<b>H005/H205</b>
Low frequency operation	Motor rotation is unstable	Decrease the motor constant J from the set value	<b>H024/H224</b>
		Increase the motor constant J from the set value	<b>H024/H224</b>
		Increase the speed response factor	<b>H005/H205</b>

Note 1) When driving a motor of which the capacity is one class lower than the inverter, adjust the torque limit (**b041** to **b044**) so that the value “ $\alpha$ ” calculated by the expression below does not exceed 200%. Otherwise, the motor may not be burnt.

$$\alpha = \text{“torque limit”} \times (\text{inverter capacity}) / (\text{motor capacity})$$

(Example) When the inverter capacity is 0.75kW and the motor capacity is 0.4kW, the torque limit value is calculated as follows, based on the assumption that the value  $\alpha$  should be 200%:

$$\begin{aligned} \text{Torque limit (b041 to b044)} &= \alpha \times (\text{motor capacity}) / (\text{inverter capacity}) \\ &= 2.0 \times (0.4\text{kW}) / (0.75\text{kW}) = 106\% \end{aligned}$$

## Auto-tuning Function

The WJ200 inverter has auto-tuning function to get suitable motor control performance by measuring the motor constants automatically. Auto-tuning is effective only sensorless vector control.

### Auto-tuning with motor stop (H001=01)

Motor does not rotate while auto-tuning. If rotating motor could give harm to your application, use this mode. But the motor constant  $I_0$  (no-load current) and  $J$  (inertia) are not measured and remain unchanged. ( $I_0$  can be monitored in 50Hz of V/f operation.)

### Auto-tuning with motor rotation (H001=02)


Motor rotates according to a special operation pattern while auto-tuning. However, the torque during auto-tuning is not sufficient, which may cause a problem in the load (for example, a lift may slide down). See below instruction 7)-d).

When using auto-tuning function, follow the instructions below.

- 1) When using a motor which constants are unknown, execute offline auto-tuning to obtain the constants.
- 2) When the motor constant selection (H002/H202) is Hitachi std. motor (01), the initial values in **H020/H220** to **H024/H224** are Hitachi standard motor's values. If Hitachi std. motor is used, full performance is achieved without auto-tuning in most cases.
- 3) The motor constant data is corresponding to one-phase of Y (star) connection for 50Hz.
- 4) Set base frequency (**A003**) and AVR voltage (**A082**) according to the motor specifications. If the motor voltage is other than the alternatives, set V/f gain (**A045**) according to below formula.  
 “motor voltage (**A082**)” × “output voltage gain (**A045**)” = “motor rated voltage”
- 5) Proper motor constants are obtained only when the same size or one size lower motor is used. If other size of motor is connected, proper values may not be obtained or auto-tuning operation may not be completed. In this case, press STOP/RESET key, then error code will be displayed.
- 6) Be sure to disable DC braking setting (**A051=00**) and simple positioning selection (**P012=00**), otherwise motor constants are not measured properly.
- 7) Be sure to deactivate ATR terminal (**52**:Enable torque cmd. input), otherwise motor constants are not measured properly.
  - a) The motor rotates up to 80% of base frequency. Check if it is no problem for the application.
  - b) The motor should not be driven by any other external force.
  - c) All the brakes should be released.
  - d) During auto-tuning, insufficient torque may cause a problem in the load (for example, a lift may slide down). In this case, remove the motor from the machine or other load, and perform auto-tuning with the motor alone. The measured inertia  $J$  is based on the motor alone. To apply the data, add the moment of inertia of the load machine to the measured  $J$  data after converting the moment of inertia to the motor shaft data.
  - e) If the application is with limitation (e.g. lift or boring machine), the allowable rotation limit may be exceeded in auto-tuning, and the machine may be damaged.
- 9) Even when “**01** (auto-tuning without motor rotation)” is selected, the motor could rotate slightly during auto-tuning.
- 10) When performing the auto-tuning with one lower size of motor, enable the overload restriction function, and set the overload restriction level to 150% of the rated current of the motor.

- 
- 11) When deceleration over-voltage suppress integral time (b134) is small, auto-tuning may result in over-voltage trip. In this case, increase b134 and retry the auto-tuning.
  - 12) To execute auto-tuning, be sure to set the output frequency (F001) larger than starting frequency (b082) regardless with or without rotation.
-

## Off-line auto-tuning procedure (with motor rotation)

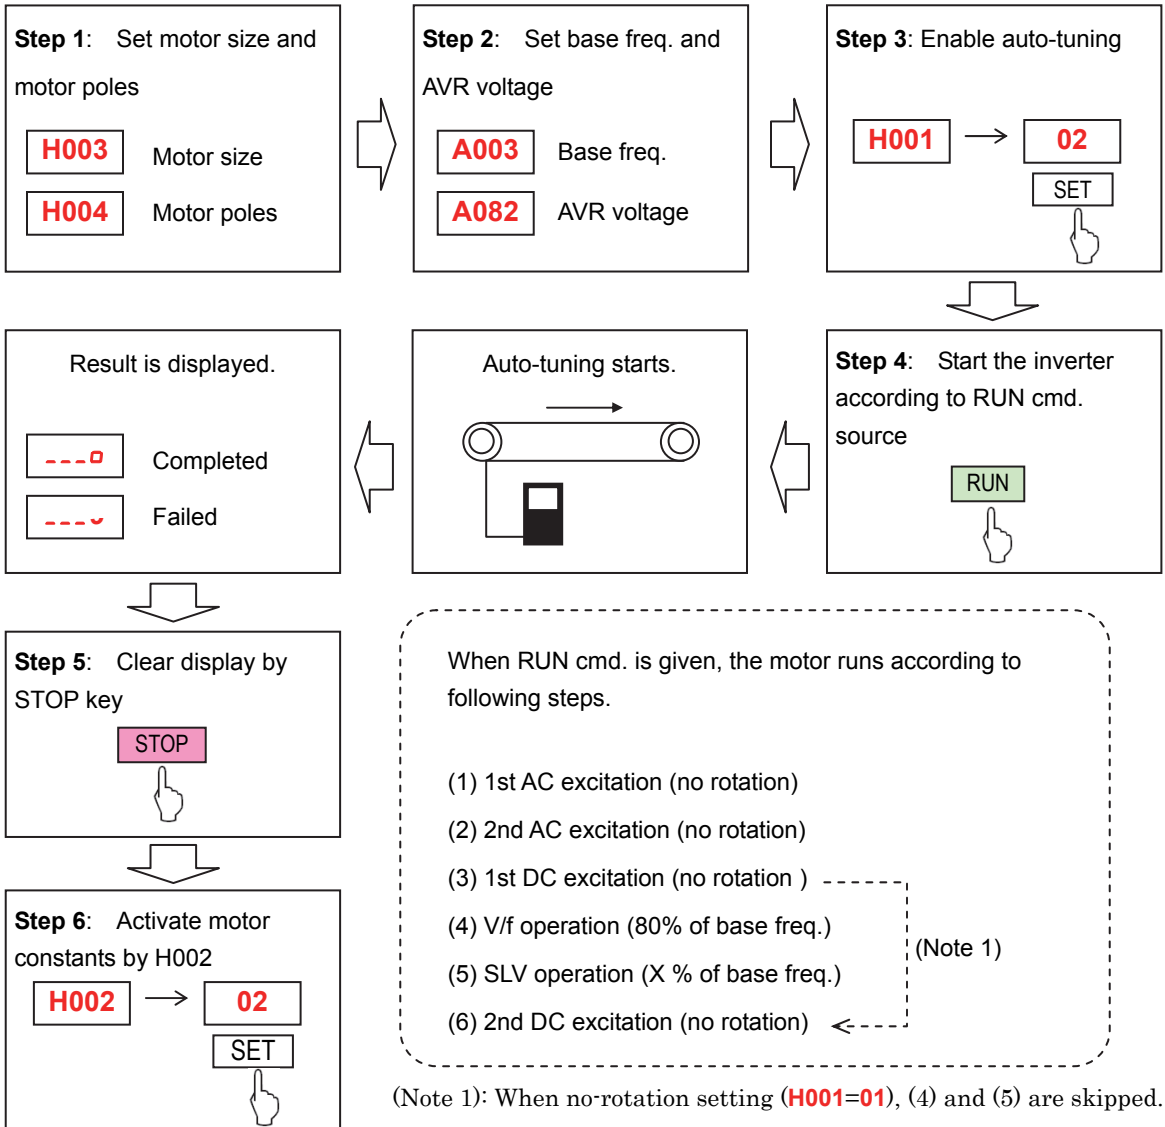

(Note 2) After auto-tuning is completed, be sure to set 01 in H002/H202, otherwise measured data is not effective.

(Note 3) Speed "X" of above (5) depends on accel/deceleration time. (T: Larger time of accel or deceleration time)

0 < T < 50 [s] :	X=40%
50 ≤ T < 100 [s] :	X=20%
100 ≤ T [s] :	X=10%

(Note 4) If auto-tuning is failed, try to execute again.

(Note 5) If the inverter trips during the auto-tuning, the auto-tuning is interrupted. After removing the cause of trip, retry auto-tuning from the beginning.

(Note 6) If inverter is stopped during auto-tuning by stop command (by STOP key or deactivate RUN input), measured constants could remain. Be sure to execute auto-tuning again.

(Note 7) If auto-tuning is attempted in free V/f setting, auto-tuning will fail with error display.

## “P” Group: Other Parameters

P group parameters are for other functionality such as option error related, encoder (pulse train input) settings related, torque command related, positioning command related, Torque command related, EzSQ related, and communication (CompoNet, DeviceNet, EtherNet, ProfiBus, CAN Open, and CC-Link) related.

### Option Card Error

You can select how the inverter reacts when an error results from a built-in option card.

Func. Code	“P” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>P001</b>	Reaction when option card error occurs	Two option codes: <b>00</b> ...Inverter trips <b>01</b> ...Ignores the error (Inverter continues operation)	<b>X</b>	00	–

## Encoder (Pulse Train Input) Related Settings

You can achieve speed control or simple positioning control by using pulse train input. Following table shows the related parameters of those function. Please refer to chapter 4 for the detailed description.

Func. Code	"P" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>P003</b>	[EA] terminal selection	Three option codes: <b>00</b> ...Speed reference (incl. PID) <b>01</b> ...For control with encoder feedback <b>02</b> ...Extended terminal for EzSQ	<b>X</b>	00	-
<b>P004</b>	Pulse train input mode selection for feedback	Four option codes: <b>00</b> ...Single-phase pulse [EA] <b>01</b> ...2-phase pulse (90° difference) 1 ([EA] and [EB]) <b>02</b> ...2-phase pulse (90° difference) 2 ([EA] and [EB]) <b>03</b> ...Single-phase pulse [EA] and direction signal [EB]	<b>X</b>	00	-
<b>P011</b>	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	<b>X</b>	512.	-
<b>P012</b>	Simple positioning selection	Two option codes: <b>00</b> ...simple positioning deactivated <b>01</b> ...simple positioning activated	<b>X</b>	00	-
<b>P015</b>	Creep Speed	Set range is start frequency ( <b>b082</b> ) ~10.00 Hz	<b>X</b>	5.00	Hz
<b>P026</b>	Over-speed error detection level	Set range is 0~150%	<b>X</b>	115.0	%
<b>P027</b>	Speed deviation error detection level	Set range is 0~120 Hz	<b>X</b>	10.00	Hz

## Speed control Related Settings

Set "15" in **C027** and "00" in **P003**, then output frequency is controlled by single phase pulse train input to EA terminal.

## Torque Command Related Settings

You can achieve simple positioning by simple encoder feedback control. Following table shows the related parameters to be set for the positioning. Please refer to chapter 4 for the detailed description of the function. 100% torque is referred to inverter rated current. Absolute torque value is up the motor to be combined.

Func. Code	"P" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>P033</b>	Torque command input selection	Four option codes: <b>00</b> ...Analog voltage input [O] <b>01</b> ...Analog current input [OI] <b>03</b> ...Operator, <b>06</b> ...Option	✗	00	-
<b>P034</b>	Torque command level input	Set range is 0~200%	✓	0.	%
<b>P036</b>	Torque bias mode selection	Two option codes: <b>00</b> ...No bias <b>01</b> ...Operator <b>05</b> ...Option	✗	00	-
<b>P037</b>	Torque bias value setting	Range is -200~200%	✓	0.	%
<b>P038</b>	Torque bias polarity selection	Three option codes: <b>00</b> ...According to the sign <b>01</b> ...According to the rotation direction <b>05</b> ...Option	✗	00	-
<b>P039</b>	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
<b>P040</b>	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
<b>P041</b>	Speed / Torque control switching time	Set range is 0 to 1000 ms	✗	0.	ms


# Simple Positioning

**Encoder wiring** – The hardware overview about pulse train input is shown below.

Pulse input types	Max. Freq.	EA terminal (5 to 24VDC)	EB terminal (24VDC)
90° ph. difference 2-ph. pulse	2kHz	Phase-A (PNP open collector or Voltage output type)	Phase-B (PNP open collector or Voltage output type)
Single phase pulse + direction	32kHz	Single phase pulse (PNP open collector or Voltage output type)	Direction (sink/source transistor or contactor)
Single phase pulse	32kHz	Single phase pulse (PNP open collector or Voltage output type)	-

## 2-phase pulse input




Wire phase-A to EA terminal and phase-B to EB terminal. Since common terminal of EB is same as other inputs, use all the input terminals as source logic (PNP open collector or voltage output type). Voltage of EB should be 18 to 24VDC. Assign EB in input terminal 7.

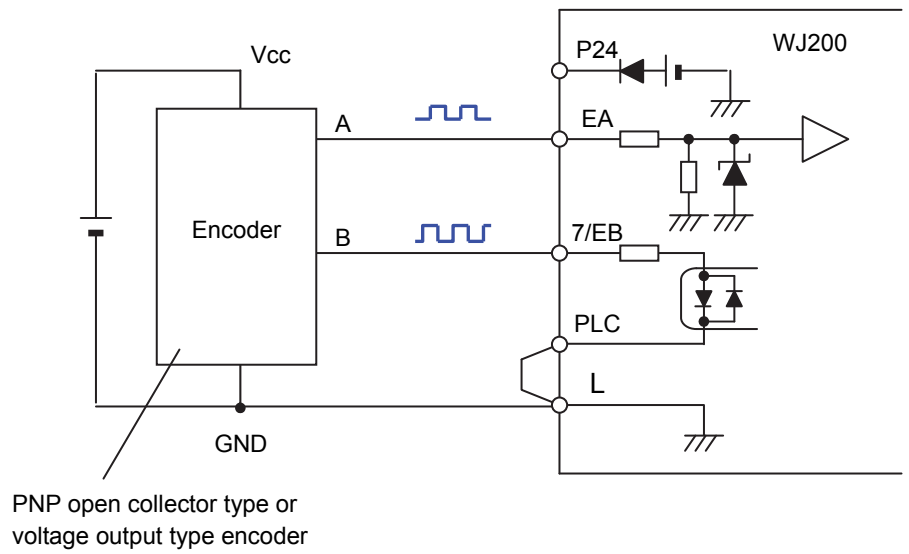



### Single phase pulse input

Wire phase-A to EA terminal and direction signal to EB terminal. Both sink or source logic are available for EB terminal by changing position of the short bar. Assign EB in input terminal 7. ON input is forward and OFF input is reverse direction.

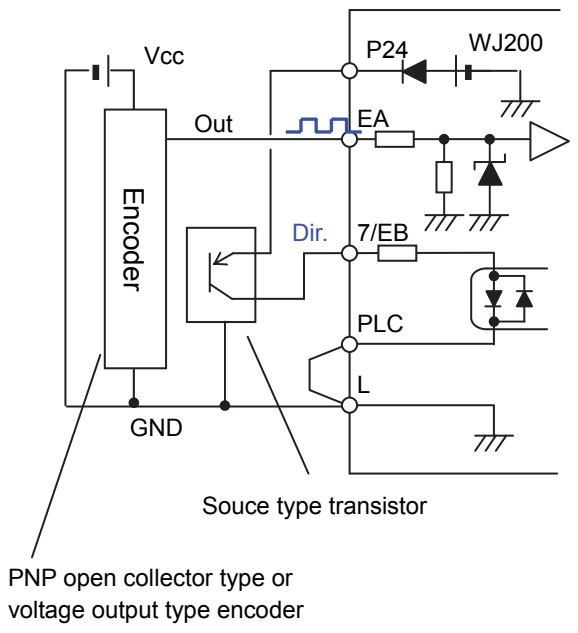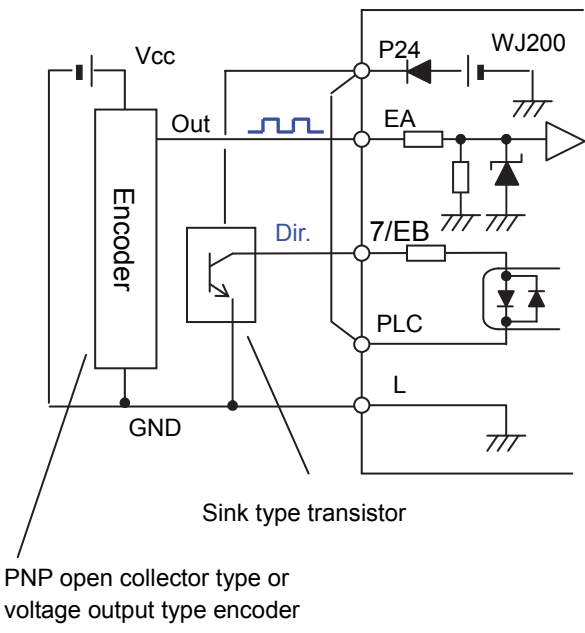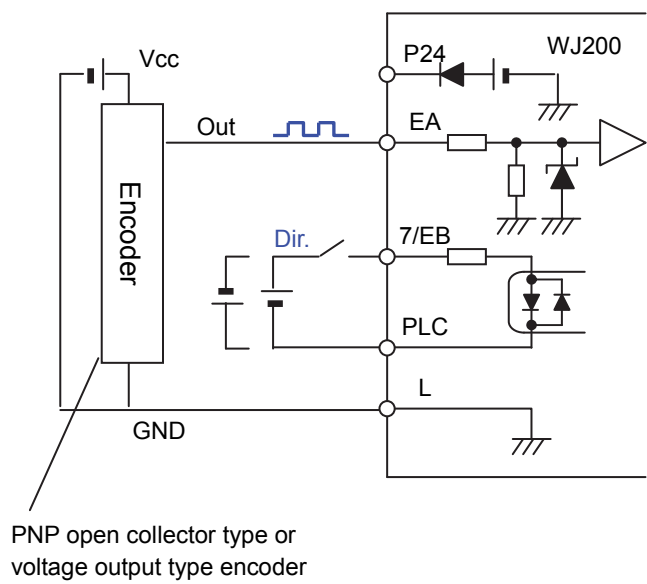

## Simple positioning setting

- Set "03" in [EA] selection (**P003**), then pulse train input is used as feedback signal from encoder.
- Set "02" in simple positioning selection (**P012**), then simple positioning is enabled. (If "00" is set, "V/f control with FB" is enabled. Please refer to **xx** for further information.
- Up to 8 position data are commanded by combination of 3 input terminals configured as CP1 to CP3.
- Besides positioning input, RUN command (FW,RV) is necessary. Since rotation direction does not matter for positioning, both FW and RV work as RUN command.
- Positioning speed depends on frequency source (**A001**).
- More than four digits are required for positioning data, but only four higher digits are displayed.


Code	Item	Data or data range	Description
<b>P003</b>	[EA] terminal selection	<b>01</b>	Encoder feedback
<b>P004</b>	Feedback pulse train mode	<b>00</b>	Single phase pulse train
		<b>01</b>	90° ph. difference 2-ph. pulse train 1
		<b>02</b>	90° ph. difference 2-ph. pulse train 2
		<b>03</b>	Single phase pulse train + direction
<b>P011</b>	Encoder PPR setting	32. to 1024.	
<b>P012</b>	Simple positioning selection	<b>02</b>	Simple positioning enabled
<b>P015</b>	Creep speed	Start freq. to .10.00Hz	
<b>P026</b>	Over-speed error detection level	0.0 to 150. %	
<b>P027</b>	Speed deviation error level	0.00 to 120.0 Hz	
<b>P072</b>	Position range (Forward)	0 to +268435455	Higher 4-digits displayed
<b>P073</b>	Position range (Reverse)	-268435455 to 0	Higher 4-digits displayed
<b>P075</b>	Positioning mode selection	<b>00</b>	With limitation
		<b>01</b>	No limitation (shorter route) <b>P004</b> is to be set <b>00</b> or <b>01</b>
<b>P077</b>	Encoder disconnection timeout	0.0 to 10.0 s	
<b>H050</b>	Slip comp. P gain for FB V/f	0.0 to 10.00	
<b>H051</b>	Slip comp. I gain for FB V/f	0.0 to 1000. s	
<b>d029</b>	Position setting monitor	8435455 to +268435455	
<b>d030</b>	Position feedback monitor		
<b>C102</b>	Reset selection	<b>03</b>	Internal data is not cleared by reset
<b>C001</b> <b>-C007</b>	Input [1]~[7] function	<b>47</b>	PCLR: Pulse counter clear
		<b>85</b>	EB: Rotation direction detection
<b>C021- C022</b>	Output [11][12] function	<b>22</b>	DSE: Speed deviation excessive
<b>C026</b>	Alarm relay function	<b>23</b>	POK: Positioning completion

(Note 1) If 7/EB terminal is used (P004=00~03), set 85 (EB) in input 7 (C007). ON is forward and OFF is reverse direction.

(Note 2) When 2-phase pulse is used, maximum frequency of phase-A and B are different (32kHz for A-phase, 2kHz for B-phase). In order to detect rotation direction over 2kHz, choose detection methods in P004.

P004	Item	Description
01	90° ph. difference 2-ph. pulse train 1	Keep the last direction
02	90° ph. difference 2-ph. pulse train 2	Depend on RUN command (FW or RV)

(Note 3) For rotating coordinate system, if "01" is set in **P075**, the rotation direction of shorter routing is selected. In this case, set the number of pulse for one rotation in position-0 (**P060**). This value must be positive number. When "01" is set in **P075**, **P004** is to be set **00** or **01**.

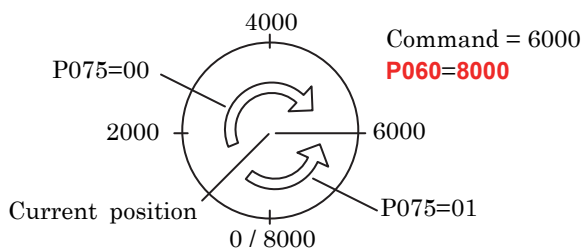

(Note 4) **d030** is cleared by inputting PCLR, SPD, ORG, RS signal or turning on the power supply.

When "00" is set in **P004**, PCLR is effective only during the RUN command (FW, RV) is given.

(Note 5) **P075** is to be set higher when speed detection is not accurate in low speed.


In the simple positioning mode, the inverter runs the motor until the machine reaches the target position according to the following settings, and then stops the motor with DC braking.

<1> Position setting

<2> Speed setting (frequency setting)

<3> Acceleration and deceleration time

(DC braking state is held until RUN command is turned off.)

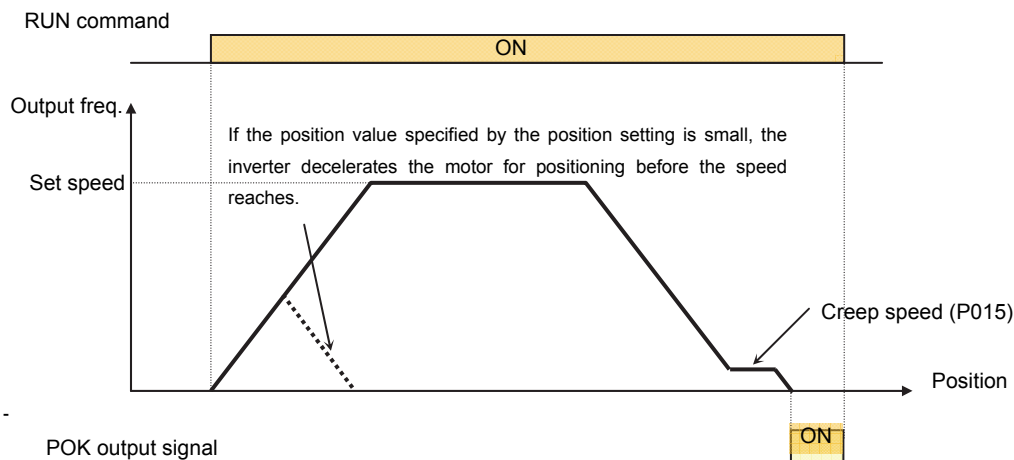

In simple positioning mode, the frequency and acceleration/deceleration are according to current settings as same as normal operation.

- Depending on DC braking and creep speed setting, positioning may go off the point.
- If the position value specified by the position setting is small, the inverter may decelerate the motor for positioning before its speed reaches the speed setting.
- In simple positioning mode, the rotation direction setting (FW or RV) of the operation command is ignored. The operation command simply functions as the signal to run or stop the motor. The motor runs in the forward direction when the value of "target position" -(minus) "current position" is positive, or in the reverse position when the value is negative.
- The position at power up is home position (Position data = 0). If power is removed, current position data is lost.
- When the operation command is turned on with 0 specified as the position setting, positioning is completed (with DC braking) without running the motor.
- Specify "03 (only to reset a trip)" for reset mode selection (**C102**). If a value other than "03" is specified to **C102**, the current position counter will be cleared when the inverter reset terminal (or reset key) is turned on. Be sure to specify "03" for reset mode selection (**C102**) if you intend to use the value of the current position counter for operation after recovering the inverter from tripping by turning on the reset terminal (or reset key).
- If the PCLR function is assigned to a input terminal, turning it on to clear the current position counter.
- In simple positioning mode, ATR terminal is invalid. (Torque control does not work.)
- If current position is out of the set range, inverter will be tripped (E83) and coasting status.

## Multistage position switching function (CP1/CP2/CP3)


When functions “66 (CP1)” to “68 (CP3)” are assigned to input terminal [1] to [7] (C001 to C008), you can select multistage positions 0 to 7. Preset position data 0 to 7 in P060 to P067. If no assignment is set in terminals, position command will be position-0 (P060).

Code	Item	Data or data range	Description
P060	Multistage position 0	P073 to P072  (Displayed higher 4-digits only)	(Note 1)
P061	Multistage position 1		
P062	Multistage position 2		
P063	Multistage position 3		
P064	Multistage position 4		
P065	Multistage position 5		
P066	Multistage position 6		
P067	Multistage position 7		

(Note 1) If P075=01, set the number of pulse for one rotation in P060.


Position setting	CP3	CP2	CP1
Multistage position 0 (P060)	0	0	0
Multistage position 1 (P061)	0	0	1
Multistage position 2 (P062)	0	1	0
Multistage position 3 (P063)	0	1	1
Multistage position 4 (P064)	1	0	0
Multistage position 5 (P065)	1	0	1
Multistage position 6 (P066)	1	1	0
Multistage position 7 (P067)	1	1	1

To avoid misinput due to time lag of each input, you can adjust the determination time in (C169). The input status is taken the preset time (C169) after the last change of input status. (Note that a long determination time deteriorates the input response.)

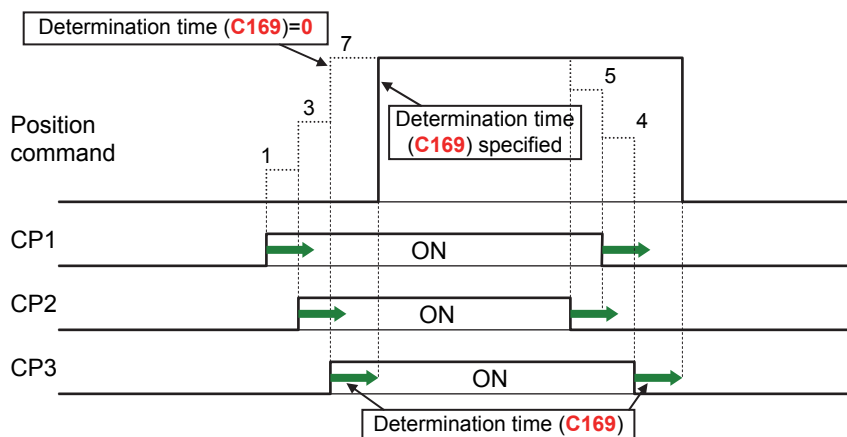

## Speed/positioning switching function (SPD)

- Set SPD terminal ON, then speed control is enabled in simple positioning mode.
- While SPD terminal is ON, current position counter is 0. When SPD is turned OFF, the inverter starts positioning operation.
- If positioning command data is 0 at SPD turning OFF, the inverter start deceleration immediately. (Depending on DC braking setting, motor could be hunting.)
- While SPD terminal is ON, rotating direction depends on RUN command. Be sure to check rotating direction after switching to positioning operation.

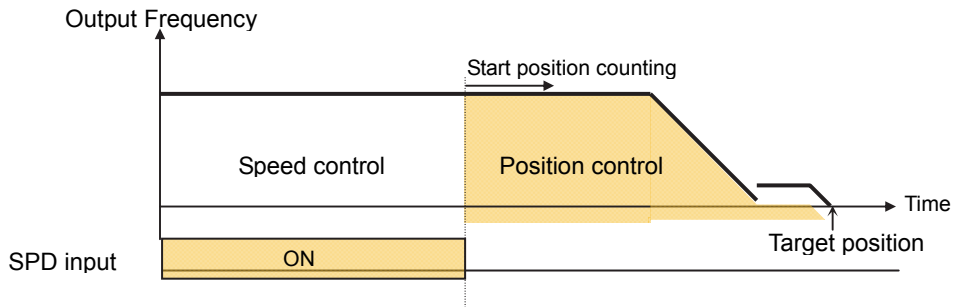


Parameter	Item	Data	Description
<b>C001-C007</b>	Input [1]~[7] function	<b>73</b>	SPD: Speed/position change over

## Homing function


- Two different homing functions are available by setting homing mode selection (**P068**).
- When trigger signal of homing (**70: ORG**), the inverter starts homing operation. When homing is completed, current position data is reset (0).
- Direction of homing is specified in **P069**.
- If homing is not operated, position at power up is regarded as home position (0).

Code	Item	Data or data range	Description
<b>P068</b>	Homing mode selection	<b>00</b>	Low speed mode
		<b>01</b>	High speed mode
<b>P069</b>	Homing direction	<b>00</b>	Forward rotation side
		<b>01</b>	Reverse rotation side
<b>P070</b>	Low speed homing freq.	0 to 10Hz	
<b>P071</b>	High speed homing freq.	0 to 400Hz	
<b>C001~C007</b>	Input [1]~[7] function	<b>69</b>	ORL: Limit signal of homing
		<b>70</b>	ORG: Trigger signal of homing

### (1) Low speed homing (P068 = 00)

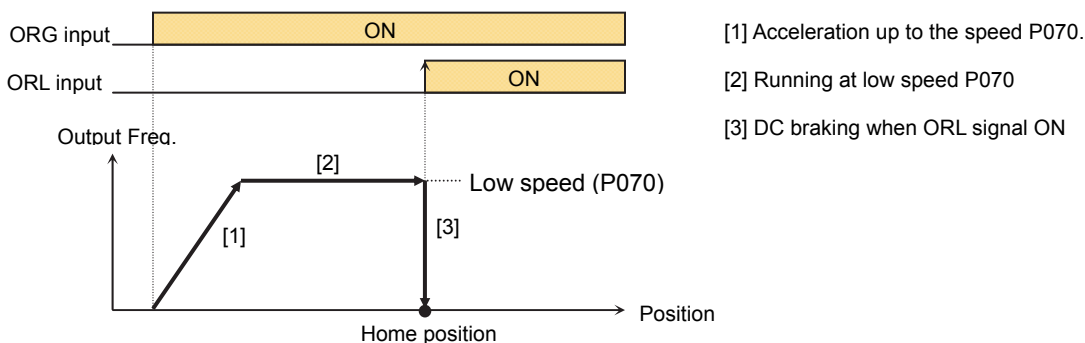

### (2) High speed homing (P068 = 01)

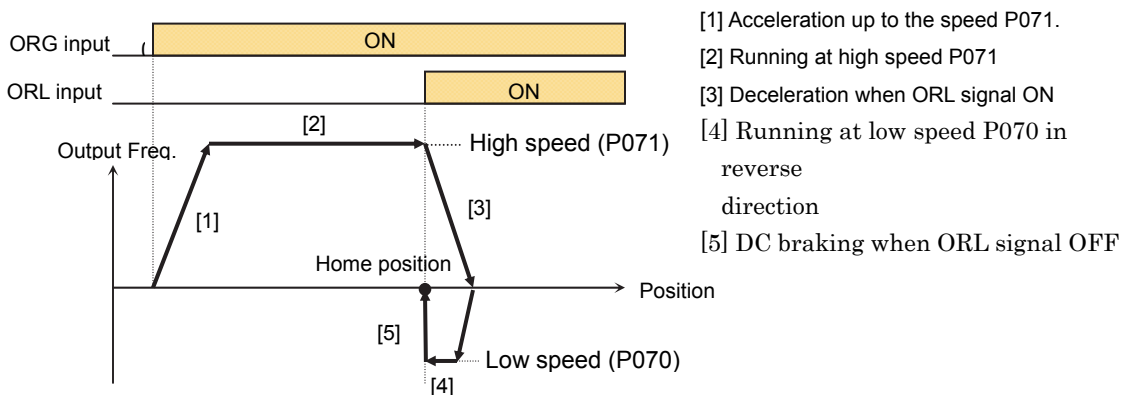

## EzSQ User Parameter Related Settings

Please refer to chapter 4 for the detailed description of the function.

"P" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>P100</b> ~ <b>P131</b>	EzSQ user parameter U(00) ~ U(31)	Each set range is 0~65535	✓	0.	-



# Operations and Monitoring



## 4

In This Chapter...	page
- Introduction .....	2
- Connecting to PLCs and Other Devices .....	4
- Control Logic Signal Specifications.....	6
- Intelligent Terminal Listing .....	10
- Using Intelligent Input Terminals.....	12
- Using Intelligent Output Terminals.....	51
- Analog Input Operation .....	87
- Pulse Train Input Operation .....	89
- Analog Output Operation.....	90

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

## Introduction

The previous material in Chapter 3 gave a reference listing of all the programmable functions of the inverter. We suggest that you first scan through the listing of inverter functions to gain a general familiarity. This chapter will build on that knowledge in the following ways:

- 1. Related functions** – Some parameters interact with or depend on the settings in other functions. This chapter lists “required settings” for a programmable function to serve as a cross-reference and an aid in showing how function interacts.
- 2. Intelligent terminals** – Some functions rely on an input signal on a control logic connector terminal, or generate output signals in other cases.
- 3. Electrical interfaces** – This chapter shows how to make connections between the inverter and other electrical devices.
- 4. Auto Tuning Performance** – This chapter shows how to perform auto tuning so to achieve good performance of the motor control.
- 5. Positioning Performance** – This chapter shows how to realize simple positioning by using encoder (PG) feedback.
  
- 6. PID Loop Operation** – The WJ200 has a built-in PID loop that calculates the optimal inverter output frequency to control an external process. This chapter shows the parameters and input/output terminals associated with PID loop operation.
- 7. Multiple motors** – A single WJ200 inverter may be used with two or more motors in some types of applications. This chapter shows the electrical connections and inverter parameters involved in multiple-motor applications.

The topics in this chapter can help you decide the features that are important to your application, and how to use them. The basic installation covered in Chapter 2 concluded with the power up test and running the motor. Now, this chapter starts from that point and shows how to make the inverter part of a larger control or automation system.

### Caution Messages for Operating Procedures

Before continuing, please read the following Caution messages.



**CAUTION:** The heat sink fins will have a high temperature. Be careful not to touch them. Otherwise, there is the danger of getting burned.



**CAUTION:** The operation of the inverter can be easily changed from low speed to high speed. Be sure to check the capability and limitations of the motor and machine before operating the inverter. Otherwise, it may cause injury to personnel.



**CAUTION:** If you operate a motor at a frequency higher than the inverter standard default setting (50Hz/60Hz), be sure to check the motor and machine specifications with the respective manufacturer. Only operate the motor at elevated frequencies after getting their approval. Otherwise, there is the danger of equipment damage.

## Warning Messages for Operating Procedures



**WARNING:** Be sure to turn ON the input power supply only after closing the front case. While the inverter is energized, be sure not to open the front case. Otherwise, there is the danger of electric shock.

---



**WARNING:** Be sure not to operate electrical equipment with wet hands. Otherwise, there is the danger of electric shock.

---



**WARNING:** While the inverter is energized, be sure not to touch the inverter terminals even when the motor is stopped. Otherwise, there is the danger of electric shock.

---



**WARNING:** If the retry mode is selected, the motor may suddenly restart after a trip stop. Be sure to stop the inverter before approaching the machine (be sure to design the machine so that safety for personnel is secure even if it restarts.) Otherwise, it may cause injury to personnel.

---



**WARNING:** If the power supply is cut OFF for a short period of time, the inverter may restart operating after the power supply recovers if the Run command is active. If a restart may pose danger to personnel, so be sure to use a lock-out circuit so that it will not restart after power recovery. Otherwise, it may cause injury to personnel.

---



**WARNING:** The Stop Key is effective only when the stop function is enabled. Be sure to enable the Stop Key separately from the emergency stop. Otherwise, it may cause injury to personnel.

---



**WARNING:** During a trip event, if the alarm reset is applied and the Run command is present, the inverter will automatically restart. Be sure to apply the alarm reset only after verifying the Run command is OFF. Otherwise, it may cause injury to personnel.

---



**WARNING:** Be sure not to touch the inside of the energized inverter or to put any conductive object into it. Otherwise, there is a danger of electric shock and/or fire.

---



**WARNING:** If power is turned ON when the Run command is already active, the motor will automatically start and injury may result. Before turning ON the power, confirm that the RUN command is not present.

---



**WARNING:** When the Stop key function is disabled, pressing the Stop key does not stop the inverter, nor will it reset a trip alarm.

---



**WARNING:** Be sure to provide a separate, hard-wired emergency stop switch when the application warrants it.

---



**WARNING:** If the power is turned ON and the Run command is already active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the Run command is not active.

---

## Connecting to PLCs and Other Devices

Hitachi inverters (drives) are useful in many types of applications. During installation, the inverter keypad (or other programming device) will facilitate the initial configuration. After installation, the inverter will generally receive its control commands through the control logic connector or serial interface from another controlling device. In a simple application such as single-conveyor speed control, a Run/Stop switch and potentiometer will give the operator all the required control. In a sophisticated application, you may have a *programmable logic controller* (PLC) as the system controller, with several connections to the inverter.

It is not possible to cover all the possible types of application in this manual. It will be necessary for you to know the electrical characteristics of the devices you want to connect to the inverter. Then, this section and the following sections on I/O terminal functions can help you quickly and safely connect those devices to the inverter.





**CAUTION:** It is possible to damage the inverter or other devices if your application exceeds the maximum current or voltage characteristics of a connection point.

The connections between the inverter and other devices rely on the electrical input/output characteristics at both ends of each connection, shown in the diagram to the right. The inverter's configurable inputs accept either a sourcing or sinking output from an external device (such as PLC). This chapter shows the inverter's internal electrical component(s) at each I/O terminal. In some cases, you will need to insert a power source in the interface wiring.

In order to avoid equipment damage and get your application running smoothly, we recommend drawing a schematic of each connection between the inverter and the other device. Include the internal components of each device in the schematic, so that it makes a complete circuit loop.


After making the schematic, then:

1. Verify that the current and voltage for each connection is within the operating limits of each device.
2. Make sure that the logic sense (active high or active low) of any ON/OFF connection is correct.
3. Check the zero and span (curve end points) for analog connections, and be sure the scale factor from input to output is correct.
4. Understand what will happen at the system level if any particular device suddenly loses power, or powers up after other devices.

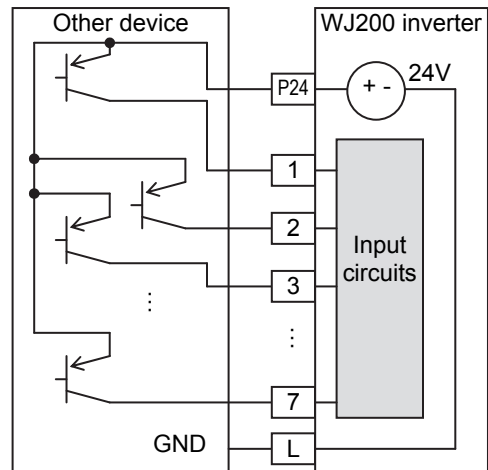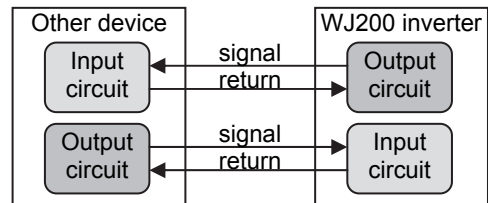


## Example Wiring Diagram

The schematic diagram below provides a general example of logic connector wiring, in addition to basic power and motor wiring converted in Chapter 2. The goal of this chapter is to help you determine the proper connections for the various terminals shown below for your application needs.

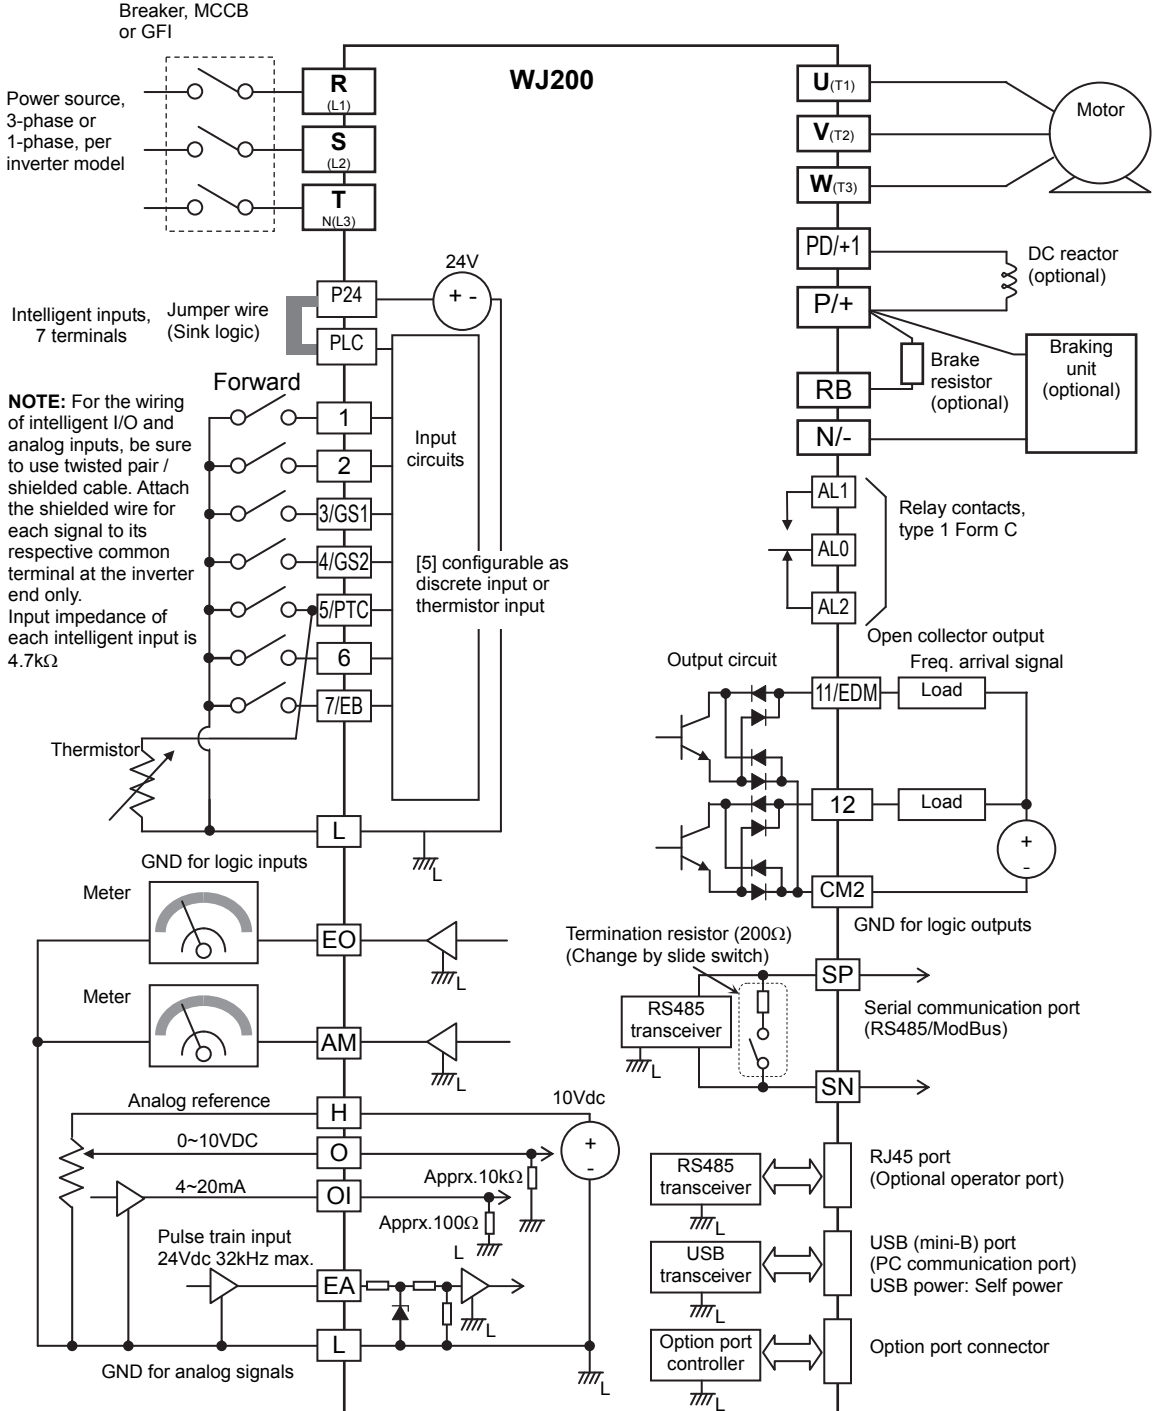

# Control Logic Signal Specifications

The control logic connectors are located just behind the front housing cover. The relay contacts are just to the left of the logic connectors. Connector labeling is shown below.

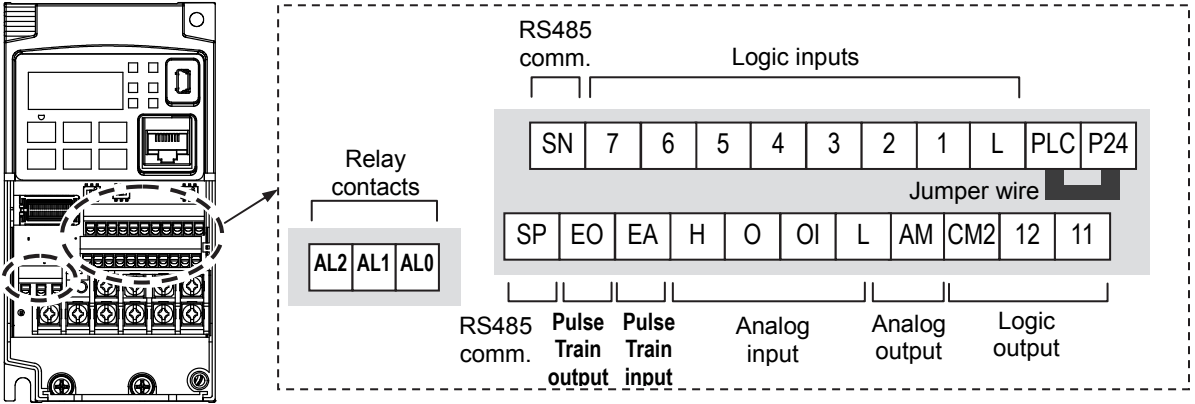

Terminal Name	Description	Ratings
P24	+24V for logic inputs	24VDC, 100mA. (do not short to terminal L)
PLC	Intelligent input common	To change to sink type, remove the jumper wire between [P24] and [L], and connect it between [P24] and [PLC]. In this case, connecting [L] to [1]~[7] makes each input ON. Please remove the jumper wire when using external power supply.
1 2 3/GS1 4/GS2 5/PTC 6 7/EB	Discrete logic inputs (Terminal [3],[4],[5] and [7] have dual function. See following description and related pages for the details.)	27VDC max. (use PLC or an external supply referenced to terminal L)
GS1(3)	Safe stop input GS1	Functionality is based on ISO13849-1
GS2(4)	Safe stop input GS2	See appendix E for the details.
PTC(5)	Motor thermistor input	Connect motor thermistor between PTC and L terminal to detect the motor temperature. Set 19 in C005.
EB(7)	Pulse train input B	2kHz max. Common is [PLC]
EA	Pulse train input A	32kHz max. Common is [L]
L (in upper row) *1	GND for logic inputs	Sum of input [1]~[7] currents (return)
11/EDM	Discrete logic outputs [11] (Terminal [11] has dual function. See following description and related pages for the details.)	50mA max. ON state current, 27 VDC max. OFF state voltage Common is CM2 In case the EDM is selected, the functionality is based on ISO13849-1 4VDC max. ON state voltage depression
12	Discrete logic outputs [12]	50mA max. ON state current, 27 VDC max. OFF state voltage Common is CM2
CM2	GND for logic output	100 mA: [11], [12] current return
AM	Analog voltage output	0~10VDC 2mA maximum
EO	Pulse train output	10VDC 2mA maximum 32kHz maximum


Terminal Name	Description	Ratings
L (in bottom row) *2	GND for analog signals	Sum of [OI], [O], and [H] currents (return)
OI	Analog current input	4 to 19.6 mA range, 20 mA nominal, input impedance 250 $\Omega$
O	Analog voltage input	0 to 9.8 VDC range, 10 VDC nominal, input impedance 10 k $\Omega$
H	+10V analog reference	10VDC nominal, 10mA max.
SP, SN	Serial communication terminal	For RS485 Modbus communication.
AL0	Relay common contact	250VAC, 2.5A (R load) max.
AL1 *3	Relay contact, normally open	250VAC, 0.2A (I load, P.F.=0.4) max.
AL2 *3	Relay contact, normally closed	100VAC, 10mA min. 30VDC, 3.0A (R load) max. 30VDC, 0.7A (I load, P.F.=0.4) max. 5VDC, 100mA min.

**Note 1:** The two terminals [L] are electrically connected together inside the inverter.

**Note 2:** We recommend using [L] logic GND (to the right) for logic input circuits and [L] analog GND (to the left) for analog I/O circuits.

**Note 3:** Default relay N.O./N.C. configuration is reversed. See page 4-60.

### Wiring sample of control logic terminal (sink logic)

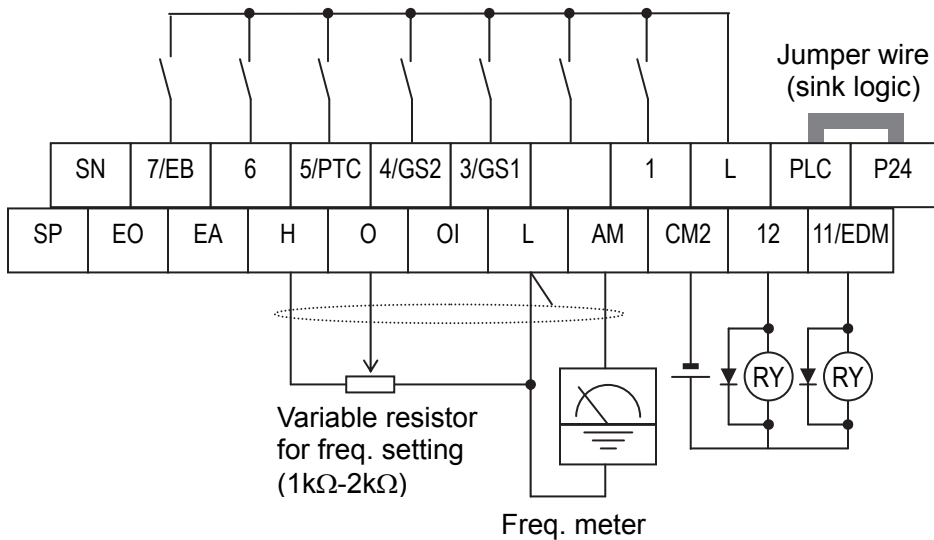

**Note:** If relay is connected to intelligent output, install a diode across the relay coil (reverse-biased) in order to suppress the turn-off spike.

### Caution for intelligent terminals setting


In turning on power when the input to the intelligent terminals become the following operations, the set data might be initialized.

Please ensure not becoming the following operations, in changing the function allocation of the intelligent input terminal.

- 1) Turning on power while [Intelligent input terminal 1/2/3 are ON] and [Intelligent input terminal 4/5/6/7 are OFF].
- 2) After 1)'s condition, turning off power.
- 3) After 2)'s condition, turning on power while [Intelligent input terminal 2/3/4 are ON] and [Intelligent input terminal 1/5/6/7 are OFF].


**sink/source logic of intelligent input terminals**

Sink or source logic is switched by a jumper wire as below.

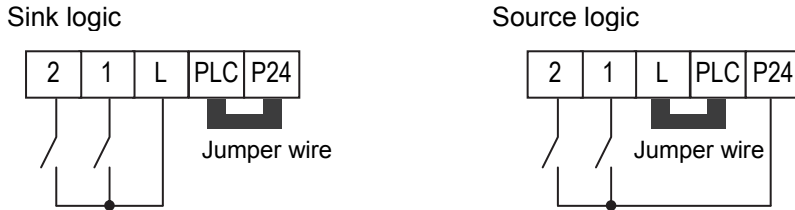

**Wire size for control and relay terminals**

Use wires within the specifications listed below. For safe wiring and reliability, it is recommended to use ferrules, but if solid or stranded wire is used, stripping length should be 8mm.

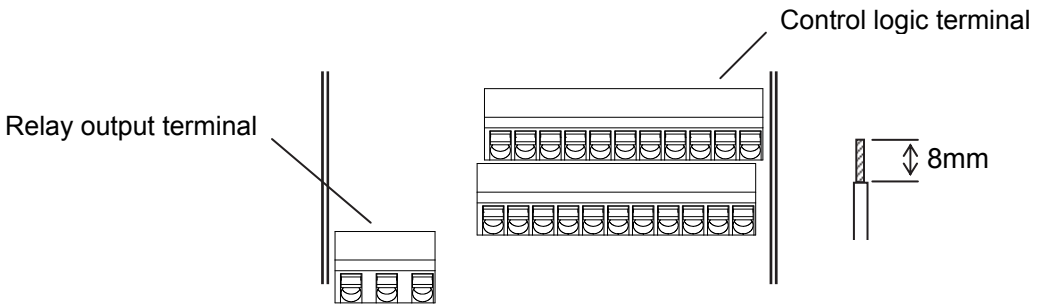

	Solid mm <sup>2</sup> (AWG)	Stranded mm <sup>2</sup> (AWG)	Ferrule mm <sup>2</sup> (AWG)
Control logic terminal	0.2 to 1.5 (AWG 24 to 16)	0.2 to 1.0 (AWG 24 to 17)	0.25 to 0.75 (AWG 24 to 18)
Relay terminal	0.2 to 1.5 (AWG 24 to 16)	0.2 to 1.0 (AWG 24 to 17)	0.25 to 0.75 (AWG 24 to 18)




## Recommended ferrule


For safe wiring and reliability, it is recommended to use following ferrules.

When you use an option mounted, please use a rod terminal without sleeve to wire so that to avoid hitting the option case.

### Rod terminal with sleeve

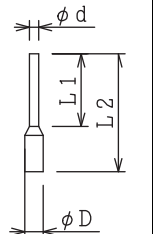Wire size mm <sup>2</sup> (AWG)	Model name of ferrule *	L1 [mm]	L2 [mm]	Φd [mm]	ΦD [mm]	
0.25 (24)	AI 0.25-8YE	8	12.5	0.8	2.0	
0.34 (22)	AI 0.34-8TQ	8	12.5	0.8	2.0	
0.5 (20)	AI 0.5-8WH	8	14	1.1	2.5	
0.75 (18)	AI 0.75-8GY	8	14	1.3	2.8	

### Rod terminal without sleeve

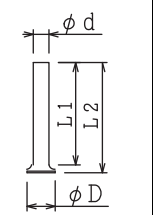
Wire size mm <sup>2</sup> (AWG)	Model name of ferrule *	L1 [mm]	L2 [mm]	Φd [mm]	ΦD [mm]	
0.5 (20)	A 0,5-8	7.3	8	1.0	2.1	
0.75 (18)	A 0,75-8	7.3	8	1.2	2.3	

\* Supplier: Phoenix contact

Crimping pliers: CRIMPFOX UD 6-4 or CRIMPFOX ZA 3

## How to connect?

- (1) Push down an orange actuating lever by a slotted screwdriver (width 2.5mm max.).
- (2) Plug in the conductor.
- (3) Pull out the screwdriver then the conductor is fixed.

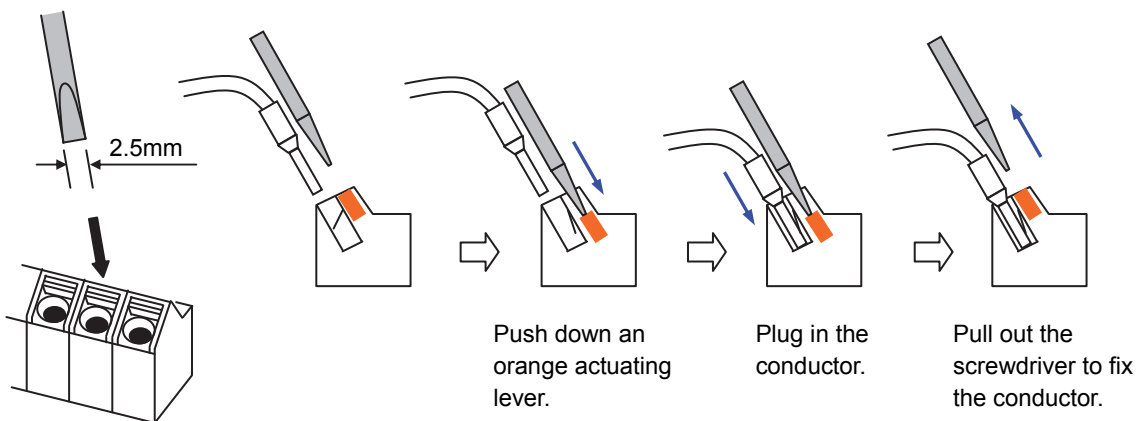

# Intelligent Terminal Listing

## Intelligent Inputs

Use the following table to locate pages for intelligent input material in this chapter.

Input Function Summary Table			
Symbol	Code	Function Name	Page
FW	00	Forward Run/Stop	4-16
RV	01	Reverse Run/Stop	4-16
CF1	02	Multi-speed Select, Bit 0 (LSB)	4-17
CF2	03	Multi-speed Select, Bit 1	4-17
CF3	04	Multi-speed Select, Bit 2	4-17
CF4	05	Multi-speed Select, Bit 3 (MSB)	4-17
JG	06	Jogging	4-19
DB	07	External DC braking	4-20
SET	08	Set (select) 2nd Motor Data	4-21
2CH	09	2-stage Acceleration and Deceleration	4-22
FRS	11	Free-run Stop	4-23
EXT	12	External Trip	4-24
USP	13	Unattended Start Protection	4-25
CS	14	Commercial power source switchover	4-26
SFT	15	Software Lock	4-27
AT	16	Analog Input Voltage/Current Select	4-28
RS	18	Reset Inverter	4-29
PTC	19	PTC thermistor Thermal Protection	4-30
STA	20	Start (3-wire interface)	4-31
STP	21	Stop (3-wire interface)	4-31
F/R	22	FWD, REV (3-wire interface)	4-31
PID	23	PID Disable	4-32
PIDC	24	PID Reset	4-32
UP	27	Remote Control UP Function	4-34
DWN	28	Remote Control Down Function	4-34
UDC	29	Remote Control Data Clearing	4-34
OPE	31	Operator Control	4-35
SF1~SF7	32~38	Multi-speed Select, Bit operation Bit 1~7	4-36
OLR	39	Overload Restriction Source Changeover	4-37
TL	40	Torque Limit Selection	4-37
TRQ1	41	Torque limit switch 1	4-38
TRQ2	42	Torque limit switch 2	4-38
BOK	44	Brake confirmation	4-38
LAC	46	LAD cancellation	4-39
PCLR	47	Pulse counter clear	4-40
ADD	50	ADD frequency enable	4-41
F-TM	51	Force Terminal Mode	4-42
ATR	52	Permission for torque command input	4-42
KHC	53	Clear watt-hour data	4-43
MI1~MI7	56~62	General purpose input (1)~(7)	4-44
AHD	65	Analog command hold	4-45
CP1~CP3	66~68	Multistage-position switch (1)~(3)	4-46
ORL	69	Limit signal of zero-return	
ORG	70	Trigger signal of zero-return	
SPD	73	Speed/position changeover	4-48
GS1	77	STO1 input (Safety related signal)	4-49
GS2	78	STO2 input (Safety related signal)	4-49
485	81	Starting communication signal	
PRG	82	Executing EzSQ program	4-49
HLD	83	Retain output frequency	4-49
ROK	84	Permission of Run command	4-50
EB	85	Rotation direction detection (phase B)	4-50

Use the following table to locate pages for intelligent input material in this chapter.

<b>Input Function Summary Table</b>			
<b>Symbol</b>	<b>Code</b>	<b>Function Name</b>	<b>Page</b>
DISP	86	Display limitation	4-50
NO	255	No assign	

## Intelligent Outputs

Use the following table to locate pages for intelligent output material in this chapter.


<b>O Function Summary Table</b>			
<b>Symbol</b>	<b>Code</b>	<b>Function Name</b>	<b>Page</b>
RUN	00	Run Signal	4-54
FA1	01	Frequency Arrival Type 1–Constant Speed	4-55
FA2	02	Frequency Arrival Type 2–Over frequency	4-55
OL	03	Overload Advance Notice Signal	4-57
OD	04	PID Deviation error signal	4-58
AL	05	Alarm Signal	4-59
FA3	06	Frequency Arrival Type 3–Set frequency	4-55
OTQ	07	Over/under Torque Threshold	4-61
UV	09	Undervoltage	4-62
TRQ	10	Torque Limited Signal	4-63
RNT	11	Run Time Expired	4-64
ONT	12	Power ON time Expired	4-64
THM	13	Thermal Warning	4-65
BRK	19	Brake Release Signal	4-66
BER	20	Brake Error Signal	4-66
ZS	21	Zero Hz Speed Detection Signal	4-67
DSE	22	Speed Deviation Excessive	4-68
POK	23	Positioning Completion	4-69
FA4	24	Frequency Arrival Type 4–Over frequency	4-55
FA5	25	Frequency Arrival Type 5–Set frequency	4-55
OL2	26	Overload Advance Notice Signal 2	4-57
ODc	27	Analog Voltage Input Disconnect Detection	4-70
OIDc	28	Analog Voltage Output Disconnect Detection	4-70
FBV	31	PID Second Stage Output	4-73
NDC	32	Network Disconnect Detection	4-74
LOG1~3	33~35	Logic Output Function 1~3	4-75
WAC	39	Capacitor Life Warning Signal	4-76
WAF	40	Cooling Fan Warning Signal	4-76
FR	41	Starting Contact Signal	4-77
OHF	42	Heat Sink Overheat Warning	4-78
LOC	43	Low load detection	4-79
MO1~3	44~46	General Output 1~3	4-79
IRDY	50	Inverter Ready Signal	4-80
FWR	51	Forward Operation	4-81
RVR	52	Reverse Operation	4-81
MJA	53	Major Failure Signal	4-82
WCO	54	Window Comparator for Analog Voltage Input	4-83
WCOI	55	Window Comparator for Analog Current Input	4-83
FREF	58	Frequency Command Source	4-84
REF	59	Run Command Source	4-84
SETM	60	2 <sup>nd</sup> Motor in operation	4-85
EDM	62	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	4-86
OP	63	Option control signal	
no	255	Not used	

## Using Intelligent Input Terminals

Terminals [1], [2], [3], [4], [5], [6] and [7] are identical, programmable inputs for general use. The input circuits can use the inverter's internal (isolated) +24V field supply or an external power supply. This section describes input circuits operation and how to connect them properly to switches or transistor outputs on field devices.


The WJ200 inverter features selectable *sinking* or *sourcing* inputs. These terms refer to the connection to the external switching device—it either *sinks* current (from the input to GND) or *sources* current (from a power source) into the input. Note that the sink/source naming convention may be different in your particular country or industry. In any case, just follow the wiring diagrams in this section for your application.

The inverter has a jumper wire for configuring the choice of sinking or sourcing inputs. To access it, you must remove the front cover of the inverter housing. In the figure to the top right, the jumper wire is shown as attached to the logic terminal block (connector). For EU and US version (suffix -xFE, and -xFU), it is originally located as source type logic. If you need to change to the sink type connection, remove the jumper wire and connect it as shown in the figure at the bottom right.

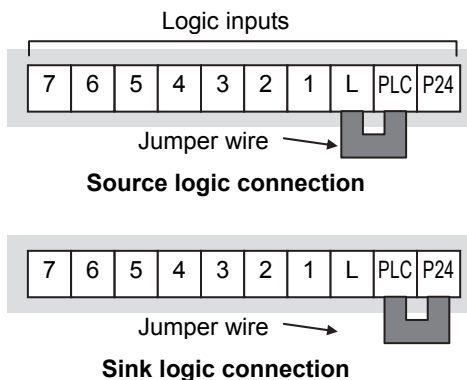

**CAUTION:** Be sure to turn OFF power to the inverter before changing the jumper wire position. Otherwise, damage to the inverter circuitry may occur.

[PLC] Terminal Wiring – The [PLC] terminal (Programmable Logic Control terminal) is named to include various devices that can connect to the inverter's logic inputs. In the figure to the right, note the [PLC] terminal and the jumper wire. Locating the jumper wire between [PLC] and [L] sets the input logic source type, which is the default setting for EU and US versions. In this case, you connect input terminal to [P24] to make it active. If instead you locate the jumper wire between [PLC] and [P24], the input logic will be sink type. In this case, you connect the input terminal to [L] to make it active.

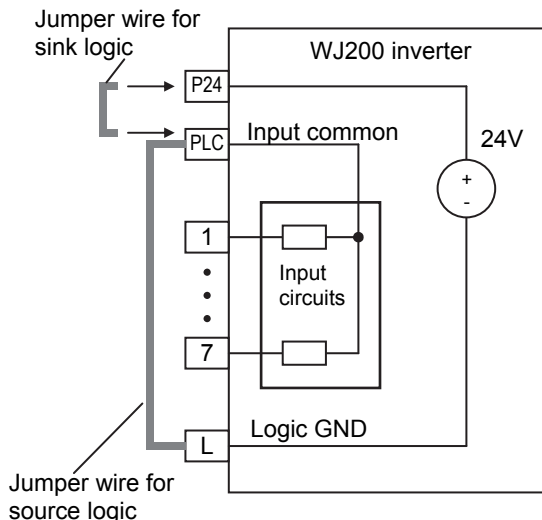


The wiring diagram on the following pages show the four combinations of using sourcing or sinking inputs, and using the internal or an external DC supply.

The two diagrams below input wiring circuits using the inverter's internal +24V supply. Each diagram shows the connection for simple switches, or for a field device with transistor outputs. Note that in the lower diagram, it is necessary to connect terminal [L] only when using the field device with transistors. Be sure to use the correct connection of the jumper wire shown for each wiring diagram.

**Sinking Inputs, Internal Supply**


Jumper wire = [PLC] – [P24] position

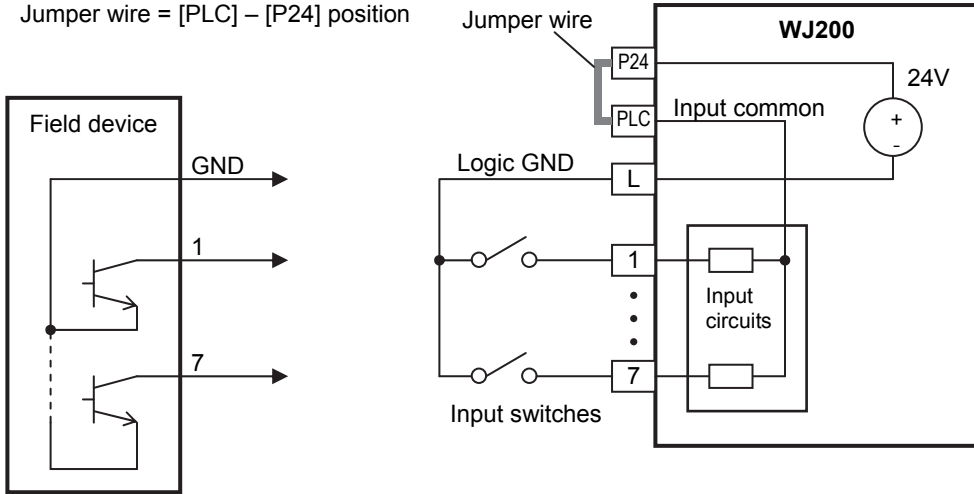

Open collector outputs, NPN transistors

**Sourcing Inputs, Internal Supply**

Jumper wire = [PLC] – [L] position

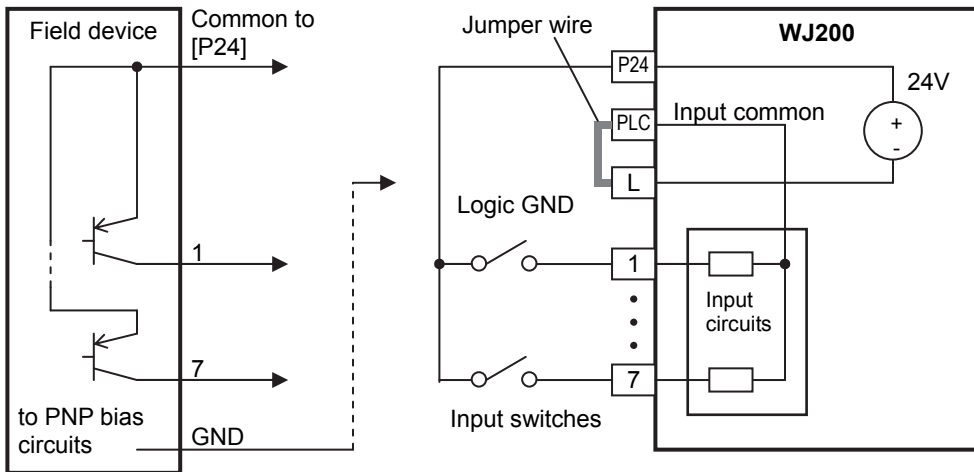


PNP transistor sourcing outputs

The two diagrams below show input wiring circuits using an external supply. If using the “Sinking Inputs, External Supply” in below wiring diagram, be sure to remove the jumper wire, and use a diode (\*) with the external supply. This will prevent a power supply contention in case the jumper wire is accidentally placed in the incorrect position. For the “Sourcing Inputs, External Supply”, please connect the jumper wire as drawn in the diagram below.

### Sinking Inputs, External Supply

Jumper wire = Removed

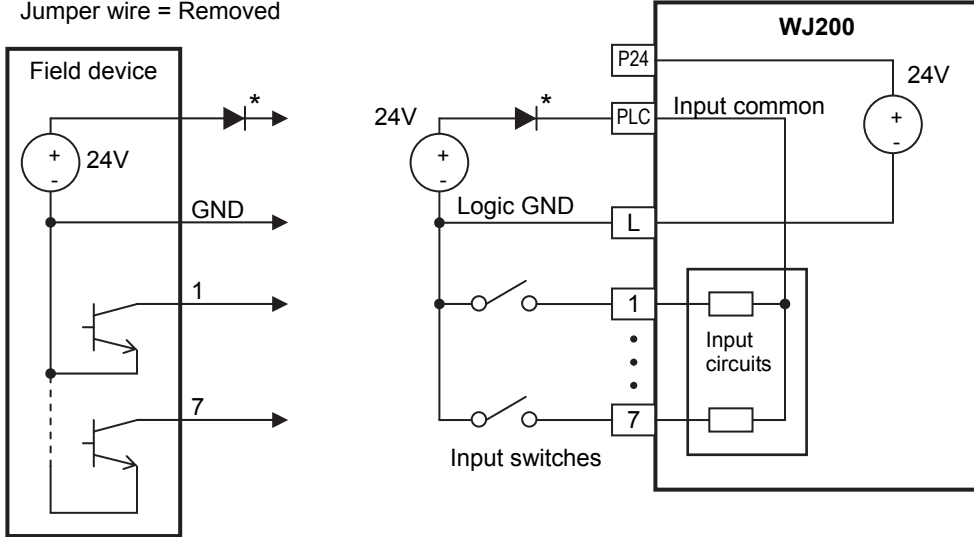


Open collector outputs,  
NPN transistors

\* Note: If the external power supply to GND is (optionally) connected to [L], then install the above diode.

For Functional safety usage (refer to Chapter E), any external signal voltage connected to the WJ200 must be from a SELV Power

### Sourcing Inputs, External Supply


Jumper wire = Removed

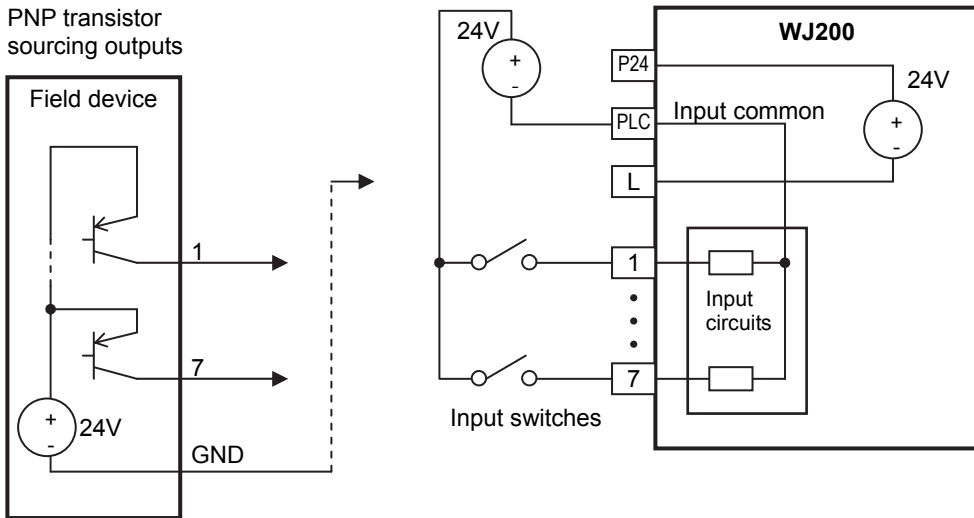


PNP transistor  
sourcing outputs

The inverter control section can be powered externally with 24 Vdc as shown below. This will allow you to read and write parameters using the keypad or via communication (such as Modbus/RTU or with optional fieldBus communication cards).

**NOTE:** You CANNOT use the ProDriveNext programming software when powering the inverter in this way! It will also not be possible to drive a motor.

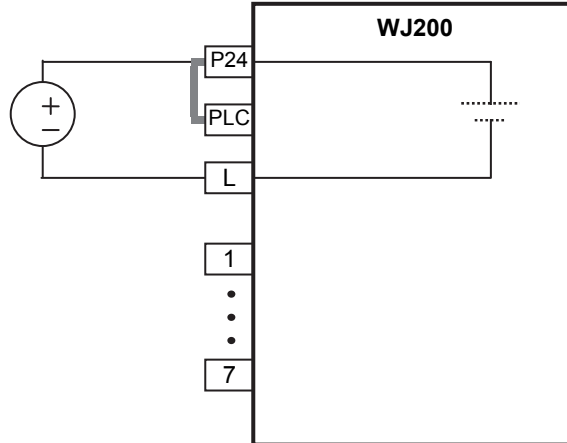


By having ability inverter doesn't block the current flowing into itself when it is not powered. This may cause the closed circuit when two or more inverters are connected to common I/O wiring as shown below to result in unexpected turning the on the input. To avoid this closed circuit, please put the diode (rated:50V/0.1A) in the path as described below.

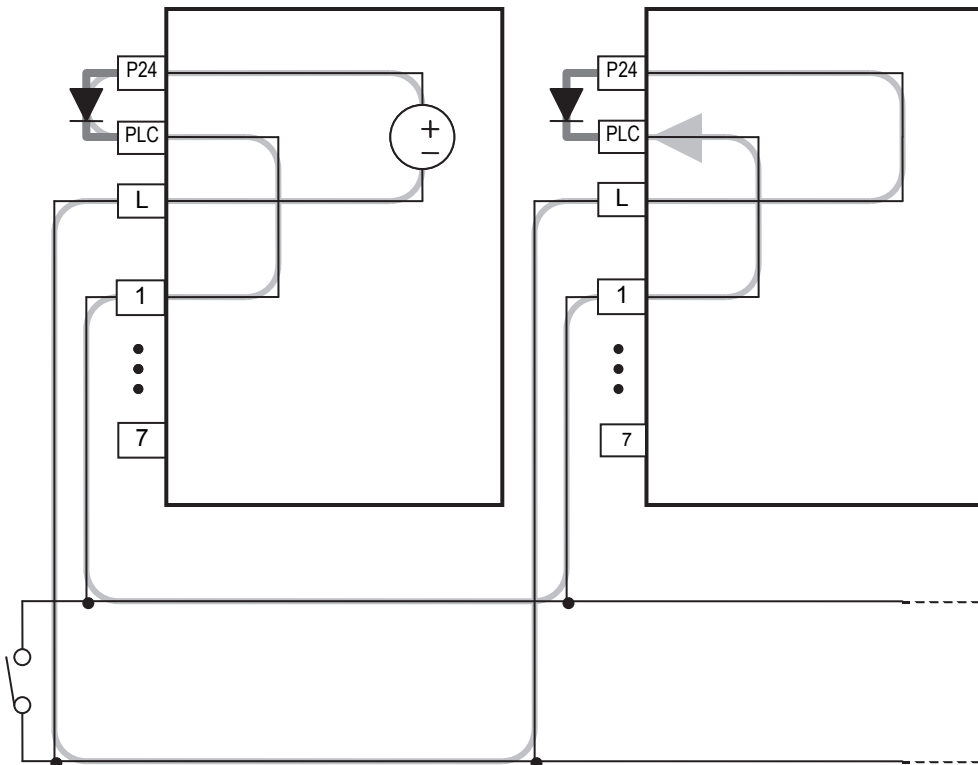

## Forward Run/Stop and Reverse Run/Stop Commands:

When you input the Run command via the terminal [FW], the inverter executes the Forward Run command (high) or Stop command (low). When you input the Run command via the terminal [RV], the inverter executes the Reverse Run command (high) or Stop command (low).

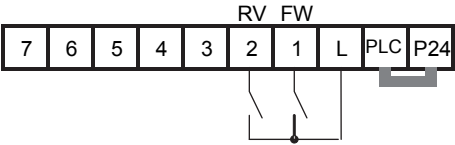Option Code	Terminal Symbol	Function Name	State	Description
00	FW	Forward Run/Stop	ON	Inverter is in Run Mode, motor runs forward
			OFF	Inverter is in Stop Mode, motor stops
01	RV	Reverse Run/Stop	ON	Inverter is in Run Mode, motor runs reverse
			OFF	Inverter is in Stop Mode, motor stops
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown – see page 3-85)
<b>Required settings</b>		A002 = 01		
<b>Notes:</b> <ul style="list-style-type: none"> <li>When the Forward Run and Reverse Run commands are active at the same time, the inverter enters the Stop Mode.</li> <li>When a terminal associated with either [FW] or [RV] function is configured for <i>normally closed</i>, the motor starts rotation when that terminal is disconnected or otherwise has no input voltage.</li> </ul>				
				 <p>See I/O specs on page 4-6.</p>



**NOTE:** The parameter **F004**, Keypad Run Key Routing, determines whether the single Run key issues a Run FWD command or Run REV command. However, it has no effect on the [FW] and [RV] input terminal operation.



**WARNING:** If the power is turned ON and the Run command is already active, the motor starts rotation and is dangerous! Before turning power ON, confirm that the Run command is not active.




## Multi-Speed Select ~Binary Operation

The inverter can store up to 16 different target frequencies (speeds) that the motor output uses for steady-state run condition. These speeds are accessible through programming four of the intelligent terminals as binary-encoded inputs CF1 to CF4 per the table to the right. These can be any of the six inputs, and in any order. You can use fewer inputs if you need eight or fewer speeds.

Multi-speed	Input Function			
	CF4	CF3	CF2	CF1
Speed 0	0	0	0	0
Speed 1	0	0	0	1
Speed 2	0	0	1	0
Speed 3	0	0	1	1
Speed 4	0	1	0	0
Speed 5	0	1	0	1
Speed 6	0	1	1	0
Speed 7	0	1	1	1
Speed 8	1	0	0	0
Speed 9	1	0	0	1
Speed 10	1	0	1	0
Speed 11	1	0	1	1
Speed 12	1	1	0	0
Speed 13	1	1	0	1
Speed 14	1	1	1	0
Speed 15	1	1	1	1



**NOTE:** When choosing a subset of speeds to use, always start at the top of the table, and with the least-significant bit: CF1, CF2, etc.

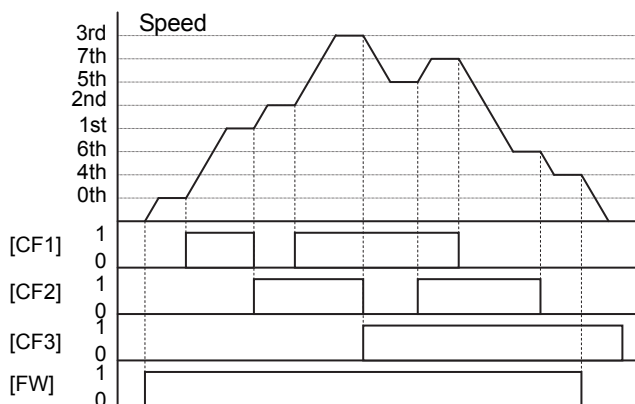

The example with eight speeds in the figure below shows how input switches configured for CF1–CF3 functions can change the motor speed in real time.

**NOTE:** Speed 0 depends on **A001** parameter value.

Option Code	Terminal Symbol	Function Name	State	Description
<b>02</b>	CF1	Multi-speed Select, Bit 0 (LSB)	ON	Binary encoded speed select, Bit 0, logical 1
			OFF	Binary encoded speed select, Bit 0, logical 0
<b>03</b>	CF2	Multi-speed Select, Bit 1	ON	Binary encoded speed select, Bit 1, logical 1
			OFF	Binary encoded speed select, Bit 1, logical 0
<b>04</b>	CF3	Multi-speed Select, Bit 2	ON	Binary encoded speed select, Bit 2, logical 1
			OFF	Binary encoded speed select, Bit 2, logical 0
<b>05</b>	CF4	Multi-speed Select, Bit 3 (MSB)	ON	Binary encoded speed select, Bit 3, logical 1
			OFF	Binary encoded speed select, Bit 3, logical 0
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (some CF inputs require input configuration; some are default inputs):  
<b>Required settings</b>		<b>F001, A001=02, A020 to A035</b>		
<b>Notes:</b> <ul style="list-style-type: none"> <li>When programming the multi-speed settings, be sure to press the SET key each time and then set the next multi-speed setting. Note that when the key is not pressed, no data will be set.</li> <li>When a multi-speed setting more than 50Hz (60Hz) is to be set, it is necessary to program the maximum frequency <b>A004</b> high enough to allow that speed</li> </ul>				
See I/O specs on page 4–6.				

While using the multi-speed capability, you can monitor the present frequency with monitor function **d001** during each segment of a multi-speed operation.



**NOTE:** When using the Multi-speed Select settings CF1 to CF4, do not display parameter F001 or change the value of **F001** while the inverter is in Run Mode (motor running). If it is necessary to check the value of **F001** during Run Mode, please monitor **d001** instead of **F001**.

There are two ways to program the speeds into the registers **A020** to **A035**:

1. Standard keypad programming:

- a. Select each parameter **A020** to **A035**.
- b. Press the **SET** key to view the parameter value.
- c. Use the **△** and **▽** keys to edit the value.
- d. Use the **SET** key to save the data to memory.

2. Programming using the CF switches. Set the speed by following these steps:

- a. Turn the Run command OFF (Stop Mode).
- b. Turn inputs ON to select desired Multi-speed. Display the value of **F001** on the digital operator.
- c. Set the desired output frequency by pressing the **△** and **▽** keys.
- d. Press the **SET** key once to store the set frequency. When this occurs, **F001** indicates the output frequency of Multi-speed n.
- e. Press the **SET** key once to confirm that the indication is the same as the set frequency.
- f. Repeat operations in 2. a) to 2. e) to set the frequency of other Multi-speeds. It can be set also by parameters **A020** to **A035** in the first procedure 1. a) to 1. d).


## Jogging Command

The Jog input [JG] is used to command the motor to rotate slowly in small increments for manual operation. The speed is limited to 9.99 Hz. The frequency for the jogging operation is set by parameter **A038**. Jogging does not use an acceleration ramp, so we recommend setting the jogging frequency **A038** to 5 Hz or less to prevent tripping.

When the terminal [JG] is turned ON and the Run command is issued, the inverter outputs the programmed jog frequency to the motor. To enable the Run key on the digital operator for jog input, set the value 01 (terminal mode) in **A002** (Run command source).

The type of deceleration used to end a motor jog operation is selectable by programming function **A039**. The options are:

- **00** valid during operation, Free-run stop (coasting)
- **01** valid during operation, Deceleration (normal level) and stop
- **02** valid during operation, Use DC braking and stop
- **03** invalid during operation, Free-run stop (coasting)
- **04** invalid during operation, Deceleration (normal level) and stop
- **05** invalid during operation, Use DC braking and stop

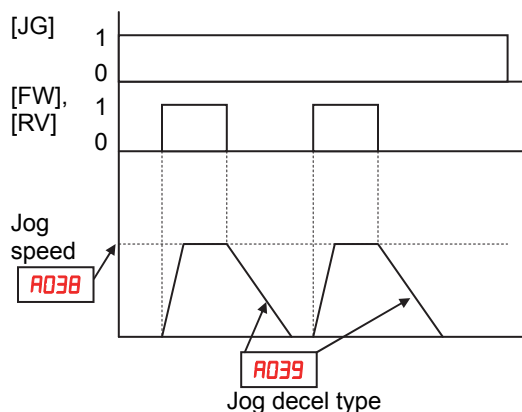

Option Code	Terminal Symbol	Function Name	State	Description
<b>06</b>	JG	Jogging	ON	Inverter is in Run Mode, output to motor runs at jog parameter frequency
			OFF	Inverter is in Stop Mode
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (requires input configuration—see page 3-85):
<b>Required settings</b>		<b>A002=01, A038&gt;b082, A038&gt;0, A039</b>		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>• No jogging operation is performed when the set value of jogging frequency <b>A038</b> is smaller than the start frequency <b>b082</b>, or the value is 0Hz.</li> <li>• Be sure to stop the motor when switching the function [JG] ON or OFF.</li> </ul>				<p>See I/O specs on page 4-6.</p>




## External Signal for DC Braking

When the terminal [DB] is turned ON, the DC braking feature is enabled. Set the following parameters when the external DC braking terminal [DB] is to be used:

- **A053** – DC braking delay time setting. The range is 0.1 to 5.0 seconds.
- **A054** – DC braking force setting. The range is 0 to 100%.

The scenarios to the right help show how DC braking works in various situations.

1. Scenario 1 – The [FW] or [RV] terminal is ON. When [DB] is ON, DC braking is applied. When [DB] is OFF again, the output frequency ramps to the prior level.
2. Scenario 2 – The Run command is applied from the operator keypad. When the [DB] terminal is ON, DC braking is applied. When the [DB] terminal is OFF again, the inverter output remains OFF.
3. Scenario 3 – The Run command is applied from the operator keypad. When the [DB] terminal is ON, DC braking is applied after the delay time set by **A053** expires. The motor is in a free-running (coasting) condition. When the [DB] terminal is OFF again, the inverter output remains OFF.

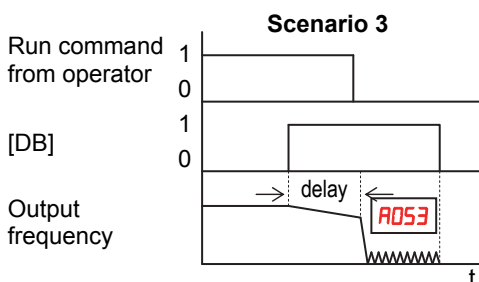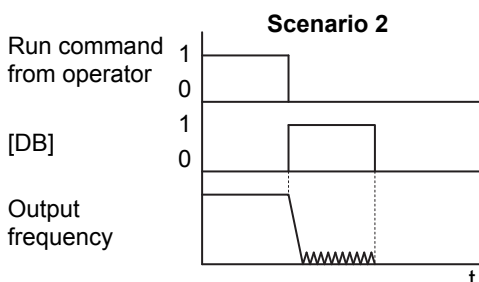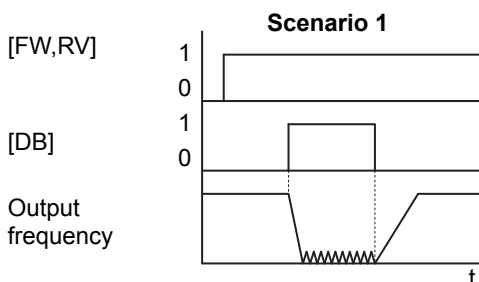


Option Code	Terminal Symbol	Function Name	State	Description
<b>07</b>	DB	External DC Braking	ON	Applies DC injection braking during deceleration
			OFF	Does not apply DC injection braking during deceleration
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (requires input configuration—see page 3-85):
<b>Required settings</b>		<b>A053, A054</b>		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>• Do not use the [DB] input continuously or for a long time when the DC braking force setting <b>A054</b> is high (depends on the motor application).</li> <li>• Do not use the [DB] feature for continuous or high duty cycle as a holding brake. The [DB] input is designed to improve stopping performance. Use a mechanical brake for holding a stop position.</li> </ul>				<p>The diagram shows a terminal block with terminals 7, 6, 5, 4, 3, 2, 1, L, PLC, and P24. Terminal 2 is connected to terminal 1 via a switch. Terminal 1 is connected to terminal L. Terminal L is connected to terminal PLC. Terminal PLC is connected to terminal P24.</p>
				See I/O specs on page 4-6.

## Set Second Motor, Special Set

If you assign the [SET] function to an intelligent input terminal, you can select between two sets of motor parameters. The second parameters store an alternate set of motor characteristics. When the terminal [SET] is turned ON, the inverter will use the second set of parameters to generate the frequency output to the motor. When changing the state of the [SET] input terminal, the change will not take effect until the inverter is stopped.


When you turn ON the [SET] input, the inverter operates per the second set of parameters. When the terminal is turned OFF, the output function returns to the original settings (first set of motor parameters). Refer to “2nd Motor Selection” on page 4-85 for details.

Parameters	SET		Parameters	SET	
	Stop	Run		Stop	Run
F002/F202			A093/A293	✓	-
F003/F203	✓	-	A094/A294	✓	-
A001/A201	✓	-	A095/A295	✓	-
A002/A202	✓	-	A096/A296	✓	-
A003/A203	✓	-	b012/b212	✓	-
A004/A204	✓	-	b013/b213	✓	-
A020/A220	✓	-	b021/b221	✓	-
A041/A241	✓	-	b022/b222	✓	-
A042/A242	✓	-	b023/b223	✓	-
A043/A243	✓	-	C041/C241	✓	-
A044/A244	✓	-	H002/H202	✓	-
A045/A245	✓	-	H003/H203	✓	-
A046/A246	✓	-	H004/H204	✓	-
A047/A247	✓	-	H005/H205	✓	-
A061/A261	✓	-	H006/H206	✓	-
A062/A262	✓	-	H020~H024/ H220~H224	✓	-
A081/A281	✓	-	H030~H034/ H230~H234	✓	-
A082/A282	✓				
A092/A292	✓				

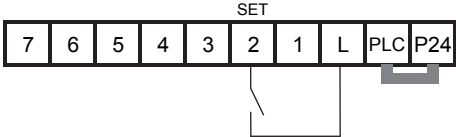
Option Code	Terminal Symbol	Function Name	State	Description
08	SET	Set (select) 2nd Motor data	ON	causes the inverter to use the 2nd set of motor parameters for generating the frequency output to motor
			OFF	causes the inverter to use the 1st (main) set of motor parameters for generating the frequency output to motor
<b>Valid for inputs:</b>		C001~C007		Example (requires input configuration—see page 3-85):
<b>Required settings</b>		(none)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>If the terminal state is changed while the inverter is running, the inverter continues using the current set of parameters until the inverter is stopped.</li> </ul>				
				 <p>See I/O specs on page 4-6.</p>

## Two Stage Acceleration and Deceleration

When terminal [2CH] is turned ON, the inverter changes the rate of acceleration and deceleration from the initial settings (**F002** and **F003**) to use the second set of acceleration/ deceleration values. When the terminal is turned OFF, the inverter is returned to the original acceleration and deceleration time (**F002** acceleration time 1, and **F003** deceleration time 1). Use **A092** (acceleration time 2) and **A093** (deceleration time 2) to set the second stage acceleration and deceleration times.

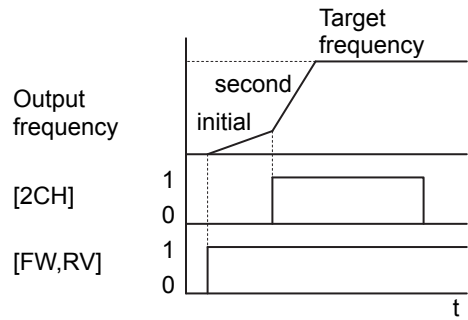

In the graph shown above, the [2CH] becomes active during the initial acceleration. This causes the inverter to switch from using acceleration 1 (**F002**) to acceleration 2 (**A092**).

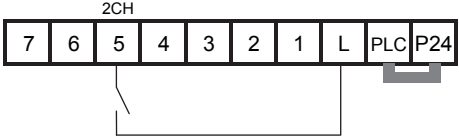
Option Code	Terminal Symbol	Function Name	State	Description
<b>09</b>	2CH	Two-stage Acceleration and Deceleration	ON	Frequency output uses 2nd-stage acceleration and deceleration values
			OFF	Frequency output uses the initial acceleration 1 and deceleration 1 values
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):  
<b>Required settings</b>		<b>A092, A093, A094=00</b>		
<b>Notes:</b>		<ul style="list-style-type: none"> <li>Function <b>A094</b> selects the method for second stage acceleration. It must be set = <b>00</b> to select the input terminal method in order for the [2CH] terminal assignment to operate.</li> </ul>		
				See I/O specs on page 4-6.

## Free-run Stop

When the terminal [FRS] is turned ON, the inverter stops the output and the motor enters the free-run state (coasting). If terminal [FRS] is turned OFF, the output resumes sending power to the motor if the Run command is still active. The free-run stop feature works with other parameters to provide flexibility in stopping and starting motor rotation.

In the figure below, parameter **b088** selects whether the inverter resumes operation from 0 Hz (left graph) or the current motor rotation speed (right graph) when the [FRS] terminal turns OFF. The application determines the best setting.

Parameter **b003** specifies a delay time before resuming operation from a free-run stop. To disable this feature, use a zero delay time.

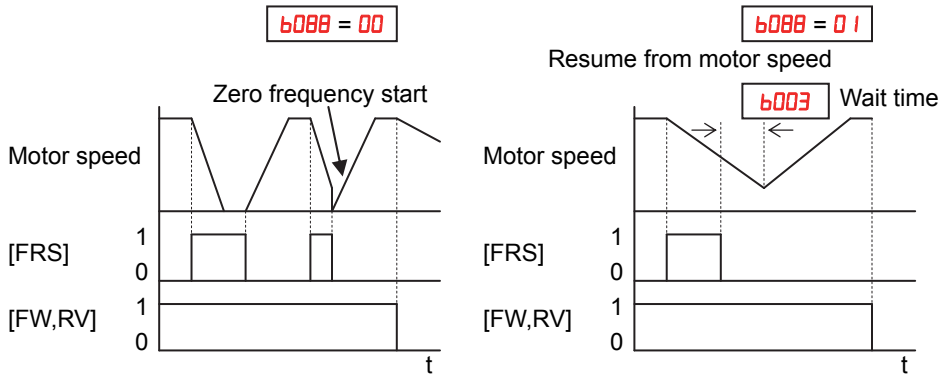


Option Code	Terminal Symbol	Function Name	State	Description
11	FRS	Free-run Stop	ON	Causes output to turn OFF, allowing motor to free run (coast) to stop
			OFF	Output operates normally, so controlled deceleration and stops motor
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (requires input configuration—see page 3-85):
<b>Required settings</b>		<b>b003, b088, C011 to C017</b>		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>When you want the [FRS] terminal to be active low (normally closed logic), change the setting (C011 to C017) that corresponds to the input (C001 to C007) that is assigned the [FRS] function.</li> </ul>				<p>See I/O specs on page 4-6.</p>

## External Trip

When the terminal [EXT] is turned ON, the inverter enters the trip state, indicates error code **E 12**, and stops the output. This is a general purpose interrupt type feature, and the meaning of the error depends on what you connect to the [EXT] terminal. Even if the [EXT] input is turned OFF, the inverter remains in the trip state. You must reset the inverter or cycle power to clear the error, returning the inverter to the Stop Mode.

In the graph below, the [EXT] input turns ON during normal Run Mode operation. The inverter lets the motor free-run to a stop, and the alarm output turns ON immediately. When the operator initiates a Reset command, the alarm and error are cleared. When the Reset is turned OFF, the motor begins rotation since the Run command is already active.

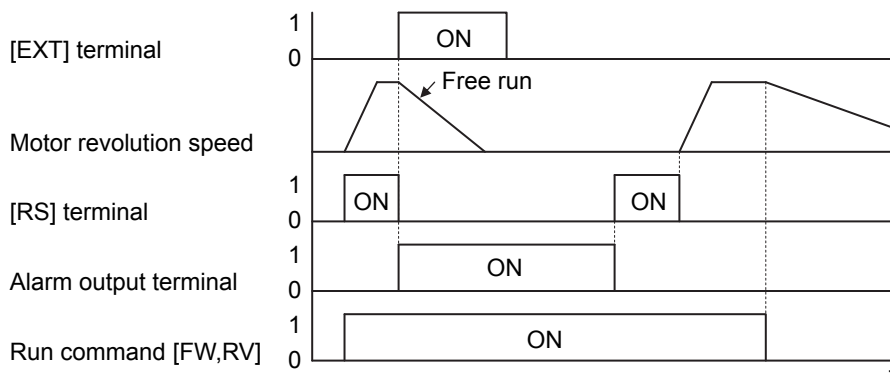


Option Code	Terminal Symbol	Function Name	State	Description
12	EXT	External Trip	ON	When assigned input transitions OFF to ON, inverter latches trip event and displays <b>E12</b>
			OFF	No trip event for ON to OFF, any recorded trip events remain in history until Reset.
<b>Valid for inputs:</b>		C001~C007		Example (requires input configuration—see page 3-85):
<b>Required settings:</b>		(none)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>If the USP (Unattended Start Protection) feature is in use, the inverter will not automatically restart after canceling the EXT trip event. In that case, it must receive either another Run command (OFF-to- ON transition), a keypad Reset command, or an [RS] intelligent terminal input signal.</li> </ul>				
				<p>See I/O specs on page 4-6.</p>



## Unattended Start Protection

If the Run command is already set when power is turned ON, the inverter starts running immediately after powerup. The Unattended Start Protection (USP) function prevents that automatic startup, so that the inverter *will not* run without outside intervention. When USP is active and you need to reset an alarm and resume running, either turn the Run command OFF, or perform a reset operation by the terminal [RS] input or the keypad Stop/reset key.

In the figure below, the [USP] feature is enabled. When the inverter power turns ON, the motor does not start, even though the Run command is already active. Instead, it enters the USP trip state, and displays **E 13** error code. This requires outside intervention to reset the alarm by turning OFF the Run command per this example (or applying a reset). Then the Run command can turn ON again and start the inverter output.

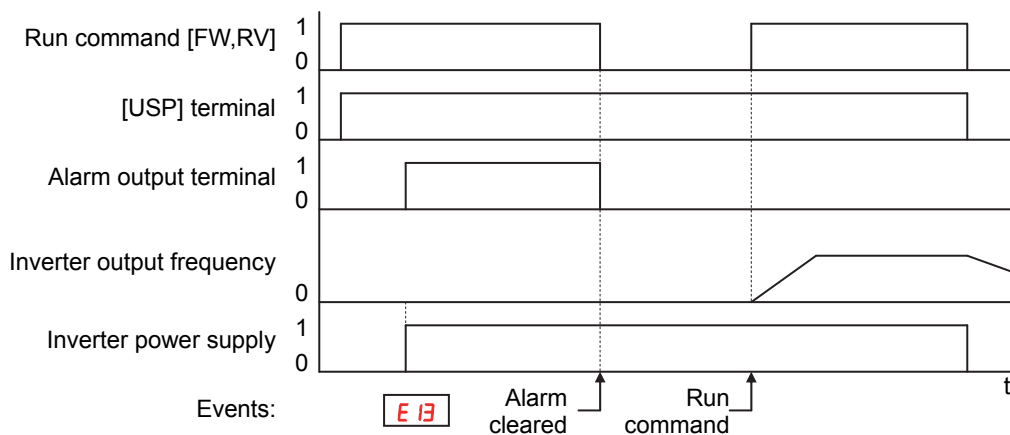

Option Code	Terminal Symbol	Function Name	State	Description
<b>13</b>	USP	Unattended Start Protection	ON	On powerup, the inverter will not resume a Run command (mostly used in the US)
			OFF	On powerup, the inverter will resume a Run command that was active before power loss
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown for –FE and –FU models; –F models require input configuration—see page 3-85): <div style="text-align: center;"> </div>
<b>Required settings</b>		(none)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>Note that when a USP error occurs and it is canceled by a reset from a [RS] terminal input, the inverter restarts running immediately.</li> <li>Even when the trip state is canceled by turning the terminal [RS] ON and OFF after an under voltage protection <b>E09</b> occurs, the USP function will be performed.</li> <li>When the running command is active immediately after the power is turned ON, a USP error will occur. When this function is used, wait for at least three (3) seconds after the powerup to generate a Run command.</li> </ul>				
				See I/O specs on page 4-6.


## Commercial power source switchover

The commercial power source switching function allows you to switch the power supply (between the inverter and commercial power supply) to your system of which the load causes a considerable moment of inertia. You can use the inverter to accelerate and decelerate the motor in the system and the commercial power supply to drive the motor for constant speed operation.


To use this function, assign parameter “14 (CS)” to one of the intelligent input terminal [1] to [7] (C001 to C007). When the CS is turned OFF with an operation command is being given, the inverter waits for the retry wait time before motor starts (b003), adjusts the output frequency to the speed of the free-running motor, and then accelerates the motor with the adjusted frequency.

Mechanically interlock the MC3 and MC2 contacts with each other. Otherwise you may damage the drive.

If the earth leakage breaker (ELB) trips because of a ground fault, the commercial power will be disabled. Therefore, contact a backup power supply from the commercial power line circuit (ELBC) to your system if needed.

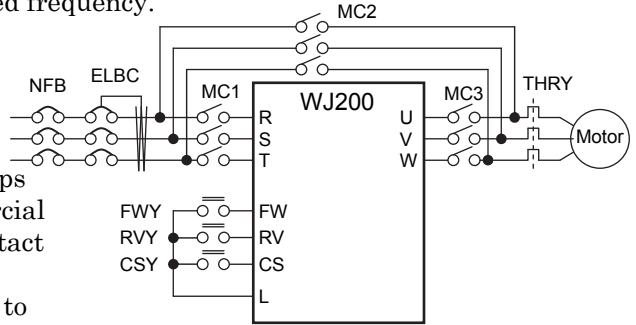

Use weak-current type relays for FWY, RVY, and CSY. The figures below show the sequence and timing of operations for reference.

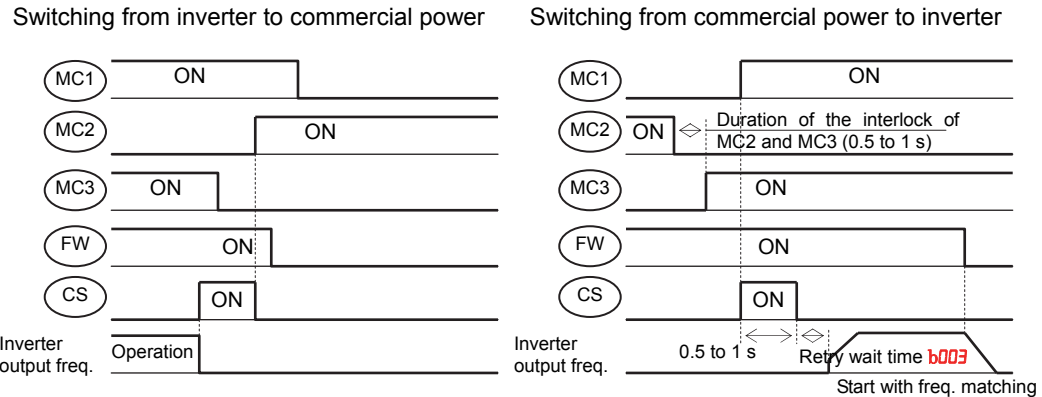


If the inverter trips because of overcurrent when it starts the motor with frequency matching, increase the retry wait time before motor starts (b003).

Option Code	Terminal Symbol	Function Name	State	Description
14	CS	Commercial power source switchover	ON	
			OFF	
<b>Valid for inputs:</b>		C001~C007		
<b>Required settings</b>		b003, b007		
<b>Notes:</b>				
inverter may start the motor with 0 Hz if:				
<ul style="list-style-type: none"> <li>the motor speed is no more than half of the base frequency, or</li> <li>the voltage induced on the motor is attenuated quickly.</li> </ul>				

## Software Lock



When the terminal [SFT] is turned ON, the data of all the parameters and functions (except the output frequency, depending on the setting of **b031**) is locked (prohibited from editing). When the data is locked, the keypad keys cannot edit inverter parameters. To edit parameters again, turn OFF the [SFT] terminal input.

Use parameter **b031** to select whether the output frequency is excluded from the lock state or is locked as well.

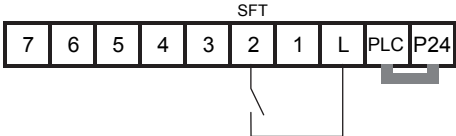Option Code	Terminal Symbol	Function Name	State	Description
15	SFT	Software Lock	ON	The keypad and remote programming devices are prevented from changing parameters
			OFF	The parameters may be edited and stored
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (requires input configuration—see page 3-85):  
<b>Required settings</b>		<b>b031</b> (excluded from lock)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>• When the [SFT] terminal is turned ON, only the output frequency can be changed.</li> <li>• Software lock can include the output frequency by setting <b>b031</b>.</li> <li>• Software lock by the operator is also possible without the [SFT] terminal being used (<b>b031</b>).</li> </ul>				
				See I/O specs on page 4-6.


## Analog Input Current/Voltage Select

The [AT] terminal selects whether the inverter uses the voltage [O] or current [OI] input terminals for external frequency control. When intelligent input [AT] is ON, you can set the output frequency by applying a current input signal at [OI]-[L]. When the [AT] input is OFF, you can apply a voltage input signal at [O]-[L] to set the output frequency. Note that you must also set parameter **A001 = 01** to enable the analog terminal set for controlling the inverter frequency.

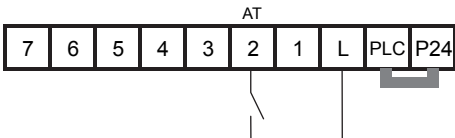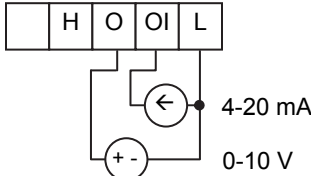Option Code	Terminal Symbol	Function Name	State	Description																		
16	AT	Analog Input Voltage/Current Select	ON	See the table down below																		
			OFF																			
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown for -FE and -FU models; -F models require input configuration):  																		
<b>Required settings</b>		<b>A001 = 01</b>																				
<b>Notes:</b>		<ul style="list-style-type: none"> <li>If the [AT] option is not assigned to any intelligent input terminal, then inverter recognizes [AT] = OFF in following table.</li> </ul> Combination of <b>A005</b> setting and [AT] input for analog input activation.																				
<table border="1"> <thead> <tr> <th>A005</th> <th>[AT] Input</th> <th>Analog Input Configuration</th> </tr> </thead> <tbody> <tr> <td rowspan="2">00</td> <td>ON</td> <td>[OI]</td> </tr> <tr> <td>OFF</td> <td>[O]</td> </tr> <tr> <td rowspan="2">02</td> <td>ON</td> <td>Keypad Pot</td> </tr> <tr> <td>OFF</td> <td>[O]</td> </tr> <tr> <td rowspan="2">03</td> <td>ON</td> <td>Keypad Pot</td> </tr> <tr> <td>OFF</td> <td>[OI]</td> </tr> </tbody> </table>					A005	[AT] Input	Analog Input Configuration	00	ON	[OI]	OFF	[O]	02	ON	Keypad Pot	OFF	[O]	03	ON	Keypad Pot	OFF	[OI]
A005	[AT] Input	Analog Input Configuration																				
00	ON	[OI]																				
	OFF	[O]																				
02	ON	Keypad Pot																				
	OFF	[O]																				
03	ON	Keypad Pot																				
	OFF	[OI]																				
		<ul style="list-style-type: none"> <li>Be sure to set the frequency source setting <b>A001=01</b> to select the analog input terminals.</li> </ul>		 <p>See I/O specs on page 4-6.</p>																		

## Reset Inverter

The [RS] terminal causes the inverter to execute the reset operation. If the inverter is in Trip Mode, the reset cancels the Trip state. When the signal [RS] is turned ON and OFF, the inverter executes the reset operation. The minimum pulse width for [RS] must be 12 ms or greater. The alarm output will be cleared within 30 ms after the onset of the Reset command.

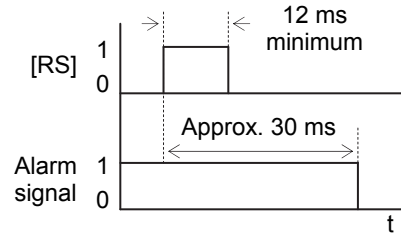

**WARNING:** After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active. Be sure to set the alarm reset after verifying that the Run command is OFF to prevent injury to personnel.

Option Code	Terminal Symbol	Function Name	State	Description
18	RS	Reset Inverter	ON	The motor output is turned OFF, the Trip Mode is cleared (if it exists), and powerup reset is applied
			OFF	Normal power ON operation
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown):  
<b>Required settings</b>		(none)		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>While the control terminal [RS] input is ON, the keypad displays alternating segments. After RS turns OFF, the display recovers automatically.</li> <li>Pressing the Stop/Reset key of the digital operator can generate a reset operation only when an alarm occurs.</li> </ul>				
<ul style="list-style-type: none"> <li>A terminal configured with the [RS] function can only be configured for normally open operation. The terminal cannot be used in the normally closed contact state.</li> <li>When input power is turned ON, the inverter performs the same reset operation as it does when a pulse on the [RS] terminal occurs.</li> <li>The Stop/Reset key on the inverter is only operational for a few seconds after inverter powerup when a hand-held remote operator is connected to the inverter.</li> <li>If the [RS] terminal is turned ON while the motor is running, the motor will be free running (coasting).</li> <li>If you are using the output terminal OFF delay feature (any of <b>C145, C147, C149</b> &gt; 0.0 sec.), the [RS] terminal affects the ON-to-OFF transition slightly. Normally (without using OFF delays), the [RS] input causes the motor output and the logic outputs to turn OFF together, immediately. However, when any output uses an OFF delay, then after the [RS] input turns ON, that output will remain ON for an additional 1 sec. period (approximate) before turning OFF.</li> </ul>				

## Thermistor Thermal Protection


Motors that are equipped with a thermistor can be protected from overheating. Input terminal [5] has the unique ability to sense a thermistor resistance. When the resistance value of the thermistor connected to terminal [PTC] (5) and [L] is more than  $3\text{ k}\Omega \pm 10\%$ , the inverter enters the Trip Mode, turns OFF the output to the motor, and indicates the trip status **E35**. Use this function to protect the motor from overheating.

Option Code	Terminal Symbol	Function Name	State	Description
19	PTC	Thermistor Thermal Protection	ON	When a thermistor is connected to terminals [5] and [L], the inverter checks for over-temperature and will cause trip ( <b>E35</b> ) and turn OFF the output to the motor
			OFF	An open circuit in the thermistor causes a trip, and the inverter turns OFF the output
<b>Valid for inputs:</b>		C005 only		Example (requires input configuration—see page 3-85):
<b>Required settings</b>		(none)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>Be sure the thermistor is connected to terminals [5] and [L]. If the resistance is above the threshold the inverter will trip. When the motor cools down enough, the thermistor resistance will change enough to permit you to clear the error. Press the STOP/Reset key to clear the error.</li> </ul>				
				<p>The diagram shows a terminal block with terminals labeled 7, 6, 5, 4, 3, 2, 1, L, PLC, and P24. A thermistor symbol is connected between terminals 5 and L. The label 'PTC' is positioned above terminals 5 and 4.</p>


### Three-wire Interface Operation

The 3-wire interface is an industry standard motor control interface. This function uses two inputs for momentary contact start/stop control, and a third for selecting forward or reverse direction. To implement the 3-wire interface, assign **20** [STA] (Start), **21** [STP] (Stop), and **22** [F/R] (Forward/Reverse) to three of the intelligent input terminals. Use a momentary contact for Start and Stop. Use a selector switch, such as SPST for the Forward/Reverse input. Be sure to set the operation command selection **A002=01** for input terminal control of motor.

If you have a motor control interface that needs logic-level control (rather than momentary pulse control), use the [FW] and [RV] inputs instead.

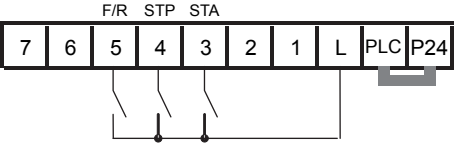Option Code	Terminal Symbol	Function Name	State	Description
<b>20</b>	STA	Start Motor	ON	Start motor rotation on momentary contact (uses acceleration profile)
			OFF	No change to motor operation
<b>21</b>	STP	Stop Motor	ON	No change to motor operation
			OFF	Stop motor rotation on momentary contact (use deceleration profile)
<b>22</b>	F/R	Forward/Reverse	ON	Select reverse direction of rotation
			OFF	Select forward direction of rotation
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown):  
<b>Required settings</b>		<b>A002 = 01</b>		
<b>Notes:</b>		<ul style="list-style-type: none"> <li>The STP logic is inverted. Normally the switch will be closed, so you open the switch to stop. In this way, a broken wire causes the motor to stop automatically (safe design).</li> <li>When you configure the inverter for 3-wire interface control, the dedicated [FW] terminal is automatically disabled. The [RV] intelligent terminal assignment is also disabled.</li> </ul>		
				See I/O specs in chapter 4.

The diagram below shows the use of 3-wire control. STA (Start Motor) is an edge-sensitive input; an OFF-to-ON transition gives the Start command. The control of direction is level-sensitive, and the direction may be changed at any time. STP (Stop Motor) is also a level-sensitive input.

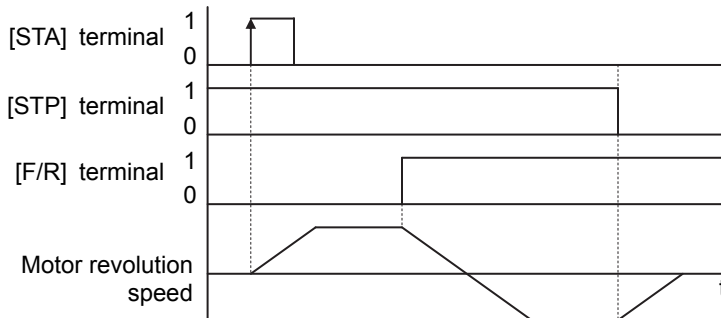

## PID ON/OFF and PID Clear

The PID loop function is useful for controlling motor speed to achieve constant flow, pressure, temperature, etc. in many process applications. The PID Disable function temporarily suspends PID loop execution via an intelligent input terminal. It overrides the parameter **A071** (PID Enable) to stop PID execution and return to normal motor frequency output characteristics. The use of PID Disable on an intelligent input terminal is optional. Of course, any use of the PID loop control requires setting PID Enable function **A071=01**.

The PID Clear function forces the PID loop integrator sum = 0. So, when you turn ON an intelligent input configured as [PIDC], the integrator sum is reset to zero. This is useful when switching from manual control to PID loop control and the motor is stopped.



**CAUTION:** Be careful not to turn PID Clear ON and reset the integrator sum when the inverter is in Run Mode (output to motor is ON). Otherwise, this could cause the motor to decelerate rapidly, resulting in a trip.

Option Code	Terminal Symbol	Function Name	State	Description
23	PID	PID Disable	ON	Disables PID loop execution
			OFF	Allows PID loop execution
24	PIDC	PID Clear	ON	Force the value of the integrator to zero
			OFF	No change in PID loop execution
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown):
<b>Required settings</b>		<b>A071</b>		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The use of [PID] and [PIDC] terminals are optional. Use <b>A071=01</b> if you want PID loop control enabled all the time.</li> <li>Do not enable/disable PID control while the motor is running (inverter is in Run Mode).</li> <li>Do not turn ON the [PIDC] input while the motor is running (inverter is in Run Mode).</li> </ul>				
				<p>See I/O specs on chapter 4.</p>




## Remote Control Up and Down Functions

The [UP] [DWN] terminal functions can adjust the output frequency for remote control while the motor is running. The acceleration time and deceleration time of this function is same as normal operation ACC1 and DEC1 (2ACC1,2DEC1). The input terminals operate according to these principles:

- Acceleration - When the [UP] contact is turned ON, the output frequency accelerates from the current value. When it is turned OFF, the output frequency maintains its current value at that moment.
- Deceleration - When the [DWN] contact is turned ON, the output frequency decelerates from the current value. When it is turned OFF, the output frequency maintains its current value at that moment.

In the graph below, the [UP] and [DWN] terminals activate while the Run command remains ON. The output frequency responds to the [UP] and [DWN] commands.

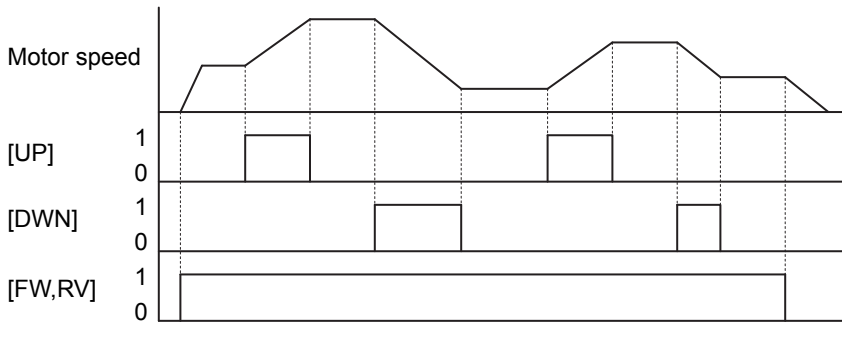

It is possible for the inverter to retain the frequency set from the [UP] and [DWN] terminals through a power loss. Parameter **C101** enables/disables the memory. If disabled, the inverter retains the last frequency before an UP/DWN adjustment. Use the [UDC] terminal to clear the memory and return to the original set output frequency.


Option Code	Terminal Symbol	Function Name	State	Description
27	UP	Remote Control UP Function (motorized speed pot.)	ON	Accelerates (increases output frequency) motor from current frequency
			OFF	Output to motor operates normally
28	DWN	Remote Control DOWN Function (motorized speed pot.)	ON	Decelerates (increases output frequency) motor from current frequency
			OFF	Output to motor operates normally
29	UDC	Remote Control Data Clear	ON	Clears the Up/Down frequency memory
			OFF	No effect on Up/Down memory
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>A001 = 02</b>		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• This feature is available only when the frequency command source is programmed for operator control. Confirm <b>A001</b> is set to <b>02</b>.</li> <li>• This function is not available when [JG] is in use.</li> <li>• The range of output frequency is 0 Hz to the value in <b>A004</b> (maximum frequency setting).</li> <li>• This setting modifies the inverter speed from using <b>F001</b> output frequency setting as a starting point.</li> </ul>				
<p>See I/O specs on page 4-6.</p>				

## Force Operation from Digital Operator

This function permits a digital operator interface to override the following two settings in the inverter:

- **A001** - Frequency source
- **A002** - Run command source

When using the [OPE] terminal input, typically A001 and **A002** are configured for sources other than the digital operator interface for the output frequency and Run command sources, respectively. When the [OPE] input is ON, then user has immediate command of the inverter, to start or stop the motor and to set the speed.

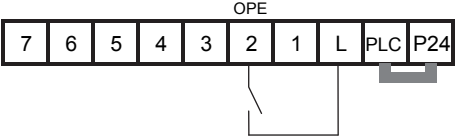Option Code	Terminal Symbol	Function Name	State	Description
<b>31</b>	OPE	Force Operation from Digital Operator	ON	Forces the operator interface to override: <b>A001</b> - Frequency Source Setting, and <b>A002</b> - Run Command Source Setting
			OFF	Parameters <b>A001</b> and <b>A002</b> are in effect again, for the frequency source and the Run command source, respectively
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>A001</b> (set not equal to 00) <b>A002</b> (set not equal to 02)		
<b>Notes:</b> <ul style="list-style-type: none"> <li>• When changing the [OPE] state during Run Mode (inverter is driving the motor), the inverter will stop the motor before the new [OPE] state takes effect.</li> <li>• If the [OPE] input turns ON and the digital operator gives a Run command while the inverter is already running, the inverter stops the motor. Then the digital operator can control the motor.</li> </ul>				
				 <p>See I/O specs on page 4-6.</p>


The inverter can store up to 16 different target frequencies (speeds) that the motor output uses for steady-state run condition.

These speeds are accessible through programming seven of the intelligent terminals as bit-encoded inputs SF1 to SF7 per the table to the right. These can be any of the six inputs, and in any order. You can use fewer inputs if you need eight or fewer speeds.

Multi-speed	Input Function						
	SF7	SF6	SF5	SF4	SF3	SF2	SF1
Speed 0	A020	0	0	0	0	0	0
Speed 1	A021	X	X	X	X	X	1
Speed 2	A022	X	X	X	X	1	0
Speed 3	A023	X	X	X	X	1	0
Speed 4	A024	X	X	X	1	0	0
Speed 5	A025	X	X	1	0	0	0
Speed 6	A026	X	1	0	0	0	0
Speed 7	A027	1	0	0	0	0	0

The example with eight speeds in the figure below shows how input switches configured for SF1–SF7 functions can change the motor speed in real time.

**NOTE:** Speed 0 depends on A001 parameter value.

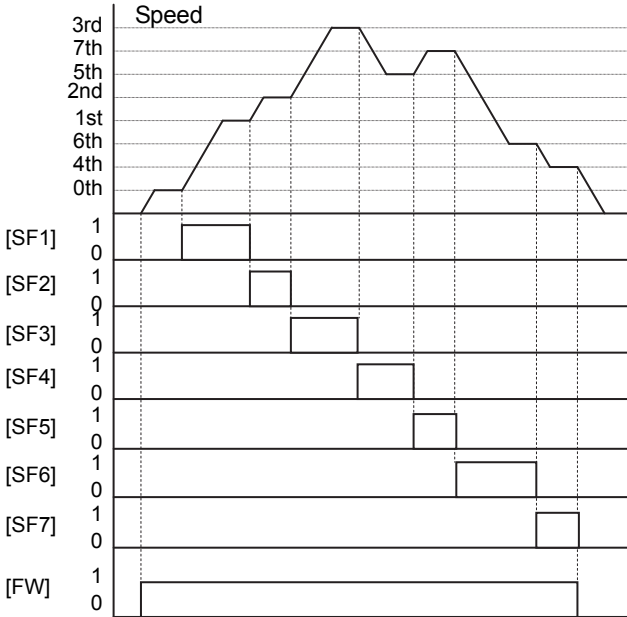

Option Code	Terminal Symbol	Function Name	State	Description
32~38	SF1~SF7	Multistage Speed ~Bit Operation	ON OFF	Makes multistage speed by combination of the inputs.
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		F001, A001=02, A020 to A035		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>When programming the multi-speed settings, be sure to press the SET key each time and then set the next multi-speed setting. Note that when the key is not pressed, no data will be set.</li> <li>When a multi-speed setting more than 50Hz (60Hz) is to be set, it is necessary to program the maximum frequency A004 high enough to allow that speed</li> </ul>				
				See I/O specs on page 4-6.

### Overload Restriction Source Changeover

This function allows you to change the parameter sets of overload restriction. (Please refer to chapter 3 for the detailed description of the overload restriction function.)

Option Code	Terminal Symbol	Function Name	State	Description
39	OLR	Overload restriction source changeover	ON	Parameter sets <b>b024, b025, b026</b> are enabled.
			OFF	Parameter sets <b>b021, b022, b023</b> are enabled.
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>b021~b026</b>		
				See I/O specs on page 4-6.

### Torque Limit Selection

This function is to select the torque limit mode. (Please refer to chapter 3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description
40	TL	Torque limit selection	ON	<b>b040</b> value is enabled as torque limit level
			OFF	<b>b040</b> value is disabled
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>b040~b044</b>		
				See I/O specs on page 4-6.

### Torque Limit Switch

This function is to select the torque limit mode. (Please refer to for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description
41 42	TRQ1	Torque limit switch 1, 2	ON	Torque limit value of <b>b041</b> to <b>b044</b> will be selected by the combination of the switches.
	TRQ2		OFF	
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>b041 ~ b044</b>		
				<p style="text-align: center;">TRQ2 TRQ1</p>
				See I/O specs on page 4-6.


### Brake Confirmation

This function is for brake performance. Please refer to chapter 3 for the detailed description of the function.

Option Code	Terminal Symbol	Function Name	State	Description
44	BOK	Brake confirmation	ON	Brake confirmation signal is being given
			OFF	Brake confirmation signal is not given
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>b120~b127, C021~C022</b>		
				<p style="text-align: center;">BOK</p>
				See I/O specs on page 4-6.

## LAD Cancellation

This function is for canceling the set ramp time and changes the output speed immediately according to the set speed. (Please refer to chapter3 for the detailed description of the function.)

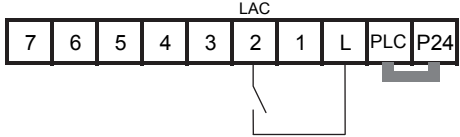Option Code	Terminal Symbol	Function Name	State	Description
46	LAC	LAD cancellation	ON	Disabling the set ramp time and inverter output immediately follows the speed command.
			OFF	Accelerates and decelerates according to the set ramp time
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):  
<b>Required settings</b>				

## Pulse Counter Clear


This function is for clearing the accumulated pulse numbers in case of positioning. (Please refer to chapter 3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description
47	PCLR	Pulse counter clear	ON	Clears the accumulated pulse numbers.
			OFF	Does not clear the pulse numbers.
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>				
				<p style="text-align: center;">PCLR</p> <p style="text-align: center;">See I/O specs on page 4-6.</p>



## Add Frequency Enable

The inverter can add or subtract an offset value to the output frequency setting which is specified by **A001** (will work with any of the five possible sources). The ADD Frequency is a value you can store in parameter **A145**. The ADD Frequency is summed with or subtracted from the output frequency setting only when the [ADD] terminal is ON. Function **A146** selects whether to add or subtract. By configuring an intelligent input as the [ADD] terminal, your application can selectively apply the fixed value in **A145** to offset (positively or negatively) the inverter output frequency in real time.

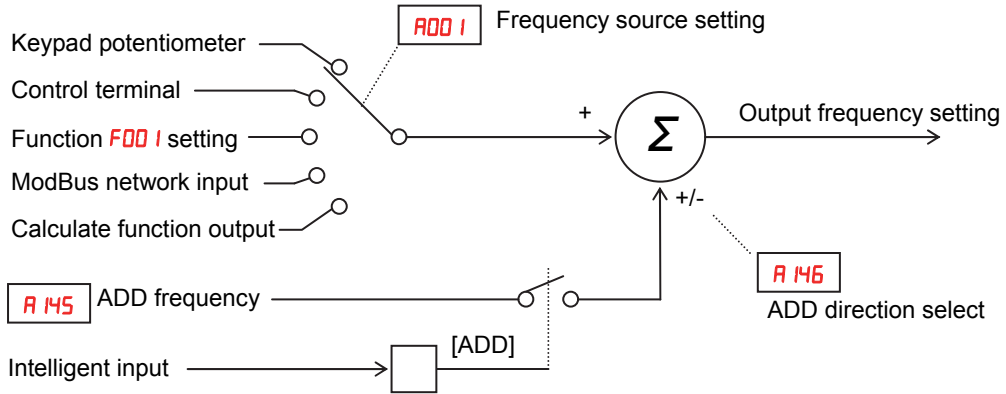

Option Code	Terminal Symbol	Function Name	State	Description
50	ADD	ADD Frequency Enable	ON	Applies the <b>A145</b> Add Frequency value to the output frequency
			OFF	Does not apply the Add frequency. The output frequency retains its normal value
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		<b>A001, A145, A146</b>		
<b>Notes:</b> <ul style="list-style-type: none"> <li><b>A001</b> may specify any source; the Add Frequency will be added to or subtracted from that value to yield output frequency value.</li> </ul>				
				See I/O specs on page 4-6.

## Force Terminal Mode

The purpose of this intelligent input is to allow a device to force the inverter to allow control of the following two parameters via the control terminals:

- **A001** - Frequency source setting (**01** = control terminals [FW] and [RV])
- **A002** - Run command source setting (**01** = control terminals [O] or [OI])

Some applications will require one or both settings above to use a source other than the terminals. You may prefer to normally use the inverter's keypad and potentiometer, or to use the ModBus network for control, for example. However, an external device can turn ON the [F-TM] input to force the inverter to (temporarily) allow control (frequency source and Run command) via control terminals. When the [F-TM] input is OFF, then the inverter uses the regular sources specified by **A001** and **A002** again.

Option Code	Terminal Symbol	Function Name	State	Description
51	F-TM	Force Terminal Mode	ON	Forces <b>A001=01</b> (frequency source setting = control terminal), and <b>A002=01</b> (Run command source setting = control terminal)
			OFF	Inverter applies the user setting for <b>A001</b> and <b>A002</b> normally
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>				
<b>Notes:</b> <ul style="list-style-type: none"> <li>• When changing the [F-TM] state during Run Mode (inverter is driving the motor), the inverter will stop the motor before the new [F-TM] state takes effect.</li> </ul>				
				<p style="text-align: center;">F-TM</p>
				See I/O specs on page 4-6.


## Permission for torque command input

This function is to permit the torque command input. (Please refer to chapter 3 for the detailed description of the function.)

Option Code	Terminal Symbol	Function Name	State	Description
52	ATR	Permission for torque command input	ON	Inverter is ready to accept the torque command.
			OFF	Inverter is in a normal mode.
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>				
<b>Notes:</b>				
				<p style="text-align: center;">ATR</p>
				See I/O specs on page 4-6.


## Clearance of cumulative power data

This function is to clear the cumulative input power data.

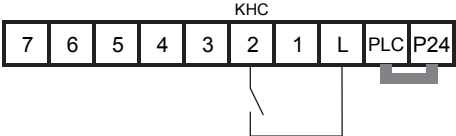Option Code	Terminal Symbol	Function Name	State	Description
53	KHC	Clear watt-hour data	ON	Clear the cumulative power data
			OFF	Does not clear the data
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):  
<b>Required settings</b>				
<b>Notes:</b>				
				See I/O specs on page 4-6.

## General Purpose Input (1)~(7)

These functions are used with EzSQ function. Refer to a description of EzSQ for the details.

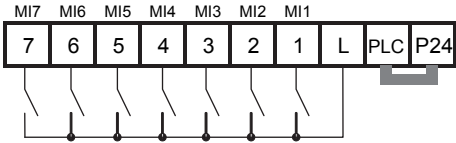Option Code	Terminal Symbol	Function Name	State	Description
56~62	MI1~MI7	General purpose input (1)~(7)	ON	General purpose input is made ON
			OFF	General purpose input is made OFF
<b>Valid for inputs:</b>		<b>C001~C007</b>	Example (default input configuration shown—see page 3-85): 	
<b>Required settings</b>				
<b>Notes:</b>				
				See I/O specs on page 4-6.


## Analog Command Hold

This function allows you to make the inverter hold the analog command input via the external analog input terminal when the AHD terminal is made ON.

While the AHD is turned ON, the up/down function can be used based on the analog signal held by this function as reference data.

When “01” is specified for Up/down memory mode selection (C101), the result of up/down processing can be stored in memory.

If the inverter power is turned on or the RS terminal turned off with the AHD terminal left turned on, the data held immediately before power on or turning off the RS terminal will be used.

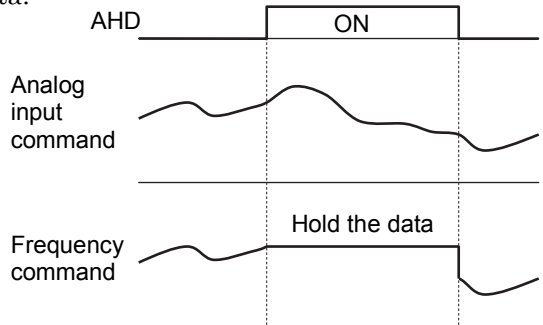

Set frequency remains when the inverter is switched with SET terminal with AHD on. Turn AHD terminal off to re-hold the set frequency.



Frequent use of this function may result in a shorter in memory component of the inverter.

Option Code	Terminal Symbol	Function Name	State	Description
65	AHD	Analog command hold	ON	Hold the analog input value
			OFF	Does not hold the analog input value
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):  <div style="text-align: center;"> </div>
<b>Required settings</b>				
<b>Notes:</b>				
				See I/O specs on page 4-6.

### Multistage-position switch (1)~(3)


When “66 (CP1)” to “68 (CP3)” are assigned to input terminals, you can select position settings from multistage positions 0 to 7.

Use multistage position settings 0 to 7 (P060 to P067) for the position settings. If no position settings are assigned to terminals, multistage position 0 (P060) is assumed.

Position setting	Parameter	CP3	CP2	CP1
Multistage position 0	P060	0	0	0
Multistage position 1	P061	0	0	1
Multistage position 2	P062	0	1	0
Multistage position 3	P063	0	1	1
Multistage position 4	P064	1	0	0
Multistage position 5	P065	1	0	1
Multistage position 6	P066	1	1	0
Multistage position 7	P067	1	1	1

You can specify a delay to be applied at multistage position setting input, until the relevant terminal input is determined. Use this specification to prevent the application of fluctuating terminal input before it is determined.

You can adjust the determination time with the multistage speed/position determination time setting (C169). The input data is finally determined when the terminal input becomes stable after the delay set as C169. (Note that a long determination time deteriorates the input terminal response.)

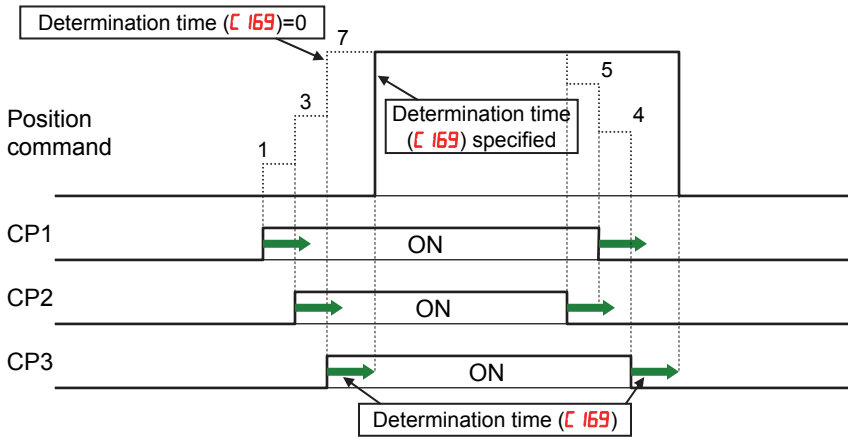


Option Code	Terminal Symbol	Function Name	State	Description
66~68	CP1~CP3	Multistage-position switch (1)~(3)	ON OFF	Multistage position is defined by combination of the inputs.
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):
<b>Required settings</b>		P060~P067		
<b>Notes:</b>				<p>See I/O specs on page 4-6.</p>

## Limit signal of homing, Trigger signal of zero-return

These functions are used for homing performance.


One of three types of homing operations can be selected by homing mode selection (**P068**). When a homing operation ends, the current position counter is cleared (to 0). Use homing direction selection (**P069**) to select the direction of homing operation. If homing operation is not performed, position control is performed based on the assumption that the motor position detected at power-on is the origin.

### <1> Low speed homing (**P068=00**)

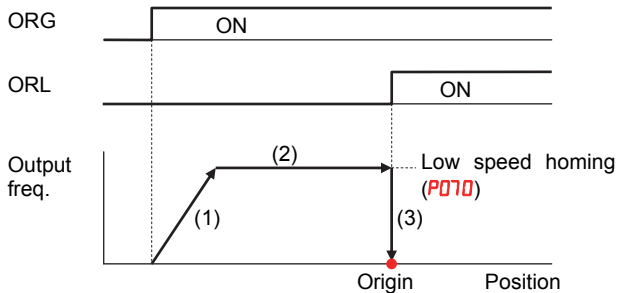

- (1) The inverter accelerates the motor for the specified ramp time to the low speed homing.
- (2) It runs the motor at the low speed homing.
- (3) It performs positioning when the ORL signal is given.

### <2> High speed homing (**P068=01**)

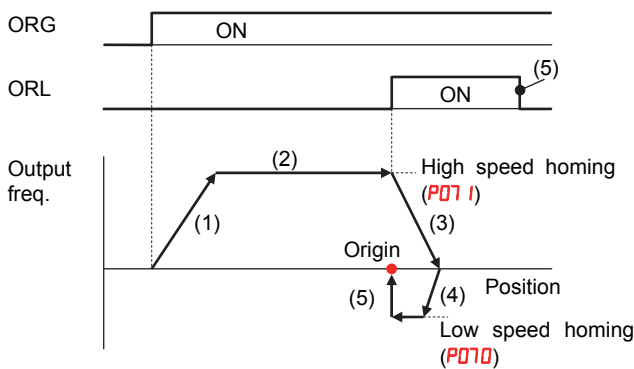


- (1) The inverter accelerates the motor for the specified ramp time to the high speed homing.
- (2) It runs the motor at the high speed homing.
- (3) It starts deceleration when the ORL signal is turned on.
- (4) It runs the motor in the reverse direction at the low speed homing.
- (5) It performs positioning when the ORL signal is turned off.

## Speed/position changeover

To perform speed control operation in absolute position control mode, turn on the SPD terminal. While the SPD terminal is off, the current position count remains at 0. Therefore if the SPD terminal is turned off during operation, the control operation is switched to position control operation based on the position where the terminal is turned off. (Speed control operation is switched to position control operation.)

If the position setting is 0 at this time, the inverter stops the motor at that position. (Hunting may occur if a certain position loop gain value has been set.)

While the SPD terminal is on, the rotating direction depends on the operation command. When switching from speed control to position control, pay attention to the sign of the value set in the operation command.

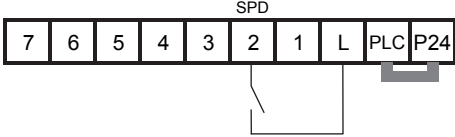Option Code	Terminal Symbol	Function Name	State	Description
<b>73</b>	SPD	Speed/position changeover	ON	Inverter is in a speed control mode
			OFF	Inverter is in a position control mode
<b>Valid for inputs:</b>		<b>C001~C007</b>	Example (default input configuration shown—see page 3-85):  	
<b>Required settings</b>				
<b>Notes:</b>				
				See I/O specs on page 4-6.



## Safe Stop Related Signals


Option Code	Terminal Symbol	Function Name	State	Description
77 78	GS1 GS2	Safety related signals	ON	
			OFF	
The function is based on Functional Safety based on European norm. Please refer to Appendix E for the detailed explanation.				

## Executing EzSQ program

Option Code	Terminal Symbol	Function Name	State	Description
82	PRG	Executing EzSQ program	ON	
			OFF	
Refer to EzSQ section				


## Retain output frequency

This function allows you to retain output frequency.

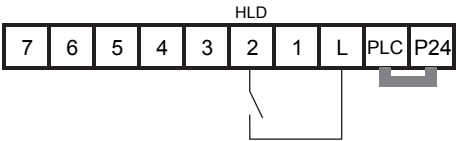Option Code	Terminal Symbol	Function Name	State	Description
83	HLD	Retain output frequency	ON	
			OFF	
<b>Valid for inputs:</b>		<b>C001~C007</b>		Example (default input configuration shown—see page 3-85):  
<b>Required settings</b>				
<b>Notes:</b>				
See I/O specs on page 4-6.				


## Permission of Run command

This function allows you to accept run command.

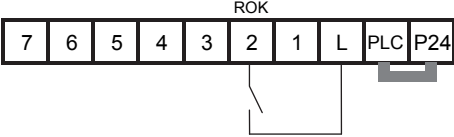Option Code	Terminal Symbol	Function Name	State	Description
84	ROK	Permission of Run command	ON	Run command can be accepted
			OFF	Run command is ignored
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):  
<b>Required settings:</b>				
<b>Notes:</b>				
See I/O specs on page 4-6.				


## Rotation direction detection

Input terminal (7) is for inputting “B pulse”, which is used for detecting the rotation direction.

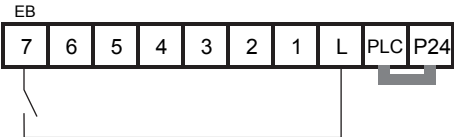Option Code	Terminal Symbol	Function Name	State	Description
85	EB	Rotation direction detection	ON	
			OFF	
<b>Valid for inputs:</b>		C007		Example (default input configuration shown—see page 3-85):  
<b>Required settings:</b>				
<b>Notes:</b>		EB input terminal is dedicated terminal (7). Maximum allowable input frequency is 2kHz.		
See I/O specs on page 4-6.				

## Display limitation

This function is to show only the contents of **d001** display.

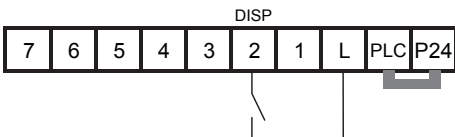
Option Code	Terminal Symbol	Function Name	State	Description
86	DISP	Display limitation	ON	
			OFF	
<b>Valid for inputs:</b>		C001~C007		Example (default input configuration shown—see page 3-85):  
<b>Required settings:</b>				
<b>Notes:</b>				
See I/O specs on page 4-6.				

## Using Intelligent Output Terminals

The intelligent output terminals are programmable in a similar way to the intelligent input terminals. The inverter has several output functions that you can assign individually to two physical logic outputs. One of the outputs is an open-collector transistor, and the other output is the alarm relay (form C – normally open and normally closed contacts). The relay is assigned the alarm function by default, but you can assign it to any of the functions that the open-collector output uses.


### Sinking Outputs, Open Collector

The open-collector transistor output can handle up to 50mA. We highly recommend that you use an external power source as shown at the right. It must be capable of providing at least 50mA to drive the output at full load. To drive loads that require more than 50mA, use external relay circuits as shown below right.

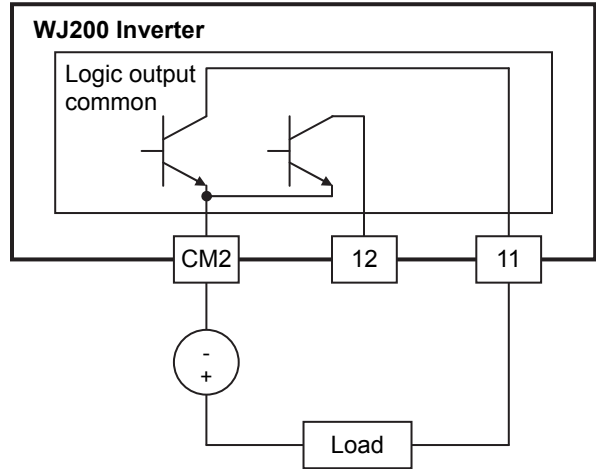

### Sinking Outputs, Open Collector

If you need output current greater than 50mA, use the inverter output to drive a small relay. Be sure to use a diode across the coil of the relay as shown (reverse-biased) in order to suppress the turn-off spike, or use a solid-state relay.

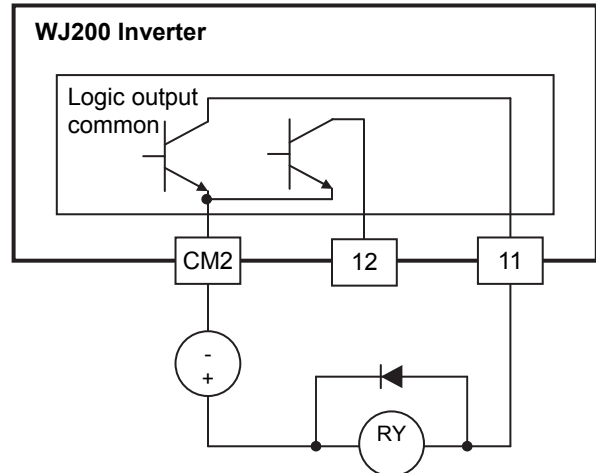

## Internal Relay Output

The inverter has an internal relay output with normally open and normally closed contacts (Type 1 form C). The output signal that controls the relay is configurable; the Alarm Signal is the default setting. Thus, the terminals are labeled [AL0], [AL1], [AL2], as shown to the right. However, you can assign any one of the nine intelligent outputs to the relay. For wiring purposes, the general terminal functions are:

- [AL0] – Common contact
- [AL1] – Normally open contact
- [AL2] – Normally closed contact



The relay itself can be configured as “normally open or closed.” Parameter **C036**, Alarm Relay Active State, is the setting. This setting determines whether or not the relay coil is energized when its output signal is OFF:

- **C036=00** – “Normally open” (relay coil is **de-energized** when output signal is OFF)
- **C036=01** – “Normally closed” (relay coil is **energized** when the output signal is OFF)


Since the relay already has normally open [AL1] and normally closed [AL2] contacts, the purpose of the ability to invert the relay coil’s active state may not be obvious. *It allows you to determine whether or not an inverter power loss causes the relay to change state.* The default relay configuration is the Alarm Signal (**C026=05**), as shown to the right. And, **C036=01** sets the relay to “normally closed” (relay coil normally energized). The reason for this is that a typical system design will require an inverter power loss to assert an alarm signal to external devices.

The relay can be used for other intelligent output signals, such as the Run Signal (set **C026=00**). For these remaining output signal types, the relay coil typically must NOT change state upon inverter power loss (set **C036=00**). The figure to the right shows the relay settings for the Run Signal output.

If you assign the relay an output signal other than the Alarm Signal, the inverter can still have an Alarm Signal output. In this case, you can assign it to terminal [11], providing an open collector output.

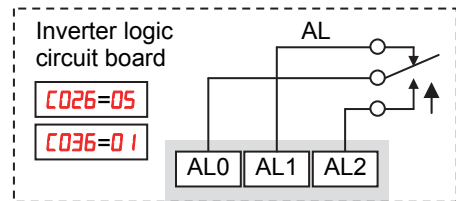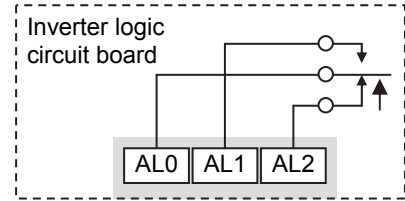

**Relay shown with inverter power ON, Alarm Signal OFF**

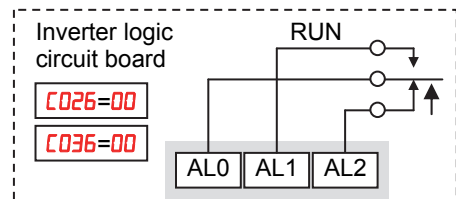


**Relay shown with inverter power ON, Run Signal OFF**

## Output Signal ON/OFF Delay Function

Intelligent outputs including terminals [11], and the output relay, have configurable signal transition delays. Each output can delay either the OFF-to-ON or ON-to-OFF transitions, or both. Signal transition delays are variable from 0.1 to 100.0 seconds. This feature is useful in applications that must tailor inverter output signals to meet timing requirements of certain external devices.

The timing diagram below shows a sample output signal (top line) and the results of various ON/OFF delay configurations.

- **Original signal** - This example signal waveform consists of three separate pulses named “A,” “B,” and “C.”
- **...with ON delay** - Pulse A is delayed by the duration of the ON delay time. Pulses B and C do not appear at the output, because they are shorter than the ON delay.
- **...with OFF delay** - Pulse A is lengthened by the amount of the OFF delay time. The separation between pulses B and C does not appear at the output, because it is shorter than the OFF delay time.
- **...with ON/OFF delays** - Pulse A is delayed on both leading and trailing edges by the amounts of the ON and OFF delay times, respectively. Pulses B and C do not appear at the output, because they are shorter than the ON delay time.

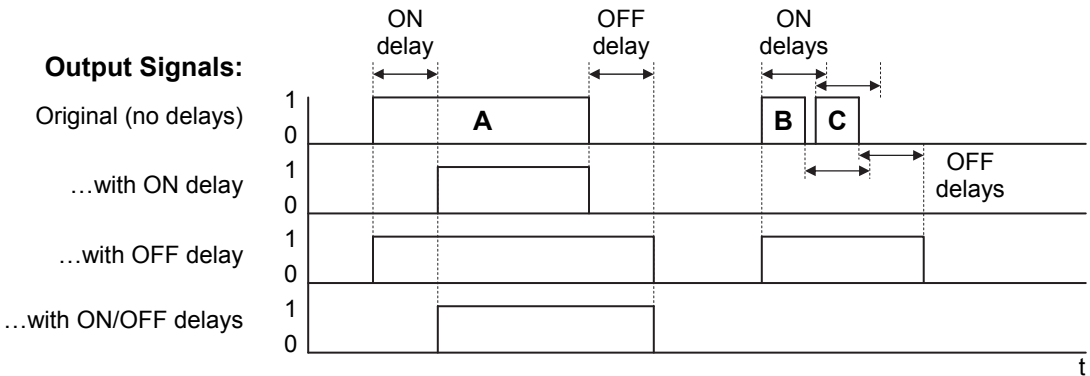


Func.	Description	Range	Default
C130	Output [11] ON delay	0.0 to 100.0 sec.	0.0
C131	Output [11] OFF delay	0.0 to 100.0 sec.	0.0
C132	Output [12] ON delay	0.0 to 100.0 sec.	0.0
C133	Output [12] OFF delay	0.0 to 100.0 sec.	0.0
C140	Output relay ON delay	0.0 to 100.0 sec.	0.0
C141	Output relay OFF delay	0.0 to 100.0 sec.	0.0

Use of the ON/OFF signal delay functions are optional. Note that any of the intelligent output assignments in this section can be combined with ON/OFF signal timing delay configurations.

## Run Signal

When the [RUN] signal is selected as an intelligent output terminal, the inverter outputs a signal on that terminal when it is in Run Mode. The output logic is active low, and is the open collector type (switch to ground).

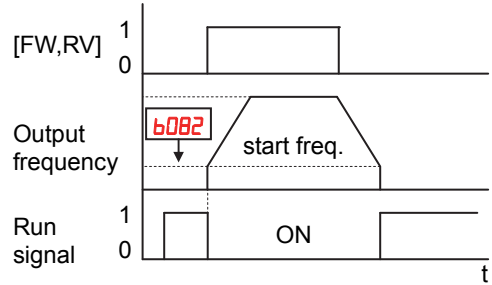

Option Code	Terminal Symbol	Function Name	State	Description
00	RUN	Run Signal	ON	when inverter is in Run Mode
			OFF	when inverter is in Stop Mode
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		(none)		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>The inverter outputs the [RUN] signal whenever the inverter output exceeds the start frequency specified by parameter <b>b082</b>. The start frequency is the initial inverter output frequency when it turns ON.</li> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> <p>The diagram shows an 'Inverter logic circuit board' with three terminals labeled AL0, AL1, and AL2. These terminals are connected to a 'Power supply' and a 'Load'. The 'RUN' signal is shown as an output from the board.</p>				
See I/O specs on page 4-6				

## Frequency Arrival Signals

The *Frequency Arrival* group of outputs helps coordinate external systems with the current velocity profile of the inverter. As the name implies, output [FA1] turns ON when the output *frequency arrives* at the standard set frequency (parameter F001). Output [FA2] relies on programmable accel/ decel thresholds for increased flexibility. For example, you can have an output turn ON at one frequency during acceleration, and have it turn OFF at a different frequency during deceleration. All transitions have hysteresis to avoid output chatter if the output frequency is near one of the thresholds.

Option Code	Terminal Symbol	Function Name	State	Description
01	FA1	Frequency Arrival Type 1 – Constant Speed	ON	when output to motor is at the constant frequency
			OFF	when output to motor is OFF, or in any acceleration or deceleration ramp
02	FA2	Frequency Arrival Type 2 – Over frequency	ON	when output to motor is at or above the set frequency thresholds for, even if in acceleration or decel ramps
			OFF	when output to motor is OFF, or during accel or decel before the respective thresholds are crossed
06	FA3	Frequency Arrival Type 3 – Set frequency	ON	when output to motor is at the set frequency
			OFF	when output to motor is OFF, or in any acceleration or deceleration ramp
24	FA4	Frequency Arrival Type 4 – Over frequency (2)	ON	when output to motor is at or above the set frequency thresholds for, even if in acceleration or decel ramps
			OFF	when output to motor is OFF, or during accel or decel before the respective thresholds are crossed
25	FA5	Frequency Arrival Type 5 – Set frequency (2)	ON	when output to motor is at the set frequency
			OFF	when output to motor is OFF, or in any acceleration or deceleration ramp


**Valid for inputs:** 11, 12, AL0 – AL2

**Required settings:** C042, C043, C045, C046,


**Notes:**

- For most applications you will need to use only one type of frequency arrival outputs (see examples). However, it is possible assign both output terminals to output functions [FA1] and [FA2]
- For each frequency arrival threshold, the output anticipates the threshold (turns ON early) by 1.5Hz
- The output turns OFF as the output frequency moves away from the threshold, delayed by 0.5Hz
- The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative going turn-off spike generated by the coil from damaging the inverter's output transistor

Example for terminal [11] (default output configuration shown – see page 3-89):

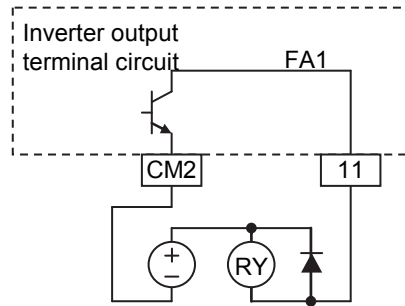


Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):

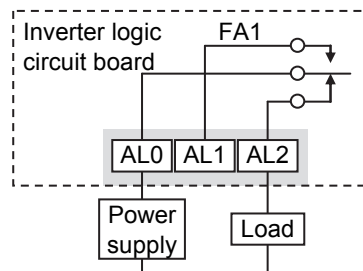


See I/O specs on page 4-6

Frequency arrival output [FA1] uses the standard output frequency (parameter F001) as the threshold for switching. In the figure to the right, Frequency Arrival [FA1] turns ON when the output frequency gets within *Fon* Hz below or *Fon* Hz above the target constant frequency, where *Fon* is 1% of the set maximum frequency and *Foff* is 2% of the set maximum frequency. This provides hysteresis that prevents output chatter near the threshold value. The hysteresis effect causes the output to turn ON slightly *early* as the speed approaches the threshold. Then the turn-OFF point is slightly *delayed*. Note the active low nature of the signal, due to the open collector output.

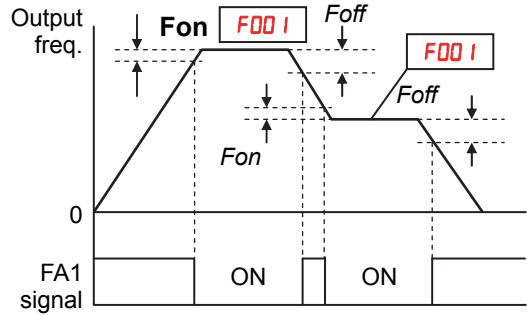


**Fon=1% of max. frequency**  
*Foff=2% of max. frequency*

Frequency arrival output [FA2/FA4] works the same way; it just uses two separate thresholds as shown in the figure to the right. These provide for separate acceleration and deceleration thresholds to provide more flexibility than for [FA1]. [FA2/FA4] uses **C042/C045** during acceleration for the ON threshold, and **C043/C046** during deceleration for the OFF threshold. This signal also is active low. Having different accel and decel thresholds provides an asymmetrical output function. However, you can use equal ON and OFF thresholds, if desired.

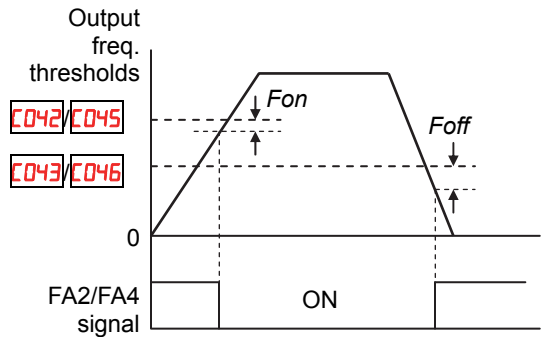

**Fon=1% of max. frequency**  
*Foff=2% of max. frequency*

Frequency arrival output [FA3/FA5] works also the same way, only difference is arriving at set frequency.

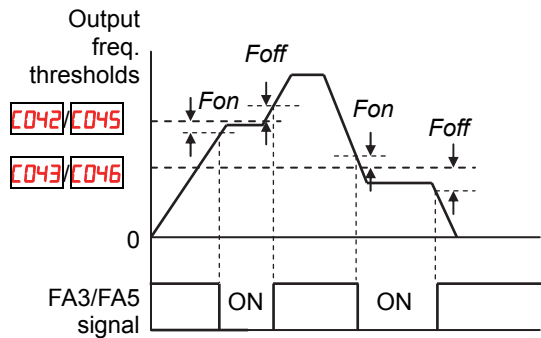


**Fon=1% of max. frequency**  
*Foff=2% of max. frequency*



### Overload Advance Notice Signal


When the output current exceeds a preset value, the [OL] terminal signal turns ON. The parameter **C041** and **C111** sets the overload threshold. (Two thresholds can be set.) The overload detection circuit operates during powered motor operation and during regenerative braking. The output circuits use open-collector transistors, and are active low.


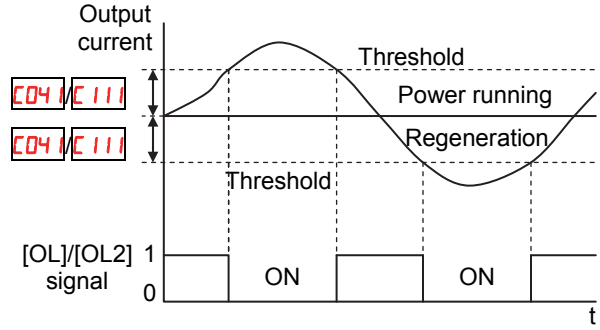


Option Code	Terminal Symbol	Function Name	State	Description
<b>03</b>	OL	Overload Advance Notice Signal	ON	when output current is more than the set threshold for the overload signal
			OFF	when output current is less than the set threshold for the overload signal
<b>26</b>	OL2	Overload Advance Notice Signal	ON	(Same as above)
			OFF	(Same as above)
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		<b>C041, C111</b>		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The default value is 100%. To change the level from the default, set <b>C041</b> (overload level) and/or <b>C111</b> (overload level (2)).</li> <li>• The accuracy of this function is the same as the function of the output current monitor on the [AM] terminal (see “Analog Output Operation” on page 4-90).</li> <li>• The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>				
<p>See I/O specs on page 4-6</p>				

### Output Deviation for PID Control

The PID loop error is defined as the magnitude (absolute value) of the difference between the Setpoint (target value) and the Process Variable (actual value). When the error magnitude exceeds the preset value for **C044**, the [OD] terminal signal turns ON. Refer to “PID Control” on page 3-30.

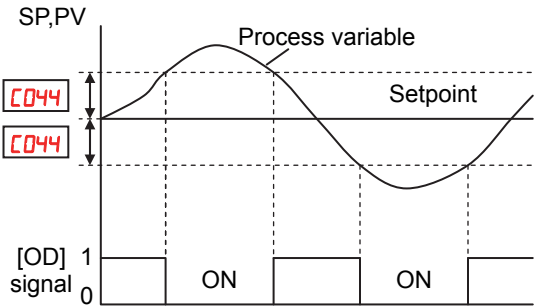

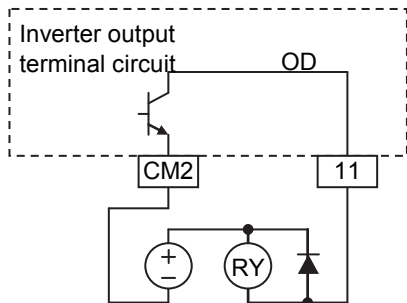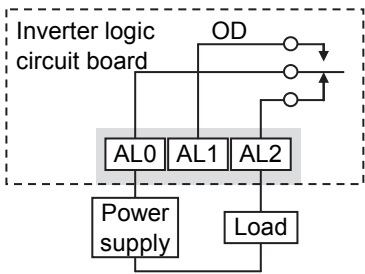
Option Code	Terminal Symbol	Function Name	State	Description
04	OD	Output Deviation for PID Control	ON	when PID error is more than the set threshold for the deviation signal.
			OFF	when PID error is less than the set threshold for the deviation signal
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>		<b>C044</b>		
<b>Notes:</b>		<ul style="list-style-type: none"> <li>The default difference value is set to 3%. To change this value, change parameter <b>C044</b> (deviation level).</li> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>		
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6

## Alarm Signal



The inverter alarm signal is active when a fault has occurred and it is in the Trip Mode (refer to the diagram at right). When the fault is cleared the alarm signal becomes inactive.

We must make a distinction between the alarm *signal* AL and the alarm relay *contacts* [AL0], [AL1] and [AL2]. The signal AL is a logic function, which you can assign to the open collector output terminals [11], [12], or the relay outputs.

The most common (and default) use of the relay is for AL, thus the labeling of its terminals. Use an open collector output (terminal [11] or [12]) for a low-current logic signal interface or to energize a small relay (50 mA maximum). Use the relay output to interface to higher voltage and current devices (10 mA minimum).

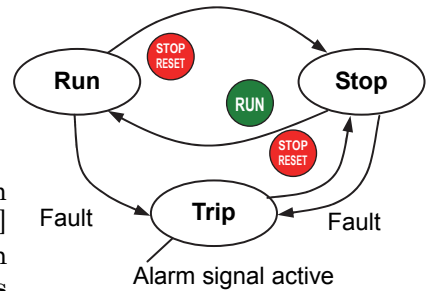


Option Code	Terminal Symbol	Function Name	State	Description
05	AL	Alarm Signal	ON	when an alarm signal has occurred and has not been cleared
			OFF	when no alarm has occurred since the last clearing of alarm(s)
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		C031, C032, C036		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>By default, the relay is configured as normally closed (C036=01). Refer to the next page for an explanation.</li> <li>In the default relay configuration, an inverter power loss turns ON the alarm output. the alarm signal remains ON as long as the external control circuit has power.</li> <li>When the relay output is set to normally closed, a time delay of less than 2 seconds occurs after powerup before the contact is closed.</li> <li>Terminals [11] and [12] are open collector outputs, so the electric specifications of [AL] are different from the contact output terminals [AL0], [AL1], [AL2].</li> <li>This signal output has the delay time (300 ms nominal) from the fault alarm output.</li> <li>The relay contact specifications are in “Control Logic Signal Specifications” on page 4-6. The contact diagrams for different conditions are on the next page.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>				
<p>See I/O specs on page 4-6</p>				

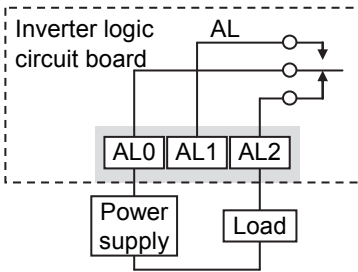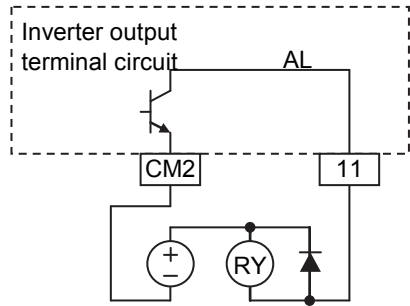

The alarm relay output can be configured in two main ways:

- Trip/Power Loss Alarm –** The alarm relay is configured as normally closed (**C036=01**) by default, shown below (left). An external alarm circuit that detects broken wiring also as an alarm connects to [AL0] and [AL1]. After powerup and short delay (< 2 seconds), the relay energizes and the alarm circuit is OFF. Then, either an inverter trip event or an inverter power loss will de-energize the relay and open the alarm circuit
- Trip Alarm –** Alternatively, you can configure the relay as normally open (**C036=00**), shown below (right). An external alarm circuit that detects broken wiring also as an alarm connects to [AL0] and [AL2]. After powerup, the relay energizes only when an inverter trip event occurs, opening the alarm circuit. However, in this configuration, an inverter power loss does not open the alarm circuit.



Be sure to use the relay configuration that is appropriate for your system design. Note that the external circuits shown assume that a closed circuit = no alarm condition (so that a broken wire also causes an alarm). However, some systems may require a closed circuit = alarm condition. In that case, then use the opposite terminal [AL1] or [AL2] from the ones shown.

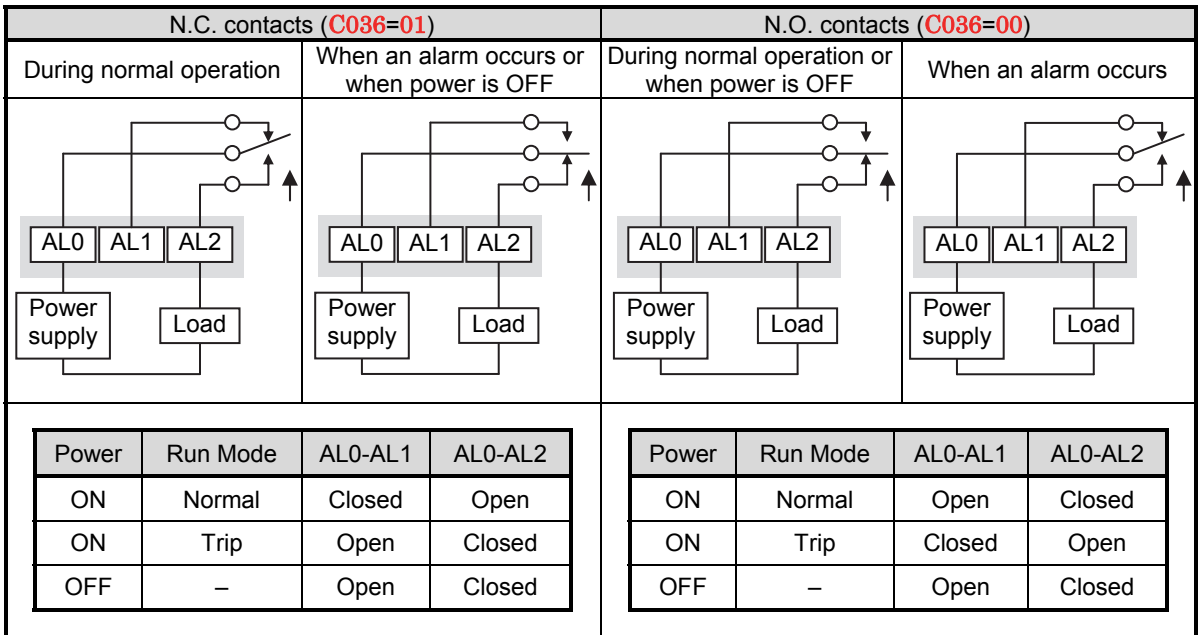

## Over Torque Signal

The inverter outputs the over torque signal when it detects that the estimated motor output torque exceeds the specified level.



To enable this function, assign “07 (OTQ)” to an intelligent output terminal.

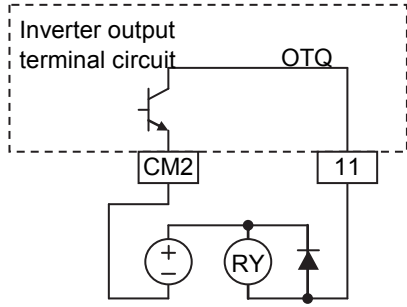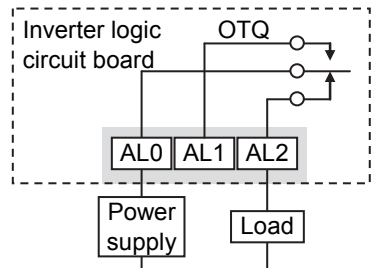Option Code	Terminal Symbol	Function Name	State	Description
07	OTQ	Over torque signal	ON	when the estimated output torque > C055~C058
			OFF	when no over torque is detected
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		A044=03 or 04, C055~C058		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• This function is effective only when the V/F characteristic curve selection A044 is set to “03 (SLV mode)”. With any other V/F characteristic curve selection, the output of the OTQ signal is unpredictable.</li> <li>• When using the inverter for a lift, use the OTQ signal as the trigger to stop braking. Use the frequency arrival signal as the trigger to start braking.</li> <li>• The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>				
				
				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> 
See I/O specs on page 4-6				

## Undervoltage Signal

The inverter outputs the undervoltage signal when it detects that the inverter is in undervoltage situation.

To enable this function, assign “09 (UV)” to an intelligent output terminal.

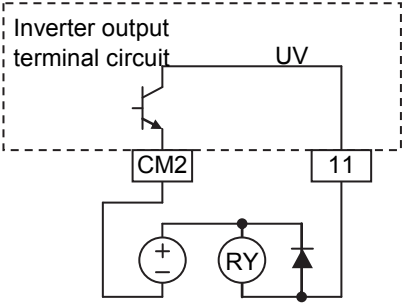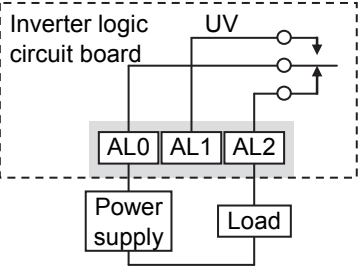Option Code	Terminal Symbol	Function Name	State	Description
09	UV	Undervoltage signal	ON	Inverter is in undervoltage
			OFF	Inverter is in normal condition
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>				
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91): 
				See I/O specs on page 4-6

## Torque Limited Signal

The inverter outputs the torque limited signal when it is in torque limit operation.

To enable this function, assign “10 (TRQ)” to an intelligent output terminal.



Refer to section 3 for detailed explanation.

Option Code	Terminal Symbol	Function Name	State	Description
10	TRQ	Torque limited signal	ON	Inverter is in torque limiting mode
			OFF	Inverter is not in torque limiting mode
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		A044=03, b040~b044		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>
				See I/O specs on page 4-6

## Running Time and Power On Time Over Signal

The inverter outputs the operation time expiration signal and power on time expiration signal.

To enable this function, assign “**11** (RNT)”, and/or “**12** (ONT)” to intelligent output terminals.

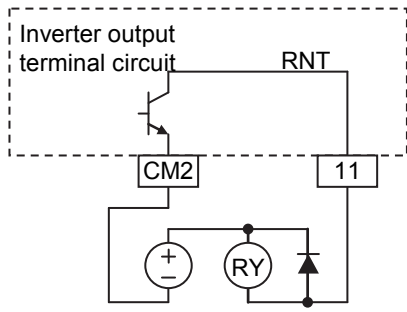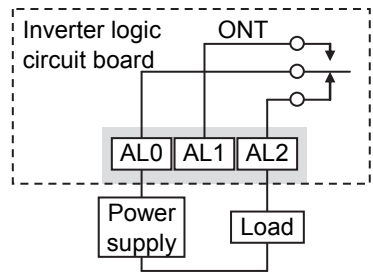Option Code	Terminal Symbol	Function Name	State	Description
<b>11</b>	RNT	Run time expiration signal	ON	Accumulated operation time of the inverter exceeds the set value of <b>b034</b>
			OFF	Accumulated operation time of the inverter does not exceed the set value of <b>b034</b>
<b>12</b>	ONT	Power ON time expiration signal	ON	Accumulated power on time of the inverter exceeds the set value of <b>b034</b>
			OFF	Accumulated power on time of the inverter does not exceed the set value of <b>b034</b>
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>		<b>b034</b>		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6



## Electronic Thermal Warning Signal Output

You can configure this function so that the inverter outputs a warning signal before the electronic thermal protection operates against motor overheating. You can also set the threshold level to output a warning signal with the electronic thermal warning level setting (C061).

To output the warning signal, assign function “13 (THM)” to one of the intelligent output terminals [11] to [12], or to the relay output terminal.



Option Code	Terminal Symbol	Function Name	State	Description
13	THM	Thermal warning signal output	ON	Accumulated thermal level exceeds the electronic thermal warning level (C061)
			OFF	Accumulated thermal level does not exceed the electronic thermal warning level (C061)
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings:</b>		C061		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91): 
				See I/O specs on page 4-6

## External Brake Related Output Signals

These signals are used with brake control function.

To output the warning signals, assign function “19 (BRK)” and “20 (BER)” to the intelligent output terminals [11] and [12], or to the relay output terminal.

Refer to chapter 3 for detailed explanation of the brake control function.

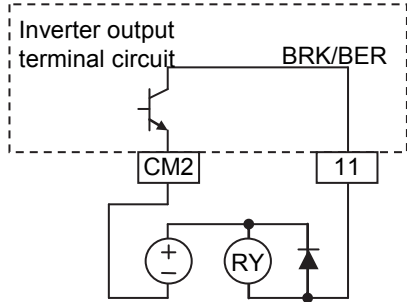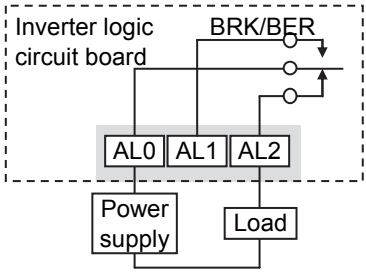Option Code	Terminal Symbol	Function Name	State	Description
19	BRK	Brake release signal	ON	Brake is ready to be released
			OFF	Brake is not ready to be released
20	BER	Brake error signal	ON	Brake error has occurred
			OFF	Brake is working properly
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		b120~b127		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> 				
				
See I/O specs on page 4-6				

## Zero Hz Speed Detection Signal

The inverter outputs the 0Hz speed detection signal when the inverter output frequency falls below the threshold level (C063).



To use this function, assign “21 (ZS)” to one of the intelligent output terminals.

Option Code	Terminal Symbol	Function Name	State	Description
21	ZS	Zero Hz speed detection signal	ON	Output frequency is less than C063
			OFF	Output frequency is not less than C063
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		C063		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>
				See I/O specs on page 4-6

## Speed Deviation Excessive Signal

The inverter outputs the detection signal when the deviation between the set speed and actual motor speed becomes less the threshold level (P027). This function is valid when connecting the encoder feedback to the inverter.

To use this function, assign “22 (DSE)” to one of the intelligent output terminals.

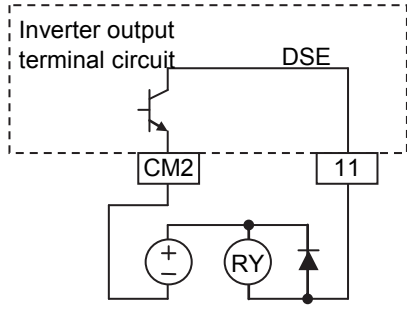
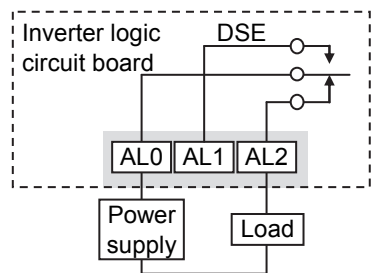
Option Code	Terminal Symbol	Function Name	State	Description
22	DSE	Speed deviation excessive signal	ON	Deviation between the speed command and motor speed is less than P027
			OFF	Deviation between the speed command and motor speed exceeds P027
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings:</b>		P027		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):
				
				See I/O specs on page 4-6

## Positioning Completion Signal

Inverter gives out the positioning signal when positioning performance is done.

To use this function, assign “23 (POK)” to one of the intelligent output terminals.

Refer to chapter 4 for the details of the performance.

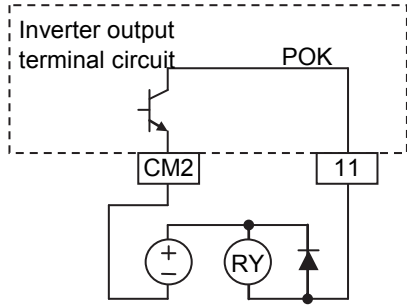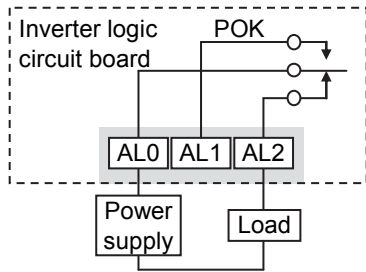Option Code	Terminal Symbol	Function Name	State	Description
23	POK	Positioning completion signal	ON	Positioning performance is completed
			OFF	Positioning performance is not completed
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		P0103~P015		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter’s output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> 				
				
See I/O specs on page 4-6				



## Analog Input Disconnect Detect

This feature is useful when the inverter receives a speed reference from an external device. Upon input signal loss at either the [O] or [OI] terminal, the inverter normally just decelerates the motor to a stop. However, the inverter can use the intelligent output terminal [Dc] to signal other devices that a signal loss has occurred.

**Voltage signal loss at [O] terminal** - Parameter **b082** is the Start Frequency Adjustment. It sets the beginning (minimum) output frequency when the speed reference source is greater than zero. If the analog input at terminal [O] is less than the Start Frequency, the inverter turns ON the [Dc] output to indicate a signal loss condition.

**Current signal loss at [OI] terminal** - The [OI] terminal accepts a 4mA to 20mA signal, with 4mA representing the beginning of the input range. If the input current falls below 4mA, the inverter applies a threshold to detect signal loss.

Note that a signal loss is not an inverter trip event. When the analog input value is again above the **b082** value, the [Dc] output turns OFF. There is no error condition to clear.

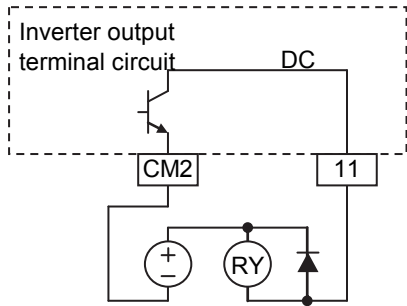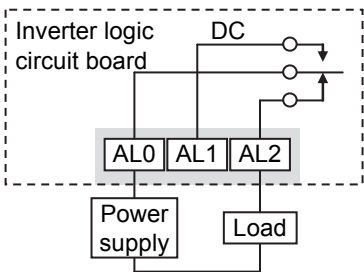Option Code	Terminal Symbol	Function Name	State	Description
27	ODc	Analog voltage Input Disconnect Detect	ON	when signal loss is detected on [O] input
			OFF	when no signal loss is detected on [O] input
28	OIDc	Analog current Input Disconnect Detect	ON	when signal loss is detected on [OI] input
			OFF	when no signal loss is detected on [OI] input
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		A001=01, b082		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>The [Dc] output can indicate an analog signal disconnect when the inverter is in Stop Mode, as well as Run Mode.</li> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> 				
				
See I/O specs on page 4-6				

## PID Second Stage Output

The inverter has a built-in PID loop feature for *two-stage control*, useful for certain applications such as building ventilation or heating and cooling (HVAC). In an ideal control environment, a single PID loop controller (stage) would be adequate. However, in certain conditions, the maximum output energy from the first stage is not enough to maintain the Process Variable (PV) at or near the Setpoint (SP). And, the output of the first stage is in saturation. A simple solution is to add a second stage, which puts an additional and constant amount of energy into the system under control. When sized properly, the boost from the second stage brings the PV toward the desired range, allowing the first stage PID control to return to its linear range of operation.


The two-stage method of control has some advantages for particular applications.

- The second stage is only ON in adverse conditions, so there is an energy savings during normal conditions.
- Since the second stage is simple ON/OFF control, it is less expensive to add than just duplicating the first stage.
- At powerup, the boost provided by the second stage helps the process variable reach the desired setpoint sooner than it would if the first stage acted alone.
- Even though the second stage is simple ON/OFF control, when it is an inverter you can still adjust the output frequency to vary the boost it provides.

Refer to the example diagram below. Its two stages of control are defined as follows:

- Stage 1 - Inverter #1 operating in PID loop mode, with motor driving a fan
- Stage 2 - Inverter #2 operating as an ON/OFF controller, with motor driving a fan


Stage #1 provides the ventilation needs in a building most of the time. On some days, there is a change in the building's air volume because large warehouse doors are open. In that situation, Stage #1 alone cannot maintain the desired air flow (PV sags under SP). Inverter #1 senses the low PV and its PID Second Stage Output at [FBV] terminal turns ON. This gives a Run FWD command to Inverter #2 to provide the additional air flow.

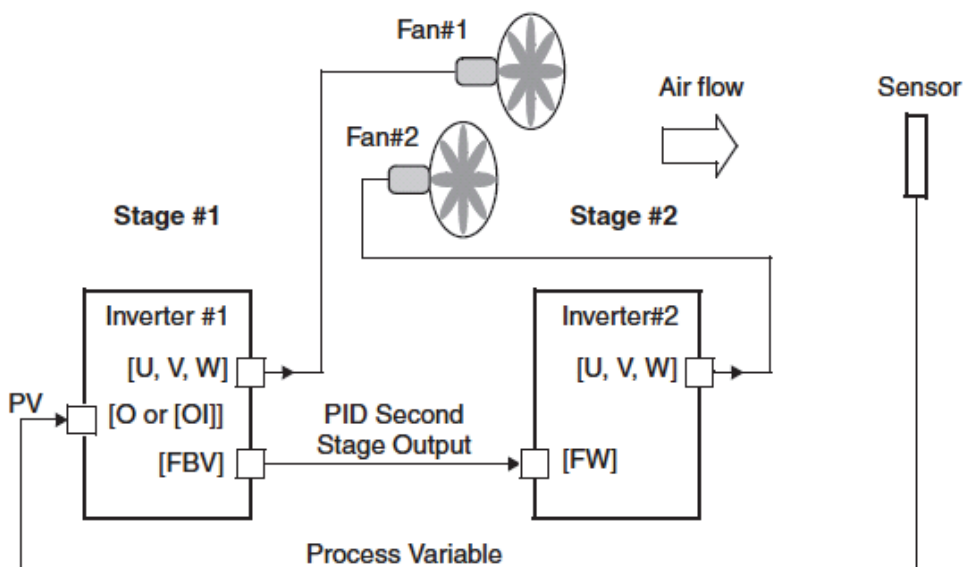

To use the PID Second Stage Output feature, you will need to choose upper and lower limits for the PV, via **C053** and **C052** respectively. As the timing diagram below shows, these are the thresholds Stage #1 inverter uses to turn ON or OFF Stage #2 inverter via the [FBV] output. The vertical axis units are percent (%) for the PID setpoint, and for the upper and lower limits. The output frequency, in Hz, is superimposed onto the same diagram.


When the system control begins, the following events occur (in sequence in the timing diagram):

1. Stage #1 inverter turns ON via the [FW] Run command.
2. Stage #1 inverter turns ON the [FBV] output, because the PV is below the PV low limit **C053**. So, Stage #2 is assisting in loop error correction from the beginning.
3. The PV rises and eventually exceeds the PV high limit **C052**. Stage #1 inverter then turns OFF the [FBV] output to Stage #2, since the boost is no longer needed.
4. When the PV begins decreasing, only Stage #1 is operating, and it is in the linear control range. This region is where a properly configured system will operate most often.
5. The PV continues to decrease until it crosses under the PV low limit (apparent external process disturbance). Stage #1 inverter turns ON the [FBV] output, and Stage #2 inverter is assisting again.
6. After the PV rises above the PV low limit, the [FW] Run command to Stage #1 inverter turns OFF (as in a system shutdown).
7. Stage #1 inverter enters Stop Mode and automatically turns OFF the [FBV] output, which causes Stage #2 inverter to also stop.

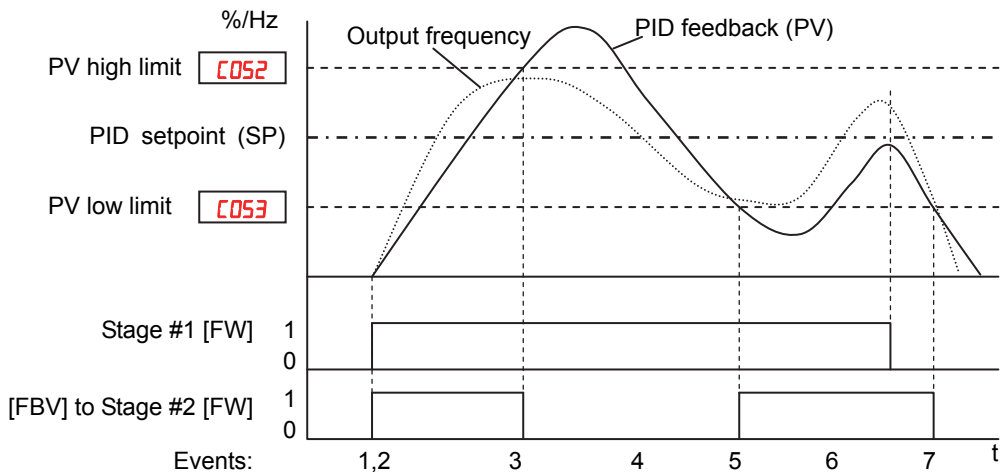

The terminal [FBV] configuration table is on the following page.

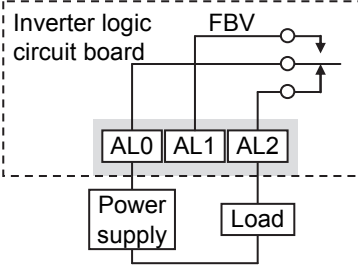




Option Code	Terminal Symbol	Function Name	State	Description
31	FBV	Feedback Value Check	ON	<ul style="list-style-type: none"> <li>• Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit (C053)</li> </ul>
			OFF	<ul style="list-style-type: none"> <li>• Transitions to OFF when the PID Feedback Value (PV) exceeds the PID High Limit (C052)</li> <li>• Transitions to OFF when the inverter goes from Run Mode to Stop Mode</li> </ul>
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		A076, C052, C053		
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>• The [FBV] is designed for implementing two-stage control. The PV high limit and PV low limit parameters, C052 and C053, do not function as process alarm thresholds. Terminal [FBV] does not provide a PID alarm function.</li> <li>• The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>				
 <p>The diagram shows an 'Inverter logic circuit board' with three terminals labeled AL0, AL1, and AL2. A 'Power supply' is connected to the bottom of the board. A 'Load' is connected to the bottom of the board. The FBV signal is connected to the AL0 terminal. The AL1 and AL2 terminals are also shown with their respective connections.</p>				
See I/O specs on page 4-6				

## Communication signal Disconnect Detect

This signal function is enabled only when ModBus-RTU has been selected for the communication. If a reception timeout occurs, the inverter continues to output the communication line disconnection signal until it receives the next data.

Specify the limit time for reception timeout by setting the communication trip time (C077).

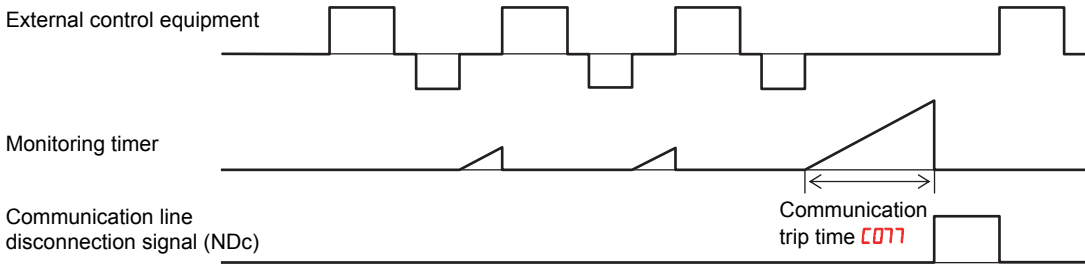


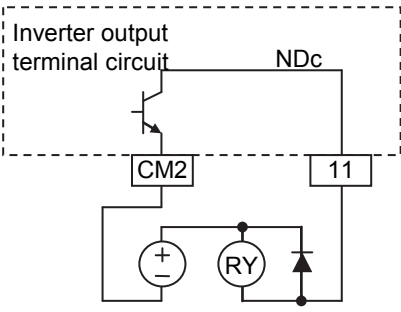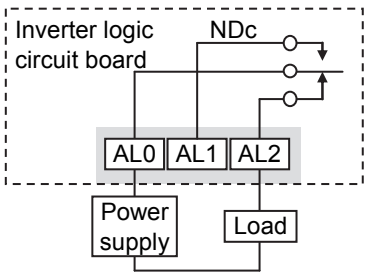Option Code	Terminal Symbol	Function Name	State	Description
32	NDc	Communication signal disconnect detection	ON	When there is a disconnection in communication
			OFF	When there is no disconnection in communication
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>		C077		
<b>Notes:</b> <ul style="list-style-type: none"> <li>The example circuit for terminal [11] drives a relay coil. Note the use of a diode to prevent the negative-going turn-off spike generated by the coil from damaging the inverter's output transistor.</li> </ul>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6

## Logic Output Function

The inverter has a built-in logic output feature. Select any two operands out of all intelligent output options except LOG1~LOG3 and their operator out of AND, OR, or XOR (exclusive OR). The terminal symbol for the new output is [LOG]. Use **C021**, **C022** or **C026** to route the logical result to terminal [11], [12] or the relay terminals.

Intelligent outputs used as internal inputs:

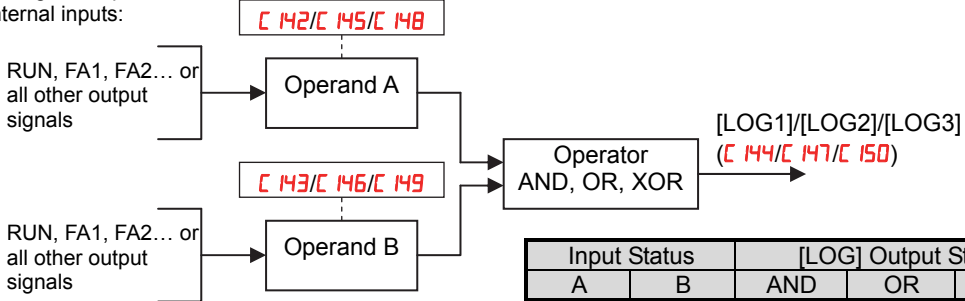



Input Status		[LOG] Output State		
A	B	AND	OR	XOR
0	0	0	0	0
0	1	0	1	1
1	0	0	1	1
1	1	1	1	0

Option Code	Terminal Symbol	Function Name	State	Description
<b>33</b>	LOG1	Logic Output Function	ON	when the Boolean operation specified by <b>C144</b> / <b>C145</b> / <b>C147</b> has a logical "1" result
<b>34</b>	LOG2		OFF	when the Boolean operation specified by <b>C144</b> / <b>C145</b> / <b>C147</b> has a logical "0" result
<b>35</b>	LOG3			
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		<b>C141~C150</b>		
<b>Notes:</b>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91): 
See I/O specs on page 4-6				

## Lifetime Warning Output Function

**Capacitor life warning signal-** The inverter checks the operating life of the capacitors on the internal circuit board on the basis of the internal temperature and cumulative power on time. You can also monitor the state of the capacitor life warning signal (WAF) in **d022**. If the WAC signal is given out, it is recommended to replace the main PCB and control PCB.



**Cooling fan warning signal-** The inverter gives out the cooling fan speed-drop signal (WAF) when it detects the rotation speed of the cooling fan drops down to approx. 75% of the full speed. If "01" has been selected for the cooling fan control (**b092**), the inverter will not give out the WAF signal even when the cooling fan is stopped. If the signal is given out, check the cooling fan cover for clogging. You can also monitor the state of WAF signal in **d022**.

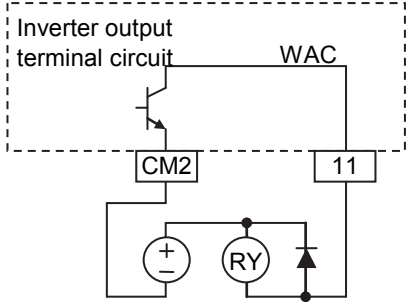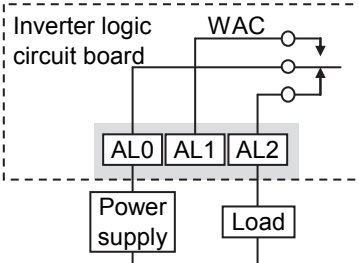Option Code	Terminal Symbol	Function Name	State	Description
39	WAC	Capacitor life warning signal	ON	Calculated lifetime of the electrolytic capacitor is expired
			OFF	Electrolytic capacitor is normal
40	WAF	Cooling fan warning signal	ON	Calculated lifetime of the cooling fan is expired
			OFF	Cooling fan is normal
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>				
<b>Notes:</b>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6





## Heat Sink Overheat Warning

The inverter monitors the temperature of its internal heatsink, and gives out the heat sink overheat warning signal (OHF) when the temperature exceeds the overheat warning level (C064).

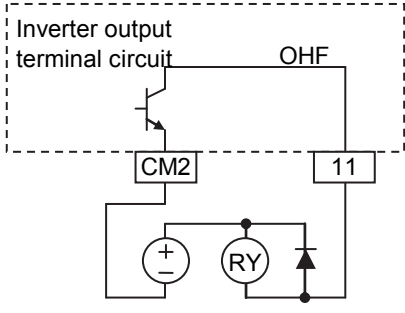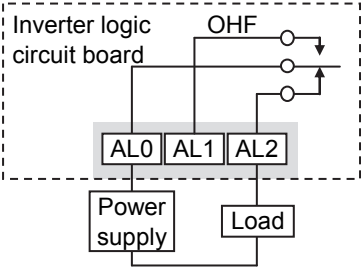Option Code	Terminal Symbol	Function Name	State	Description
42	OHF	Heat sink overheat warning	ON	Heat sink temperature exceeds the C064 set level
			OFF	Heat sink temperature does not exceed the C064 set level
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>		C064		
<b>Notes:</b>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6

## Low Load Detection Signal

The low load detection signal output indicates the general status of the inverter output current. When the output current becomes less than the value specified by **C039**, the LOC output turns ON.

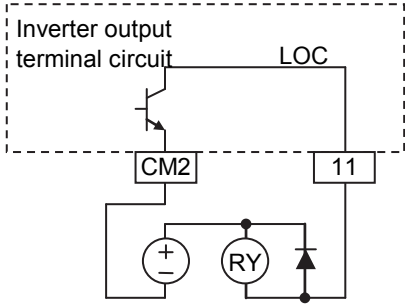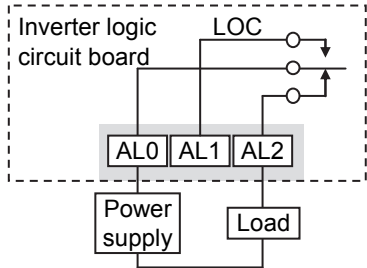Option Code	Terminal Symbol	Function Name	State	Description
<b>43</b>	LOC	Low load detection	ON	When the output current becomes less than the value specified by <b>C039</b>
			OFF	When the output current is more than the value specified by <b>C039</b>
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		<b>C038, C039</b>		
<b>Notes:</b>				 <p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>  <p>See I/O specs on page 4-6</p>

## General Input (1)~(3)

The functions are for EzSQ. Refer to a manual of EzSQ for detailed description.

Option Code	Terminal Symbol	Function Name	State	Description
<b>44</b>	MO1	General input (1)	ON	Each general output is turned on
<b>45</b>	MO2	General input (2)		
<b>46</b>	MO3	General input (3)	OFF	Each general output is turned off
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		
<b>Required settings</b>				
<b>Notes:</b> Refer to a manual of EzSQ for detailed explanation.				

## Inverter Ready Signal

The inverter outputs the inverter ready signal (IRDY) when it is ready for operation (i.e. when it can receive an operational command).


Option Code	Terminal Symbol	Function Name	State	Description
50	IRDY	Inverter ready signal	ON	The inverter is ready to accept the operation command
			OFF	The inverter is not ready to accept the operation command
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		C038, C039		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>- The inverter can recognize only the operation command is given while the IRDY signal is given out</li> <li>- If the IRDY signal is not given out, check whether the input power supply voltage (connect to the R, S, and T terminals) is within the range of specification</li> </ul>				
				<p>Example for terminal [11] (default output configuration shown – see page 3-89):</p>
				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>
				See I/O specs on page 4-6



## Forward Rotation, Reverse Rotation Signals

**Forward Rotation signal-** The inverter continues to output the forward rotation signal (FWR) while it is driving the motor for forward operation. The FWR signal is turned off while the inverter is driving the motor for reverse operation or stopping the motor.



**Reverse Rotation signal -** The inverter continues to output the forward rotation signal (RVR) while it is driving the motor for reverse operation. The RVR signal is turned off while the inverter is driving the motor for forward operation or stopping the motor.

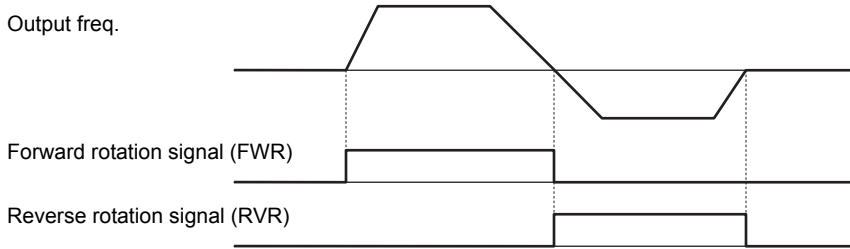

Option Code	Terminal Symbol	Function Name	State	Description
51	FWR	Forward rotation	ON	Inverter is driving the motor for forward operation
			OFF	Inverter is driving the motor for reverse operation, or the motor is stopped
52	RVR	Reverse rotation	ON	Inverter is driving the motor for reverse operation
			OFF	Inverter is driving the motor for forward operation, or the motor is stopped
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>				
<b>Notes:</b>				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> <p>See I/O specs on page 4-6</p>

## Major Failure Signal

The inverter gives out the major failure signal in addition to an alarm signal when it trips because of one of the errors listed in note down below.

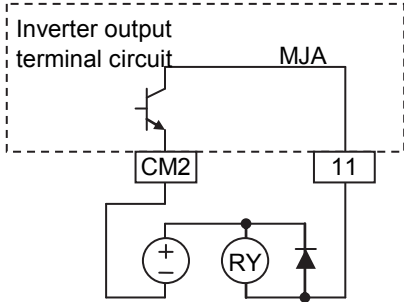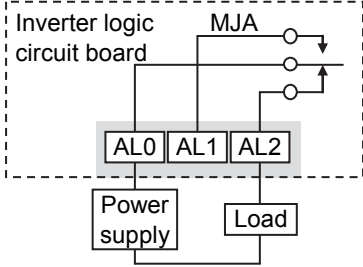Option Code	Terminal Symbol	Function Name	State	Description
53	MJA	Major failure signal	ON	
			OFF	
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see <a href="#">page 3-89</a> ):  
<b>Required settings</b>				
<b>Notes:</b> The output applies to the tripping caused by hardware as shown below.				
No.	Error code	Description		
1	<b>E08.*</b>	EEPROM error		
2	<b>E10.*</b>	CT error		
3	<b>E11.*</b>	CPU error		
4	<b>E14.*</b>	Ground-fault at power ON		
5	<b>E22.*</b>	CPU error		
6	<b>E25.*</b>	Main Circuit Error		
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see <a href="#">page 4-51</a> and <a href="#">3-91</a> ):  
				See I/O specs on page 4-6



## Window Comparator for Analog Inputs

The window comparator function outputs signals when the value of analog inputs [O] and [OI] are within the maximum and minimum limits specified for the window comparator. You can monitor analog inputs with reference to arbitrary levels (to find input terminal disconnection and other errors).

Refer to chapter 3 for detailed information.

Option Code	Terminal Symbol	Function Name	State	Description
54	WCO	Window comparator for analog voltage input	ON	[O] input is inside of the window comparator
			OFF	[O] input is outside of the window comparator
55	WCOI	Window comparator for analog current input	ON	[OI] input is inside of the window comparator
			OFF	[OI] input is outside of the window comparator
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>		b060~b065, b070, b071		
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>- Output values of ODc and OIDc are the same as those of WCO and WCOI, respectively.</li> </ul>				
				<p>The diagram shows an inverter output terminal circuit enclosed in a dashed box. It features a transistor with its base connected to terminal CM2 and its emitter to ground. The collector is connected to terminal 11. A feedback path from terminal 11 goes through a diode to the base of the transistor. Below the transistor, a battery and a relay labeled RY are connected in parallel between terminal 11 and ground.</p>
				<p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p> <p>The diagram shows an inverter logic circuit board enclosed in a dashed box. It has three terminals labeled AL0, AL1, and AL2. Terminal AL0 is connected to a power supply. Terminal AL1 is connected to a load. Terminal AL2 is connected to ground. The WCO output is shown as three terminals with arrows pointing outwards.</p>
				See I/O specs on page 4-6



## Frequency Command Source, Run Command Source

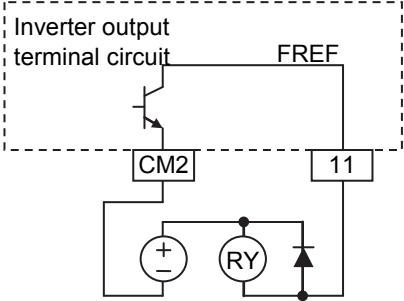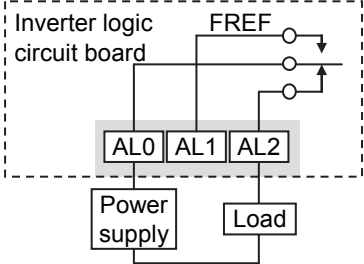Option Code	Terminal Symbol	Function Name	State	Description
58	FREF	Frequency command source	ON	
			OFF	
59	REF	Run command source	ON	
			OFF	
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):
<b>Required settings</b>				
<b>Notes:</b>				 <p>Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):</p>  <p>See I/O specs on page 4-6</p>

## 2<sup>nd</sup> Motor Selection

This function allows you to switch the inverter setting to control two different types of motors. To use this function, assign function “08” to one of the input terminal and make it on or off. When 2<sup>nd</sup> motor parameters are selected, output signal SETM turns on.

No.	Codes	Description	No.	Codes	Description
1	F202	Acceleration time (1)	22	A295	Acc1 to Acc2 frequency transition point
2	F203	Deceleration time (1)	23	A296	Dec1 to Dec2 frequency transition point
3	A201	Frequency source	24	C241	Overload warning level
4	A202	Run command source	25	H202	Motor data selection
5	A203	Base frequency	26	H203	Motor capacity
6	A204	Maximum frequency	27	H204	Motor poles
7	A220	Multi-speed frequency 0	28	H205	Motor speed response
8	A241	Torque boost select	29	H206	Motor stabilization constant
9	A242	Manual torque boost value	30	H220	Motor constant R1 (Hitachi motor)
10	A243	Manual torque boost freq.	31	H221	Motor constant R2 (Hitachi motor)
11	A244	V/f characteristic curve	32	H222	Motor constant L (Hitachi motor)
12	A245	V/f gain	33	H223	Motor constant IO (Hitachi motor)
13	A246	Voltage comp. gain for automatic torque boost	34	H224	Motor constant J (Hitachi motor)
14	A247	Slip comp. gain for automatic torque boost	35	H230	Motor constant R1 (Auto tuned data)
15	A261	Frequency upper limit	36	H231	Motor constant R2 (Hitachi motor)
16	A262	Frequency lower limit	37	H232	Motor constant L (Hitachi motor)
17	A281	AVR function select	38	H233	Motor constant IO (Hitachi motor)
18	A282	AVR voltage select	39	H234	Motor constant J (Hitachi motor)
19	A292	Acceleration time (2)			
20	A293	Deceleration time (2)			
21	A294	Select method to switch to Acc2/Dec2 profile			

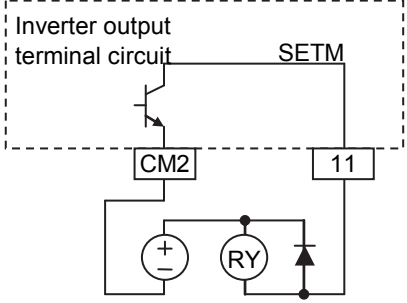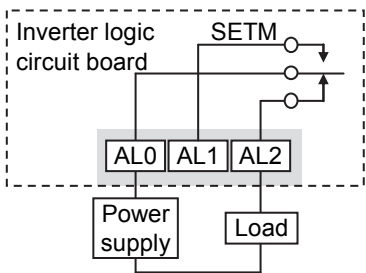Option Code	Terminal Symbol	Function Name	State	Description
60	SETM	2 <sup>nd</sup> motor selection	ON	2 <sup>nd</sup> motor parameter sets are selected
			OFF	1 <sup>st</sup> motor parameter sets are selected
<b>Valid for inputs:</b>		11, 12, AL0 – AL2		Example for terminal [11] (default output configuration shown – see page 3-89):  
<b>Required settings</b>				
<b>Notes:</b>				
				Example for terminal [AL0], [AL1], [AL2] (requires output configuration – see page 4-51 and 3-91):  
				See I/O specs on page 4-6

## STO (Safe Torque Off) Performance Monitor


This signal is specific for Safe Stop function.

Option Code	Terminal Symbol	Function Name	State	Description
62	EDM	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	ON	
			OFF	
<b>Valid for inputs:</b>		11, 12, AL0 – AL2	Dedicated to terminal [11]:	
<b>Required settings</b>				
<b>Notes:</b>				

# Analog Input Operation

The WJ200 inverters provide for analog input to command the inverter frequency output value. The analog input terminal group includes the [L], [OI], [O], and [H] terminals on the control connector, which provide for Voltage [O] or Current [OI] input. All analog input signals must use the analog ground [L].

If you use either the voltage or current analog input, you must select one of them using the logic input terminal function [AT] analog type. Refer to the table on next page showing the activation of each analog input by combination of **A005** set parameter and [AT] terminal condition. The [AT] terminal function is covered in “Analog Input Current/Voltage Select” in section 4. Remember that you must also set **A001 = 01** to select analog input as the frequency source.



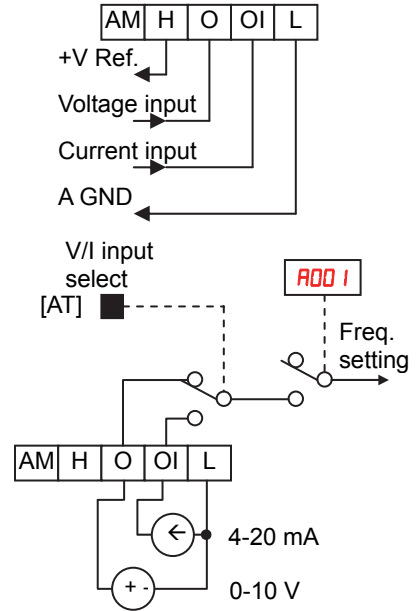


**NOTE:** If no logic input terminal is configured for the [AT] function, then inverter recognizes that [AT]=OFF and MCU recognizes [O]+[OI] as analog input.

Using an external potentiometer is a common way to control the inverter output frequency (and a good way to learn how to use the analog inputs). The potentiometer uses the built-in 10V reference [H] and the analog ground [L] for excitation, and the voltage input [O] for the signal. By default, the [AT] terminal selects the voltage input when it is OFF. Take care to use the proper resistance for the potentiometer, which is 1~2 kΩ, 2 Watts.

**Voltage Input** – The voltage input circuit uses terminals [L] and [O]. Attach the signal cable’s shield wire only to terminal [L] on the inverter. Maintain the voltage within specifications (do not apply negative voltage).

**Current Input** – The current input circuit uses terminals [OI] and [L]. The current comes from a *sourcing* type transmitter; a *sinking* type will not work! This means the current must flow into terminal [OI], and terminal [L] is the return back to the transmitter. The input impedance from [OI] to [L] is 100 Ohms. Attach the cable shield wire only to terminal [L] on the inverter.

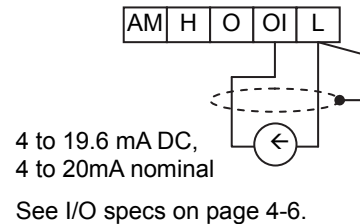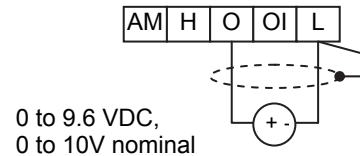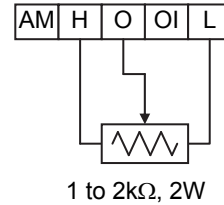

The following table shows the available analog input settings. Parameter **A005** and the input terminal [AT] determine the External Frequency Command input terminals that are available, and how they function. The analog inputs [O] and [OI] use terminal [L] as the reference (signal return).

<b>A005</b>	[AT] Input	Analog Input Configuration
<b>00</b>	ON	[O]
	OFF	[OI]
<b>02</b>	ON	[O]
	OFF	Integrated POT on external panel
<b>03</b>	ON	[OI]
	OFF	Integrated POT on external panel


#### Other Analog Input-related topics:

- “Analog Input Settings”
- “Additional Analog Input Settings”
- “Analog Signal Calibration Settings”
- “Analog Input Current/Voltage Select”
- “ADD Frequency Enable”
- “Analog Input Disconnect Detect”



## Pulse Train Input Operation

The WJ200 inverter is capable of accepting pulse train input signals, that are used for frequency command, process variable (feedback) for PID control, and simple positioning. The dedicated terminal is called “EA” and “EB”. Terminal “EA” is a dedicated terminal, and the terminal “EB” is an intelligent terminal, that has to be changed by a parameter setting.

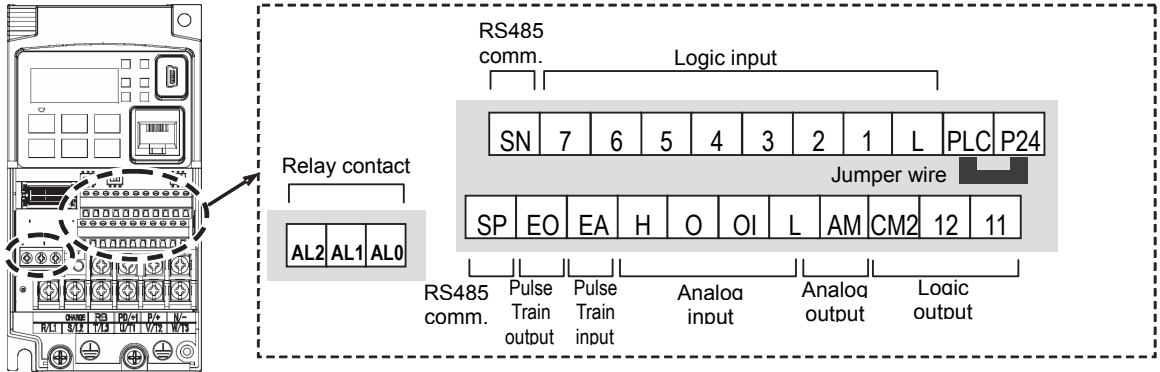

Terminal Name	Description	Ratings
EA	Pulse train input A	For frequency command, 32kHz max. Common is [L]
EB (Input terminal 7)	Pulse train input B (Set <b>C007</b> to <b>85</b> )	27Vdc max. For frequency command, 2kHz max. Common is [PLC]

### (1) Frequency Command by pulse train input

When using this mode, you should set **A001** to **06**. In this case the frequency is detected by input-capture, and calculated based on the ratio of designated max. frequency (under 32kHz). Only an input terminal “EA” will be used in this case.

### (2) Using for process variable of PID control


You can use the pulse train input for process variable (feedback) of PID control. In this case you need to set **A076** to **03**. Only “EA” input terminal is to be used.

### (3) Simple positioning by pulse train input

This is to use the pulse train input like an encoder signal. You can select three types of operation.

# Analog Output Operation

In inverter applications it is useful to monitor the inverter operation from a remote location or from the front panel of an inverter enclosure. In some cases, this requires only a panel-mounted volt meter. In other cases, a controller such as a PLC may provide the inverter's frequency command, and require inverter feedback data (such as output frequency or output current) to confirm actual operation. The analog output terminal [AM] serves these purposes.

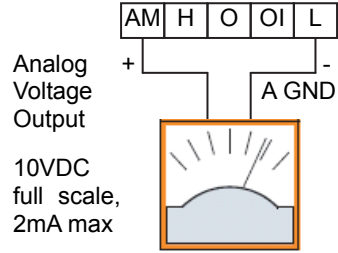

See I/O specs on page4-6

The inverter provides an analog voltage output on terminal [AM] with terminal [L] as analog GND reference. The [AM] can output inverter frequency or current output value. Note that the voltage range is 0 to +10V (positive-going only), regardless of forward or reverse motor rotation. Use **C028** to configure terminal [AM] as indicated below.

Func.	Code	Description
<b>C028</b>	<b>00</b>	Inverter output frequency
	<b>01</b>	Inverter output current
	<b>02</b>	Inverter output torque
	<b>03</b>	Digital output frequency
	<b>04</b>	Inverter output voltage
	<b>05</b>	Inverter input power
	<b>06</b>	Electronic Thermal Load
	<b>07</b>	LAD frequency
	<b>08</b>	Digital current monitor
	<b>10</b>	Cooling fin temperature
	<b>12</b>	General purpose
	<b>15</b>	Pulse train
<b>16</b>	Option	


The [AM] signal offset and gain are adjustable, as indicated below.

Func.	Description	Range	Default
<b>C106</b>	[AM] output gain	0~255.	100.
<b>C109</b>	[AM] output offset	0.0~10.0	0.0


The graph below shows the effect of the gain and offset setting. To calibrate the [AM] output for your application (analog meter), follow the steps below:

1. Run the motor at the full scale speed, or most common operating speed.
  - a. If the analog meter represents output frequency, adjust offset (**C109**) first, and then use **C106** to set the voltage for full scale output.
  - b. If [AM] represents motor current, adjust offset (**C109**) first, and then use **bC106** to set the voltage for full scale output. Remember to leave room at the upper end of the range for increased current when the motor is under heavier loads.

AM output offset adjustment

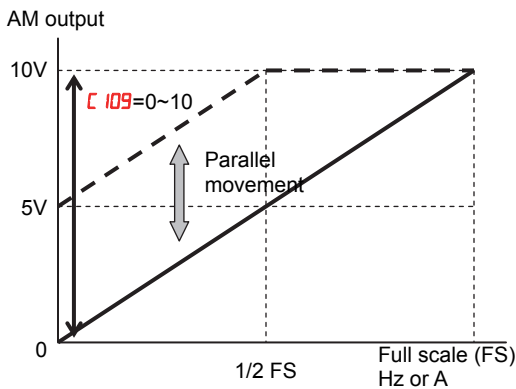

AM output gain adjustment

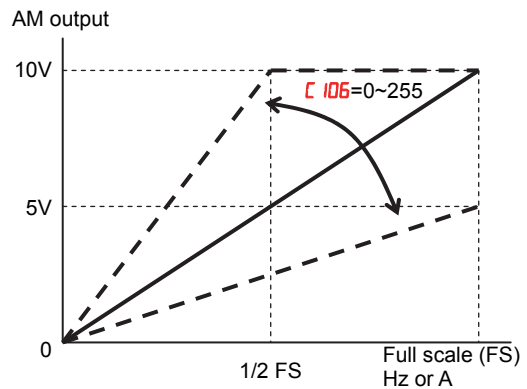

**NOTE:** As mentioned above, first adjust the offset, and then adjust the gain. Otherwise the required performance cannot be obtained because of the parallel movement of the offset adjustment.

---

# Inverter System Accessories



---


In This Chapter...	page
- Introduction .....	2
- Component Description .....	3

---

# Introduction

## Introduction

A motor control system will obviously include a motor and inverter, as well as fuses for safety. If you are connecting a motor to the inverter on a test bench just to get started, that's all you may need for now. But a fully developed system can also have a variety of additional components. Some can be for noise suppression, while others may enhance the inverter's braking performance. The figure below shows a system with several possible optional components, and the table gives part number information.

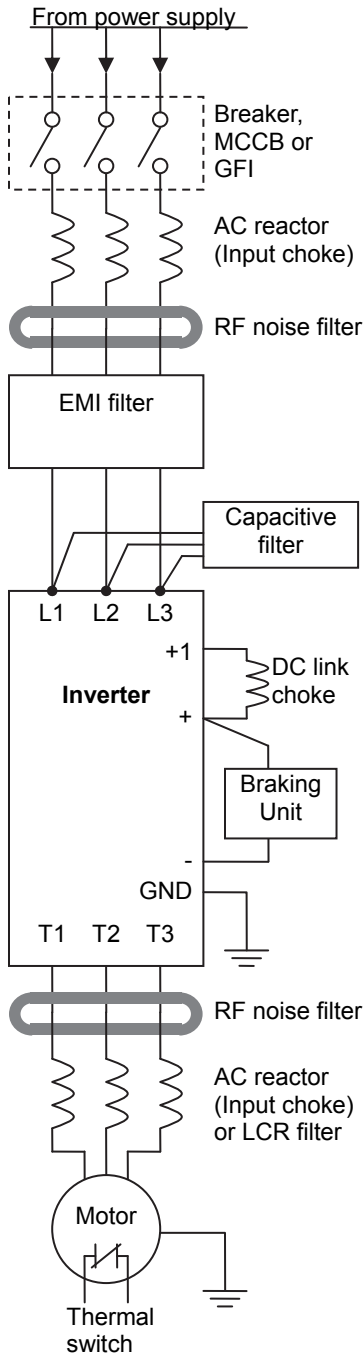

Name	Part No. Series		See page
	EU, Japan	USA	
AC reactor, input side	ALI-xxx2	HRL-x	5-3
RF noise filter, input side	ZCL-xxx	ZCL-xxx	5-4
EMI filter (for CE)	(to be fixed)		5-4
Capacitive filter	CFI-x	CFI-x	5-4
DC link choke	DCL-x-xx	HDC-xxx	5-5
Braking resistor	JRB-xxx-x SRB-xxx-x	JRB-xxx-x SRB-xxx-x	5-5
Braking resistor NEMA-rated	-	HRB-x, NSRBx00-x NJRB-xxx	5-5
Braking unit	BRD-xxx	BRD-xxx	5-5
RF noise filter, output side	ZCL-xxx	ZCL-xxx	5-4
AC reactor, output side	ACL-x2-xxx	HRL-xxx	5-3
LCR filter	Combination: ACL-x2-xxx LPF-xxx R-2-xxx	HRL-xxC	5-3



**NOTE:** The Hitachi part number series for accessories includes different sizes of each part type, specified by the -x suffix. Hitachi product literature can help match size and rating of your inverter to the proper accessory size.

Each inverter accessory comes with its own printed instruction manual. Please refer to those manuals for complete installation details. This chapter gives only an overview of these optional system devices.

# Component Descriptions

## AC Reactors, Input Side

This is useful in suppressing harmonics induced on the power supply lines, or when the main power voltage imbalance exceeds 3% (and power source capacity is more than 500 kVA), or to smooth out line fluctuations. It also improves the power factor.

In the following cases for a general-purpose inverter, a large peak current flows on the main power supply side, and is able to destroy the inverter module:

- If the unbalanced factor of the power supply is 3% or higher
- If the power supply capacity is at least 10 times greater than the inverter capacity (the power supply capacity is 500 kVA or more)
- If abrupt power supply changes are expected

Examples of these situations include:

1. Several inverters are connected in parallel, sharing the same power bus
2. A thyristor converter and an inverter are connected in parallel, sharing the same power bus
3. An installed phase-advance (power factor correction) capacitor opens and closes

Where these conditions exist or when the connected equipment must be highly reliable, you **MUST** install an input-side AC reactor of 3% (at a voltage drop at rated current) with respect to the supply voltage on the power supply side. Also, where the effects of an indirect lightning strike are possible, install a lightning conductor.

### Example calculation:

$V_{RS} = 205V$ ,  $V_{ST} = 203V$ ,  $V_{TR} = 197V$ ,

where  $V_{RS}$  is R-S line voltage,  $V_{ST}$  is S-T line voltage,  $V_{TR}$  is T-R line voltage

Unbalance factor of voltage =

$$\frac{\text{Max. line voltage}(\text{min.}) - \text{Mean Line voltage}}{\text{Meanline voltage}} \times 100$$

$$= \frac{V_{RS} - (V_{RS} + V_{ST} + V_{TR}) / 3}{(V_{RS} + V_{ST} + V_{TR}) / 3} \times 100 = \frac{205 - 202}{202} \times 100 = 1.5\%$$

Please refer to the documentation that comes with the AC reactor for installation instructions.

## AC Reactors, Output Side

This reactor reduces the vibrations in the motor caused by the inverter's switching waveforms, by smoothing the waveforms to approximate commercial power quality. It is also useful to reduce the reflected voltage wave phenomenon when wiring from the inverter to the motor is more than 10m in length. Please refer to the documentation that comes with the AC reactor for installation instructions.

### Zero-phase Reactor (RF Noise Filter)

The zero-phase reactor helps reduce radiated noise from the inverter wiring. It can be used on the input or output side of the inverter.

The example zero-phase reactor shown to the right comes with a mounting bracket. The wiring must go through the opening to reduce the RF component of the electrical noise.

Loop the wires three times (four turns) to attain the full RF filtering effect. For larger wire sizes, place multiple zero-phase reactors (up to four) side-by-side for a greater filtering effect.



ZCL-xxx

## WJ200 Dynamic Braking Selection Tables

The WJ200 series inverter models have internal braking units. Additional stopping torque is available by adding external resistors. The required braking torque depends on your particular application. Other tables in this section will help you choose the proper resistor.

200V Class		Performance without resistor		Performance at Minimum Resistance			Min. Resistance at 100% Braking Duty Cycle	
WJ200 Model Number	HP	Integrated Resister	Braking Torque (%)	Min. Resistance (Ohms)	Braking Torque (%)	Max. Braking Duty Cycle (%)	Min. Resistance at 100% Braking Duty Cycle (Ohms)	Braking Torque (%)
001	1/8	N.A.	50	100	200	10	317	150
002	1/4	N.A.	50	100	200	10	317	150
004	1/2	N.A.	50	100	200	10	317	100
007	1	N.A.	50	50	200	10	159	100
015	2	N.A.	50	50	150	10	159	50
022	3	N.A.	20	35	150	10	111	50
037	5	N.A.	20	35	100	10	111	30
055	7.5	N.A.	20	20	80	10	64	30
075	10	N.A.	20	17	80	10	54	30
110	15	N.A.	15	17	60	10	54	20
150	20	N.A.	15	10	60	10	32	20

400V Class		Performance without resistor		Performance at Minimum Resistance			Min. Resistance at 100% Braking Duty Cycle	
WJ200 Model Number	HP	Integrated Resister	Braking Torque (%)	Min. Resistance (Ohms)	Braking Torque (%)	Max. Braking Duty Cycle (%)	Min. Resistance at 100% Braking Duty Cycle (Ohms)	Braking Torque (%)
004	1/2	N.A.	50	180	150	10	570	100
007	1	N.A.	50	180	150	10	570	100
015	2	N.A.	50	180	150	10	570	60
022	3	N.A.	20	100	100	10	317	60
030	4	N.A.	20	100	100	10	317	50
040	5	N.A.	20	100	100	10	317	40
055	7.5	N.A.	20	70	80	10	222	40
075	10	N.A.	20	70	80	10	222	30
110	15	N.A.	15	70	60	10	222	20
150	20	N.A.	15	35	60	10	111	20



---

# Troubleshooting and Maintenance



## 6

---

In This Chapter...	page
- Troubleshooting.....	2
- Monitoring Trip Events, History, & Conditions.....	9
- Restoring Factory Default Settings.....	15
- Maintenance and Inspection.....	16
- Warranty.....	23

---

# Troubleshooting

## Safety Messages

Please read the following safety messages before troubleshooting or performing maintenance on the inverter and motor system.



**WARNING:** Wait at least ten (10) minutes after turning OFF the input power supply before performing maintenance or an inspection. Otherwise, there is a danger of electric shock.



**WARNING:** Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.). Be sure to use tools with insulated handles. Otherwise, there is a danger of electric shock and/or injury to personnel.



**WARNING:** Never remove connectors by pulling on its wire leads (wires for cooling fan and logic P.C.board). Otherwise, there is a danger of fire due to wire breakage and/or injury to personnel.

## General Precautions and Notes

- Always keep the unit clean so that dust or other foreign matter does not enter the inverter.
- Take special care in regard to breaking wires or making connection mistakes.
- Firmly connect terminals and connectors.
- Keep electronic equipment away from moisture and oil. Dust, steel filings and other foreign matter can damage insulation, causing unexpected accidents, so take special care.

## Inspection Items

This chapter provides instructions or checklists for these inspection items:

- Daily inspection
- Periodical inspection (approximately once a year)
- Insulation resistance (Megger) test (approximately once two years)

## Troubleshooting Tips

The table below lists typical symptoms and the corresponding solution(s).

### 1. Inverter does not power up.

Possible Cause(s)	Corrective Action
Power cable is incorrectly wired.	Check input wiring
Short bar or DCL between [P] and [PD] is disconnected.	Install short bar or DCL between [P] and [PD] terminal.
Power cable is breaking.	Check input wiring.

### 2. Motor does not start.

Possible Cause(s)	Corrective Action
Incorrect RUN command source is selected.	Check RUN command source (A002) for correct source. Ex. Terminal (digital input) : 01 Operator (RUN key) : 02
Incorrect frequency source is selected.	Check frequency source (A001) for correct source. Ex. Terminal (analog input) : 01 Operator (F001) : 02
Frequency setting is 0Hz.	If frequency source is terminal (A001=01), check analog voltage or current signal at [O] or [OI] terminals. If frequency source is operator (A001=02), set frequency in F001. Depending on frequency source, input proper frequency reference. If frequency source is multi-speed operation, set frequency in A020 to A035 and A220.
RUN command is not set to input terminal.	If RUN command source is terminal (A002=01), set "forward" (00:FW) or "reverse" (01:RV) to any input terminals. In case of 3-wire control, set "3-wire start" (20:STA), "3-wire stop" (21:STP) and "3-wire FW/RV" (22:F/R) to any input terminals.
"Multi-speed input(s) (02 to 05:CF1 to CF4)" is (are) set to input terminal(s) and active.	Deactivate the input(s).
Both FWD and REV input are active.	If RUN command source is FWD/REV input, activate either FWD or REV input.
Rotation direction restriction (b035) is enabled.	Check b035.
Incorrect input wiring or short bar position	Wire inputs correctly and/or install short bar. (ON/OFF status of inputs are monitored in d005.)
Incorrect analog input or variable resistor wiring	Wire correctly. In case of analog voltage or variable resistor input, check voltage between [O] and [L] terminal. In case of analog current, check current between current source and [OI] terminal.
RUN command source is operator, but input terminal is set to "Force terminal" and active.	Deactivate the input.
RUN command source is terminal, but input terminal is set to "Force operator" and active.	Deactivate the input.
Inverter is in trip status. (With ALARM LED and "Exxx" indication)	Reset inverter by STOP/RESET key and check error code.

Either GS1 or GS2 input is inactive.	Activate both GS1 and GS2. or disable that function by dip switch.
--------------------------------------	--

Possible Cause(s)	Corrective Action
"18:RS", "14:CS" or "11:FRS" is set to input terminal and the input is active.	Deactivate the input.
"84:ROK" is set to input terminal and the input is active.	Activate the input.
Cable between inverter and motor or internal cable of motor is breaking.	Check the wiring.
Excess load.	Remove excess load.
Motor is locked.	Unlock the motor.

### 3. Motor does not accelerate to command speed.

Possible Cause(s)	Corrective Action
Bad connection of analog wiring.	Check the wiring. In case of analog voltage or variable resistor input, check voltage between [O] and [L] terminal. In case of analog current, check current between current source and [OI] terminal.
Overload restriction or OC suppression function works.	Check the function level.
Max. frequency (A004) or upper limit (A061/A261) is lower than as expected.	Check the value.
Acceleration time is excessive.	Change acceleration time (F002/A092/A292).
"Multi-speed input(s) (02 to 05:CF1 to CF4)" is (are) set to input terminal(s) and active.	Deactivate the input(s).
"06:JG " is set to input terminal and the input is active.	Deactivate the input.
Excess load.	Remove excess load.
Motor is locked.	Unlock the motor.

### 4. Inverter does not respond to changes in frequency setting from operator.

Possible Cause(s)	Corrective Action
Incorrect frequency source is selected.	Check frequency source (A001=02).
"51:F-TM" is set to input terminal and the input is active.	Deactivate the input.

### 5. A part of function codes is not displayed.

Possible Cause(s)	Corrective Action
"Function code display restriction" (b037) is enabled.	Set 00 (all display) to b037.
"86:DISP" is set to input terminal and the input is active.	Deactivate the input.

### 6. Operator (keypad) does not respond.

Possible Cause(s)	Corrective Action
"86:DISP" is set to input terminal and the input is active.	Deactivate the input.

## 7. Parameter data does not change.

Possible Cause(s)	Corrective Action
Inverter is in RUN status.	Stop the inverter, make sure the motor stops and try again. If "RUN mode edit" is enabled, a part of function codes can be changed in RUN status.
Software lock function (b031) is enabled.	Disable software lock function.

## 8. Motor rotates reverse direction with forward command.

Possible Cause(s)	Corrective Action
Incorrect power wiring.	Exchange any two of U/T1, V/T2 or W/T3.
Incorrect logic of direction signal in 3-wire operation.	Check the logic of input set as "22:F/R".

## 9. Motor rotates reverse direction with RUN key of keypad.

Possible Cause(s)	Corrective Action
Keypad RUN key routing (F004) is incorrectly set.	Check F004.

## 10. .Overcurrent trip (E03)

Possible Cause(s)	Corrective Action
Acceleration time is short.	Change acceleration time (F002/A092/A292). Enable "acceleration hold" function (A069,A070)
Excess load.	Remove excess load. Enable torque boost function. Set free V/f in V/F characteristic curve selection (A044/A244=02)
Overload restriction (b021) is disabled (00).	Enable overload restriction (b021=01/02/03).

When the inverter trips due to Overcurrent(E03), despite overload restriction is enabled(b021=01/02/03).

Overload restriction level (b022/b025) is high.	Set overload restriction level (b022/b025) lower.
Deceleration rate at overload restriction (b023/b026) is too short.	Set deceleration rate at overload restriction (b023/b026) longer.

## 11. STOP/RESET key does not respond.

Possible Cause(s)	Corrective Action
STOP/RESET key disabled.	Check "STOP key enable" function. (b087)
Deceleration overvoltage suppression (b130) or controlled deceleration on power loss (b050) function is enabled.	Check b130 and b050.

## 12. Sound noise of motor or machine.

Possible Cause(s)	Corrective Action
Carrier frequency is low.	Set carrier frequency (b083) higher. (This could cause electric noise and leak current higher.)
Machine frequency and motor frequency are resonated.	Change output frequency slightly. If resonating in accel/deceleration, use jump frequency function (A063-68) to avoid machine frequency.
Over excitation	Set base frequency (A003/A203) and AVR voltage (A082/A282) according to motor rating. If not improved, reduce V/f gain (A045/A245) slightly or change V/f curve (A044/A244) as free V/f.

## 13. Overload trip (E05).

Possible Cause(s)	Corrective Action
Improper electronic thermal level	Check electronic thermal setting (b012/b013)

## 14. Over voltage trip (E07).

Possible Cause(s)	Corrective Action
Short deceleration time	Change deceleration time. (F003/F203/A093/A293)
Overvoltage suppression during deceleration (b130) is disabled (00).	Enable overvoltage suppression (b130=01/02).

When the inverter trips due to over voltage, despite over voltage suppression is enabled.

Improper overvoltage suppression propotional gain (b134) or integral time (135).	Check overvoltage suppression proportional gain (b134) and integral time (b135).
Overvoltage suppression level (b131) is high.	Set Overvoltage suppression level (b131) lower. (Lower limit of parameter b131 must be $(\text{input voltage}) \times \sqrt{2} \times 1.1$ .)

## 15. Thermistor error trip (E35).

Possible Cause(s)	Corrective Action
Thermistor is set to input [5] and DC24V is supplied.	Check setting of input terminal [5] (C005).

## 16. Unstable output frequency.

Possible Cause(s)	Corrective Action
Improper parameters	Set output frequency slightly smaller or bigger value than power source frequency. Change motor stabilization constant (H006/H203).
Load variation is excessive.	Change motor and inverter to one size bigger.
Power voltage variation is excessive.	Check power source.

## 17. Output torque is not sufficient.

Possible Cause(s)	Corrective Action
Improper parameters [Acceleration]	Increase torque boost (A042/A242-A043/A243)
	Reduce carrier frequency (A083).
	Change V/f curve (A044/A244) to SLV.
	Change torque boost select (A041/A241) to automatic.
Improper parameters [Deceleration]	Increase deceleration time (F003/F203/A093/A293).
	Disable AVR function (A081/A281).
	Install dynamic braking resistor or regenerative braking unit.

18. If cable to operator is disconnected, inveter will trip or stop.

Possible Cause(s)	Corrective Action
Improper setting of b165.	Set ex.operator com loss action (b165) to 02.

19. No response over Modbus communication.

Possible Cause(s)	Corrective Action
New parameter is not updated.	If C071, C074 or C075 is changed, cycle power or reset inverter by turning RS terminal ON and OFF.
Incorrect setting of RUN command source (A002/A202).	Set RUN command source (A002/A202) to 03.
Incorrect setting of Frequency source (A001/A201).	Set frequency source (A001/A201) to 03.
Incorrect setting of com. speed.	Check communication speed (A071).
Incorrect setting or duplication of Modbus address.	Check Modbus address (A072).
Incorrect setting of com. parity.	Check communication parity (A074).
Incorrect setting of com. stop bit.	Check communication stop bit (A075).
Incorrect wiring.	Check communication wiring at SP,SN terminals.

20. When inverter starts, ECB (Earth leakage Circuit Breaker) trips.

Possible Cause(s)	Corrective Action
Leak current of inverter is excessive.	Reduce carrier frequency (A083).
	Increase current sensor level of ECB or replace ECB with another one having higher current sensor level.

21.DC braking doesn't work

Possible Cause(s)	Corrective Action
DC braking force for deceleration (A054) isn't set. (Defaults (0.))	Set DC braking force for deceleration (A054).
DC braking time for deceleration (A055) isn't set. (Defaults (0.0))	Set DC braking time for deceleration (A055).

22.Under-voltage error

Possible Cause(s)	Corrective Action
Decrease in input voltage due to capacity shortage of electric source.	Make capacity of electric source larger.

23.TV or radio near inverter receives noises

Possible Cause(s)	Corrective Action
The radiation noise generated by the inverter.	Put away those devices from the inverter as far as possible.

## 24. Motor overheated

Possible Cause(s)	Corrective Action
The wiring head to a motor is more than 20m	Shortening of the wiring head to a motor. Install peripheral devices such as LCR filters.
The inverter output or a motor cable or a motor run as open-phase	Depending on a cause point, repair or replace Inverter, motor cable or motor.
A motor different in the voltage class is connected	Connect a motor of the same voltage class.
Too small voltage, large voltage drop or voltage imbalance	Improvement of the receiving voltage / number of phase / voltage source capacity of the inverter, shortening of the interconnection length to a motor, repair of the inverter or replacement.
Inappropriate parameter setting (Please confirm once again that parameters in right column are appropriate value, if the motor is damaged by overheating or parameters are corrected to avoid trip and warning indication. If it is inappropriate, the motor may overheat.)	Review electronic thermal parameters, and set appropriate value. (b012/b212/b013/b213/b015 - b020/b910 - b913)
	Base frequency (A003/A203/A004/A204), AVR motor receiving voltage (A081/A281/A082/A282/A083/A084), V/f properties (A041 - A247/b100 - b113), the IM motor constant (H020 - H224/H030 - H234), the PM motor constant (H105 - H110/H111 - H113), DC braking (A051 - A059) Review each above parameters, and set appropriate values.




# Monitoring Trip Events, History, & Conditions

## Fault Detection and Clearing

The microprocessor in the inverter detects a variety of fault conditions and captures the event, recording it in a history table. The inverter output turns OFF, or “trips” similar to the way a circuit breaker trips due to an over-current condition. Most faults occur when the motor is running (refer to the diagram to the right). However, the inverter could have an internal fault and trip in Stop Mode.

In either case, you can clear the fault by pressing the Stop/Reset key. Additionally, you can clear the inverter’s cumulative trip history by performing the procedure “Restoring Factory Default Settings” on page 6-8 (setting **b084=00** will clear the trip history but leave inverter settings intact).

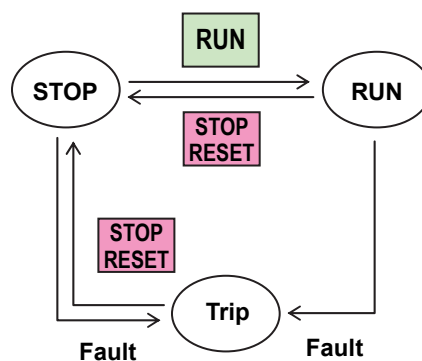










## Error Codes

An error code will appear on the display automatically when a fault causes the inverter to trip. The following table lists the cause associated with the error.

 Error Code	Name	Cause(s)
<b>E01</b>	Over-current event while at constant speed	The inverter output was short-circuited, or the motor shaft is locked or has a heavy load. These conditions cause excessive current for the inverter, so the inverter output is turned OFF. The dual-voltage motor is wired incorrectly.
<b>E02</b>	Over-current event during deceleration	
<b>E03</b>	Over-current event during acceleration	
<b>E04</b>	Over-current event during other conditions	
<b>E05</b>	Overload protection	When a motor overload is detected by the electronic thermal function, the inverter trips and turns OFF its output.
<b>E06</b>	Braking resistor overload protection	When the BRD operation rate exceeds the setting of "b090", this protective function shuts off the inverter output and displays the error code.
<b>E07</b>	Over-voltage protection	When the DC bus voltage exceeds a threshold, due to regenerative energy from the motor.
<b>E08</b>	EEPROM error	When the built-in EEPROM memory has problems due to noise or excessive temperature, the inverter trips and turns OFF its output to the motor.
<b>E09</b>	Under-voltage error	A decrease of internal DC bus voltage below a threshold results in a control circuit fault. This condition can also generate excessive motor heat or cause low torque. The inverter trips and turns OFF its output.
<b>E10</b>	Current detection error	If an error occurs in the internal current detection system, the inverter will shut off its output and display the error code.

Error Code	Name	Cause(s)
<b>E11</b>	CPU error	A malfunction in the built-in CPU has occurred, so the inverter trips and turns OFF its output to the motor.
<b>E12</b>	External trip	A signal on an intelligent input terminal configured as EXT has occurred. The inverter trips and turns OFF the output to the motor.
<b>E13</b>	USP	When the Unattended Start Protection (USP) is enabled, an error occurred when power is applied while a Run signal is present. The inverter trips and does not go into Run Mode until the error is cleared.
<b>E14</b>	Ground fault	The inverter is protected by the detection of ground faults between the inverter output and the motor upon during powerup tests. This feature protects the inverter, and does not protect humans.
<b>E15</b>	Input over-voltage	The inverter tests for input over-voltage after the inverter has been in Stop Mode for 100 seconds. If an over-voltage condition exists, the inverter enters a fault state. After the fault is cleared, the inverter can enter Run Mode again.
<b>E21</b>	Inverter thermal trip	When the inverter internal temperature is above the threshold, the thermal sensor in the inverter module detects the excessive temperature of the power devices and trips, turning the inverter output OFF.
<b>E22</b>	CPU communication error	When communication between two CPU fails, inverter trips and displays the error code.
<b>E25</b>	Main circuit error (*3)	The inverter will trip if the power supply establishment is not recognized because of a malfunction due to noise or damage to the main circuit element.
<b>E30</b>	Driver error	An internal inverter error has occurred at the safety protection circuit between the CPU and main driver unit. Excessive electrical noise may be the cause. The inverter has turned OFF the IGBT module output.
<b>E35</b>	Thermistor	When a thermistor is connected to terminals [5] and [L] and the inverter has sensed the temperature is too high, the inverter trips and turns OFF the output.
<b>E36</b>	Braking error	When "01" has been specified for the Brake Control Enable (b120), the inverter will trip if it cannot receive the braking confirmation signal within the Brake Wait Time for Confirmation (b124) after the output of the brake release signal.
<b>E37</b>	Safe Stop	Safe stop signal is given.
<b>E38</b>	Low-speed overload protection	If overload occurs during the motor operation at a very low speed, the inverter will detect the overload and shut off the inverter output.

Error Code	Name	Cause(s)
<b>E40</b>	Operator connection	When the connection between inverter and operator keypad failed, inverter trips and displays the error code.
<b>E41</b>	Modbus communication error	When “trip” is selected (C076=00) as a behavior in case of communication error, inverter trips when timeout happens.
<b>E43</b>	EzSQ invalid instruction	The program stored in inverter memory has been destroyed, or the PRG terminal was turned on without a program downloaded to the inverter.
<b>E44</b>	EzSQ nesting count error	Subroutines, if-statement, or for-next loop are nested in more than eight layers
<b>E45</b>	EzSQ instruction error	Inverter found the command which cannot be executed.
<b>E50</b> to <b>E59</b>	EzSQ user trip (0 to 9)	When user –defined trip happens, inverter trips and displays the error code.
<b>E60</b>	Option error (DeviceNet Communications error)	If the disconnection due to the Bus-Off signal or timeout occurs during the operation using DeviceNet commands, the inverter will shut off its output and display the error code shown on the right. (The inverter will trip according to the settings of "p45" and "P048".)
<b>E61</b>	Option error (duplicated MACID)	If two or more devices having the same MAC ID are detected in the same network, the inverter will display the error code shown on the right.
<b>E62</b>	Option error (External trip)	If the Force Fault/Trip bit of Attribute 17 in the Instance 1 of the Control Supervisory object is set to "1", the inverter will shut off its output and display the error code shown on the right.
<b>E63</b> to <b>E68</b>	Option error	The inverter detects errors in the option board mounted in the optional slot. For details, refer to the instruction manual for the mounted option board.
<b>E69</b>	Option error (inverter communication error)	If timeout occurs during the communication between the inverter and DeviceNet option board, the inverter will shut off its output and display the error code shown on the right.
<b>E80</b>	Encoder disconnection	If the encoder wiring is disconnected, an encoder connection error is detected, the encoder fails, or an encoder that does not support line driver output is used, the inverter will shut off its output and display the error code shown on the right.
<b>E81</b>	Excessive speed	If the motor speed rises to "maximum frequency (A004) x over-speed error detection level (P026)" or more, the inverter will shut off its output and display the error code shown on the right.
<b>E83</b>	Positioning range error	If current position exceeds the position range (P072-P073), the inverter will shut off its output and display the error code.
<b>E98</b>	States of GS1 and GS2	States of GS1 and GS2 are inconsistent.
<b>E99</b>	States of GS1/GS2 and EDM	States of GS1/GS2 and EDM are inconsistent.

Error Code	Name	Descriptions
 Rotating	Reset	RS input is ON or STOP/RESET key is pressed.
	Undervoltage	If input voltage is under the allowed level, inverter shuts off output and wait with this indication.
	Waiting to restart	This indication is displayed after tripping before restarting.
	Restricted operation command	Commanded RUN direction is restricted in b035.
	Trip history initializing	Trip history is being initialized.
	No data (Trip monitor)	No trip/waning data exists.
 Blinking	Communication error	Communication between inverter and digital operator fails.
	Auto-tuning completed	Auto-tuning is completed properly.
	Auto-tuning error	Auto-tuning fails.



**NOTE:** Reset is not allowed in 10 second after trip.

**NOTE:** When error E08, E14 and E30 occur, reset operation by RS terminal or STOP/RESET key is not accepted. In this case, reset by cycling power. If still same error occurs, perform initialization.

## Warning Codes

If set parameter is conflicted to other parameters, warning code is displayed as follows.


Warning Code	Warning condition		
H001	Frequency upper limit (A061)	>	Max. Frequency (A004)
H002	Frequency lower limit (A062)	>	Max. Frequency (A004)
H005	Output Frequency setting (F001) Multi-speed freq. 0 (A020)	>	Max. Frequency (A004)
H015	Output Frequency setting (F001) Multi-speed freq. 0 (A020)	>	Frequency upper limit (A061)
H025	Frequency lower limit (A062)	>	Output Frequency setting (F001) Multi-speed freq. 0 (A020)
H031	Start frequency (A082)	>	Frequency upper limit (A061)
H032	Start frequency (A082)	>	Frequency lower limit (A062)
H035	Start frequency (A082)	>	Output Frequency setting (F001) Multi-speed freq. 0 (A020)
H036	Start frequency (A082)	>	Multi-speed freq. 1-15 (A021-A035)
H037	Start frequency (A082)	>	Jogging frequency (A038)

Warning Code	Warning condition		
H085	Output Frequency setting (F001) Multi-speed freq. 0 (A020)	=	Jump frequency (A063/A063/A063±A064/A066/A068)
H086	Multi-speed freq. 1-15 (A021-A035)		
H091	Free setting V/f frequency 7	>	Frequency upper limit (A061)
H092	Free setting V/f frequency 7	>	Frequency lower limit (A062)
H095	Free setting V/f frequency 7	>	Output Frequency setting (F001) Multi-speed freq. 0 (A020)
H201	Frequency upper limit (A261)	>	Max. Frequency (A204)
H202	Frequency lower limit (A262)	>	Max. Frequency (A204)
H205	Output Frequency setting (F001) Multi-speed freq. 0 (A220)	>	Max. Frequency (A204)
H215	Output Frequency setting (F001) Multi-speed freq. 0 (A220)	>	Frequency upper limit (A261)
H225	Frequency lower limit (A262)	>	Output Frequency setting (F001) Multi-speed freq. 0 (A220)
H231	Start frequency (A082)	>	Frequency upper limit (A261)
H232	Start frequency (A082)	>	Frequency lower limit (A262)
H235	Start frequency (A082)	>	Output Frequency setting (F001) Multi-speed freq. 0 (A220)
H285	Output Frequency setting (F001) Multi-speed freq. 0 (A220)	=	Jump frequency (A063/A063/A063±A064/A066/A068)
H291	Free setting V/f frequency 7	>	Frequency upper limit (A261)
H292	Free setting V/f frequency 7	>	Frequency lower limit (A262)
H295	Free setting V/f frequency 7	>	Output Frequency setting (F001) Multi-speed freq. 0 (A220)

## Trip History and Inverter Status

We recommend that you first find the cause of the fault before clearing it. When a fault occurs, the inverter stores important performance data at the moment of the fault. To access the data, use the monitor function (dxxx) and select **d081** details about the present fault. The previous 5 faults are stored in **d082** to **d086**. Each error shifts **d081-d085** to **d082-d086**, and writes the new error to **d081**.

The following Monitor Menu map shows how to access the error codes. When fault(s) exist, you can review their details by first selecting the proper function: **d081** is the most recent, and **d086** is the oldest.

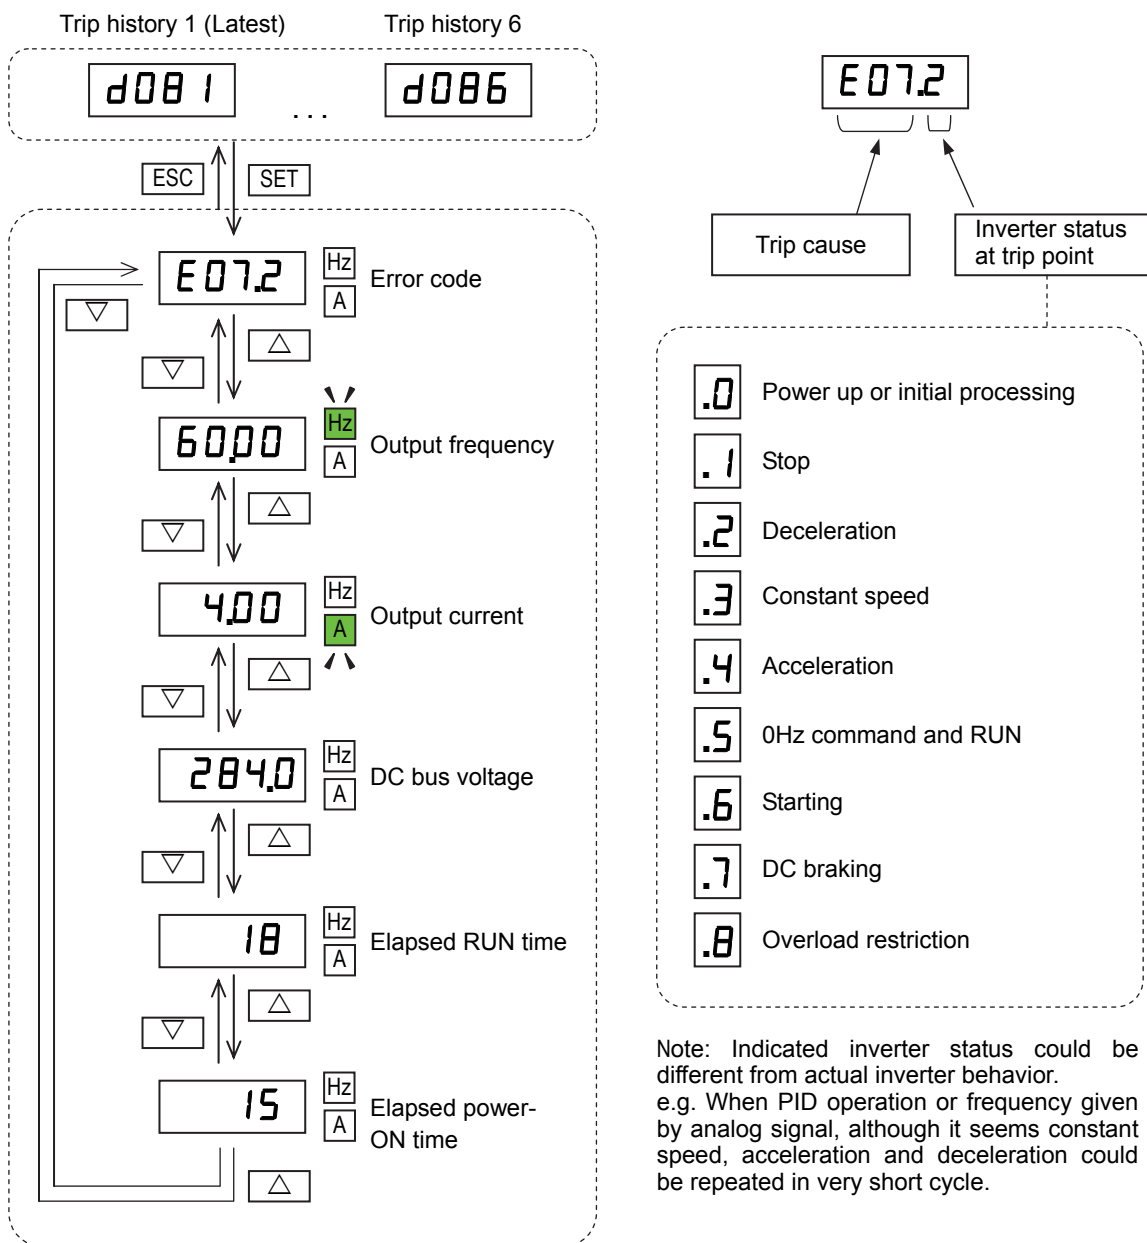


# Restoring Factory Default Settings

You can restore all inverter parameters to the original factory (default) settings according to area of use. After initializing the inverter, use the powerup test in Chapter 2 to get the motor running again. If operation mode (std. or high frequency) mode is changed, inverter must be initialized to activate new mode. To initialize the inverter, follow the steps below.

- (1) Select initialization mode in **b084**.
- (2) If **b084=02, 03** or **04**, select initialization target data in **b094**.
- (3) If **b084=02, 03** or **04**, select country code in **b085**.
- (4) Set **01** in **b180**.
- (5) The following display appears for a few seconds, and initialization is completed with **d001** displayed.

### Display during initialization

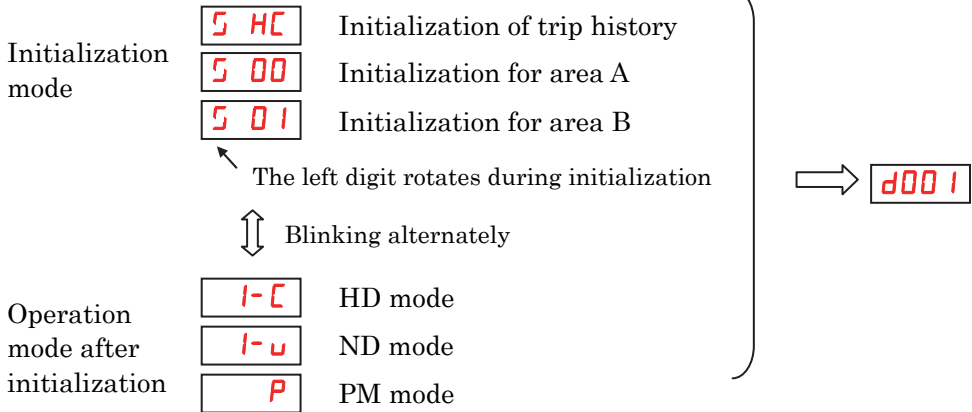

"B" Function		
Func. Code	Name	Description
<b>b084</b>	Initialization mode (parameters or trip history)	Select initialized data, five option codes: <b>00</b> ...Initialization disabled <b>01</b> ...Clears Trip history <b>02</b> ...Initializes all Parameters <b>03</b> ...Clears Trip history and initializes all parameters <b>04</b> ...Clears Trip history and initializes all parameters and EzSQ program
<b>b094</b>	Initialization target data setting	Select initialized parameters, four option codes: <b>00</b> ...All parameters <b>01</b> ...All parameters except in/output terminals and communication. <b>02</b> ...Only registered parameters in <b>Uxxx</b> . <b>03</b> ...All parameters except registered parameters in <b>Uxxx</b> and <b>b037</b> .
<b>b085</b>	Initial value select	Select default parameter values: <b>00</b> ...area A <b>01</b> ...area B
<b>b180</b>	Initialization trigger	This is to perform initialization by parameter input with <b>b084, b085</b> and <b>b094</b> . Two option codes: <b>00</b> ...Initialization disable <b>01</b> ...Perform initialization

Data of b084 is not saved in EEPROM to avoid unintentional initializing.

# Maintenance and Inspection

## Daily and Yearly Inspection Chart

Item Inspected		Check for...	Inspection Cycle		Inspection Method	Criteria
			Daily	Year		
Overall	Ambient environment	Extreme temperatures & humidity	✓		Thermometer, hygrometer	Ambient temperature between -10 to 50°C, Humidity 90% or less non-condensing
	Major devices	Abnormal noise & vib.	✓		Visual and aural	Stable environment for electronic controls
	Power supply voltage	Voltage tolerance	✓		Digital volt meter, measure between inverter terminals [L1], [L2], [L3]	200V class: 50/60 Hz 200 to 240V (-15/+10%) 400V class: 50/60 Hz 380 to 460V (-15/+10%)
Main circuit	Ground Insulation	Adequate resistance		✓	Refer to P6-16	5 MΩ or greater
	Mounting	No loose screws		✓	Torque wrench	M3.5: 1.0Nm M4: 1.4Nm M5: 3.0 M6: 3.9 to 5.1Nm M8: 5.9 to 8.8Nm
	Components	Overheating		✓	Thermal trip events	No trip events
	IGBT	Resistance value		✓	Refer to P6-17	
	Terminal block	Secure connections		✓	Visual	No abnormalities
	Smoothing capacitors	Leaking, swelling	✓		Visual	No abnormalities
	Relay(s)	Chattering		✓	Aural	Single click when switching ON or OFF
Control circuit	Function	Voltage balance between phases		✓	Measure voltage between U, V, W	Difference must be 2% or less.
		Protection circuit		✓	e.g. Input Ex.trip signal and check inverter behavior and alarm signal.	Functions properly.
	Overall	No odor, discoloring, corrosion		✓	Visual	No abnormalities
	Capacitor	Leaking, swelling	✓		Visual	Undistorted appearance
Cooling	Cooling fan	Noise	✓		Power down, manually rotate	Rotation must be smooth
		Dust	✓		Visual	Vacuum to clean
		Mounting	✓		Visual	Mounted firmly
Heat sink	Dust	✓		Visual	Vacuum to clean	
Display	LEDs	Legibility			Visual	All LED segments work

**Note 1:** The life of a capacitor is affected by the ambient temperature. See page 6–21.

**Note 2:** Designed life of a cooling fan is 10 years. However, it is affected by the ambient temperature and other environmental conditions.

**Note 3:** The inverter must be cleaned periodically. If dust accumulates on the fan and heat sink, it can cause overheating of the inverter.




## Megger test

The *megger* is a piece of test equipment that uses a high voltage to determine if an insulation degradation has occurred. For inverters, it is important that the power terminals be isolated from the Earth GND terminal via the proper amount of insulation.

The circuit diagram below shows the inverter wiring for performing the megger test. Just follow the steps to perform the test:

1. Remove power from the inverter and wait at least 10 minutes before proceeding.
2. Open the front housing panel to access the power wiring.
3. Remove all wires to terminals [R, S, T, PD/+1, P/+, N/-, U, V, and W]. Most importantly, the input power and motor wires will be disconnected from the inverter.
4. Use a bare wire and short terminals [R, S, T, PD/+1, P/+, N/-, U, V, and W] together as shown in the diagram.
5. Connect the megger to the inverter Earth GND and to the shorted power terminals as shown. Then perform the megger test at 500 VDC and verify 5M $\Omega$  or greater resistance.

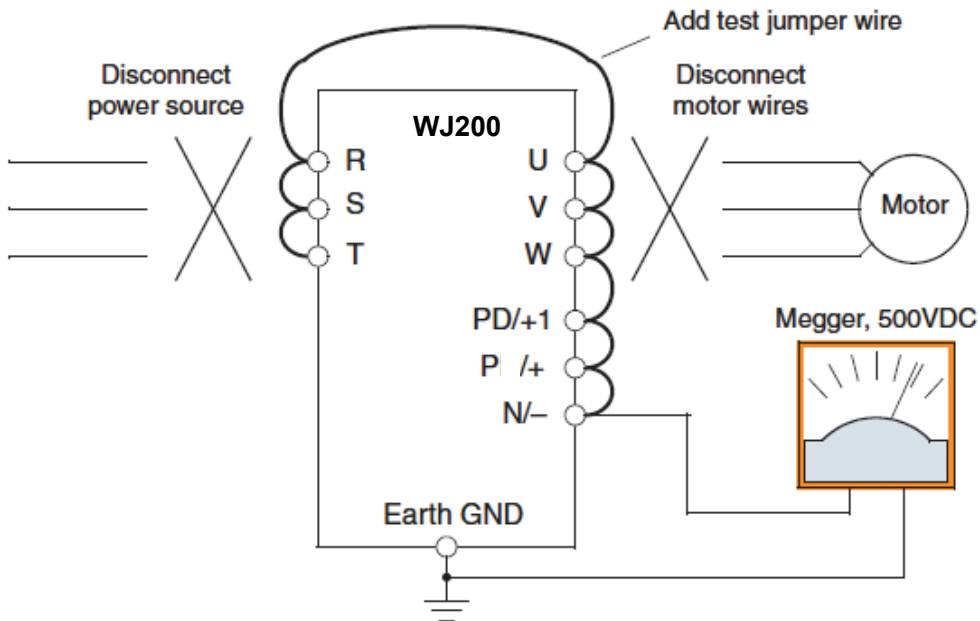

6. After completing the test, disconnect the megger from the inverter.
7. Reconnect the original wires to terminals [R, S, T, PD/+1, P/+, N/-, U, V, and W].



**CAUTION:** Do not connect the megger to any control circuit terminals such as intelligent I/O, analog terminals, etc. Doing so could cause damage to the inverter.



**CAUTION:** Never test the withstand voltage (HIPOT) on the inverter. The inverter has a surge protector between the main circuit terminals above and the chassis ground.




**CAUTION:** Power terminal assignment is different compared to old models such as L100, L200 series, etc.. Pay attention when wiring the power cable.

## IGBT Test Method

The following procedure will check the inverter transistors (IGBTs) and diodes:

1. Disconnect input power to terminals [R, S, and T] and motor terminals [U, V, and W].
2. Disconnect any wires from terminals [+] and [-] for regenerative braking.
3. Use a Digital Volt Meter (DVM) and set it for 1Ω resistance range. You can check the status of the charging state of terminals [R, S, T, U, V, W, +, and -] of the inverter and the probe of the DVM by measuring the charging state.

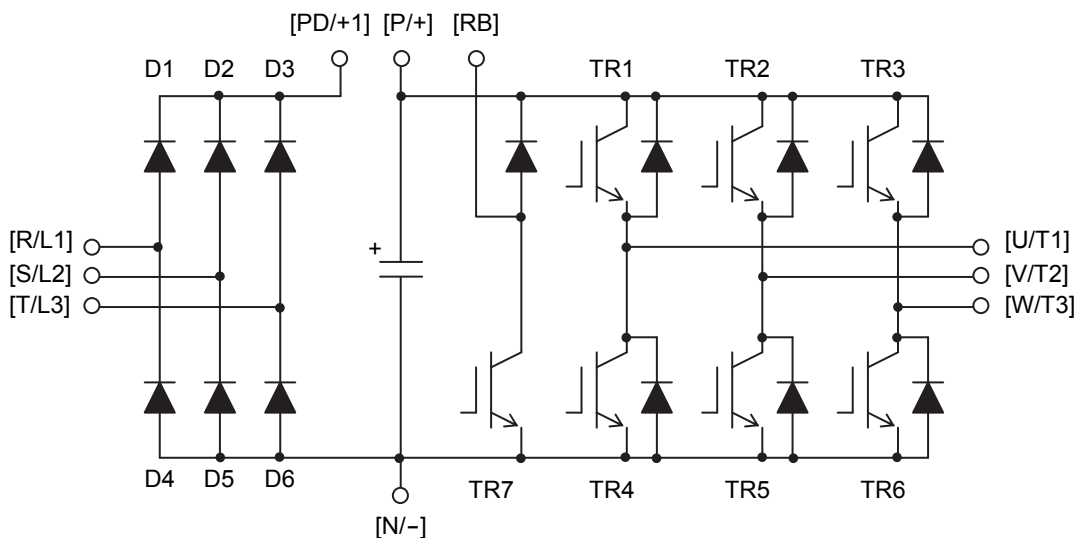

**Table Legend** Almost infinite resistance:  $\cong \infty \Omega$  Almost zero resistance:  $\cong 0 \Omega$

Part	DVM		Measured Value	Part	DVM		Measured Value	Part	DVM		Measured Value
	-	+			-	+			-	+	
D1	[R]	[+1]	$\cong \infty \Omega$	D5	[S]	[-]	$\cong 0 \Omega$	TR4	[U]	[-]	$\cong 0 \Omega$
	[+1]	[R]	$\cong 0 \Omega$		[-]	[S]	$\cong \infty \Omega$		[-]	[U]	$\cong \infty \Omega$
D2	[S]	[+1]	$\cong \infty \Omega$	D6	[T]	[-]	$\cong 0 \Omega$	TR5	[V]	[-]	$\cong 0 \Omega$
	[+1]	[S]	$\cong 0 \Omega$		[-]	[T]	$\cong \infty \Omega$		[-]	[V]	$\cong \infty \Omega$
D3	[T]	[+1]	$\cong \infty \Omega$	TR1	[U]	[+]	$\cong \infty \Omega$	TR6	[W]	[-]	$\cong 0 \Omega$
	[+1]	[T]	$\cong 0 \Omega$		[+]	[U]	$\cong 0 \Omega$		[-]	[W]	$\cong \infty \Omega$
D4	[R]	[-]	$\cong 0 \Omega$	TR2	[V]	[+]	$\cong \infty \Omega$	TR7	[RB]	[+]	$\cong \infty \Omega$
	[-]	[R]	$\cong \infty \Omega$		[+]	[V]	$\cong 0 \Omega$		[+]	[RB]	$\cong 0 \Omega$
				TR3	[W]	[+]	$\cong \infty \Omega$		[RB]	[-]	$\cong \infty \Omega$
					[+]	[W]	$\cong 0 \Omega$		[-]	[RB]	$\cong \infty \Omega$



**NOTE:** The resistance values for the diodes or the transistors will not be exactly the same, but they will be close. If you find a significance difference, a problem may exist.



**NOTE:** Before measuring the voltage between [+] and [-] with the DC current range, confirm that the smoothing capacitor is discharged fully, then execute the tests.

## General Inverter Electrical Measurements


The following table specifies how to measure key system electrical parameters. The diagrams on the next page show inverter-motor systems and the location of measurement points for these parameters.

Parameter	Circuit location of measurement	Measuring instrument	Notes	Reference Value
Supply voltage $E_1$	$E_R$ – across L1 and L2 $E_S$ – across L2 and L3 $E_T$ – across L3 and L1	Moving-coil type voltmeter or rectifier type voltmeter	Fundamental wave effective value	Commercial supply voltage 200V class: 200–240V, 50/60 Hz 400V class: 380–460V, 50/60 Hz
	Single phase $E_1$ – across L1 and N			
Supply current $I_1$	$I_r$ – L1 $I_s$ – L2 $I_t$ – L3		Total effective value	
	Single phase $I_1 = I_L$			
Supply power $W_1$	$W_{11}$ – across L1 and L2 $W_{12}$ – across L2 and L3	Total effective value	—	
	Single phase $W_1$ – across L1 and N			
Supply power factor $Pf_1$	$Pf_1 = \frac{W_1}{\sqrt{3} \times E_1 \times I_1} \times 100\%$		—	
Output voltage $E_o$	$E_U$ – across U and V $E_V$ – across V and W $E_W$ – across W and U	Rectifier type voltmeter	Total effective value	—
Output current $I_o$	$I_U$ – U $I_V$ – V $I_W$ – W	Moving-coil type ammeter	Total effective value	—
Output power $W_o$	$W_{O1}$ – across U and V $W_{O2}$ – across V and W	Electronic type wattmeter	Total effective value	—
Output power factor $Pf_o$	Calculate the output power factor from the output voltage $E$ , output current $I$ , and output power $W$ . $Pf_o = \frac{W_1}{\sqrt{3} \times E_o \times I_o} \times 100\%$		—	


- Note 1:** Use a meter indicating a fundamental wave effective value for voltage, and meters indicating total effective values for current and power.
- Note 2:** The inverter output has a distorted waveform, and low frequencies may cause erroneous readings. However, the measuring instruments and methods listed above provide comparably accurate results.
- Note 3:** A general-purpose digital volt meter (DVM) is not usually suitable to measure a distorted waveform (not pure sinusoid).

The figures below show measurement locations for voltage, current, and power measurements listed in the table on the previous page. The voltage to be measured is the fundamental wave effective voltage. The power to be measured is the total effective power.

### Single-phase Measurement Diagram

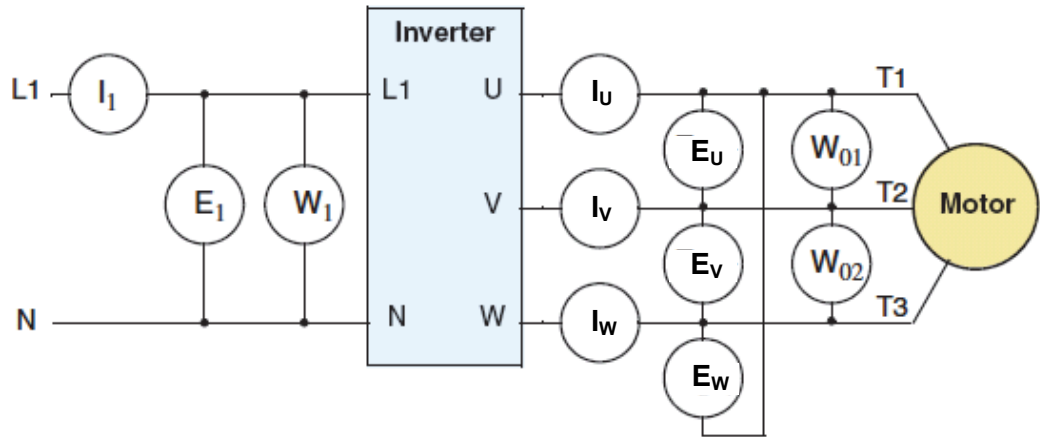


### Three-phase Measurement Diagram

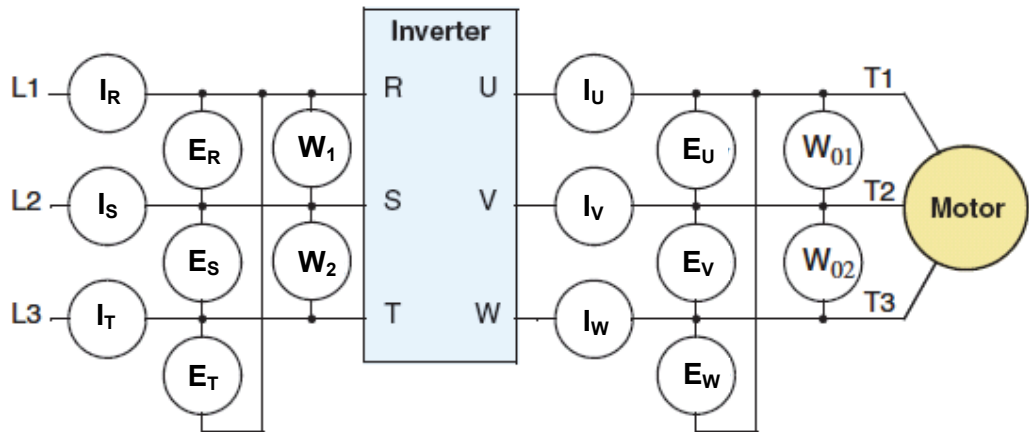

## Inverter Output Voltage Measurement Techniques

Taking voltage measurements around drives equipment requires the right equipment and a safe approach. You are working with high voltages and high-frequency switching waveforms that are not pure sinusoids. Digital voltmeters will not usually produce reliable readings for these waveforms. And, it is usually risky to connect high voltage signals to oscilloscopes. The inverter output semiconductors have some leakage, and no-load measurements produce misleading results. So, we highly recommend using the following circuits to measure voltage for performing the equipment inspections.

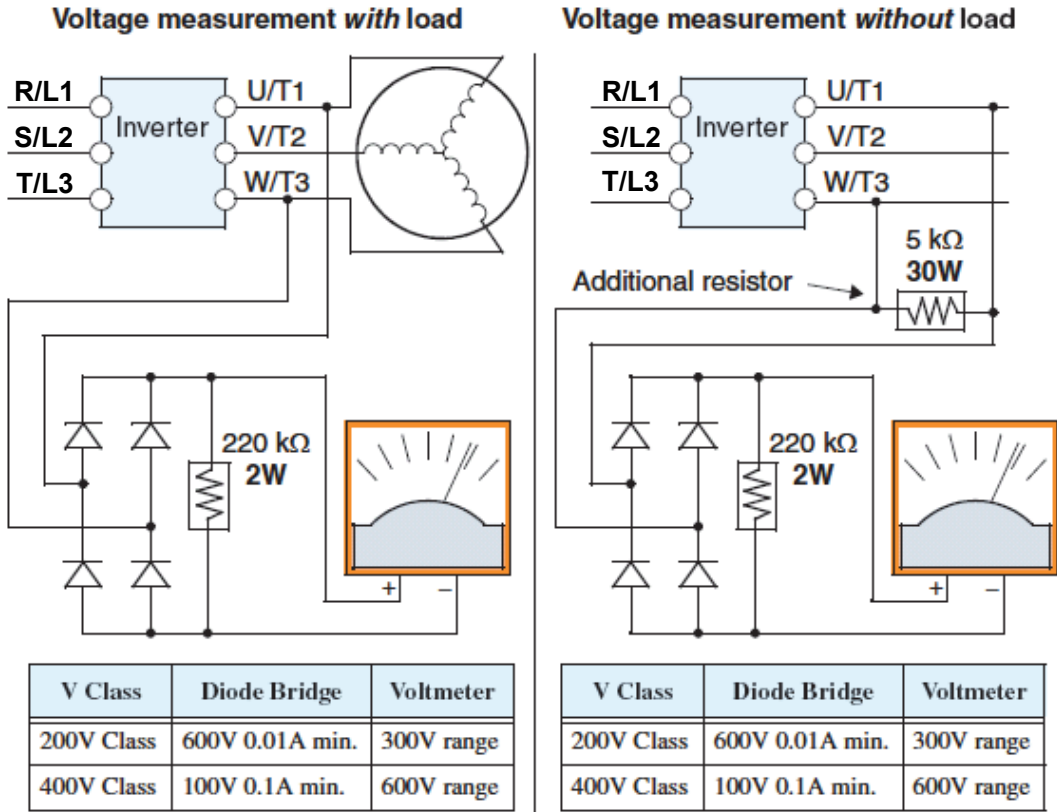


**HIGH VOLTAGE:** Be careful not to touch wiring or connector terminals when working with the inverters and taking measurements. Be sure to place the measurement circuitry components above in an insulated housing before using them.




The safe Disable function does not cut the power supply to the drive and does not provide electrical isolation. Before any installation or maintenance work is done, the drives power supply must be switched off and place a tag/lock-out.

## Capacitor Life Curves

The DC bus inside the inverter uses a large capacitor as shown in the diagram below. The capacitor handles high voltage and current as it smooths the power for use by the inverter. So, any degradation of the capacitor will affect the performance of the inverter.

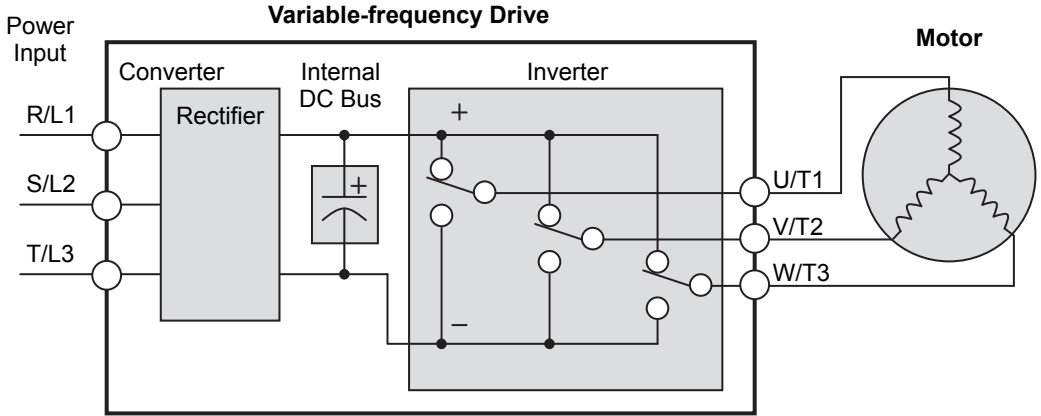

Capacitor life is reduced in higher ambient temperatures, as the graph below demonstrates. Under the condition of average ambient temperature 40degC, 80% load, 24 hours operation, the lifetime is 10years. Be sure to keep the ambient temperature at acceptable levels, and perform maintenance inspections on the fan, heat sink, and other components. If the inverter is installed on a cabinet, the ambient temperature is the temperature inside the cabinet.

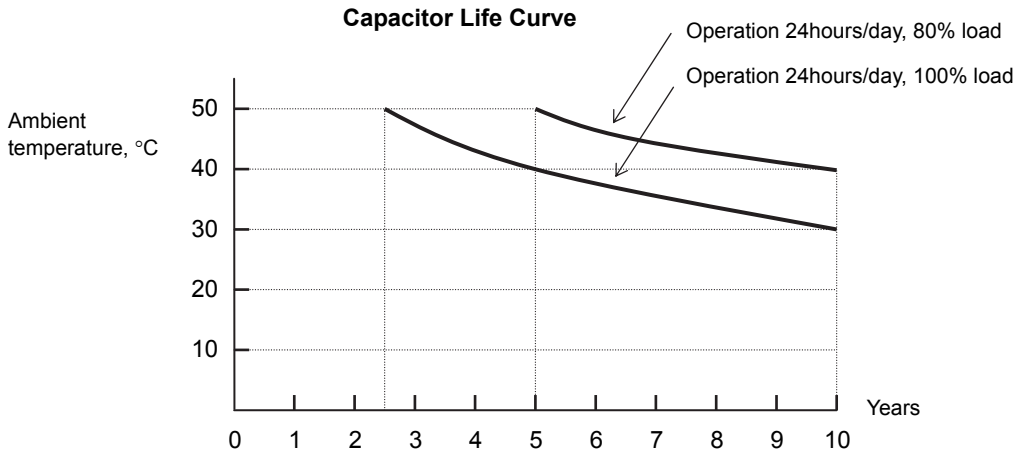

# Warranty

## Warranty Terms

The warranty period under normal installation and handling conditions shall be two (2) years from the date of manufacture, or one (1) year from the date of installation, whichever occurs first. The warranty shall cover the repair or replacement, at Hitachi's sole discretion, of ONLY the inverter that was installed.

1. Service in the following cases, even within the warranty period, shall be charged to the purchaser:
  - a. Malfunction or damage caused by mis-operation or modification or improper repair
  - b. Malfunction or damage caused by the different external factors which is not related to the inverter installed at this time.
  - c. Malfunction or damage caused by the use in the range beyond the specifications level.
  - d. Malfunction or damage caused by a drop after purchase and transportation
  - e. Malfunction or damage caused by fire, earthquake, flood, lightening, abnormal input voltage, contamination, or other natural disasters
2. When service is required for the product at your work site, all expenses associated with field repair shall be charged to the purchaser.
3. Always keep this manual handy; please do not lose it. Please contact your Hitachi distributor to purchase replacement or additional manuals.

The damage to other equipments and systems which inducted by each next item, is out of warranty.


- 1) Malfunction or damage of installed inverters.
- 2) Inappropriate setting situation beyond the specification level of the motor, machine, power supply.
- 3) The use in the inappropriate parameter setting of the installed inverters.

Please minimize the probability that above items endanger to the other equipments and systems. In addition, please carry out safety design and countermeasures which indicate the danger for users. Please choose inverter with a margin in the rating and performance. In addition, likewise please design the other equipments and systems with a margin and redundancy.

In addition, as for the compatibilities to purpose of utilization of the installed inverters, please confirm before use by customers oneself because it cannot be warrantied.

---

# Glossary and Bibliography

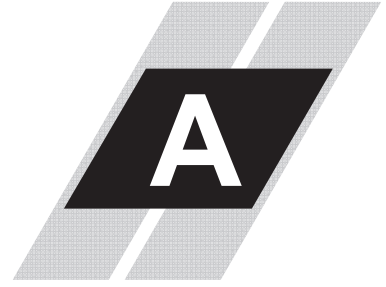

---

In This Appendix...	page
- Glossary .....	2
- Bibliography .....	8

---



---

## Glossary

<b>Ambient Temperature</b>	The air temperature in the chamber containing a powered electronic unit. A unit's heat sinks rely on a lower ambient temperature in order to dissipate heat away from sensitive electronics.
<b>Arrival Frequency</b>	The arrival frequency refers to the set output frequency of the inverter for the constant speed setting. The arrival frequency feature turns on an output when the inverter reaches the set constant speed. The inverter has various arrival frequencies and pulsed or latched logic options.
<b>Auto-tuning</b>	The ability of a controller to execute a procedure that interacts with a load to determine the proper coefficients to use in the control algorithm. Auto-tuning is a common feature of process controllers with PID loops. Hitachi inverters feature auto tuning to determine motor parameters for optimal commutation. Auto-tuning is available as a special command from a digital operator panel. See also <i>Digital Operator Panel</i> .
<b>Base Frequency</b>	The power input frequency for which an AC induction motor is designed to operate. Most motors will specify a 50 to 60 Hz value. The Hitachi inverters have a programmable base frequency, so you must ensure that parameter matches the attached motor. The term <i>base frequency</i> helps differentiate it from the carrier frequency. See also <i>Carrier Frequency</i> and <i>Frequency Setting</i> .
<b>Braking Resistor</b>	An energy-absorbing resistor that dissipates energy from a decelerating load. Load inertia causes the motor to act as a generator during deceleration. For the X200 inverter models, the braking unit and braking resistor are optional (external) components. See also <i>Four-quadrant Operation</i> and <i>Dynamic Braking</i> .
<b>Break-away Torque</b>	The torque a motor must produce to overcome the static friction of a load, in order to start the load moving.
<b>Carrier Frequency</b>	The frequency of the constant, periodic, switching waveform that the inverter modulates to generate the AC output to the motor. See also <i>PWM</i> .
<b>CE</b>	A regulatory agency for governing the performance of electronic products in Europe. Drive installations designed to have CE approval must have particular filter(s) installed in the application.
<b>Choke</b>	An inductor that is tuned to react at radio frequencies is called a "choke," since it attenuates (chokes) frequencies above a particular threshold. Tuning is often accomplished by using a movable magnetic core. In variable-frequency drive systems, a choke positioned around high-current wiring can help attenuate harmful harmonics and protect equipment. See also <i>Harmonics</i> .

---

---

<b>DC Braking</b>	The inverter DC braking feature stops the AC commutation to the motor, and sends a DC current through the motor windings in order to stop the motor. Also called “DC injection braking,” it has little effect at high speed, and is used as the motor is nearing a stop.
<b>Deadband</b>	In a control system, the range of input change for which there is no perceptible change in the output. In PID loops, the error term may have a dead band associated with it. Deadband may or may not be desirable; it depends on the needs of the application.
<b>Digital Operator Panel</b>	For Hitachi inverters, “digital operator panel” (DOP) refers first to the operator keypad on the front panel of the inverter. It also includes hand-held remote keypads, which connect to the inverter via a cable. Finally, the DOP Professional is a PC-based software simulation of the keypad devices.
<b>Diode</b>	A semiconductor device that has a voltage-current characteristic that allows current to flow only in one direction, with negligible leakage current in the reverse direction. See also <i>Rectifier</i> .
<b>Duty Cycle</b>	<ol style="list-style-type: none"><li>1. The percent of time a square wave of fixed frequency is ON (high) versus OFF (low).</li><li>2. The ratio of operating time of a device such as a motor to its resting time. This parameter usually is specified in association with the allowable thermal rise for the device.</li></ol>
<b>Dynamic Braking</b>	For the X2002 inverter models, the braking unit and braking resistor are optional (external) components. The dynamic braking feature shunts the motor-generated EMF energy into a special braking resistor. The added dissipation (braking torque) is effective at higher speeds, having a reduced effect as the motor nears a stop.
<b>EDM</b>	[ <i>Functional Safety Related Term</i> ] External Device Monitoring, the output signal from inverter to external device in order to feed back the status that the both safety path working properly. Safety certificate is issued based on the condition that this EDM signal is interfaced to certified external device to avoid restarting or to inform in case of failure in safety path.
<b>Error</b>	In process control, the error is the difference between the desired value or setpoint (SP) and the actual value of a the process variable (PV). See also <i>Process Variable</i> and <i>PID Loop</i> .
<b>EMI</b>	Electromagnetic Interference - In motor/drive systems, the switching of high currents and voltages creates the possibility of generating radiated electrical noise that may interfere with the operation of nearby sensitive electrical instruments or devices. Certain aspects of an installation, such as long motor lead wire lengths, tend to increase the chance of EMI. Hitachi provides accessory filter components you can install to decrease the level of EMI.
<b>Four-quadrant operation</b>	Referring to a graph of torque versus direction, a four-quadrant drive can turn the motor either forward or reverse, as well as decelerate in either direction (see also <i>reverse torque</i> ). A load that has a relatively

---

---

high inertia and must move in both directions and change directions rapidly requires four-quadrant capability from its drive.

- Free-run Stop** A method of stopping a motor, caused when the inverter simply turns OFF its motor output connections. This may allow the motor and load to coast to a stop, or a mechanical brake may intervene and shorten the deceleration time.
- Frequency Setting** While frequency has a broad meaning in electronics, it typically refers to motor speed for variable-frequency drives (inverters). This is because the output frequency of the inverter is variable, and is proportional to the attained motor speed. For example, a motor with a base frequency of 60 Hz can be speed controlled with an inverter output varying from 0 to 60 Hz. See also *Base Frequency*, *Carrier Frequency*, and *Slip*.
- Harmonics** A *harmonic* is a whole number multiple of a base of fundamental frequency. The square waves used in inverters produce high frequency harmonics, even though the main goal is to produce lower-frequency sine waves. These harmonics can be harmful to electronics (including motor windings) and cause radiated energy that interferes with nearby electronic devices. Chokes, line reactors, and filters are sometimes used to suppress the transmission of harmonics in an electrical system. See also *Choke*.
- Horsepower** A unit of physical measure to quantify the amount of work done per unit of time. You can directly convert between horsepower and Watts as measurements of power.
- IGBT** **Insulated Gate Bipolar Transistor(IGBT)** – A semiconductor transistor capable of conducting very large currents when in saturation and capable of withstanding very high voltages when it is OFF. This high-power bipolar transistor is the type used in Hitachi inverters.
- Inertia** The natural resistance a stationary object to being moved by an external force. See also *Momentum*.
- Intelligent Terminal** A configurable input or output logic function on the Hitachi inverters. Each terminal may be assigned one of several functions.
- Inverter** A device that electronically changes DC to AC current through an alternating process of switching the input to the output, inverted and non-inverted. A variable speed drive such as the Hitachi X2002 is also called an inverter, since it contains three inverter circuits to generate 3-phase output to the motor.
- Isolation Transformer** A transformer with 1:1 voltage ratio that provides electrical isolation between its primary and secondary windings. These are typically used on the power input side of the device to be protected. An isolation transformer can protect equipment from a ground fault or other malfunction of nearby equipment, as well as attenuate harmful harmonics and transients on the input power.
-

---

<b>Jogging Operation</b>	Usually done manually, a jog command from an operator's panel requests the motor/drive system to run indefinitely in a particular direction, until the machine operator ends the jog operation.
<b>Jump Frequency</b>	A <i>jump frequency</i> is a point on the inverter output frequency range that you want the inverter to skip around. This feature may be used to avoid a resonant frequency, and you can program up to three jump frequencies in the inverter.
<b>Line Reactor</b>	A three-phase inductor generally installed in the AC input circuit of an inverter to minimize harmonics and to limit short-circuit current.
<b>Momentum</b>	The physical property of a body in motion that causes it to remain in motion. In the case of motors, the rotor and attached load are rotating and possesses angular momentum.
<b>Multi-speed Operation</b>	The ability of a motor drive to store preset discrete speed levels for the motor, and control motor speed according to the currently selected speed preset. The Hitachi inverters have 16 preset speeds.
<b>Motor Load</b>	In motor terminology, motor load consists of the inertia of the physical mass that is moved by the motor and the related friction from guiding mechanisms. See also <i>Inertia</i> .
<b>NEC</b>	The National Electric Code is a regulatory document that governs electrical power and device wiring and installation in the United States.
<b>NEMA</b>	The National Electric Manufacturer's Association. NEMA Codes are a published series of device ratings standards. Industry uses these to evaluate or compare the performance of devices made by various manufacturers to a known standard.
<b>Open-collector Outputs</b>	A common logic-type discrete output that uses an NPN transistor that acts as a switch to a power supply common, usually ground. The transistor's <i>collector</i> is <i>open</i> for external connection (not connected internally). Thus, the output <i>sinks</i> external load current to ground.
<b>Power Factor</b>	A ratio that expresses a phase difference (timing offset) between current and voltage supplied by a power source to a load. A perfect power factor = 1.0 (no phase offset). Power factors less than one cause some energy loss in power transmission wiring (source to load).
<b>PID Loop</b>	Proportional - Integral-Derivative - A mathematical model used for process control. A process controller maintains a process variable (PV) at a setpoint (SP) by using its PID algorithm to compensate for dynamic conditions and vary its output to drive the PV toward the desired value. For variable-frequency drives, the process variable is the motor speed. See also <i>Error</i> .

---

---

<b>Process Variable</b>	A physical property of a process that is of interest because it affects the quality of the primary task accomplished by the process. For an industrial oven, temperature is the process variable. See also <i>PID Loop</i> and <i>Error</i> .
<b>Proof Test</b>	[ <i>Functional Safety Related Term</i> ] The test to be carried out periodically to confirm the proper working of safety path. Safety certificate is issued based on the condition that this proof test is carried out at least once a year.
<b>PWM</b>	Pulse-width modulation: A type of AC adjustable frequency drive that accomplishes frequency and voltage control at the output section (inverter) of the drive. The drive output voltage waveform is at a constant amplitude, and by “chopping” the waveform (pulsewidth-modulating), the average voltage is controlled. The chopping frequency is sometimes called the <i>Carrier Frequency</i> .
<b>Reactance</b>	The impedance of inductors and capacitors has two components. The resistive part is constant, while the reactive part changes with applied frequency. These devices have a complex impedance (complex number), where the resistance is the real part and the reactance is the imaginary part.
<b>Rectifier</b>	An electronic device made of one or more diodes that converts AC power into DC power. Rectifiers are usually used in combination with capacitors to filter (smooth) the rectified waveform to closely approximate a pure DC voltage source.
<b>Regenerative Braking</b>	A particular method of generating reverse torque to a motor, an inverter will switch internally to allow the motor to become a generator and will either store the energy internally, deliver the braking energy back to the main power input, or dissipate it with a resistor.
<b>Regulation</b>	The quality of control applied to maintain a parameter of interest at a desired value. Usually expressed as a percent ( $\pm$ ) from the nominal, motor regulation usually refers to its shaft speed.
<b>Reverse Torque</b>	The torque applied in the direction opposite to motor shaft rotation. As such, reverse torque is a decelerating force on the motor and its external load.
<b>Rotor</b>	The windings of a motor that rotate, being physically coupled to the motor shaft. See also <i>Stator</i> .
<b>Saturation Voltage</b>	For a transistor semiconductor device, it is in saturation when an increase in input current no longer results in an increase in the output current. The saturation voltage is the voltage drop across the device. The ideal saturation voltage is zero.
<b>Sensorless Vector Control</b>	A technique used in some variable-frequency drives (featured in some other Hitachi inverter model families) to rotate the force vector in the motor without the use of a shaft position sensor (angular). Benefits include an increase in torque at the lowest speed and the cost savings from the lack of a shaft position sensor.

---

---

<b>Setpoint (SP)</b>	The <i>setpoint</i> is the desired value of a process variable of interest. See also <i>Process Variable (PV)</i> and <i>PID Loop</i> .
<b>Single-phase power</b>	An AC power source consisting of Hot and Neutral wires. An Earth Ground connection usually accompanies them. In theory, the voltage potential on Neutral stays at or near Earth Ground, while Hot varies sinusoidally above and below Neutral. This power source is named Single Phase to differentiate it from three-phase power sources. Some Hitachi inverters can accept single phase input power, but they all output three-phase power to the motor. See also <i>Three-phase</i> .
<b>Slip</b>	The difference between the theoretical speed of a motor at no load (determined by its inverter output waveforms) and the actual speed. Some slip is essential in order to develop torque to the load, but too much will cause excessive heat in the motor windings and/or cause the motor to stall.
<b>Squirrel Cage</b>	A “nick-name” for the appearance of the rotor frame assembly for an AC induction motor.
<b>Stator</b>	The windings in a motor that are stationary and coupled to the power input of the motor. See also <i>Rotor</i> .
<b>Tachometer</b>	<ol style="list-style-type: none"><li>1. A signal generator usually attached to the motor shaft for the purpose of providing feedback to the speed controlling device of the motor.</li><li>2. A speed-monitoring test meter that may optically sense shaft rotation speed and display it on a readout.</li></ol>
<b>Thermal Switch</b>	An electromechanical safety device that opens to stop current flow when the temperature at the device reaches a specific temperature threshold. Thermal switches are sometimes installed in the motor in order to protect the windings from heat damage. The inverter can use thermal switch signals to trip (shut down) if the motor overheats. See also <i>Trip</i> .
<b>Thermistor</b>	A type of temperature sensor that changes its resistance according to its temperature. The sensing range of thermistors and their ruggedness make them ideal for motor overheating detection. Hitachi inverters have built-in thermistor input circuits, which can detect an overheated motor and shut off (trip) the inverter output.
<b>Three-phase power</b>	An AC power source with three Hot connections that have phase offsets of 120 degrees is a 3-phase power source. Usually, Neutral and Earth Ground wires accompany the three Hot connections. Loads may be configured in a delta or Y configuration. A Y-connected load such as an AC induction motor will be a balanced load; the currents in all the Hot connections are the same. Therefore, the Neutral connection is theoretically zero. This is why inverters that generate 3-phase power for motors do not generally have a Neutral connection to the motor. However, the Earth Ground connection is important for safety reasons, and is provided.

---

- Torque** The rotational force exerted by a motor shaft. The units of measurement consist of the distance (radius from shaft center axis) and force (weight) applied at that distance. Units are usually given as pound-feet, ounce-inches, or Newton-meters.
- Transistor** A solid state, three-terminal device that provides amplification of signals and can be used for switching and control. While transistors have a linear operating range, inverters use them as high-powered switches. Recent developments in power semiconductors have produced transistors capable of handling high voltages and currents, all with high reliability. The saturation voltage has been decreasing, resulting in less heat dissipation. Hitachi inverters use state-of-the-art semiconductors to provide high performance and reliability in a compact package. See also *IGBT* and *Saturation Voltage*.
- Trip Event** An event that causes the inverter to stop operation is called a “trip” event (as in *tripping* a circuit breaker). The inverter keeps a history log of trip events. They also require an action to clear.
- Watt Loss** A measure of the internal power loss of a component, the difference between the power it consumes and what its output delivers. An inverter’s watt loss is the input power minus the power delivered to the motor. The watt loss is typically highest when an inverter is delivering its maximum output. Therefore, watt loss is usually specified for a particular output level. Inverter watt loss specifications are important when designing enclosures.

## Bibliography

Title	Author and Publisher
Variable Speed Drive Fundamentals, 2nd Ed.	Phipps, Clarence A. The Fairmont Press, Inc. / Prentice-Hall, Inc. 1997
Electronic Variable Speed Drives	Brumbach, Michael E. Delmar Publishers 1997 ISBN 0-8273-6937-9
Hitachi Inverter Technical Guide Book	Published by Hitachi, Ltd. Japan 1995 Publication SIG-E002

# Modbus Network Communications



---

<b>In This Appendix...</b>	<b>page</b>
- <b>Introduction</b> .....	<b>2</b>
- <b>Connecting the Inverter to Modbus</b> .....	<b>3</b>
- <b>Network Protocol Reference</b> .....	<b>5</b>
- <b>Modbus Data Listing</b> .....	<b>24</b>

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

---




## Introduction

WJ200 Series inverters have built-in RS-485 serial communications, featuring the Modbus RTU protocol. The inverters can connect directly to existing factory networks or work with new networked applications, without any extra interface equipment. The specifications are in the following table.



Item	Specifications	User-selectable
Transmission speed	2400 / 4800 / 9600 / 19.2k / 38.4k / 57.6k / 76.8k / 115.2k bps	✓
Communication mode	Asynchronous	✗
Character code	Binary	✗
LSB placement	Transmits LSB first	✗
Electrical interface	RS-485 differential transceiver	✗
Data bits	8-bit (Modbus RTU mode)	✗
Parity	None / even / odd	✓
Stop bits	1 or 2 bits	✓
Startup convention	One-way start from host device	✗
Wait time for response	0 to 1000 msec.	✓
Connections	Station address numbers from 1 to 32	✓
Connector	Terminal connector	–
Error check	Overrun, Framing block check code, CRC-16, or horizontal parity	–
Cable length	500m maximum	

The network diagram below shows a series of inverters communicating with a host computer. Each inverter must have a unique address, from 1 to 32, on the network. In a typical application, a host computer or controller is the master and each of the inverter(s) or other devices is a slave.

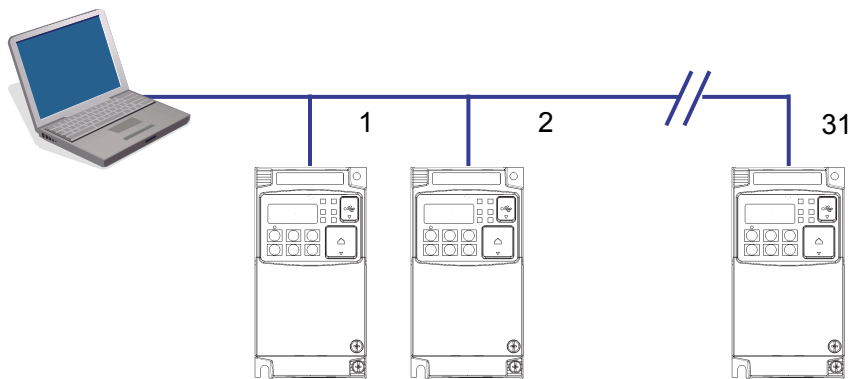

# Connecting the Inverter to Modbus

Modbus connector is in control terminal block as below. Note that RJ45 connector (RS-422) is used for external operator only.

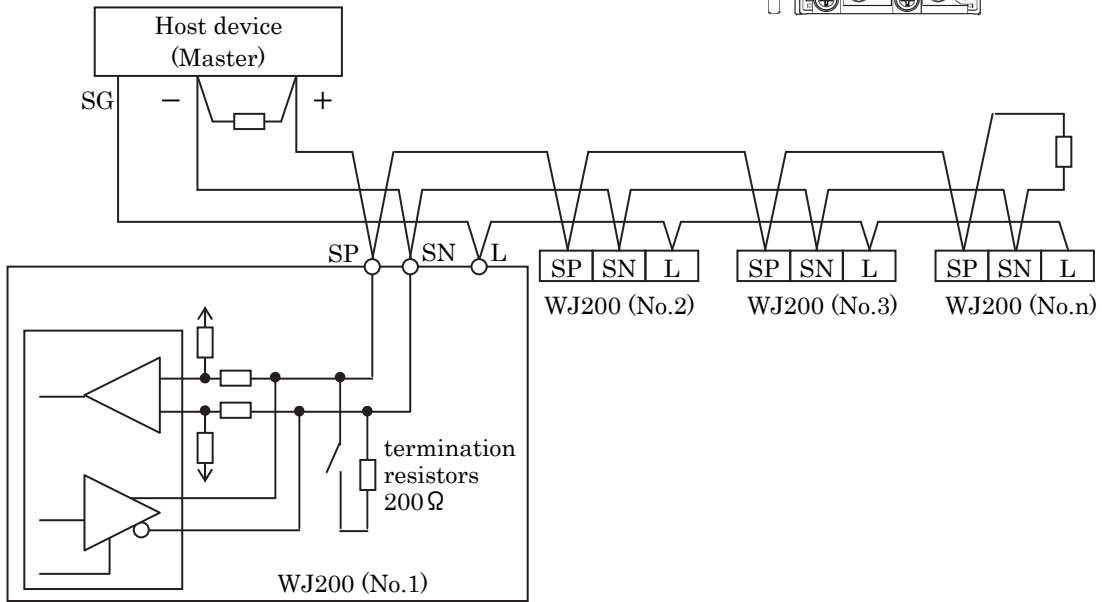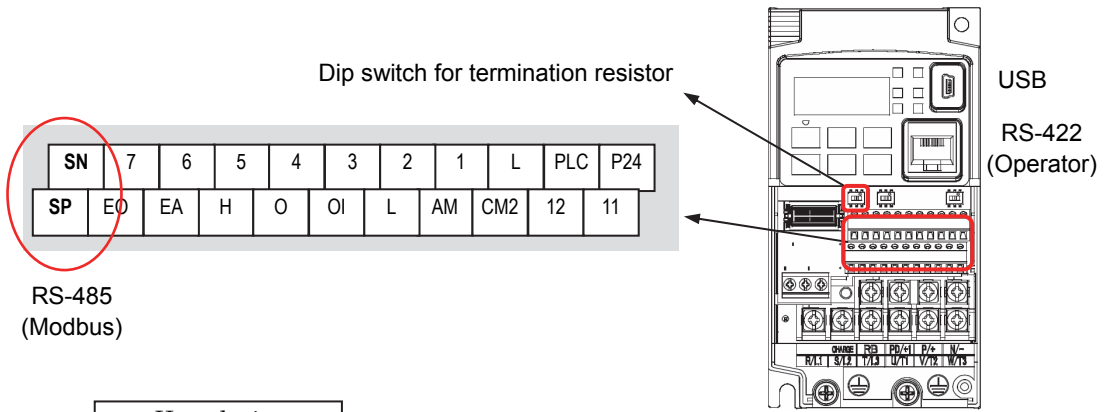

Note) Communication may become unstable depending on a cable and the wiring situation to use for use environment of the inverter, a communication line. In that case, please carry out follows.

- not use the terminal resistance with a built-in inverter, and please get the terminal resistance that matched the characteristic impedance of the cable at the both ends of the communications cable.(the terminal resistance having built-in to inverter is 200 Ω.)
- Please connect a signal ground of each inverter to external equipment (master).
- Please lower a transfer speed.
- Please insert a repeater.

**Inverter Parameter Setup** - The inverter has several settings related to Modbus communications. The table below lists them together. The *Required* column indicates which parameters *must* be set properly to allow communications. You may need to refer to the host computer documentation in order to match some of its settings.

Func. Code	Name	Required	Settings
A001	Frequency source	✓	00...Keypad potentiometer 01...Control terminal 02...Function F001 setting <b>03...Modbus network input</b> 10...Calculate function output
A002	Run command source	✓	01...Control terminal 02...Run key on keypad, or digital operator <b>03... Modbus network input</b>
C071	Communication speed	✓	03 2400 bps 04...4800 bps 05 9600 bps 06 19.2k bps 07...38.4k bps 08...57.6k bps 09...76.8k bps 10 115.2k bps
C072	Modbus Address	✓	Network address, range is 1 to 247
C074	Communication parity	✓	00...No parity 01...Even parity 02...Odd parity
C075	Communication stop bit	✓	Range is 1 or 2
C076	Communication error select	-	00...Trip (Error code E60) 01...Decelerate to a stop and trip 02...Disable 03...Free run stop (coasting) 04...Decelerate to a stop
C077	Communication error time-out	-	Comm. Watchdog timer period, range is 0.00 to 99.99 sec.
C078	Communication wait time	✓	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms




**NOTE:** When you change any of the parameters above, the inverter power must be rebooted in order to activate new parameters. Instead of rebooting, turning ON/OFF of reset terminal works as same.

# Network Protocol Reference

## Transmission procedure

The transmission between the external control equipment and the inverter takes the procedure below.

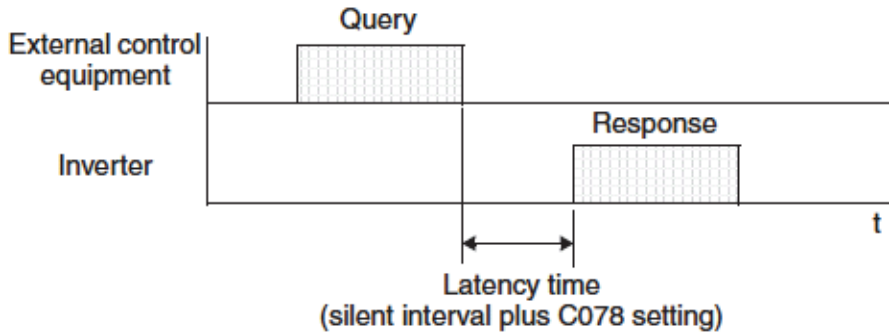

- Query - A frame sent from the external control equipment to the inverter
- Response - A frame returned from inverter to the external control equipment

The inverter returns the response only after the inverter receives a query from the external control equipment and does not output the response positively. Each frame is formatted (with commands) as follows:

Frame Format
Header (silent interval)
Slave address
Function code
Data
Error check
Trailer (silent interval)

## Message Configuration: Query

### Slave address:

- This is a number of 1 to 32 assigned to each inverter (slave). (Only the inverter having the address given as a slave address in the query can receive the query.)
- When slave address “0” is specified, the query can be addressed to all inverters simultaneously. (Broadcasting)
- In broadcasting, you cannot call and loop back data.
- Slave Address 1-247 in Modbus specification. When master address the slave 250-254, broadcast toward specific slave address. Slave doesn't answer back. And this function is valid for the write command (05h, 06h, 0Fh, 10h)

Slave address	Broadcast to
250 (FAh)	Broadcast to Slave address 01 to 09
251 (FBh)	Broadcast to Slave address 10 to 19
252 (FCh)	Broadcast to Slave address 20 to 29
253 (FDh)	Broadcast to Slave address 30 to 39
254 (FEh)	Broadcast to Slave address 40 to 247

**Data:**

- A function command is set here.
- The data format used in the X2002 series is corresponding to the Modbus data format below.

Name of Data	Description
Coil	Binary data that can be referenced and changed ( 1 bit long)
Holding Register	16-bit data that can be referenced and changed

**Function code:**

Specify a function you want to make the inverter execute. Function codes available to the X2002 series are listed below.

Function Code	Function	Maximum data size (bytes available per message)	Maximum number of data elements available per message
0 1 h	Read Coil Status	4	32 coils (in bits)
0 3 h	Read Holding Resistor	32	16 registers (in bytes)
0 5 h	Write in Coil	2	1 coil (in bits)
0 6 h	Write in Holding Register	2	1 register (in bytes)
0 8 h	Loopback Test	–	–
0 F h	Write in Coils	4	32 coils (in bits)
1 0 h	Write in Registers	32	16 registers (in bytes)
17 h	Read/Write Holding Register	32	16 registers (in bytes)

**Error check:**

Modbus-RTU uses CRC (Cyclic Redundancy Check) for error checking.

- The CRC code is 16-bit data that is generated for 8-bit blocks of arbitrary length.
- The CRC code is generated by a generator polynomial CRC-16 ( $X^{16} + X^{15} + X^2 + 1$ ).

**Header and trailer (silent interval):**

Latency is the time between the reception of a query from the master and transmission of a response from the inverter.

- 3.5 characters (24 bits) are always required for latency time. If the latency time shorter than 3.5 characters, the inverter returns no response.
- The actual transmission latency time is the sum of silent interval (3.5 characters long) + C078 (transmission latency time).

## Message Configuration: Response

### Transmission time required:

- A time period between reception of a query from the master and transmission of a response from the inverter is the sum of the silent interval (3.5 characters long) + C078 (transmission latency time).
- The master must provide a time period of the silent interval (3.5 characters long or longer) before sending another query to an inverter after receiving a response from the inverter.

### Normal response:

- When receiving a query that contains a function code of Loopback (08h), the inverter returns a response of the same content of the query.
- When receiving a query that contains a function code of Write in Register or Coil (05h, 06h, 0Fh, or 10h), the inverter directly returns the query as a response.
- When receiving a query that contains a function code of Read Register or Coil (01h or 03h), the inverter returns, as a response, the read data together with the same slave address and function code as those of the query.

### Response when an error occurs:

- When finding any error in a query (except for a transmission error), the inverter returns an exception response without executing anything.
- You can check the error by the function code in the response. The function code of the exception response is the sum of the function code of the query and 80h.
- The content of the error is known from the exception code.

Field Configuration
Slave address
Function code
Exception code
CRC-16

Exception Code	Description
0 1 h	The specified function is not supported.
0 2 h	The specified function is not found.
0 3 h	The format of the specified data is not acceptable.
2 1 h	The data to be written in a holding register is outside the inverter.
2 2 h	<p>The specified functions are not available to the inverter.</p> <ul style="list-style-type: none"> <li>• Function to change the content of a register that cannot be changed while the inverter is in service</li> <li>• Function to submit an ENTER command during running (UV)</li> <li>• Function to write in a register during tripping (UV)</li> <li>• Function to change the I/O terminal configuration which is not allowed.</li> <li>• Function to change active state of RS (reset) terminal</li> <li>• Function to write in a register during auto-tuning</li> <li>• Function to write in a register locked by password</li> </ul>
2 3h	The register (or coil) to be written in is read-only

**No response occurs:**

In the cases below, the inverter ignores a query and returns no response.

- When receiving a broadcasting query
- When detecting a transmission error in reception of a query
- When the slave address set in the query is not equal to the slave address of the inverter
- When a time interval between data elements constituting a message is shorter than 3.5 characters
- When the data length of the query is invalid
- When broadcast message received.



**NOTE:** Provide a timer in the master and make the master retransmit the same query when no response is made within a preset time period after the preceding query was sent.

---



## Explanation of function codes

### Read Coil Status [01h]:

This function reads the status (ON/OFF) of selected coils. An example follows below.

- Read intelligent input terminals [1] to [5] of an inverter having a slave address “8.”
- This example assumes the intelligent input terminals have terminal states listed below.

Item	Data				
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]
Coil number	7	8	9	10	11
Coil Status	ON	OFF	ON	OFF	OFF

### Query:

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	01
3	Coil start address *4 (high order)	00
4	Coil start address *4 (low order)	06
5	Number of coils (high order *2)	00
6	Number of coils (low order *2)	05
7	CRC-16 (high order)	1C
8	CRC-16 (low order)	91

### Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	01
3	Data size (in bytes)	01
4	Coil data *3	05
5	CRC-16 (high order)	92
6	CRC-16 (low order)	17

**Note 1:** Broadcasting is disabled.

**Note 2:** When 0 or more than 31 is specified as a number of coils, error code “03h” is returned.

**Note 3:** Data is transferred by the specified number of data bytes (data size).

**Note 4:** The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.

- The data set in the response shows terminal state of coils 0007h~000Dh.
- Data “05h = 00000101b” indicates the following assuming coil 7 is the LSB.

Item	Data							
Coil Number	14	13	12	11	10	9	8	7
Coil Status	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON

- When a read coil is outside the defined coils, the final coil data to be transmitted contains “0” as the status of the coil outside the range.
- When the Read Coil Status command cannot be executed normally, see the exception response.

### Read Holding Register [03h]:

This function reads the contents of the specified number of consecutive holding registers (of specified register addresses). An example follows below.

- Reading Trip monitor 1 factor and trip frequency, current, and voltage from an inverter having a slave address “1”
- This example assumes the previous three trip factors are as follows:

X2002 Command	D081 (factor)	D081 (frequency)	D081 (output current)	D081 (DC-bus Voltage)
Register Number	0012h	0014h	0016h	0017h
Trip factor	Over-Current (E03)	9.9Hz	3.0A	284V

#### Query:

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	03
3	Register start address *3 (high order)	00
4	Register start address *3 (low order)	11
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	06
7	CRC-16 (high order)	95
8	CRC-16 (low order)	CD

#### Response:

No.	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes) *2	0C
4	Register data 1 (high order)	00
5	Register data 1 (high order)	03
6	Register data 2 (high order)	00
7	Register data 2 (low order)	00
8	Register data 3 (high order)	00
9	Register data 3 (low order)	63
10	Register data 4 (high order)	00
11	Register data 4 (low order)	00
12	Register data 5 (high order)	00
13	Register data 5 (low order)	1E
14	Register data 6 (high order)	01
15	Register data 6 (low order)	1C
16	CRC-16 (high order)	AF
17	CRC-16 (low order)	6D

**Note 1:** Broadcasting is disabled.

**Note 2:** Data is transferred by the specified number of data bytes (data size). In this case, 6 bytes are used to return the content of three holding registers.

**Note 3:** The PDU Register Number are addressed starting at zero. Therefore register numbered “0012h” are addressed as “0011h”. Register address value (transmitted on Modbus line) is 1 less than the Register Number.

The data set in the response is as follows:

Response Buffer	4-5		6-7		8-9	
Register Number	12+0 (high order)	12+0 (low order)	12+1 (high order)	12+1 (low order)	12+2 (high order)	12+2 (low order)
Register Data	0003h		00h	00h	0063h	
Trip data	Trip factor (E03)		Not used		Frequency (9.9Hz)	
Response Buffer	10-11		12-13		14-15	
Register Number	12+3 (high order)	12+3 (low order)	12+4 (high order)	12+4 (low order)	12+5 (high order)	12+5 (low order)
Register Data	00h	00h	001Eh		011Ch	
Trip data	Not used		Output current (3.0A)		DC-bus voltage (284V)	

When the Read Holding Register command cannot be executed normally, refer to the exception response.

### Write in Coil [05h]:

This function writes data in a single coil. Coil status changes are as follows:

Data	Coil Status	
	OFF to ON	ON to OFF
Change data (high order)	FFh	00h
Change data (low order)	00h	00h

An example follows (note that to command the inverter, set A002=03):

- Sending a RUN command to an inverter having slave address “8”
- This example writes in coil number “1.”

### Query:

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	05
3	Coil start address *2 (high order)	00
4	Coil start address *2 (low order)	00
5	Change data (high order)	FF
6	Change data (low order)	00
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	A3

### Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	05
3	Coil start address *2 (high order)	00
4	Coil start address *2 (low order)	00
5	Change data (high order)	FF
6	Change data (low order)	00
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	A3

**Note 1:** No response is made for a broadcasting query.

**Note 2:** The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.

When writing in a selected coil fails, see the exception response.

**Write in Holding Register [06h]:**

This function writes data in a specified holding register. An example follows:

- Write “50Hz” as the first Multi-speed 0 (A020) in an inverter having slave address “5.”
- This example uses change data “500(1F4h)” to set “50Hz” as the data resolution of the register “1029h” holding the first Multi-speed 0 (A020) is 0.1Hz

**Query:**

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	06
3	Register start address *2 (high order)	10
4	Register start address *2 (low order)	28
5	Change data (high order)	01
6	Change data (low order)	F4
7	CRC-16 (high order)	0D
8	CRC-16 (low order)	8C

**Response:**

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	06
3	Register start address *2 (high order)	10
4	Register start address *2 (low order)	28
5	Change data (high order)	01
6	Change data (low order)	F4
7	CRC-16 (high order)	0D
8	CRC-16 (low order)	8C

**Note 1:** No response is made for a broadcasting query.

**Note 2:** The PDU Register Number are addressed starting at zero. Therefore register numbered “1029h” are addressed as “1028h”. Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in a selected holding register fails, see the exception response.

**Loopback Test [08h]:**

This function checks a master-slave transmission using any test data. An example follows:

- Send test data to an inverter having slave address “1” and receiving the test data from the inverter (as a loopback test).

**Query:**

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	08
3	Test subcode (high order)	00
4	Test subcode (low order)	00
5	Data (high order)	Any
6	Data (low order)	Any
7	CRC-16 (high order)	CRC
8	CRC-16 (low order)	CRC

**Response:**

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	08
3	Test subcode (high order)	00
4	Test subcode (low order)	00
5	Data (high order)	Any
6	Data (low order)	Any
7	CRC-16 (high order)	CRC
8	CRC-16 (low order)	CRC

**Note 1:** Broadcasting is disabled.

When test subcode is for echo (00h, 00h) only and not available to the other commands.

**Write in Coils [0Fh]:**

This function writes data in consecutive coils. An example follows:

- Change the state of intelligent input terminal [1] to [5] of an inverter having a slave address “8.”
- This example assumes the intelligent input terminals have terminal states listed below.

Item	Data				
Intelligent input terminal	[1]	[2]	[3]	[4]	[5]
Coil Number	7	8	9	10	11
Terminal status	ON	ON	ON	OFF	ON

**Query:**

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	0F
3	Coil start address *3 (high order)	00
4	Coil start address *3 (low order)	06
5	Number of coils (high order)	00
6	Number of coils (low order)	05
7	Byte number *2	02
8	Change data (high order)	17
9	Change data (low order)	00
10	CRC-16 (high order)	83
11	CRC-16 (low order)	EA

**Response:**

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	0F
3	Coil start address *3 (high order)	00
4	Coil start address *3 (low order)	06
5	Number of coils (high order)	00
6	Number of coils (low order)	05
7	CRC-16 (high order)	75
8	CRC-16 (low order)	50

**Note 1:** Broadcasting is disabled.

**Note 2:** The change data is a set of high-order data and low-order data. So when the size (in bytes) of data to be changed is an odd start coil number (“7”), add “1” to the data size (in bytes) to make it an even number.

**Note 3:** The PDU Coils are addressed starting at zero. Therefore coils numbered 1-31 are addressed as 0-30. Coil address value (transmitted on Modbus line) is 1 less than the Coil Number.

## Write in Holding Registers [10h]:

This function writes data in consecutive holding registers. An example follows:

- Write “3000 seconds” as the first acceleration time 1 (F002) in an inverter having a slave address “8.”
- This example uses change data “300000(493E0h)” to set “3000 seconds” as the data resolution of the registers “1014h” and “1015h” holding the first acceleration time 1 (F002) is 0.01 second.

### Query:

No.	Field Name	Example (Hex)
1	Slave address *1	08
2	Function code	10
3	Start address *3 (high order)	10
4	Start address *3 (low order)	13
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	Byte number *2	04
8	Change data 1 (high order)	00
9	Change data 1 (low order)	04
10	Change data 2 (high order)	93
11	Change data 2 (low order)	E0
12	CRC-16 (high order)	7D
13	CRC-16 (low order)	53

### Response:

No.	Field Name	Example (Hex)
1	Slave address	08
2	Function code	10
3	Start address *3 (high order)	10
4	Start address *3 (low order)	13
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	02
7	CRC-16 (high order)	B4
8	CRC-16 (low order)	54

**Note 1:** Broadcasting is disabled.

**Note 2:** This is not the number of holding registers. Specify the number of bytes of data to be changed.

**Note 3:** The PDU Register Number are addressed starting at zero. Therefore register numbered “1014h” are addressed as “1013h”. Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in selected holding registers fails, see the exception response.

**Write in Holding Registers [17h]:**

This function is to read and write data in consecutive holding registers. An example follows:

- Write “50.0Hz” as the set frequency (F001) in an inverter having a slave address “1” and then to read out the output frequency (d001).

**Query:**

No.	Field Name	Example (Hex)
1	Slave address *1	01
2	Function code	17
3	Start address to read *3 (high order)	10
4	Start address to read *3 (low order)	00
5	Number of holding registers to read (high order)	00
6	Number of holding registers to read (low order)	02
7	Start address to write *3 (high order)	00
8	Start address to write *3 (low order)	00
9	Number of holding registers to write (high order)	00
10	Number of holding registers to write (low order)	02
11	Byte number to write*2	04
12	Change data 1 (high order)	00
13	Change data 1 (low order)	00
14	Change data 2 (high order)	13
15	Change data 2 (low order)	88
16	CRC-16 (high order)	F4
17	CRC-16 (low order)	86

**Response:**

No.	Field Name	Example (Hex)
1	Slave address	01
2	Function code	17
3	Byte number n	04
4	Register Data 1 (high order)	00
5	Register Data 1 (low order)	00
6	Register Data 2 (high order)	13
7	Register Data 2 (low order)	88
8	CRC-16 (high order)	F4
9	CRC-16 (low order)	71

**Note 1:** Register address value (transmitted on Modbus line) is 1 less than the Register Number.

When writing in selected holding registers fails, see the exception response.



## Exception Response:

When sending a query (excluding a broadcasting query) to an inverter, the master always requests a response from the inverter. Usually, the inverter returns a response according to the query. However, when finding an error in the query, the inverter returns an exception response. The exception response consists of the fields shown below.

Field Configuration
Slave address
Function code
Exception code
CRC-16

The content of each field is explained below. The function code of the exception response is the sum of the function code of the query and 80h. The exception code indicates the factor of the exception response.

Function Code	
Query	Exception Response
0 1 h	8 1 h
0 3 h	8 3 h
0 5 h	8 5 h
0 6 h	8 6 h
0 F h	8 F h
1 0 h	9 0 h

Exception Code	
Code	Description
0 1 h	The specified function is not supported.
0 2 h	The specified function is not found.
0 3 h	The format of the specified data is not acceptable.
2 1 h	The data to be written in a holding register is outside the inverter.
2 2 h	The specified functions are not available to the inverter. <ul style="list-style-type: none"> <li>• Function to change the content of a register that cannot be changed while the inverter is in service</li> <li>• Function to submit an ENTER command during running (UV)</li> <li>• Function to write in a register during tripping (UV)</li> <li>• Function to write in a read-only register (or coil)</li> </ul>

## Store New Register Data (ENTER command)

After being written in a selected holding register by the Write in Holding Register command (06h) or in selected holding registers by the Write in Holding Registers command (10h), new data is temporary and still outside the storage element of the inverter. If power to the inverter is shut off, this new data is lost and the previous data returns. The ENTER command is used to store this new data in the storage element of the inverter. Follow the instructions below to submit the ENTER command.

### Submitting an ENTER Command:

- Write any data in all memory (of a holding register at 0900h) by the Write in Holding Register command [06h].



**NOTE:** The ENTER command takes much time to run. You can check its progress by monitoring the Data Writing signal (of a coil at 0049h).

---




**NOTE:** The service life of the storage element of the inverter is limited (to about 100,000 write operations). Frequent use of the ENTER command may shorten its service life.

---

## EzCOM (Peer-to-Peer communication)

- Besides standard Modbus-RTU communication (slave), WJ200 supports Peer-to-Peer communication between multiple inverters.
- The max. number of inverter in the network is up to 247 (32 without repeater).
- One administrator inverter is necessary in the network, and the other inverters behave as master or slave.
- Be sure to set station No.1 as an administrator inverter, which controls master inverter according to user setting. The others will be slave inverters. An admin. inverter is fixed, but a master inverter always turns by rotation. For this reason, an admin. inverter can be a master or a slave.
- A master inverter is able to write data to any holding register of designated slave inverter. The max. number of holding register is up to 5. After writing data completed, a master inverter will be shift to the next inverter.
- The max. number of master inverter is 8.

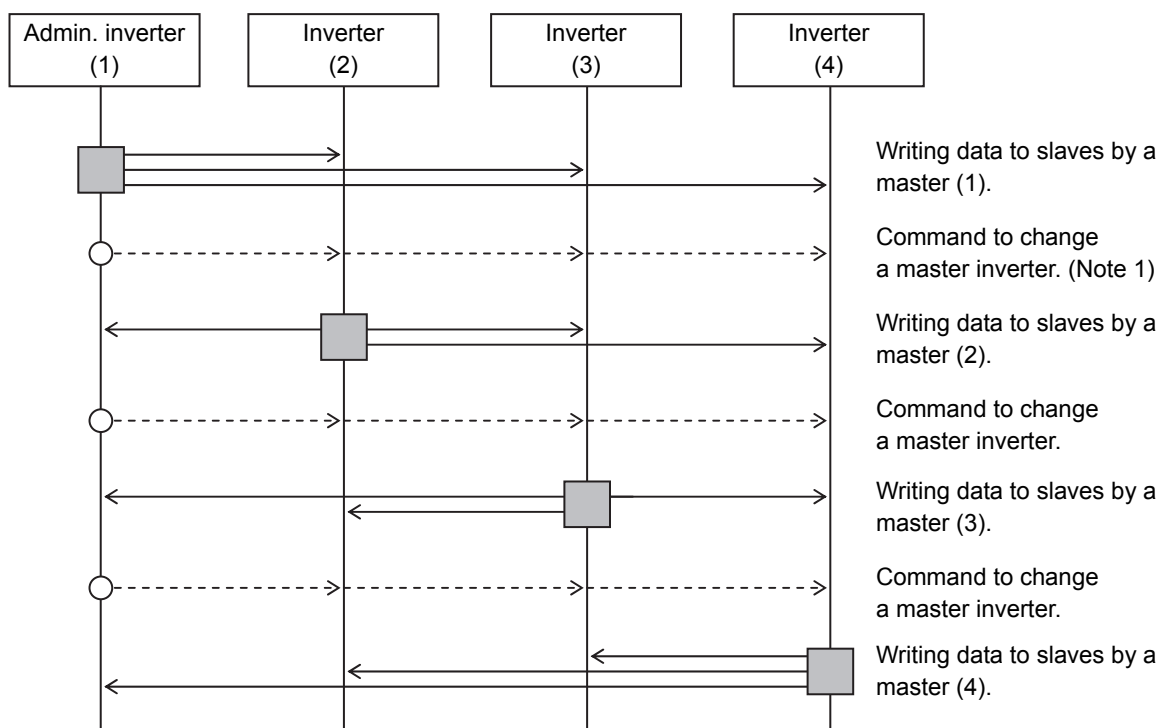

 : Master inverter

Note 1: The command to change a master is issued by an admin. inverter automatically, which users do not have to take care.

---

Note2: The command to change a master from 01 to 02 is issued after the data is sent from master inverter 01 to slave and silent interval plus communication wait time (C078) passed.

Note 3: Administrative inverter issues the next command to change a master after the data from master inverters is sent and silent interval plus communication wait time (C078) passed. In case the data from master inverter cannot be received within the communication timeout (C077), then the inverter timeouts and the behaves according to the communication error selection.

Note 4: Please set the communication timeout as it is valid (C077=0.01~99.99). If it is disabled (C077=0.0), EzCOM function is interrupted in case the data from master inverter was not received. In case it is interrupted, please turn on/off the power or reset (reset terminal on/off).

---

Func. code	Name	Data/Range	For	Description
C072	Modbus address	1 to 247	ALL	Network address
C076	Selection of the operation after communication error	00	ALL	tripping
		01	ALL	tripping after decelerating and stopping the motor
		02	ALL	ignoring errors
		03	ALL	stopping the motor after free-running
		04	ALL	decelerating and stopping the motor
C077	Communication timeout limit	0.00	ALL	Disabled
		0.01~99.99	ALL	[sec.]
C078	Communication wait time	0.~1000.	ALL	[ms]
C096	Communication selection	00	-	Modbus-RTU
		01	B	EzCOM
		02	A	EzCOM < Admin. inverter >
C098	EzCOM start adr. of master	01 to 08	A	
C099	EzCOM end adr. of master	01 to 08	A	
C100	EzCOM starting trigger	00	A	Input terminal (Note 2)
		01	A	Always
P140	EzCOM the number of data	1 to 5	M	
P141	EzCOM destination 1 address	1 to 247	M	(Note 3)
P142	EzCOM destination 1 register	0000 to FFFF	M	
P143	EzCOM source 1 register	0000 to FFFF	M	
P144	EzCOM destination 2 address	1 to 247	M	
P145	EzCOM destination 2 register	0000 to FFFF	M	
P146	EzCOM source 2 register	0000 to FFFF	M	
P147	EzCOM destination 3 address	1 to 247	M	
P148	EzCOM destination 3 register	0000 to FFFF	M	
P149	EzCOM source 3 register	0000 to FFFF	M	
P150	EzCOM destination 4 address	1 to 247	M	
P151	EzCOM destination 4 register	0000 to FFFF	M	
P152	EzCOM source 4 register	0000 to FFFF	M	
P153	EzCOM destination 5 address	1 to 247	M	
P154	EzCOM destination 5 register	0000 to FFFF	M	
P155	EzCOM source 5 register	0000 to FFFF	M	
C001~ C007	Input terminal function	81	A	485: start EzCOM

### Which parameters to be set?

- ALL: Set all inverters in the network.
- A : Set admin. inverter (address=1) only.
- B : Set all inverters except admin. inverter.
- M : Set master inverters configured in C098 to C099 of admin. inverter.

Note 5: Address of Administrative inverter is to be set 01 (C072=01).

Note 6: When selection of operation after communication error is set other than “ignoring errors (C076=02)”, EzCOM function is interrupted in case of communication timeout on administrative inverter. In this case, please power off/on or reset (on/off RES terminal) to recover.

Note 7: If EzCOM starting trigger is set as input terminal (C100=00), be sure to configure 81 in one of input terminals.

Note 8: If EzCOM starting trigger is set as always (C100=01), administrative inverter starts to send the

---

data immediately after power on. In case the establishment of the inverter to be assigned as master of delays and fail to receive the command to change the master, the data cannot be sent from master and administrative inverter time-outs. When C100=01 selected, please be sure to power up the administrative inverter at last after reconfirming the establishment of inverters other than administrative inverters.

Note 9: Although slave addresses are set in a master inverter, data is sent as broadcast address (00). If a slave inverter receives data to another slave, it will be ignored.

Note 10: As EzCOM source and destination register, please set the number minus one from the value listed in the table in “modbus data listing”.

Note 11: Be sure to avoid to set “08FFh(EEPROM writing)” and “0901h(EEPROM

Note 12: If above parameter is changed, the inverter power must be rebooted in order to activate new parameters. Instead of rebooting, turning ON/OFF of reset terminal works as same.

#### **Basic function (in case the number of data is 1 (P140=1))**

- A master inverter sends data in holding register P143 of the master to a slave inverter of address P141 and overwrites on holding register P142.
  - A master inverter is changed to the next inverter, and repeats same procedure according to setting of new master inverter.
-

# Modbus Data Listing

## Modbus Coil List

The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- **Coil Number** - The network *register address offset* for the coil. The coil data is a single bit (binary) value.
- **Name** - The functional name of the coil
- **R/W** - The read-only (R) or read-write (R/W) access permitted to the inverter data
- **Description** - The meaning of each of the states of the coils

Coil No.	Item	R/W	Setting
0000h	unused	-	(Inaccessible)
0001h	Operation command	R/W	1: Run, 0: Stop (valid when A002 = 03)
0002h	Rotation direction command	R/W	1: Reverse rotation, 0: Forward rotation (valid when A002 = 03)
0003h	External trip (EXT)	R/W	1: Trip
0004h	Trip reset (RS)	R/W	1: Reset
0005h	(Reserved)	-	-
0006h	(Reserved)	-	-
0007h	Intelligent input terminal [1]	R/W	1: ON, 0: OFF (*1)
0008h	Intelligent input terminal [2]	R/W	1: ON, 0: OFF (*1)
0009h	Intelligent input terminal [3]	R/W	1: ON, 0: OFF (*1)
000Ah	Intelligent input terminal [4]	R/W	1: ON, 0: OFF (*1)
000Bh	Intelligent input terminal [5]	R/W	1: ON, 0: OFF (*1)
000Ch	Intelligent input terminal [6]	R/W	1: ON, 0: OFF (*1)
000Dh	Intelligent input terminal [7]	R/W	1: ON, 0: OFF (*1)
000Eh	(Reserved)	-	-
000Fh	Operation status	R	1: Run, 0: Stop (interlocked to "d003")
0010h	Rotation direction	R	1: Reverse rotation, 0: Forward rotation (interlocked to "d003")
0011h	Inverter ready	R	1: Ready, 0: Not ready
0012h	(Reserved)	-	-
0013h	RUN (running)	R	1: Tripping, 0: Normal
0014h	FA1 (constant-speed reached)	R	1: ON, 0: OFF
0015h	FA2 (set frequency overreached)	R	1: ON, 0: OFF
0016h	OL (overload advance notice (1))	R	1: ON, 0: OFF
0017h	OD (output deviation for PID control)	R	1: ON, 0: OFF
0018h	AL (alarm signal)	R	1: ON, 0: OFF
0019h	FA3 (set frequency reached)	R	1: ON, 0: OFF
001Ah	OTQ (over-torque)	R	1: ON, 0: OFF
001Bh	(Reserved)	-	-
001Ch	UV (undervoltage)	R	1: ON, 0: OFF
001Dh	TRQ (torque limited)	R	1: ON, 0: OFF
001Eh	RNT (operation time over)	R	1: ON, 0: OFF
001Fh	ONT (plug-in time over)	R	1: ON, 0: OFF
0020h	THM (thermal alarm signal)	R	1: ON, 0: OFF
0021h	(Reserved)	-	-
0022h	(Reserved)	-	-
0023h	(Reserved)	-	-
0024h	(Reserved)	-	-
0025h	(Reserved)	-	-
0026h	BRK (brake release)	R	1: ON, 0: OFF
0027h	BER (brake error)	R	1: ON, 0: OFF
0028h	ZS (0 Hz detection signal)	R	1: ON, 0: OFF
0029h	DSE (speed deviation maximum)	R	1: ON, 0: OFF
002Ah	POK (positioning completed)	R	1: ON, 0: OFF
002Bh	FA4 (set frequency overreached 2)	R	1: ON, 0: OFF
002Ch	FA5 (set frequency reached 2)	R	1: ON, 0: OFF

Coil No.	Item	R/W	Setting
002Dh	OL2 (overload notice advance (2))	R	1: ON, 0: OFF
002Eh	Odc: Analog O disconnection detection	-	1: ON, 0: OFF
002Fh	OIdc: Analog OI disconnection detection	-	1: ON, 0: OFF
0030h	(Reserved)	-	-
0031h	(Reserved)	-	-
0032h	FBV (PID feedback comparison)	R	1: ON, 0: OFF
0033h	Ndc (communication train disconnection)	R	1: ON, 0: OFF
0034h	LOG1 (logical operation result 1)	R	1: ON, 0: OFF
0035h	LOG2 (logical operation result 2)	R	1: ON, 0: OFF
0036h	LOG3 (logical operation result 3)	R	1: ON, 0: OFF
0037h	(Reserved)	-	-
0038h	(Reserved)	-	-
0039h	(Reserved)	-	-
003Ah	WAC (capacitor life warning)	R	1: ON, 0: OFF
003Bh	WAF (cooling-fan speed drop)	R	1: ON, 0: OFF
003Ch	FR (starting contact signal)	R	1: ON, 0: OFF
003Dh	OHF (heat sink overheat warning)	R	1: ON, 0: OFF
003Eh	LOC (low-current indication signal)	R	1: ON, 0: OFF
003Fh	M01 (general output 1)	R	1: ON, 0: OFF
0040h	M02 (general output 2)	R	1: ON, 0: OFF
0041h	M03 (general output 3)	R	1: ON, 0: OFF
0042h	(Reserved)	-	-
0043h	(Reserved)	-	-
0044h	(Reserved)	-	-
0045h	IRDY (inverter ready)	R	1: ON, 0: OFF
0046h	FWR (forward rotation)	R	1: ON, 0: OFF
0047h	RVR (reverse rotation)	R	1: ON, 0: OFF
0048h	MJA (major failure)	R	1: ON, 0: OFF
0049h	Data writing in progress	R	1: Writing in progress, 0: Normal status
004Ah	CRC error	R	1: Error detected, 0: No error (*2)
004Bh	Overrun	R	1: Error detected, 0: No error (*2)
004Ch	Framing error	R	1: Error detected, 0: No error (*2)
004Dh	Parity error	R	1: Error detected, 0: No error (*2)
004Eh	Sum check error	R	1: Error detected, 0: No error (*2)
004Fh	(Reserved)	-	-
0050h	WCO (window comparator O)	R	1: ON, 0: OFF
0051h	WCOI (window comparator OI)	R	1: ON, 0: OFF
0052h	(Reserved)	-	-
0053h	OPDc (option disconnection)	R	1: ON, 0: OFF
0054h	FREF (FQ command source)	R	1: Operator, 0: Others
0055h	REF (RUN command source)	R	1: Operator, 0: Others
0056h	SETM (2nd motor selected)	R	1: 2nd motor selected, 0: 1st motor selected
0057h	(Reserved)	-	-
0058h	EDM (STO (Safe Torque Off) Performance Monitor)	R	1: ON, 0: OFF
0059h-	unused	R	inaccessible

\*1 Normally, this coil is turned on when the corresponding intelligent input terminal on the control circuit terminal block is turned on or the coil itself is set to on. In this regard, the operation of the intelligent input terminal has priority over the operation of the coil. If disconnection of the communication train has disabled the master system from turning off the coil, turn the corresponding intelligent input terminal on the control circuit block on and off. This operation turns off the coil.

\*2 Communication error data is retained until an error reset command is input. (The data can be reset during the inverter operation.)



## Modbus Holding Registers

The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- **Function Code** - The inverter's reference code for the parameter or function (same as inverter keypad display)
- **Name** - The standard functional name of the parameter or function for the inverter
- **R/W** - The read-only(R) or read-write access(R/W) permitted to the data in the inverter
- **Description** - How the parameter or setting works (same as Chapter 3 description).
- **Reg.** - The network *register address offset* for the value. Some values have a high-byte and low-byte address.
- **Range** - The numerical range for the network value that is sent and/or received



**TIP:** The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

- **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0000h	unused	-	-	Inaccessible	
0001h	Frequency source	F001 (high)	R/W	0 to 40000 (valid when A001 = 03)	0.01 [Hz]
0002h		F001 (low)	R/W		
0003h	Inverter status A	-	R	0: Initial status 2: Stopping 3: Running 4: Free-run stop 5: Jogging 6: DC braking 7: Retrying 8: Tripping 9: Undervoltage (UV)	-
0004h	Inverter status B	-	R	0: Stopping, 1: Running, 2: Tripping	-
0005h	Inverter status C	-	R	0: --- 1: Stopping 2: Decelerating 3: Constant-speed operation 4: Accelerating 5: Forward rotation 6: Reverse rotation 7: Switching from fwd. to rev. rotation, 8: Switching from rev. to fwd. rotation, 9: Starting fwd. 10: Starting rev.	-
0006h	PID feedback	-	R/W	0 to 10000	0.01 [%]
0007h to 0010h	(Reserved)	-	R	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0011h	Trip Counter	d080	R	0 to 65530	1 [time]
0012h	Trip info. 1 (factor)	d081	R	See the list of inverter trip factors below	-
0013h	Trip info. 1 (inverter status)			See the list of inverter trip factors below	-
0014h	Trip info. 1 (frequency) (high)			0 to 100000	0.01[Hz]
0015h	Trip info. 1 (frequency) (low)			Output current at tripping	0.01[A]
0016h	Trip info. 1 (current)			DC input voltage at tripping	1[V]
0017h	Trip info. 1 (voltage)			Cumulative running time at tripping	1[h]
0018h	Trip info. 1 (running time) (high)			Cumulative power-on time at tripping	1[h]
0019h	Trip info. 1 (running time) (low)				
001Ah	Trip info. 1 (power-on time) (high)				
001Bh	Trip info. 1 (power-on time) (low)				
001Ch	Trip info. 2 (factor)	d082	R	See the list of inverter trip factors below	-
001Dh	Trip info. 2 (inverter status)			See the list of inverter trip factors below	-
001Eh	Trip info. 2 (frequency) (high)			0 to 100000	0.01[Hz]
001Fh	Trip info. 2 (frequency) (low)			Output current at tripping	0.01[A]
0020h	Trip info. 2 (current)			DC input voltage at tripping	1[V]
0021h	Trip info. 2 (voltage)			Cumulative running time at tripping	1[h]
0022h	Trip info. 2 (running time) (high)			Cumulative power-on time at tripping	1[h]
0023h	Trip info. 2 (running time) (low)				
0024h	Trip info. 2 (power-on time) (high)				
0025h	Trip info. 2 (power-on time) (low)				
0026h	Trip info. 3 (factor)	d083	R	See the list of inverter trip factors below	-
0027h	Trip info. 3 (inverter status)			See the list of inverter trip factors below	-
0028h	Trip info. 3 (frequency) (high)			0 to 100000	0.01[Hz]
0029h	Trip info. 3 (frequency) (low)			Output current at tripping	0.01[A]
002Ah	Trip info. 3 (current)			DC input voltage at tripping	1[V]
002Bh	Trip info. 3 (voltage)			Cumulative running time at tripping	1[h]
002Ch	Trip info. 3 (running time) (high)			Cumulative power-on time at tripping	1[h]
002Dh	Trip info. 3 (running time) (low)				
002Eh	Trip info. 3 (power-on time) (high)				
002Fh	Trip info. 3 (power-on time) (low)				
0030h	Trip info. 4 (factor)	d084	R	See the list of inverter trip factors below	-
0031h	Trip info. 4 (inverter status)			See the list of inverter trip factors below	-
0032h	Trip info. 4 (frequency) (high)			0 to 100000	0.01[Hz]
0033h	Trip info. 4 (frequency) (low)			Output current at tripping	0.01[A]
0034h	Trip info. 4 (current)			DC input voltage at tripping	1[V]
0035h	Trip info. 4 (voltage)			Cumulative running time at tripping	1[h]
0036h	Trip info. 4 (running time) (high)			Cumulative power-on time at tripping	1[h]
0037h	Trip info. 4 (running time) (low)				
0038h	Trip info. 4 (power-on time) (high)				
0039h	Trip info. 4 (power-on time) (low)				
003Ah	Trip info. 5 (factor)	d085	R	See the list of inverter trip factors below	-
003Bh	Trip info. 5 (inverter status)			See the list of inverter trip factors below	-
003Ch	Trip info. 5 (frequency) (high)			0 to 100000	0.01[Hz]
003Dh	Trip info. 5 (frequency) (low)			Output current at tripping	0.01[A]
003Eh	Trip info. 5 (current)			DC input voltage at tripping	1[V]
003Fh	Trip info. 5 (voltage)			Cumulative running time at tripping	1[h]
0040h	Trip info. 5 (running time) (high)			Cumulative power-on time at tripping	1[h]
0041h	Trip info. 5 (running time) (low)				
0042h	Trip info. 5 (power-on time) (high)				
0043h	Trip info. 5 (power-on time) (low)				
0044h	Trip info. 6 (factor)	d086	R	See the list of inverter trip factors below	-
0045h	Trip info. 6 (inverter status)			See the list of inverter trip factors below	-
0046h	Trip info. 6 (frequency) (high)			0 to 100000	0.01[Hz]
0047h	Trip info. 6 (frequency) (low)			Output current at tripping	0.01[A]
0048h	Trip info. 6 (current)			DC input voltage at tripping	1[V]
0049h	Trip info. 6 (voltage)			Cumulative running time at tripping	1[h]
004Ah	Trip info. 6 (running time) (high)			Cumulative power-on time at tripping	1[h]
004Bh	Trip info. 6 (running time) (low)				
004Ch	Trip info. 6 (power-on time) (high)				
004Dh	Trip info. 6 (power-on time) (low)				

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
004Eh	Programming error monitoring	d090	R	Warning code	-
004Fh to 006Ch	(reserved)	-	-	-	-
006Dh to 08Efh	(reserved)	-	-	-	-
0900h	Writing to EEPROM	-	W	0: Motor constant recalculation 1: Save all data in EEPROM Other: Motor constant recalculation and save all data in EEPROM	-
0901h	Unused	-	-	Inaccessible	-
0902h	EEPROM write mode	-	W	0 (invalid) / 1 (valid)	-
0903h to 1000h	Unused	-	-	Inaccessible	-

Note 1: Assume that the rated current of the inverter is "1000".

Note 2: If a number not less than "1000" (100.0 seconds) is specified, the second value after the decimal point will be ignored.

Note 3: 0902h setting is referred for one time when following 06H command is executed.

## List of inverter trip factors

Upper part of trip factor code (indicating the factor)		Lower part of trip factor code (indicating the inverter status)	
Name	Code	Name	Code
No trip factor	0	Resetting	0
Over-current event while at constant speed	1	Stopping	1
Over-current event during deceleration	2	Decelerating	2
Over-current event during acceleration	3	Constant-speed operation	3
Over-current event during other conditions	4	Accelerating	4
Overload protection	5	Operating at zero frequency	5
Braking resistor overload protection	6	Starting	6
Overvoltage protection	7	DC braking	7
EEPROM error	8	Overload restricted	8
Undervoltage protection	9		
Current detection error	10		
CPU error	11		
External trip	12		
USP error	13		
Ground-fault protection	14		
Input overvoltage protection	15		
Inverter thermal trip	21		
CPU error	22		
Main circuit error	25		
Driver error	30		
Thermistor error	35		
Braking error	36		
Safe Stop	37		
Low-speed overload protection	38		
Operator connection	40		
Modbus communication error	41		
Easy sequence error (invalid instruction)	43		
Easy sequence error (invalid nesting count)	44		
Easy sequence execution error 1	45		
Easy sequence user trip 0 to 9	50 to 59		
Option error 0 to 9	60 to 69		
Encoder disconnection	80		
Excessive speed	81		
Position control range trip	83		

## (iii) List of registers (monitoring)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1001h	Output frequency monitor	d001 (high)	R	0 to 40000(100000)	0.01 [Hz]
1002h		d001 (low)			
1003h	Output current monitor	d002	R	0 to 65530	0.1 [A]
1004h	Rotation direction monitoring	d003	R	0: Stopping, 1: Forward rotation, 2: Reverse rotation	0.1 [Hz]
1005h	Process variable (PV), PID feedback monitoring	d004 (high)	R	0 to 1000000	0.1
1006h		d004 (low)			
1007h	Intelligent input terminal status	d005	R	2^0: Terminal 1 to 2^6: Terminal 7	1 bit
1008h	Intelligent output terminal status	d006	R	2^0: Terminal 11 to 2^1: Terminal 12/ 2^2: Relay Terminal	1 bit
1009h	Scaled output frequency monitor	d007 (high)	R	0 to 4000000(10000000)	0.01
100Ah		d007 (low)			
100Bh	Actual-frequency monitor	d008 (high)	R	-100000 to +100000	0.01 [Hz]
100Ch		d008 (low)	R		
100Dh	Torque command monitor	d009	R	-200 to +200	1 [%]
100Eh	Torque bias monitor	d010	R	-200 to +200	1 [%]
100Fh	(Reserved)	-	-	-	-
1010h	Torque monitor	d012	R	-200 to +200	1 [%]
1011h	Output voltage monitor	d013	R	0 to 6000	0.1 [V]
1012h	Power monitor	d014	R	0 to 1000	0.1 [kW]
1013h	Watt-hour monitor	d015 (high)	R	0 to 9999000	0.1
1014h		d015 (low)			
1015h	Elapsed RUN time monitor	d016 (high)	R	0 to 999900	1 [h]
1016h		d016 (low)			
1017h	Elapsed power-on time monitor	d017 (high)	R	0 to 999900	1 [h]
1018h		d017 (low)			
1019h	Heat sink temperature monitor	d018	R	-200 to 1500	0.1 [°C]
101Ah to 101Ch	(Reserved)	-	-	-	-
101Dh	Life-check monitor	d022	R	2^0: Capacitor on main circuit board 2^1: cooling-fan	1 bit
101Eh	EzSQ program counter	d023	R	0~1024	
101Fh	EzSQ program number	d024	R	0~9999	
1020h~1025h	(Reserved)	-	-	-	-
1026h	DC voltage monitoring (across P and N)	d102	R	0 to 10000	0.1 [V]
1027h	BRD load factor monitoring	d103	R	0 to 1000	0.1 [%]
1028h	Electronic thermal overload monitoring	d104	R	0 to 1000	0.1 [%]
1029h to 102Dh	(Reserved)	-	-	-	-
102Eh	User monitor 1	d025(HIGH)	R	-2147483647 to 2147483647	1
102Fh		d025(LOW)	R		
1030h	User monitor 2	d026(HIGH)	R	-2147483647 to 2147483647	1
1031h		d026(LOW)	R		
1032h	User monitor 3	d027(HIGH)	R	-2147483647 to 2147483647	1
1033h		d027(LOW)	R		
1034h to 1035h	(Reserved)	-	-	-	-
1036h	Position setting monitor	d029(HIGH)	R	-268435455 to 268435455	1
1037h		d029(LOW)	R		
1038h	Position feedback monitor	d030(HIGH)	R	-268435455 to 268435455	1
1039h		d030(LOW)	R		
103Ah to 1056h	(reserved)	-	-	-	-
1057h	Inverter mode monitor	d060	R	0 (IM CT)                      3(PM motor mode) 1 (IM VT)	
1058h to 1102h	unused	-	-	Inaccessible	-

## (iv) List of registers

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1103h	Acceleration time (1)	F002 (high)	R/W	1 to 360000	0.01 [sec.]
1104h		F002 (low)			
1105h	Deceleration time (1)	F003 (high)	R/W	1 to 360000	0.01 [sec.]
1106h		F003 (low)			
1107h	Keypad Run key routing	F004	R/W	0 (forward rotation), 1 (reverse rotation)	-
1108h to 1200h	Unused	-	-	Inaccessible	-

## (v) List of registers (function modes)

## Parameter group A

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1201h	Frequency source	A001	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
1202h	Run command source (*)	A002	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
1203h	Base frequency	A003	R/W	300 to "maximum frequency"	0.1 [Hz]
1204h	Maximum frequency	A004	R/W	300 to 4000(10000)	0.1 [Hz]
1205h	[AT] selection	A005	R/W	0 (switching between O and OI terminals), 2 (switching between O terminal and keypad potentiometer), 3 (switching between OI terminal and keypad potentiometer)	-
1206h to 120Ah	(Reserved)	-	-	-	-
120Bh	[O] input active range start frequency	A011 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Ch		A011 (low)			
120Dh	[O] input active range end frequency	A012 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Eh		A012 (low)			
120Fh	[O] input active range start voltage	A013	R/W	0 to "[O]-[L] input active range end voltage"	1 [%]
1210h	[O] input active range end voltage	A014	R/W	"[O]-[L] input active range start voltage" to 100	1 [%]
1211h	[O] input start frequency select	A015	R/W	0 (external start frequency), 1 (0 Hz)	-
1212h	Analog input filter.	A016	R/W	1 to 30 or 31 (500 ms filter $\pm 0.1$ Hz with hysteresis)	1
1213h	EzSQ selection	A017	R/W	0 (disabling), 1 (PRG terminal), 2 (Always)	-
1214h	(Reserved)	-	-	-	-
1215h	Multi speed operation selection	A019	R/W	0 (binary), 1 (bit)	-
1216h	Multi-speed freq. 0	A020 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1217h		A020 (low)	R/W		
1218h	Multi-speed freq. 1	A021 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1219h		A021 (low)	R/W		
121Ah	Multi-speed freq. 2	A022 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Bh		A022 (low)	R/W		
121Ch	Multi-speed freq. 3	A023 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Dh		A023 (low)	R/W		
121Eh	Multi-speed freq. 4	A024 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Fh		A024 (low)	R/W		
1220h	Multi-speed freq. 5	A025 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1221h		A025 (low)	R/W		
1222h	Multi-speed freq. 6	A026 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1223h		A026 (low)	R/W		
1224h	Multi-speed freq. 7	A027 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1225h		A027 (low)	R/W		

After changing the setting, keep the time 40ms or longer before actually give run command

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1226h	Multi-speed freq. 8	A028 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1227h		A028 (low)	R/W		
1228h	Multi-speed freq. 9	A029 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1229h		A029 (low)	R/W		
122Ah	Multi-speed freq. 10	A030 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Bh		A030 (low)	R/W		
122Ch	Multi-speed freq. 11	A031 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Dh		A031 (low)	R/W		
122Eh	Multi-speed freq. 12	A032 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Fh		A032 (low)	R/W		
1230h	Multi-speed freq. 13	A033 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1231h		A033 (low)	R/W		
1232h	Multi-speed freq. 14	A034 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1233h		A034 (low)	R/W		
1234h	Multi-speed freq. 15	A035 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1235h		A035 (low)	R/W		
1236h	(Reserved)	-	-	-	-
1237h	(Reserved)	-	-	-	-
1238h	Jog frequency	A038	R/W	0.0, "Start frequency" to 999(10000)	0.01 [Hz]
1239h	Jog stop mode	A039	R/W	0 (free-running after jogging stops [disabled during operation]) 1 (deceleration and stop after jogging stops [disabled during operation]) 2 (DC braking after jogging stops [disabled during operation]) 3 (free-running after jogging stops [enabled during operation]) 4 (deceleration and stop after jogging stops [enabled during operation]) 5 (DC braking after jogging stops [enabled during operation])	-
123Ah	(Reserved)	-	-	-	-
123Bh	Torque boost method selection	A041	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
123Ch	Manual torque boost value	A042	R/W	0 to 200	0.1 [%]
123Dh	Manual torque boost frequency	A043	R/W	0 to 500	0.1 [%]
123Eh	V/F characteristic curve selection, 1st motor	A044	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control),	-
123Fh	V/f gain	A045	R/W	20 to 100	1 [%]
1240h	Voltage compensation gain setting for automatic torque boost, 1st motor	A046	R/W	0 to 255	1 [%]
1241h	Slippage compensation gain setting for automatic torque boost, 1st motor	A047	R/W	0 to 255	1 [%]
1242h to 1244h	(Reserved)	-	-	-	-
1245h	DC braking enable	A051	R/W	0 (disabling), 1 (enabling), 2 (output freq < [A052])	-
1246h	DC braking frequency	A052	R/W	0 to 6000	0.01 [Hz]
1247h	DC braking wait time	A053	R/W	0 to 50	0.1 [sec.]
1248h	DC braking force during deceleration	A054	R/W	0 to 100	1 [%]
1249h	DC braking time for deceleration	A055	R/W	0 to 600	0.1 [sec.]
124Ah	DC braking/edge or level detection for [DB] input	A056	R/W	0 (edge operation), 1 (level operation)	-
124Bh	DC braking force for starting	A057	R/W	0 to 100	1 [%]
124Ch	DC braking time for starting	A058	R/W	0 to 600	0.1 [sec.]
124Dh	DC braking carrier frequency setting	A059	R/W	20 to 150	0.1 [kHz]
124Eh	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
124Fh	Frequency upper limit	A061 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1250h		A061 (low)	R/W		
1251h	Frequency lower limit	A062 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1252h		A062 (low)	R/W		
1253h	Jump freq. (center) 1	A063 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1254h		A063 (low)	R/W		
1255h	Jump freq. width (hysteresis) 1	A064	R/W	0 to 1000(10000)	0.01 [Hz]
1256h	Jump freq. (center) 2	A065 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1257h		A065 (low)	R/W		
1258h	Jump freq. width (hysteresis) 2	A066	R/W	0 to 1000(10000)	0.01 [Hz]
1259h	Jump freq. (center) 3	A067 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
125Ah		A067 (low)	R/W		
125Bh	Jump freq. width (hysteresis) 3	A068	R/W	0 to 1000(10000)	0.01 [Hz]
125Ch	Acceleration hold frequency	A069 (high)	R/W	0 to 40000	0.01 [Hz]
125Dh		A069 (low)	R/W		
125Eh	Acceleration hold time	A070	R/W	0 to 600	0.1 [sec.]
125Fh	PID Function Enable	A071	R/W	0 (disabling), 1 (enabling), 2 (enabling inverted-data output)	-
1260h	PID proportional gain	A072	R/W	0 to 2500	0.10
1261h	PID integral time constant	A073	R/W	0 to 36000	0.1 [sec.]
1262h	PID derivative gain	A074	R/W	0 to 10000	0.01 [sec.]
1263h	PV scale conversion	A075	R/W	1 to 9999	0.01
1264h	PV source	A076	R/W	0 (input via OI), 1 (input via O), 2 (external communication), 3 (pulse train frequency input), 10 (operation result output)	-
1265h	Reverse PID	A077	R/W	00 (disabling), 01 (enabling)	-
1266h	PID output limiter	A078	R/W	0 to 1000	0.1 [%]
1267h	PID feed forward selection	A079	R/W	0 (disabled), 1(O input), 2 (OI input)	-
1268h	(Reserved)	-	R/W	-	-
1269h	AVR function select	A081	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
126Ah	AVR voltage select	A082	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
126Bh	AVR filter time constant	A083	R/W	0.000 to 10.00	0.001[sec]
126Ch	AVR deceleration gain	A084	R/W	50 to 200	1[%]
126Dh	Energy-saving operation mode	A085	R/W	0 (normal operation), 1 (energy-saving operation)	-
126Eh	Energy-saving mode tuning	A086	R/W	0 to 1000	0.1 [%]



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
126Fh to 1273h	(Reserved)	-	-	-	-
1274h	Acceleration time (2)	A092 (high)	R/W	1 to 360000	0.01 [sec.]
1275h		A092 (low)	R/W		
1276h	Deceleration time (2)	A093 (high)	R/W	1 to 360000	0.01 [sec.]
1277h		A093 (low)	R/W		
1278h	Select method to switch to Acc2/Dec2 profile	A094	R/W	0 (switching by 2CH terminal), 1 (switching by setting) 2 (Forward and reverse)	-
1279h	Acc1 to Acc2 frequency transition point	A095 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ah		A095 (low)	R/W		
127Bh	Dec1 to Dec2 frequency transition point	A096 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ch		A096 (low)	R/W		
127Dh	Acceleration curve selection	A097	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Eh	Deceleration curve setting	A098	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Fh	(Reserved)	-	-	-	-
1280h	(Reserved)	-	-	-	-
1281h	[OI] input active range start frequency	A101 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1282h		A101 (low)	R/W		
1283h	[OI] input active range end frequency	A102 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1284h		A102 (low)	R/W		
1285h	[OI] input active range start current	A103	R/W	0 to "[OI]-[L] input active range end current"	1 [%]
1286h	[OI] input active range end current	A104	R/W	"[OI]-[L] input active range start current" to 100	1 [%]
1287h	[OI] input start frequency select	A105	R/W	0 (external start frequency), 1 (0 Hz)	-
1288h to 12A4h	(Reserved)	-	-	-	-
12A5h	Acceleration curve constant	A131	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A6h	Deceleration curve constant	A132	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A7h to 12AEh	(Reserved)	-	-	-	-
12AFh	Operation-target frequency selection 1	A141	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
12B0h	Operation-target frequency selection 2	A142	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-
12B1h	Operator selection	A143	R/W	0 (addition: A141 + A142), 1 (subtraction: A141 - A142), 2 (multiplication: A141 x A142)	-
12B2h	(Reserved)	-	-	-	-
12B3h	Frequency to be added	A145 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
12B4h		A145 (low)	R/W		
12B5h	Sign of the frequency to be added	A146	R/W	00 (frequency command + A145), 01 (frequency command - A145)	-
12B6h to 12B8h	(Reserved)	-	-	-	-
12B9h	EL-S-curve acceleration/deceleration ratio 1	A150	R/W	0 to 50	1 [%]
12BAh	EL-S-curve acceleration/deceleration ratio 2	A151	R/W	0 to 50	1 [%]
12BBh	EL-S-curve deceleration/deceleration ratio 1	A152	R/W	0 to 50	1 [%]
12BCh	EL-S-curve deceleration/deceleration ratio 2	A153	R/W	0 to 50	1 [%]
12BDh	Deceleration hold frequency	A154 (high)	R/W	0~40000(100000)	0.01 [Hz]
12BEh		A154 (low)			
12BFh	Deceleration hold time	A155	R/W	0~600	0.1 [sec.]
12C0h	PID sleep function triggering level	A156 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C1h		A156 (low)			
12C2h	PID sleep function action delay time	A157	R/W	0~255	0.1 [sec.]
12C3h to 12C5h	(Reserved)	-	-	-	-
12C6h	[VR] input active range start frequency	A161 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C7h		A161 (low)			
12C8h	[VR] input active range end frequency	A162 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C9h		A162 (low)			
12CAh	[VR] input active range start %	A163	R/W	0~100	1 [%]
12CBh	[VR] input active range end %	A164	R/W	0~100	1 [%]
12CCh	[VR] input start frequency select	A165	R/W	0(start frequency A161) / 1(0Hz)	-
12CDh to 1300h	unused	-	-	Inaccessible	-

## Parameter group B

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1301h	Restart mode on power failure / under-voltage trip	b001	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
1302h	Allowable under-voltage power failure time	b002	R/W	3 to 250	0.1 [sec.]
1303h	Retry wait time before motor restart	b003	R/W	3 to 1000	0.1 [sec.]
1304h	Instantaneous power failure/under-voltage trip alarm enable	b004	R/W	0 (disabling), 1 (enabling), 2 (disabling during stopping and decelerating to stop)	-
1305h	Number of restarts on power failure/under-voltage trip events	b005	R/W	0 (16 times), 1 (unlimited)	-
1306h	(Reserved)	-	-	-	-
1307h	Restart frequency threshold	b007 (high)	R/W	0 to 40000	0.01 [Hz]
1308h		b007 (low)	R/W		
1309h	Restart mode on over voltage / over current	b008	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
130Ah	(Reserved)	-	-	-	-
130Bh	Number of retry on over voltage / over current	b010	R/W	1 to 3	1 [time]
130Ch	Retry wait time on over voltage / over current	b011	R/W	3 to 1000	0.1 [sec.]
130Dh	Level of electronic thermal	b012	R/W	200 to 1000	0.1 [%]
130Eh	Electronic thermal characteristic	b013	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
130Fh	(Reserved)	-	-	Inaccessible	-
1310h	Free setting, electronic thermal frequency (1)	b015	R/W	0 to 400	1 [Hz]
1311h	Free setting, electronic thermal current (1)	b016	R/W	0 to Rated current	0.1 [A]
1312h	Free setting, electronic thermal frequency (2)	b017	R/W	0 to 400	1 [Hz]
1313h	Free setting, electronic thermal current (2)	b018	R/W	0 to Rated current	0.1 [A]
1314h	Free setting, electronic thermal frequency (3)	b019	R/W	0 to 400	1 [Hz]
1315h	Free setting, electronic thermal current (3)	b020	R/W	0 to Rated current	0.1 [A]
1316h	Overload restriction operation mode	b021	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
1317h	Overload restriction level	b022	R/W	200 to 2000	0.1 [%]
1318h	Deceleration rate at overload restriction	b023	R/W	1 to 30000	0.1 [sec.]
1319h	Overload restriction operation mode (2)	b024	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
131Ah	Overload restriction level 2	b025	R/W	200 to 2000	0.1 [%]
131Bh	Deceleration rate at overload restriction (2)	b026	R/W	1 to 30000	0.1 [sec.]
131Ch	Overcurrent suppression enable	b027	R/W	0 (disabling), 1 (enabling)	-
131Dh	Current level of active freq. matching	b028	R/W	100 to 2000	0.1 [%]
131Eh	Deceleration rate of active freq. matching	b029	R/W	1 to 30000	0.1 [sec.]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
131Fh	Start freq. of active frequency matching	b030	R/W	0 (frequency at the last shutoff), 1 (maximum frequency), 2 (set frequency)	-
1320h	Software lock mode selection	b031	R/W	0 (disabling change of data other than "b031" when SFT is on), 1 (disabling change of data other than "b031" and frequency settings when SFT is on), 2 (disabling change of data other than "b031"), 3 (disabling change of data other than "b031" and frequency settings), 10 (enabling data changes during operation)	-
1321h	(Reserved)	-	-	-	-
1322h	Motor cable length parameter	b033	R/W	5 to 20	-
1323h	Run/power-on warning time	b034 (high)	R/W	0 to 65535	1 [10h]
1324h		b034 (low)	R/W		
1325h	Rotation direction restriction	b035	R/W	0( Enable for both dir)/ 1 (Enable for forward only)/ 2 (Enable for reverse only)	-
1326h	Reduced voltage start selection	b036	R/W	0 (minimum reduced voltage start time) to 255 (maximum reduced voltage start time)	-
1327h	Function code display restriction	b037	R/W	0 (full display), 1 (function-specific display), 2 (user setting), 3 (data comparison display), 4 (basicdisplay), 5(monitor display)	-
1328h	Initial display selection	b038	R/W	001-060	-
1329h	Automatic user parameter registration	b039	R/W	0 (disabling), 1 (enabling)	-
132Ah	Torque limit selection	b040	R/W	00 (quadrant-specific setting), 01 (switching by terminal), 02 (analog input)	-
132Bh	Torque limit 1 (fwd-power in 4-quadrant mode)	b041	R/W	0 to 200/255 (no)	1 [%]
132Ch	Torque limit 2 (rev/regen. in 4-quadrant mode)	b042	R/W	0 to 200/255 (no)	1 [%]
132Dh	Torque limit 3 (rev/power in 4-quadrant mode)	b043	R/W	0 to 200/255 (no)	1 [%]
132Eh	Torque limit 4 (fwd/regen. in 4-quadrant mode)	b044	R/W	0 to 200/255 (no)	1 [%]
132Fh	Torque limit LADSTOP enable	b045	R/W	0 (disabling), 1 (enabling)	-
1330h	Reverse Run protection enable	b046	R/W	0 (disabling), 1 (enabling)	-
1331h to 1332h	(Reserved)	-	-	-	-
1333h	Dual Rating Selection	b049	R/W	0(CT mode)/1(VT mode)	-
1334h	Controlled deceleration on power loss	b050	R/W	0 (disabling), 1 (enabling), 2, (nonstop operation at momentary power failure (no restoration)) 3, (nonstop operation at momentary power failure (restoration to be done))	-
1335h	DC bus voltage trigger level of ctrl. decel.	b051	R/W	0 to 10000	0.1 [V]
1336h	Over-voltage threshold of ctrl. decel.	b052	R/W	0 to 10000	0.1 [V]
1337h	Deceleration time of ctrl. decel.	b053 (high)	R/W	0.01 to 36000	0.01 [sec.]
1338h		b053 (low)	R/W		
1339h	Initial freq. drop of ctrl. decel.	b054	R/W	0 to 1000	0.01 [Hz]
133Ah to 133Eh	(Reserved)	-	-	-	-
133Fh	Maximum-limit level of window comparators O	b060	R/W	0. to 100. (lower limit : b061 + b062 *2) (%)	1 [%]
1340h	Minimum-limit level of window comparators O	b061	R/W	0. to 100. (lower limit : b060 - b062*2) (%)	1 [%]
1341h	Hysteresis width of window comparators O	b062	R/W	0. to 10. (lower limit : b061 - b062 / 2) (%)	1 [%]
1342h	Maximum-limit level of window comparators OI	b063	R/W	0. to 100. (lower limit : b064 + b065 *2) (%)	1 [%]
1343h	Minimum-limit level of window comparators OI	b064	R/W	0. to 100. (lower limit : b063 - b065 *2) (%)	1 [%]
1344h	Hysteresis width of window comparators OI	b065	R/W	0. to 10. (lower limit : b063 - b064 / 2) (%)	1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1345h to 1348h	(Reserved)	-	-	-	-
1349h	Operation level at O disconnection	b070	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Ah	Operation level at OI disconnection	b071	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Bh to 134Dh	(reserved)	-	-	-	-
134Eh	Ambient temperature	b075	R/W	-10 to 50	1 [°C]
134Fh to 1350	(reserved)	-	-	-	-
1351h	Cumulative input power data clearance	b078	R/W	Clearance by setting "1"	-
1352h	Watt-hour display gain	b079	R/W	1 to 1000	1
1353h to 1354h	(Reserved)	-	-	-	-
1355h	Start frequency	b082	R/W	1 to 999	0.01 [Hz]
1356h	Carrier frequency	b083	R/W	20 to 150	0.1 [kHz]
1357h	Initialization mode (parameters or trip history)	b084	R/W	0, 1 (clearing the trip history), 2 (initializing the data), 3 (clearing the trip history and initializing the data), 4 (clearing the trip history and initializing the data and EzSQ program)	-
1358h	Country code for initialization	b085	R/W	0 (area A), 1 (area B)	-
1359h	Frequency scaling conversion factor	b086	R/W	1 to 9999	0.01
135Ah	STOP key enable	b087	R/W	0 (enabling), 1 (disabling), 2 (disabling only stop)	-
135Bh	Restart mode after FRS	b088	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (starting with active matching frequency)	-
135Ch	Automatic carrier frequency reduction	b089	R/W	0(disabling)/1(enabling( output current controlled))/2(enabling( fin temperature controlled))	-
135Dh	Dynamic braking usage ratio	b090	R/W	0 to 1000	0.1 [%]
135Eh	Stop mode selection	b091	R/W	0 (deceleration until stop), 1 (free-run stop)	-
135Fh	Cooling fan control	b092	R/W	0 (always operating the fan), 1 (operating the fan only during inverter operation [including 5 minutes after power-on and power-off]) ,2	-
1360h	Clear elapsed time of cooling fan	b093	R/W	0(count)/1(clear)	-
1361h	Initialization target data	b094	R/W	0 to 3	-
1362h	Dynamic braking control	b095	R/W	0 (disabling), 1 (enabling [disabling while the motor is stopped]), 2 (enabling [enabling also while the motor is stopped])	-
1363h	Dynamic braking activation level	b096	R/W	330 to 380, 660 to 760	1. [V]
1364h to 1366h	(Reserved)	-	-	-	-
1367h	Free-setting V/f frequency (1)	b100	R/W	0. to "free-setting V/f frequency (2)"	1 [Hz]
1368h	Free-setting V/f voltage (1)	b101	R/W	0. to 8000	0.1 [V]
1369h	Free-setting V/f frequency (2)	b102	R/W	0. to "free-setting V/f frequency (3)"	1 [Hz]
136Ah	Free-setting V/f voltage (2)	b103	R/W	0. to 8000	0.1 [V]
136Bh	Free-setting V/f frequency (3)	b104	R/W	0. to "free-setting V/f frequency (4)"	1 [Hz]
136Ch	Free-setting V/f voltage (3)	b105	R/W	0. to 8000	0.1 [V]
136Dh	Free-setting V/f frequency (4)	b106	R/W	0. to "free-setting V/f frequency (5)"	1 [Hz]
136Eh	Free-setting V/f voltage (4)	b107	R/W	0. to 8000	0.1 [V]
136Fh	Free-setting V/f frequency (5)	b108	R/W	0. to "free-setting V/f frequency (6)"	1 [Hz]
1370h	Free-setting V/f voltage (5)	b109	R/W	0. to 8000	0.1 [V]
1371h	Free-setting V/f frequency (6)	b110	R/W	0. to "free-setting V/f frequency (7)"	1 [Hz]
1372h	Free-setting V/f voltage (6)	b111	R/W	0. to 8000	0.1 [V]
1373h	Free-setting V/f frequency (7)	b112	R/W	0. to 400.	1 [Hz]
1374h	Free-setting V/f voltage (7)	b113	R/W	0. to 8000	0.1 [V]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1375h to 137Ah	(Reserved)	-	-	-	-
137Bh	Brake Control Enable	b120	R/W	0 (disabling), 1 (enabling)	-
137Ch	Brake Wait Time for Release	b121	R/W	0 to 500	0.01 [sec.]
137Dh	Brake Wait Time for Acceleration	b122	R/W	0 to 500	0.01 [sec.]
137Eh	Brake Wait Time for Stopping	b123	R/W	0 to 500	0.01 [sec.]
137Fh	Brake Wait Time for Confirmation	b124	R/W	0 to 500	0.01 [sec.]
1380h	Brake Release Frequency	b125	R/W	0 to 40000	0.01 [Hz]
1381h	Brake Release Current	b126	R/W	0 to 2000	0.1 [%]
1382h	Braking frequency	b127	R/W	0 to 40000	0.01 [Hz]
1383h	(Reserved)	-	-	-	-
1384h	(Reserved)	-	-	-	-
1385h	Deceleration overvoltage suppression enable	b130	R/W	0 (disabling), 1 (enabling), 2 (enabling with acceleration)	-
1386h	Decel. overvolt. suppress level	b131	R/W	200 V class: 330 to 390 (V) 400 V class: 660 to 780 (V)	1 [V]
1387h	Decel. overvolt. suppress const.	b132	R/W	10 to 3000	0.01 [sec.]
1388h	Decel. overvolt. suppress propotional gain	b133	R/W	0 to 500	0.01
1389h	Decel. overvolt. suppress Integral time	b134	R/W	0 to 1500	0.1 [sec.]
138Ah to 1393h	(Reserved)	-	-	-	-
1394h	GS input mode	b145	R/W	0(non Trip) /1(Trip)	-
1395h~1399h	(Reserved)	-	-	-	-
139Ah	Display ex.operator connected	b150	R/W	001 to 060	-
139Bh~13A2h	(Reserved)	-	-	-	-
13A3h	1st parameter of Dual Monitor	b160	R/W	001 to 030	-
13A4h	2nd parameter of Dual Monitor	b161	R/W	001 to 030	-
13A5h	(Reserved)	-	-	-	-
13A6h	Freq. set in monitoring	b163	R/W	0 (disabling), 1 (enabling),	-
13A7h	Automatic return to the initial display	b164	R/W	0 (disabling), 1 (enabling),	-
13A8h	Ex. operator com. loss action	b165	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
13A9h~13ADh	(Reserved)	-	-	-	-
13AEh	Inverter mode selection	b171	R/W	0 (disabling), 1 (IM mode), 3 (PM motor mode)	-
13AFh~13B6h	(Reserved)	-	-	-	-
13B7h	Initialization trigger	b180	R/W	0 (disabling), 1 (enabling),	-
13B8h~1400h	unused	-	-	Inaccessible	-

## Parameter group C

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1401h	Input [1] function	C001	R/W	1 (RV: Reverse RUN), 2 (CF1: Multispeed 1 setting), 3 (CF2: Multispeed 2 setting), 4 (CF3: Multispeed 3 setting), 5 (CF4: Multispeed 4 setting), 6 (JG: Jogging), 7 (DB: external DC braking), 8 (SET: Set 2nd motor data), 9 (2CH: 2-stage acceleration/deceleration), 11 (FRS: free-run stop), 12 (EXT: external trip), 13 (USP: unattended start protection), 14: (CS: commercial power source enable), 15 (SFT: software lock), 16 (AT: analog input voltage/current select), 18 (RS: reset), 20 (STA: starting by 3-wire input), 21 (STP: stopping by 3-wire input), 22 (F/R: forward/reverse switching by 3-wire input), 23 (PID: PID disable), 24 (PIDC: PID reset, 27 (UP: remote control UP function), 28 (DWN: remote control DOWN function), 29 (UDC: remote control data clearing), 31 (OPE: forcible operation), 32 (SF1: multispeed bit 1), 33 (SF2: multispeed bit 2), 34 (SF3: multispeed bit 3), 35 (SF4: multispeed bit 4), 36 (SF5: multispeed bit 5), 37 (SF6: multispeed bit 6), 38 (SF7: multispeed bit 7), 39 (OLR: overload restriction selection), 40 (TL: torque limit enable), 41 (TRQ1: torque limit selection bit 1), 42 (TRQ2: torque limit selection bit 2), 44 (BOK: braking confirmation), 46 (LAC: LAD cancellation), 47 (PCLR: clearance of position deviation), 50 (ADD: trigger for frequency addition [A145]), 51 (F-TM: forcible-terminal operation), 52 (ATR: permission of torque command input), 53 (KHC: cumulative power clearance), 56 (MI1: general-purpose input 1), 57 (MI2: general-purpose input 2), 58 (MI3: general-purpose input 3), 59 (MI4: general-purpose input 4), 60 (MI5: general-purpose input 5), 61 (MI6: general-purpose input 6), 62 (MI7: general-purpose input 7), 65 (AHD: analog command holding), 66 (CP1: multistage position settings selection 1), 67 (CP2: multistage position settings selection 2), 68 (CP3: multistage position settings selection 3), 69 (ORL: Zero-return limit function), 70 (ORG: Zero-return trigger function), 73 (SPD: speed / position switching), 77 (GS1 input), 78 (GS2 input), 81 (485: EzCOM), 82 (PRG: executing EzSQ program), 83 (HLD: retain output frequency), 84 (ROK: permission of run command), 85 (EB: Rotation direction detection(for V/f with ENC), 86 (DISP: Display limitation), 255 (no: no assignment),	-
1402h	Input [2] function	C002	R/W		-
1403h	Input [3] function	C003	R/W		-
1404h	Input [4] function	C004	R/W		-
1405h	Input [5] function	C005	R/W		-
1406h	Input [6] function	C006	R/W		-
1407h	Input [7] function	C007	R/W		-
1408h to 140Ah	(Reserved)	-	-	Inaccessible	-
140Bh	Input [1] active state	C011	R/W	0 (NO), 1 (NC)	-
140Ch	Input [2] active state	C012	R/W	0 (NO), 1 (NC)	-
140Dh	Input [3] active state	C013	R/W	0 (NO), 1 (NC)	-
140Eh	Input [4] active state	C014	R/W	0 (NO), 1 (NC)	-
140Fh	Input [5] active state	C015	R/W	0 (NO), 1 (NC)	-
1410h	Input [6] active state	C016	R/W	0 (NO), 1 (NC)	-
1411h	Input [7] active state	C017	R/W	0 (NO), 1 (NC)	-
1412h to 1414h	(Reserved)	-	-	Inaccessible	-



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1415h	Output [11] function	C021	R/W	0 (RUN: running), 1 (FA1: constant-speed reached), 2 (FA2: set frequency overreached), 3 (OL: overload notice advance signal (1)), 4 (OD: output deviation for PID control), 5 (AL: alarm signal), 6 (FA3: set frequency reached), 7 (OTQ: over-torque), 9 (UV: undervoltage), 10 (TRQ: torque limited), 11 (RNT: operation time over), 12 (ONT: plug-in time over), 13 (THM: thermal alarm signal), 19 (BRK: brake release), 20 (BER: braking error), 21 (ZS: 0 Hz detection signal), 22 (DSE: speed deviation maximum), 23 (POK: positioning completed), 24 (FA4: set frequency overreached 2), 25 (FA5: set frequency reached 2), 26 (OL2: overload notice advance signal (2)), 31 (FBV: PID feedback comparison), 32 (NDc: communication line disconnection), 33 (LOG1: logical operation result 1), 34 (LOG2: logical operation result 2), 35 (LOG3: logical operation result 3), 39 (WAC: capacitor life warning), 40 (WAF: cooling-fan), 41 (FR: starting contact signal), 42 (OHF: heat sink overheat warning), 43 (LOC: low-current indication signal), 44 (M01: general-purpose output 1), 45 (M02: general-purpose output 2), 46 (M03: general-purpose output 3), 50 (IRDY: inverter ready), 51 (FWR: forward rotation), 52 (RVR: reverse rotation), 53 (MJA: major failure)	-
1416h	Output [12] function	C022	R/W	54 (WCO: window comparator O), 55 (WCO: window comparator OI), 58(FREF),59(REF),60(SETM),62(EDM),63(OPO:Opti on)	-
1421h to 1423h	(Reserved)	-	-		-
141Ah	Alarm relay function	C026	R/W		-
141Bh	[EO] terminal selection	C027	R/W	0 (output frequency), 1 (output current), 2 (output torque), 3 (digital output frequency), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 8 (digital current monitoring), 10 (heat sink temperature), 12 (general-purpose output YA0), 15, 16(option)	-
141Ch	[AM] terminal selection	C028	R/W	0 (output frequency), 1 (output current), 2 (output torque), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 10 (heat sink temperature), 11 (output torque [signed value]), 13 (general-purpose output YA1), 16(option)	-
141Dh	(reserved)	-	-		-
141Eh	Digital current monitor reference value	C030	R/W	200 to 2000	0.1 [%]
141Fh	Output [11] active state	C031	R/W	0 (NO), 1 (NC)	-
1420h	Output [12] active state	C032	R/W	0 (NO), 1 (NC)	-
1421h to 1423h	(Reserved)	-	-		-
1424h	Alarm relay active state	C036	R/W	0 (NO), 1 (NC)	-
1425h	(Reserved)	-	-		-
1426h	Output mode of low current detection	C038	R/W	0 (output during acceleration/deceleration and constant-speed operation), 1 (output only during constant-speed operation)	-
1427h	Low current detection level	C039	R/W	0 to 2000	0.1 [%]
1428h	Overload signal output mode	C040	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1429h	Overload warning level	C041	R/W	0 to 2000	0.1 [%]



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
142Ah	Frequency arrival setting for accel.	C042 (high)	R/W	0 to 40000	0.01 [Hz]
142Bh		C042 (low)	R/W		
142Ch	Frequency arrival setting for decel.	C043 (high)	R/W	0 to 40000	0.01 [Hz]
142Dh		C043 (low)	R/W		
142Eh	PID deviation level	C044	R/W	0 to 1000	0.1 [%]
142Fh	Frequency arrival setting 2 for accel.	C045 (high)	R/W	0 to 40000	0.01 [Hz]
1430h		C045 (low)	R/W		
1431h	Frequency arrival setting 2 for decel.	C046 (high)	R/W	0 to 40000	0.01 [Hz]
1432h		C046 (low)	R/W		
1433h	Pulse train input scale conversion for EO output	C047	R/W	0.01 – 99.99	–
1434h to 1437h	(Reserved)	-	-	-	-
1438h	Maximum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
1439h	Minimum PID feedback data	C053	R/W	0 to 1000	0.1 [%]
143Ah	Over-torque/under-torque selection	C054	R/W	0(Over torque)/1(under torque)	–
143Bh	Over-torque (forward-driving) level setting	C055	R/W	0 to 200	1 [%]
143Ch	Over-torque (reverse regenerating) level setting	C056	R/W	0 to 200	1 [%]
143Dh	Over-torque (reverse driving) level setting	C057	R/W	0 to 200	1 [%]
143Eh	Over-torque (forward regenerating) level setting	C058	R/W	0 to 200	1 [%]
143Fh	Signal output mode of Over/under torque	C059	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	–
1440h	(Reserved)	-	-	-	-
1441h	Electronic thermal warning level	C061	R/W	0 to 100	1 [%]
1442h	(Reserved)	-	-	-	-
1443h	Zero speed detection level	C063	R/W	0 to 10000	0.01 [Hz]
1444h	Heat sink overheat warning level	C064	R/W	0 to 110	1 [°C]
1445h to 144Ah	(Reserved)	-	-	-	-
144Bh	Communication speed	C071	R/W	03(2400bps), 04(4800bps), 05(9600bps) 06(19.2kbps), 07(38.4kbps), 08(57.6kbps), 09(76.8kbps), 10(115.2kbps)	-
144Ch	Modbus address	C072	R/W	1. to 247.	-
144Dh	(Reserved)	-	-	-	-
144Eh	Communication parity	C074	R/W	00 (no parity), 01 (even parity), 02 (odd parity)	-
144Fh	Communication stop bit	C075	R/W	1 (1 bit), 2 (2 bits)	-
1450h	Selection of the operation after communication error	C076	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1451h	Communication timeout limit	C077	R/W	0 to 9999	0.01 [sec.]
1452h	Communication wait time	C078	R/W	0 to 1000	1 [msec.]
1453h to 1454h	(Reserved)	-	-	-	-
1455h	[O] input span calibration	C081	R/W	0 to 2000	0.1
1456h	[OI] input span calibration	C082	R/W	0 to 2000	0.1
1457h to 1458h	(Reserved)	-	-	-	-
1459h	Thermistor input tuning	C085	R/W	0 to 2000	0.1
145Ah to 145Eh	(Reserved)	-	-	-	-
145Fh	Debug mode enable	C091	R	0/1	-
1460h to 1463h	(Reserved)	-	-	-	-
1464h	Communication selection	C096	R/W	0(Modbus-RTU) 1(EzCOM)	-

				2(EzCOM<administrator>)	
1465h	(Reserved)	-	-	-	-
1466h	EzCOM start adr. of master	C098	R/W	1~8	
1467h	EzCOM end adr. of master	C099	R/W	1~8	
1468h	EzCOM starting trigger	C100	R/W	00(Input terminal), 01(Always)	
1469h	Up/Down memory mode selection	C101	R/W	0 (not storing the frequency data), 1 (storing the frequency data)	-
146Ah	Reset mode selection	C102	R/W	0 (resetting the trip when RS is on), 1 (resetting the trip when RS is off), 2 (enabling resetting only upon tripping [resetting when RS is on]), 3(resetting only trip)	-
146Bh	Restart mode after reset	C103	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (restarting with active matching frequency)	-
146Ch	UP/DWN clear mode	C104	R/W	0 (0Hz)/1 (EEPROM data)	-
146Dh	FM gain adjustment	C105	R/W	50 to 200	1 [%]
146Eh	AM gain adjustment	C106	R/W	50 to 200	1 [%]
146Fh	(Reserved)	-	-	Inaccessible	1 [%]
1471h	AM bias adjustment	C109	R/W	0 to 100	1 [%]
1472h	(Reserved)	-	-	-	1 [%]
1473h	Overload warning level 2	C111	R/W	0 to 2000	0.1 [%]
1474h to 1485h	(Reserved)	-	-	-	-
1486h	Output [11] on-delay time	C130	R/W	0 to 1000	0.1 [sec.]
1487h	Output [11] off-delay time	C131	R/W	0 to 1000	0.1 [sec.]
1488h	Output [12] on-delay time	C132	R/W	0 to 1000	0.1 [sec.]
1489h	Output [12] off-delay time	C133	R/W	0 to 1000	0.1 [sec.]
148Ah to 148F	(Reserved)	-	-	-	-
1490h	Output RY on-delay time	C140	R/W	0 to 1000	0.1 [sec.]
1491h	Output RY off-delay time	C141	R/W	0 to 1000	0.1 [sec.]
1492h	Logic output 1 operand A	C142	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1493h	Logic output 1 operand B	C143	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1494h	Logical output 1 operator	C144	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1495h	Logic output 2 operand A	C145	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1496h	Logic output 2 operand B	C146	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1497h	Logical output 2 operator	C147	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1498h	Logic output 3 operand A	C148	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1499h	Logic output 3 operand B	C149	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
149Ah	Logical output 3 operator	C150	R/W	0 (AND), 1 (OR), 2 (XOR)	-
149Bh to 14A3h	(Reserved)	-	-	-	-
14A4h	Input [1] response time	C160	R/W	0 to 200	
14A5h	Input [2] response time	C161	R/W	0 to 200	
14A6h	Input [3] response time	C162	R/W	0 to 200	
14A7h	Input [4] response time	C163	R/W	0 to 200	
14A8h	Input [5] response time	C164	R/W	0 to 200	
14A9h	Input [6] response time	C165	R/W	0 to 200	
14AAh	Input [7] response time	C166	R/W	0 to 200	
14ABh to 14ACh	(Reserved)	-	-	-	
14ADh	Multistage speed/position determination time	C169	R/W	0 to 200	
14A4h to 1500h	unused	-	-	Inaccessible	-

## Parameter group H

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1501h	Auto-tuning Setting	H001	R/W	0 (disabling auto-tuning), 1 (auto-tuning without rotation), 2 (auto-tuning with rotation)	-
1502h	Motor data selection, 1st motor	H002	R/W	0 (Hitachi standard data), 2 (auto-tuned data)	-
1503h	Motor capacity, 1st motor	H003	R/W	00(0.1kW)- 15 (18.5kW)	-
1504h	Motor poles setting, 1st motor	H004	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles)~ 23 (46 poles), 24 (48 poles)	-
1505h	(Reserved)	-	-	-	-
1506h	Motor speed constant, 1st motor	H005	R/W	0 to 1000	1[%]
1508h~ 1514h	(Reserved)	-	-	-	-
1516h	Motor stabilization constant, 1st motor	H006	R/W	0 to 255	1
1517h	(Reserved)	-	-	-	-
1516h	Motor constant R1, 1st motor	H020	R/W	1 to 65530	0.001 [ $\Omega$ ]
1517h	(Reserved)	-	-	-	-
1518h	Motor constant R2, 1st motor	H021	R/W	1 to 65530	0.001 [ $\Omega$ ]
1519h	(Reserved)	-	-	-	-
151Ah	Motor constant L, 1st motor	H022	R/W	1 to 65530	0.01 [mH]
151Bh	(Reserved)	-	-	-	-
151Ch	Motor constant I <sub>o</sub>	H023	R/W	1 to 65530	0.01 [A]
151Dh	Motor constant J	H024 (high)	R/W	1 to 9999000	0.001
151Eh		H024 (low)	R/W		
151Hf~ 1524h	(Reserved)	-	-	-	-
1525h	Auto constant R1, 1st motor	H030	R/W	1 to 65530	0.001 [ $\Omega$ ]
1526h	(Reserved)	-	-	Inaccessible	-
1527h	Auto constant R2, 1st motor	H031	R/W	1 to 65530	0.001 [ $\Omega$ ]
1528h	(Reserved)	-	-	-	-
1529h	Auto constant L, 1st motor	H032	R/W	1 to 65530	0.01 [mH]
152Ah	(Reserved)	-	-	Inaccessible	-
152Bh	Auto constant I <sub>o</sub> , 1st motor	H033	R/W	1 to 65530	0.01 [A]
152Ch	Auto constant J, 1st motor	H034 (high)	R/W	1 to 9999000	0.001
152Dh		H034 (low)	R/W		
152Eh~ 153Ch	(Reserved)	-	-	-	-
153Dh	Slip compensation P gain for V/f control with FB	H050	R/W	0 to 10000	0.1
153Eh	Slip compensation P gain for V/f control with FB	H051	R/W	0 to 10000	1
153Fh~ 1600h	unused	-	-	Inaccessible	2

## Parameter group P

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1601h	Operation mode on expansion card 1 error	P001	R/W	0 (tripping), 1 (continuing operation)	-
1602h	(Reserved)	-	-	-	-
1603h	[EA] terminal selection	P003	R/W	00 (Speed reference, incl. PID) 01 (Encoder feedback) 02 (Extended terminal for EzSQ)	
1604h	Pulse train input mode for feedback	P004	R/W	00 (Single-phase pulse [EA]) 01 (2-phase pulse [90° difference] 1 ([EA] and [EB])) 02 (2-phase pulse [90° difference] 2 ([EA] and [EB])) 03 (Single-phase pulse [EA] and direction signal [EB])	
1605h to 160Ah	(Reserved)	-	-	-	-
160Bh	Encoder pulse-per-revolution (PPR) setting	P011	R/W	32 to 1024	1
160Ch	Simple positioning selection	P012	R/W	00 (simple positioning deactivated) 02 (simple positioning activated)	-
160Dh to 160Eh	(Reserved)	-	-	-	-
160Fh	Creep speed	P015	R/W	"start frequency" to 1000	0.01 [Hz]
1610h to 1619h	(Reserved)	-	-	-	-
161Ah	Over-speed error detection level	P026	R/W	0 to 1500	0.1 [%]
161Bh	Speed deviation error detection level	P027	R/W	0 to 12000	0.01 [Hz]
161Ch to 161Eh	(Reserved)	-	-	-	-
161Fh	Accel/decel time input selection	P031	R/W	0 (digital operator), 3 (easy sequence)	-
1620h	(Reserved)	-	-	-	-
1621h	Torque command input selection	P033	R/W	0 (O terminal), 1 (OI terminal), 3 (digital operator), 06 (Option)	-
1622h	Torque command setting	P034	R/W	0 to 200	1 [%]
1623h	(Reserved)	-	-	-	-
1624h	Torque bias mode	P036	R/W	0 (disabling the mode), 1 (digital operator),	-
1625h	Torque bias value	P037	R/W	-200 to +200	1 [%]
1626h	Torque bias polarity selection	P038	R/W	0 (as indicated by the sign), 1 (depending on the operation direction), 05 (Option)	-
1627h	Speed limit for torque-controlled operation (forward rotation)	P039 (high)	R/W	0 to 12000	0.01 [Hz]
1628h		P039 (low)	R/W		
1629h	Speed limit for torque-controlled operation (reverse rotation)	P040 (high)	R/W	0 to 12000	0.01 [Hz]
162Ah		P040 (low)	R/W		
162Bh	Speed / torque control switching time	P041	R/W	0 to 1000	-
162Ch to 162Dh	(Reserved)	-	-	-	-
162Eh	Communication watchdog timer	P044	R/W	0 to 9999	0.01 [sec.]
162Fh	Inverter action on communication error	P045	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1630h	DeviceNet polled I/O: Output instance number	P046	R/W	0-20	-
1631h	(Reserved)	-	-	-	-
1632h	Inverter action on communication idle mode	P048	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1633h	Motor poles setting for RPM	P049	R/W	0 (0 pole), 1 (2 poles), 2 (4 poles), 3 (6 poles), 4 (8 poles), 5 (10 poles), 6 (12 poles), 7 (14 poles), 8 (16 poles), 9 (18 poles), 10 (20 poles), 11 (22 poles), 12 (24 poles), 13 (26 poles), 14 (28 poles), 15 (30 poles), 16 (32 poles), 17 (34 poles), 18 (36 poles), 19 (38 poles)	-
1634h to 1638h	(Reserved)	-	-	-	-
1639h	Pulse train frequency scale	P055	R/W	10 to 320 (input frequency corresponding to the allowable maximum frequency)	0.1 [kHz]
163Ah	Time constant of pulse train frequency filter	P056	R/W	1 to 200	0.01 [sec.]
163Bh	Pulse train frequency bias	P057	R/W	-100 to +100	1 [%]
163Ch	Pulse train frequency limit	P058	R/W	0 to 100	1 [%]
163Dh	(Reserved)	-	-	-	-
163Eh	Multistage position 0	P060(HIGH)	R/W		1
163Fh		P060(LOW)	R/W		
1640h	Multistage position 1	P061(HIGH)	R/W		1
1641h		P061(LOW)	R/W		
1642h	Multistage position 2	P062(HIGH)	R/W		1
1643h		P062(LOW)	R/W		
1644h	Multistage position 3	P063(HIGH)	R/W		1
1645h		P063(LOW)	R/W		
1646h	Multistage position 4	P064(HIGH)	R/W		1
1647h		P064(LOW)	R/W		
1648h	Multistage position 5	P065(HIGH)	R/W		1
1649h		P065(LOW)	R/W		
164Ah	Multistage position 6	P066(HIGH)	R/W		1
164Bh		P066(LOW)	R/W		
164Ch	Multistage position 7	P067(HIGH)	R/W		1
164Dh		P067(LOW)	R/W		
164Eh	Homing mode selection	P068	R/W	0(Low) / 1(High)	
164Fh	Homing direction	P069	R/W	0(FW) / 1(RV)	
1650h	Low-speed homing frequency	P070	R/W	0 to 1000	
1651h	High-speed homing frequency	P071	R/W	0 to 40000	
1652h	Position range (forward)	P072(HIGH)	R/W	0 to 268435455	1
1653h		P072(LOW)	R/W		
1654h	Position range (reverse)	P073(HIGH)	R/W	-268435455 to 0	1
1655h		P073(LOW)	R/W		
1656h	(Reserved),	-	-	-	-
1657h	Positioning mode	P075	R/W	00...With limitation 01...No limitation (fastest control)	
1658h	(Reserved),	-	-	-	-
1659h	Encoder disconnection timeout	P077	R/W	0 to 100	0.1[sec.]
165Ah to 1665h	(Reserved),	-	-	-	-
1656h to 1665h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1666h	EzSQ user parameter U (00)	P100	R/W	0 to 65530	1
1667h	EzSQ user parameter U (01)	P101	R/W	0 to 65530	1
1668h	EzSQ user parameter U (02)	P102	R/W	0 to 65530	1
1669h	EzSQ user parameter U (03)	P103	R/W	0 to 65530	1
166Ah	EzSQ user parameter U (04)	P104	R/W	0 to 65530	1
166Bh	EzSQ user parameter U (05)	P105	R/W	0 to 65530	1
166Ch	EzSQ user parameter U (06)	P106	R/W	0 to 65530	1
166Dh	EzSQ user parameter U (07)	P107	R/W	0 to 65530	1
166Eh	EzSQ user parameter U (08)	P108	R/W	0 to 65530	1
166Fh	EzSQ user parameter U (09)	P109	R/W	0 to 65530	1
1670h	EzSQ user parameter U (10)	P110	R/W	0 to 65530	1
1671h	EzSQ user parameter U (11)	P111	R/W	0 to 65530	1
1672h	EzSQ user parameter U (12)	P112	R/W	0 to 65530	1
1673h	EzSQ user parameter U (13)	P113	R/W	0 to 65530	1
1674h	EzSQ user parameter U (14)	P114	R/W	0 to 65530	1
1675h	EzSQ user parameter U (15)	P115	R/W	0 to 65530	1
1676h	EzSQ user parameter U (16)	P116	R/W	0 to 65530	1
1677h	EzSQ user parameter U (17)	P117	R/W	0 to 65530	1
1678h	EzSQ user parameter U (18)	P118	R/W	0 to 65530	1
1679h	EzSQ user parameter U (19)	P119	R/W	0 to 65530	1
167Ah	EzSQ user parameter U (20)	P120	R/W	0 to 65530	1
167Bh	EzSQ user parameter U (21)	P121	R/W	0 to 65530	1
167Ch	EzSQ user parameter U (22)	P122	R/W	0 to 65530	1
167Dh	EzSQ user parameter U (23)	P123	R/W	0 to 65530	1
167Eh	EzSQ user parameter U (24)	P124	R/W	0 to 65530	1
167Fh	EzSQ user parameter U (25)	P125	R/W	0 to 65530	1
1680h	EzSQ user parameter U (26)	P126	R/W	0 to 65530	
1681h	EzSQ user parameter U (27)	P127	R/W	0 to 65530	
1682h	EzSQ user parameter U (28)	P128	R/W	0 to 65530	1
1683h	EzSQ user parameter U (29)	P129	R/W	0 to 65530	1
1684h	EzSQ user parameter U (30)	P130	R/W	0 to 65530	1
1685h	EzSQ user parameter U (31)	P131	R/W	0 to 65530	1
1686h to 168Dh	(Reserved),	-	-	-	-
168Eh	EzCOM number of data	P140	R/W	1 to 5	
168Fh	EzCOM destination 1 address	P141	R/W	1 to 247	
1690h	EzCOM destination 1 register	P142	R/W	0000 to FFFF	
1691h	EzCOM source 1 register	P143	R/W	0000 to FFFF	
1692h	EzCOM destination 2 address	P144	R/W	1 to 247	
1693h	EzCOM destination 2 register	P145	R/W	0000 to FFFF	
1694h	EzCOM source 2 register	P146	R/W	0000 to FFFF	
1695h	EzCOM destination 3 address	P147	R/W	1 to 247	
1696h	EzCOM destination 3 register	P148	R/W	0000 to FFFF	
1697h	EzCOM source 3 register	P149	R/W	0000 to FFFF	
1698h	EzCOM destination 4 address	P150	R/W	1 to 247	
1699h	EzCOM destination 4 register	P151	R/W	0000 to FFFF	
169Ah	EzCOM source 4 register	P152	R/W	0000 to FFFF	
169Bh	EzCOM destination 5 address	P153	R/W	1 to 247	
169Ch	EzCOM destination 5 register	P154	R/W	0000 to FFFF	
169Dh	EzCOM source 5 register	P155	R/W	0000 to FFFF	
169Eh~16A1h	(Reserved),	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
16A2h	Option I/F command register to write 1	P160	R/W	0000 to FFFF	—
16A3h	Option I/F command register to write 2	P161	R/W	0000 to FFFF	—
16A4h	Option I/F command register to write 3	P162	R/W	0000 to FFFF	—
16A5h	Option I/F command register to write 4	P163	R/W	0000 to FFFF	—
16A6h	Option I/F command register to write 5	P164	R/W	0000 to FFFF	—
16A7h	Option I/F command register to write 6	P165	R/W	0000 to FFFF	—
16A8h	Option I/F command register to write 7	P166	R/W	0000 to FFFF	—
16A9h	Option I/F command register to write 8	P167	R/W	0000 to FFFF	—
16AAh	Option I/F command register to write 9	P168	R/W	0000 to FFFF	—
16ABh	Option I/F command register to write 10	P169	R/W	0000 to FFFF	—
16ACh	Option I/F command register to read 1	P170	R/W	0000 to FFFF	—
16ADh	Option I/F command register to read 2	P171	R/W	0000 to FFFF	—
16AEh	Option I/F command register to read 3	P172	R/W	0000 to FFFF	—
16AFh	Option I/F command register to read 4	P173	R/W	0000 to FFFF	—
16B0h	Option I/F command register to read 5	P174	R/W	0000 to FFFF	—
16B1h	Option I/F command register to read 6	P175	R/W	0000 to FFFF	—
16B2h	Option I/F command register to read 7	P176	R/W	0000 to FFFF	—
16B3h	Option I/F command register to read 8	P177	R/W	0000 to FFFF	—
16B4h	Option I/F command register to read 9	P178	R/W	0000 to FFFF	—
16B5h	Option I/F command register to read 10	P179	R/W	0000 to FFFF	—
16B6h	Profibus Node address	P180	R/W	0 to 125	—
16B7h	Profibus Clear Node address	P181	R/W	0(clear)/1(not clear)	—
16B8h	Profibus Map selection	P182	R/W	0(PPO)/1(Comverntional)	—
16B9h to 16BAh	(Reserved),	-	-	-	-
16BBh	CANopen Node address	P185	R/W	0 to 127	
16BCh	CAN open communication speed	P186	R/W	0 (automatic) 5 (250kbps) 1 (10kbps) 6 (500kbps) 2 (20kbps) 7 (800kbps) 3 (50kbps) 8 (1Mbps) 4 (125kbps)	
16BDh to 1E00h	Unused	-	-	-	-
1E01h	Coil data 1	-	R/W	2 <sup>1</sup> : coil number 0010h – 2 <sup>15</sup> : coil number 001Fh -	-
1E02h	Coil data 2	-	R/W	2 <sup>1</sup> : coil number 0020h – 2 <sup>15</sup> : coil number 002Fh -	-
1E03h	Coil data 3	-	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1E04h	Coil data 4	-	R/W	2 <sup>1</sup> : coil number 0030h – 2 <sup>15</sup> : coil number 003Fh -	-
1E05h	Coil data 5	-	R/W	2 <sup>1</sup> : coil number 0040h – 2 <sup>15</sup> : coil number 004Fh -	-
1E06h to 1F18h	(reserved)	-	-	-	-
1E19h to 1F00h	Unused	-	-	-	-
1F01h	Coil data 0	-	R/W	2 <sup>1</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1F02h to 1F1Dh	(reserved)	-	-	(note: 2)	-
1F1Eh to 2102h	Unused	-	-	Inaccessible	-

Note 1: above register (coil data 0 to 5) is consisted with 16 coil data. EzCOM communication (inverter to inverter) doesn't support coil, but only register is supporte, in case of need to access coil, please use above registers.

Note 2: Be sure not to write into above 1F02h to 1F1Dh.

## (vi) List of registers (2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2103h	Acceleration time (1), 2nd motor	F202 (high)	R/W	1 to 360000	0.01 [sec.]
2104h		F202 (low)	R/W		
2105h	Deceleration time (1), 2nd motor	F203 (high)	R/W	1 to 360000	0.01 [sec.]
2106h		F203 (low)	R/W		
2107h to 2200h	unused	-	-	Inaccessible	-

## (vii) List of registers (function modes for the 2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2201h	Frequency source, 2nd motor	A201	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
2202h	Frequency source, 2nd motor	A202	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
2203h	Base frequency, 2nd motor	A203	R/W	300 to "maximum frequency, 2nd motor"	0.1 [Hz]
2204h	Maximum frequency, 2nd motor	A204	R/W	300 to 4000	0.1 [Hz]
2205h to 2215h	(Reserved)	-	-	Inaccessible	-
2216h	Multispeed frequency setting, 2nd motor	A220 (high)	R/W	0 or "start frequency" to "maximum frequency, 2nd motor"	0.01 [Hz]
2217h		A220 (low)	R/W		
2218h to 223Ah	(Reserved)	-	-	Inaccessible	-
223Bh	Torque boost method selection, 2nd motor	A241	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
223Ch	Manual torque boost value, 2nd motor	A242	R/W	20 to 200	1 [%]
223Dh	Manual torque boost frequency, 2nd motor	A243	R/W	0 to 255	1 [%]
223Eh	V/f characteristic curve selection, 2nd motor	A244	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control)	-
223Fh	V/f gain, 2nd motor	A245	R/W	20 to 100	1 [%]
2240h	Voltage compensation gain setting for automatic torque boost, 2nd motor	A246	R/W	0 to 255	1
2241h	Slippage compensation gain setting for automatic torque boost, 2nd motor	A247	R/W	0 to 255	1
2242h to 224Eh	(Reserved)	-	-	Inaccessible	-
224Fh	Frequency upper limit, 2nd motor	A261 (high)	R/W	00 or "2nd minimum frequency limit" to "maximum frequency, 2nd motor"	0.01 [Hz]
2250h		A261 (low)	R/W		
2251h	Frequency lower limit, 2nd motor	A262 (high)	R/W	00 or "start frequency" to "maximum frequency, 2nd motor limit"	0.01 [Hz]
2252h		A262 (low)	R/W		
2253h to 2268h	(Reserved)	-	-	Inaccessible	-
2269h	AVR function select, 2nd motor	A281	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
226Ah	AVR voltage select, 2nd motor	A282	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
226Bh to 226Eh	(Reserved)	-	-	Inaccessible	-



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
226Fh	Acceleration time (2), 2nd motor	A292 (high)	R/W	1 to 360000	0.01 [sec.]
2270h		A292 (low)	R/W		
2271h	Deceleration time (2), 2nd motor	A293 (high)	R/W	1 to 360000	0.01 [sec.]
2272h		A293 (low)	R/W		
2273h	Select method to switch to Acc2/Dec2, 2nd motor	A294	R/W	0 (switching by 2CH terminal), 1 (switching by setting), 2 (switching only when the rotation is reversed)	-
2274h	Acc1 to Acc2 frequency transition point, 2nd motor	A295 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2275h		A295 (low)	R/W		
2276h	Dec1 to Dec2 frequency transition point, 2nd motor	A296 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2277h		A296 (low)	R/W		
2278h to 230Bh	(Reserved)	-	-	-	-
230Ch	Level of electronic thermal, 2nd motor	b212	R/W	200 to 1000	0.1 [%]
230Dh	Electronic thermal characteristic, 2nd motor	b213	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
230Eh to 2315h	(Reserved)	-	-	-	-
2316h	Overload restriction operation mode, 2nd motor	b221	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	—
2317h	Overload restriction level, 2nd motor	b222	R/W	100 to 2000	0.1[%]
2318h	Deceleration rate at overload restriction, 2nd motor	b223	R/W	1 to 30000	0.1[秒]
2319h to 2428h	unused	-	-	Inaccessible	-
2429h	Overload warning level 2, 2nd motor	C241	R/W	0 to 2000	0.1[%]
242Ah to 2501h	Unused	-	-	Inaccessible	-
2502h	Motor data selection, 2nd motor	H202	R/W	0 (Hitachi standard data), 2 (auto-tuned data),	—
2503h	Motor capacity, 2nd motor	H203	R/W	00(0.1kW)- 15 (18.5kW)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2504h	Motor poles setting, 2nd motor	H204	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
2505h	Motor speed constant, 2nd motor	H205 (high)	R/W	1 to 1000	0.001
2506h		H205 (low)	R/W		
2507h	Motor stabilization constant, 2nd motor	H206	R/W	0 to 255	1
2508h to 2515h	(Reserved)	-	-	-	-
2516h	Motor constant R1, 2nd motor	H220 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2517h	(Reserved)	-	-	-	-
2518h	Motor constant R2, 2nd motor	H221 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2519h	(Reserved)	-	-	-	-
251Ah	Motor constant L, 2nd motor	H222 (high)	R/W	1 to 65535	0.01 [mH]
251Bh	(Reserved)	-	-	-	-
251Ch	Motor constant lo, 2nd motor	H223 (high)	R/W	1 to 65535	0.01 [A]
251Dh	Motor constant J, 2nd motor	H224 (high)	R/W	1 to 9999000	0.001
251Eh		H224 (low)	R/W		
251Fh to 2524h	(Reserved)	-	-	-	-
2525h	Auto constant R1, 2nd motor	H230 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2526h	(Reserved)	-	-	-	-
2527h	Auto constant R2, 2nd motor	H231 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2528h	(Reserved)	-	-	-	-
2529h	Auto constant L, 2nd motor	H232 (high)	R/W	1 to 65530	0.01 [mH]
252Ah	(Reserved)	-	-	-	-
252Bh	Auto constant lo, 2nd motor	H233 (high)	R/W	1 to 65530	0.01 [A]
252Ch	Auto constant J, 2nd motor	H234 (high)	R/W	1 to 9999000	0.001
252Dh		H234 (low)	R/W		
252Eh ~	Unused	-	-	Inaccessible	-

# Drive Parameter Setting Tables



---

In This Appendix...	page
- Introduction .....	2
- Parameter Settings for Keypad Entry .....	2

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

---

## Introduction

This appendix lists the user-programmable parameters for the WJ200 series inverters and the default values for European and U.S. product types. The right-most column of the tables is blank, so you can record values you have changed from the default. This involves just a few parameters for most applications. This appendix presents the parameters in a format oriented toward the keypad on the inverter.

## Parameter Settings for Keypad Entry

WJ200 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model	WJ200	<input type="text"/>	} This information is printed on the specification label located on the right side of the inverter
MFG. No.		<input type="text"/>	

## IMPORTANT

Please be sure to set the motor nameplate data into the appropriate parameters to ensure proper operation and protection of the motor:

- b012 is the motor overload protection value
- A082 is the motor voltage selection
- H003 is the motor kW capacity
- H004 is the number of motor poles

Please refer to the appropriate pages for the further details.

## Main Profile Parameters



**NOTE:** Mark “✓” in b031=10 shows the accessible parameters when b031 is set “10”, high level access.

\* Please change from "04 (Basic display)" to "00 (Full display)" in parameter **b037** (Function code display restriction), in case some parameters cannot be displayed.

“F” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>F001</b>	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	✓	0.0	Hz
<b>F002</b>	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
<b>F202</b>	Acceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
<b>F003</b>	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 sec.	✓	10.0	sec.
<b>F203</b>	Deceleration time (1), 2 <sup>nd</sup> motor		✓	10.0	sec.
<b>F004</b>	Keypad RUN key routing	Two options; select codes: <b>00</b> ...Forward <b>01</b> ...Reverse	✗	00	–

## Standard Functions



**NOTE:** Mark “✓” in B031=10 shows the accessible parameters when B031 is set “10”, high level access.

“A” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
A001	Frequency source	Eight options; select codes: 00 ...POT on ext. operator 01 ...Control terminal	✗	02	–
A201	Frequency source, 2 <sup>nd</sup> motor	02 ...Function F001 setting 03 ...Modbus network input 04 ...Option 06 ...Pulse train input 07 ...via EzSQ 10 ...Calculate function output	✗	02	–
A002	Run command source	Four options; select codes: 01 ...Control terminal 02 ...Run key on keypad,	✗	02	–
A202	Run command source, 2 <sup>nd</sup> motor	or digital operator 03 ...Modbus network input 04 ...Option	✗	02	–
A003	Base frequency	Settable from 30 Hz to the maximum frequency(A004)	✗	60.0	Hz
A203	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency(A204)	✗	60.0	Hz
A004	Maximum frequency	Settable from the base frequency to 400 Hz	✗	60.0	Hz
A204	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400 Hz	✗	60.0	Hz
A005	[AT] selection	Three options; select codes: 00...Select between [O] and [OI] at [AT] (ON=OI, OFF=O) 02...Select between [O] and external POT at [AT] (ON=POT, OFF=O) 03...Select between [OI] and external POT at [AT] (ON=POT, OFF=OI)	✗	00	–
A011	[O] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	✗	0.00	Hz
A012	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.0 to 400.0	✗	0.00	Hz
A013	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	✗	0.	%
A014	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	✗	100.	%

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
A015	[O] input start frequency enable	Two options; select codes: 00...Use offset (A011 value) 01...Use 0Hz	✗	01	-
A016	Analog input filter	Range n = 1 to 31, 1 to 30 : ×2ms filter 31: 500ms fixed filter with ± 0.1kHz hys.	✗	8.	Spl.
A017	EzSQ function select	Select codes: 00...Disable 01...Activate by RPG terminal 02...Activate always	✓	00	-
A019	Multi-speed operation selection	Select codes: 00...Binary operation (16 speeds selectable with 4 terminals) 01...Bit operation (8 speeds selectable with 7 terminals)	✗	00	-
A020	Multi-speed freq. 0	Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz A020 = Speed 0 (1st motor)	✓	0.0	Hz
A220	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start frequency to 400Hz A220 = Speed 0 (2nd motor)	✓	0.0	Hz
A021 to A035	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is 0.0 / start frequency to 400 Hz. A021=Speed 1 ~ A035=Speed15	✓	See next row	Hz
		A021~ A035	✓	0.0	Hz
A038	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	6.00	Hz
A039	Jog stop mode	Define how end of jog stops the motor; six options: 00...Free-run stop (invalid during run) 01...Controlled deceleration (invalid during run) 02...DC braking to stop(invalid during run) 03...Free-run stop (valid during run) 04...Controlled deceleration (valid during run) 05...DC braking to stop(valid during run)	✗	04	-
A041	Torque boost select	Two options: 00...Manual torque boost 01...Automatic torque boost	✗	00	-
A241	Torque boost select, 2 <sup>nd</sup> motor		✗	00	-

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A042</b>	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve, range is 0.0 to 20.0%	✓	1.0	%
<b>A242</b>	Manual torque boost value, 2 <sup>nd</sup> motor		✓	1.0	%
<b>A043</b>	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost, range is 0.0 to 50.0%	✓	5.0	%
<b>A243</b>	Manual torque boost frequency, 2 <sup>nd</sup> motor		✓	5.0	%
<b>A044</b>	V/f characteristic curve	Four available V/f curves; <b>00</b> ...Constant torque <b>01</b> ...Reduced torque (1.7) <b>02</b> ...Free V/F <b>03</b> ...Sensorless vector (SLV)	✗	00	–
<b>A244</b>	V/f characteristic curve, 2 <sup>nd</sup> motor		✗	00	–
<b>A045</b>	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	100.	%
<b>A245</b>	V/f gain, 2 <sup>nd</sup> motor		✓	100.	%
<b>A046</b>	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	–
<b>A246</b>	Voltage compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	–
<b>A047</b>	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	100.	–
<b>A247</b>	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	100.	–
<b>A051</b>	DC braking enable	Three options; select codes: <b>00</b> ...Disable <b>01</b> ...Enable during stop <b>02</b> ...Frequency detection	✗	00	–
<b>A052</b>	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency ( <b>b082</b> ) to 60Hz	✗	0.5	Hz
<b>A053</b>	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 sec.	✗	0.0	sec.
<b>A054</b>	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	✗	50.	%
<b>A055</b>	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	0.5	sec.



"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A056</b>	DC braking / edge or level detection for [DB] input	Two options; select codes: <b>00</b> ...Edge detection <b>01</b> ...Level detection	✗	01	–
<b>A057</b>	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	✗	0.	%
<b>A058</b>	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	0.0	sec.
<b>A059</b>	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	✗	5.0	sec.
<b>A061</b>	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency ( <b>A004</b> ). Range is from frequency lower limit ( <b>A062</b> ) to maximum frequency ( <b>A004</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz
<b>A261</b>	Frequency upper limit, 2nd motor	Sets a limit on output frequency less than the maximum frequency ( <b>A204</b> ). Range is from frequency lower limit ( <b>A262</b> ) to maximum frequency ( <b>A204</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz
<b>A062</b>	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A061</b> ) 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz
<b>A262</b>	Frequency lower limit, 2nd motor	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A261</b> ) 0.0 setting is disabled >0.0 setting is enabled	✗	0.00	Hz
<b>A063</b> <b>A065</b> <b>A067</b>	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) Range is 0.0 to 400.0 Hz	✗	0.0 0.0 0.0	Hz
<b>A064</b> <b>A066</b> <b>A068</b>	Jump freq. width (hysteresis) 1 to 3	Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz	✗	0.5 0.5 0.5	Hz
<b>A069</b>	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	✗	0.00	Hz
<b>A070</b>	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds	✗	0.0	sec.

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
A071	PID enable	Enables PID function, three option codes: 00...PID Disable 01...PID Enable 02...PID Enable with reverse output	✗	00	-
A072	PID proportional gain	Proportional gain has a range of 0.00 to 25.00	✓	1.0	-
A073	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds	✓	1.0	sec
A074	PID derivative time constant	Derivative time constant has a range of 0.0 to 100 seconds	✓	0.00	sec
A075	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	✗	1.00	-
A076	PV source	Selects source of Process Variable (PV), option codes: 00...[OI] terminal (current in) 01...[O] terminal (voltage in) 02...Modbus network 03...Pulse train input 10...Calculate function output	✗	00	-
A077	Reverse PID action	Two option codes: 00...PID input = SP-PV 01...PID input = -(SP-PV)	✗	00	-
A078	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	✗	0.0	%
A079	PID feed forward selection	Selects source of feed forward gain, option codes: 00...Disabled 01...[O] terminal (voltage in) 02...[OI] terminal (current in)	✗	00	-
A081	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three option codes: 00...AVR enabled 01...AVR disabled 02...AVR enabled except during deceleration	✗	02	-
A281	AVR function select, 2 <sup>nd</sup> motor		✗	02	-
A082	AVR voltage select	200V class inverter settings: .....200/215/220/230/240 400V class inverter settings: .....380/400/415/440/460/480	✗	200/ 400	V
A282	AVR voltage select, 2 <sup>nd</sup> motor		✗	200/ 400	V
A083	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 sec.	✗	0.300	sec
A084	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	✗	100.	%

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
A085	Energy-saving operation mode	Two option codes: 00...Normal operation 01...Energy-saving operation	✗	00	-
A086	Energy-saving mode tuning	Range is 0.0 to 100 %.	✗	50.0	%
A092	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.01 to 3600 sec.	✓	10.00	sec
A292	Acceleration time (2), 2 <sup>nd</sup> motor		✓	10.00	sec
A093	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.01 to 3600 sec.	✓	10.00	sec
A293	Deceleration time (2), 2 <sup>nd</sup> motor		✓	10.00	sec
A094	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel: 00...2CH input from terminal 01...Transition frequency 02...Forward and reverse	✗	00	-
A294	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor		✗	00	-
A095	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	✗	0.0	Hz
A295	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		✗	0.0	Hz
A096	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.0 to 400.0 Hz	✗	0.0	Hz
A296	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor		✗	0.0	Hz
A097	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options: 00...linear 01...S-curve 02...U-curve 03...Inverse U-curve 04...EL S-curve	✗	01	-
A098	Deceleration curve selection	Set the characteristic curve of Dec1 and Dec2, options are same as above (A097)	✗	01	-
A101	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	✗	0.00	Hz
A102	[OI] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	✗	0.0	Hz
A103	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	✗	20.	%

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A104</b>	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	✗	100.	%
<b>A105</b>	[OI] input start frequency select	Two options: select codes: <b>00</b> ...Use offset ( <b>A101</b> value) <b>01</b> ...Use 0Hz	✗	00	-
<b>A131</b>	Acceleration curve constant	Range is 01 to 10.	✗	02	-
<b>A132</b>	Deceleration curve constant	Range is 01 to 10.	✗	02	-
<b>A141</b>	A input select for calculate function	Seven options: <b>00</b> ...Operator <b>01</b> ...VR <b>02</b> ...Terminal [O] input <b>03</b> ...Terminal [OI] input <b>04</b> ...RS485 <b>05</b> ...Option <b>07</b> ...Pulse train input	✗	02	-
<b>A142</b>	B input select for calculate function	Seven options: <b>00</b> ...Operator <b>01</b> ...VR <b>02</b> ...Terminal [O] input <b>03</b> ...Terminal [OI] input <b>04</b> ...RS485 <b>05</b> ...Option <b>07</b> ...Pulse train input	✗	03	-
<b>A143</b>	Calculation symbol	Calculates a value based on the A input source ( <b>A141</b> selects) and B input source ( <b>A142</b> selects). Three options: <b>00</b> ...ADD (A input + B input) <b>01</b> ...SUB (A input - B input) <b>02</b> ...MUL (A input * B input)	✗	00	-
<b>A145</b>	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz	✓	0.00	Hz
<b>A146</b>	ADD direction select	Two options: <b>00</b> ...Plus (adds <b>A145</b> value to the output frequency setting) <b>01</b> ...Minus (subtracts <b>A145</b> value from the output frequency setting)	✗	00	-
<b>A150</b>	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	✗	10.	%
<b>A151</b>	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	✗	10.	%
<b>A152</b>	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	✗	10.	%

"A" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>A153</b>	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	✘	10.	%
<b>A154</b>	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	✘	0.0	Hz
<b>A155</b>	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds	✘	0.0	sec.
<b>A156</b>	PID sleep function action threshold	Sets the threshold for the action, set range 0.0~400.0 Hz	✘	0.00	Hz
<b>A157</b>	PID sleep function action delay time	Sets the delay time for the action, set range 0.0~25.5 sec	✘	0.0	sec
<b>A161</b>	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	✘	0.00	Hz
<b>A162</b>	[VR] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	✘	0.00	Hz
<b>A163</b>	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.%	✘	0.	%
<b>A164</b>	[VR] input active range end %	The ending point (offset) for the current input range, range is 0. to 100.%	✘	100.	%
<b>A165</b>	[VR] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A161</b> value) <b>01</b> ...Use 0Hz	✘	01	-

## Fine Tuning Functions

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
b001	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes: 00...Alarm output after trip, no automatic restart 01...Restart at 0Hz 02...Resume operation after frequency matching 03...Resume previous freq. after freq. matching, then decelerate to stop and display trip info 04...Resume operation after active freq. matching	✗	00	–
b002	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	✗	1.0	sec.
b003	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	✗	1.0	sec.
b004	Instantaneous power failure / under-voltage trip alarm enable	Three option codes: 00...Disable 01...Enable 02...Disable during stop and decelerates to a stop	✗	00	–
b005	Number of restarts on power failure / under-voltage trip events	Two option codes: 00...Restart 16 times 01...Always restart	✗	00	–
b007	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	✗	0.00	Hz
b008	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes: 00...Alarm output after trip, no automatic restart 01...Restart at 0Hz 02...Resume operation after frequency matching 03...Resume previous freq. after active freq. matching, then decelerate to stop and display trip info 04...Resume operation after active freq. matching	✗	00	–
b010	Number of retry on over voltage / over current trip	Range is 1 to 3 times	✗	3	times

“b” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b011</b>	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	✗	1.0	sec
<b>b012</b>	Level of electronic thermal	Set a level between 20% and 100% for the rated inverter current.	✗	Rated current for each inverter model *1	A
<b>b212</b>	Level of electronic thermal, 2 <sup>nd</sup> motor		✗		A
<b>b013</b>	Electronic thermal characteristic	Select from three curves, option codes: <b>00</b> ...Reduced torque <b>01</b> ...Constant torque <b>02</b> ...Free setting	✗	01	–
<b>b213</b>	Electronic thermal characteristic, 2 <sup>nd</sup> motor		✗	01	–
<b>b015</b>	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	✗	0.0	Hz
<b>b016</b>	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	✗	0.00	Amps
<b>b017</b>	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	✗	0.0	Hz
<b>b018</b>	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	✗	0.00	Amps
<b>b019</b>	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	✗	0.0	Hz
<b>b020</b>	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	✗	0.00	Amps
<b>b021</b>	Overload restriction operation mode	Select the operation mode during overload conditions, four options, option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	01	–
<b>b221</b>	Overload restriction operation mode, 2 <sup>nd</sup> motor		✗	01	–
<b>b022</b>	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	Rated current x 1.5	Amps
<b>b222</b>	Overload restriction level, 2 <sup>nd</sup> motor		✗	Rated current x 1.5	Amps
<b>b023</b>	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	1.0	sec.
<b>b223</b>	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor		✗	1.0	sec.

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b024</b>	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	01	–
<b>b025</b>	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	Rated current x 1.5	
<b>b026</b>	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	1.0	sec.
<b>b027</b>	OC suppression selection *	Two option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled	✗	01	–
<b>b028</b>	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.2*inverter rated current to 2.0*inverter rated current, resolution 0.1	✗	Rated current	A
<b>b029</b>	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1	✗	0.5	sec.
<b>b030</b>	Start freq. of active freq. matching	Three option codes: <b>00</b> ...freq at previous shutoff <b>01</b> ...start from max. Hz <b>02</b> ...start from set frequency	✗	00	–
<b>b031</b>	Software lock mode selection	Prevents parameter changes, in five options, option codes: <hr/> <b>00</b> ...all parameters except <b>b031</b> are locked when [SFT] terminal is ON <hr/> <b>01</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked when [SFT] terminal is ON <hr/> <b>02</b> ...all parameters except <b>b031</b> are locked <hr/> <b>03</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked <hr/> <b>10</b> ...High level access including <b>b031</b> <i>See appendix C for the accessible parameters in this mode.</i>	✗	01	–
<b>b033</b>	Motor cable length parameter	Set range is 5 to 20.	✗	10.	–



"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b034</b>	Run/power ON warning time	Range is, <b>0</b> :Warning disabled <b>1</b> . to <b>9999</b> : 10~99,990 hrs (unit: 10) <b>1000</b> to <b>6553</b> : 100,000~655,350 hrs (unit: 100)	✗	0.	Hrs.
<b>b035</b>	Rotation direction restriction	Three option codes: <b>00</b> ...No restriction <b>01</b> ...Reverse rotation is restricted <b>02</b> ...Forward rotation is restricted	✗	00	-
<b>b036</b>	Reduced voltage start selection	Set range, <b>0</b> (disabling the function), <b>1</b> (approx. 6ms) to <b>255</b> (approx. 1.5s)	✗	2	-
<b>b037</b>	Function code display restriction	Six option codes: <b>00</b> ...Full display <b>01</b> ...Function-specific display <b>02</b> ...User setting (and <b>b037</b> ) <b>03</b> ...Data comparison display <b>04</b> ...Basic display <b>05</b> ...Monitor display only	✗	04	-
<b>b038</b>	Initial display selection	<b>000</b> ...Func. code that SET key pressed last displayed.(*) <b>001~030</b> ... <b>d001~d030</b> displayed <b>201</b> ... <b>F001</b> displayed <b>202</b> ...B display of LCD operator	✗	001	-
<b>b039</b>	Automatic user parameter registration	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	00	
<b>b040</b>	Torque limit selection	Three option codes: <b>00</b> ...Quadrant-specific setting mode <b>01</b> ...Terminal-switching mode <b>02</b> ...Analog voltage input mode(O)	✗	00	
<b>b041</b>	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b042</b>					
<b>b043</b>	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b044</b>	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0 to 200%/no(disabled)	✗	200	%
<b>b045</b>	Torque LAD STOP selection	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	00	
<b>b046</b>	Reverse run protection	Two option codes: <b>00</b> ...No protection <b>01</b> ...Reverse rotation is protected	✗	01	-
<b>b049</b>	Dual Rating Selection	<b>00</b> ... (CT mode) / <b>01</b> ... (VT mode)	✗	00	

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b050</b>	Controlled deceleration on power loss	Four option codes: <b>00</b> ...Trips <b>01</b> ...Decelerates to a stop <b>02</b> ...Decelerates to a stop with DC bus voltage controlled <b>03</b> ...Decelerates to a stop with DC bus voltage controlled, then restart	✗	00	-
<b>b051</b>	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	✗	220.0/ 440.0	V
<b>b052</b>	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	✗	360.0/ 720.0	V
<b>b053</b>	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0	✗	1.0	sec
<b>b054</b>	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	✗	0.0	Hz
<b>b060</b>	Maximum-limit level of window comparator (O)	Set range, {Min.-limit level ( <b>b061</b> ) + hysteresis width ( <b>b062</b> )x2} to 100 % (Minimum of 0%)	✗	100.	%
<b>b061</b>	Minimum-limit level of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - hysteresis width ( <b>b062</b> )x2} % (Maximum of 0%)	✓	0.	%
<b>b062</b>	Hysteresis width of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - Min.-limit level ( <b>b061</b> )} / 2 % (Maximum of 10%)	✓	0.	%
<b>b063</b>	Maximum-limit level of window comparator (OI)	Set range, {Min.-limit level ( <b>b064</b> ) + hysteresis width ( <b>b065</b> )x2} to 100 % (Minimum of 0%)	✓	100.	%
<b>b064</b>	Minimum-limit level of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - hysteresis width ( <b>b065</b> )x2} % (Maximum of 0%)	✓	0.	%
<b>b065</b>	Hysteresis width of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - Min.-limit level ( <b>b064</b> )} / 2 % (Maximum of 10%)	✓	0.	%
<b>b070</b>	Operation level at O disconnection	Set range, 0 to 100%, or "no" (ignore)	✗	no	-
<b>b071</b>	Operation level at OI disconnection	Set range, 0 to 100%, or "no" (ignore)	✗	no	-
<b>b075</b>	Ambient temperature setting	Set range is, -10~50 °C	✓	40	°C
<b>b078</b>	Watt-hour clearance	Two option codes: <b>00</b> ...OFF <b>01</b> ...ON (press STR then clear)	✓	00	-
<b>b079</b>	Watt-hour display gain	Set range is, 1.~1000.	✓	1.	
<b>b082</b>	Start frequency	Sets the starting frequency for the inverter output, range is 0.01 to 9.99 Hz	✗	0.50	Hz
<b>b083</b>	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	✗	2.0	kHz

"b" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>b084</b>	Initialization mode (parameters or trip history)	Select initialized data, five option codes: <b>00</b> ...Initialization disabled <b>01</b> ...Clears Trip history <b>02</b> ...Initializes all Parameters <b>03</b> ...Clears Trip history and initializes all parameters <b>04</b> ...Clears Trip history and initializes all parameters and EzSQ program	✗	00	-
<b>b085</b>	Country for initialization	Select default parameter values for country on initialization, two option codes: <b>00</b> ...area A <b>01</b> ...area B	✗	00	-
<b>b086</b>	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for <b>d007</b> monitor, range is 0.01 to 99.99	✗	1.00	-
<b>b087</b>	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes: <b>00</b> ...Enabled <b>01</b> ...Disabled always <b>02</b> ... Disabled for stop	✗	00	-
<b>b088</b>	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options: <b>00</b> ...Restart from 0Hz <b>01</b> ...Restart from frequency detected from real speed of motor (freq. matching) <b>02</b> ...Restart from frequency detected from real speed of motor (active freq. matching)	✗	00	-
<b>b089</b>	Automatic carrier frequency reduction	Three option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled, depending on the output current <b>02</b> ...Enabled, depending on the heat-sink temperature	✗	01	-
<b>b090</b>	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to 100%. 0%: Function disabled >0%: Enabled, per value	✗	0.0	%
<b>b091</b>	Stop mode selection	Factory use only. Do not change.	/	/	/
<b>b092</b>	Cooling fan control	Selects when the fan is ON during inverter operation, three options: <b>00</b> ...Fan is always ON <b>01</b> ...Fan is ON during run, OFF during stop (5 minute delay from ON to OFF) <b>02</b> ...Fan is temperature controlled	✗	01	-

Func. Code	“b” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b093</b>	Clear elapsed time of cooling fan	Two option codes: <b>00</b> ...Count <b>01</b> ...Clear	✗	00	-
<b>b094</b>	Initialization target data	Select initialized parameters, four option codes: <b>00</b> ...All parameters <b>01</b> ...All parameters except in/output terminals and communication. <b>02</b> ...Only registered parameters in $U_{xxx}$ . <b>03</b> ...All parameters except registered parameters in $U_{xxx}$ and <b>b037</b> .	✗	00	-
<b>b095</b>	Dynamic braking control (BRD) selection	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable during run only <b>02</b> ...Enable always	✗	01	-
<b>b096</b>	BRD activation level	Range is: 330 to 380V (200V class) 660 to 760V (400V class)	✗	360/ 720	V
<b>b100</b>	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b102</b>	✗	0.	Hz
<b>b101</b>	Free V/F setting, voltage.1	Set range, 0 ~ 800V	✗	0.0	V
<b>b102</b>	Free V/F setting, freq.2	Set range, value of <b>b100</b> ~ <b>b104</b>	✗	0.	Hz
<b>b103</b>	Free V/F setting, voltage.2	Set range, 0 ~ 800V	✗	0.0	V
<b>b104</b>	Free V/F setting, freq.3	Set range, value of <b>b102</b> ~ <b>b106</b>	✗	0.	Hz
<b>b105</b>	Free V/F setting, voltage.3	Set range, 0 ~ 800V	✗	0.0	V
<b>b106</b>	Free V/F setting, freq.4	Set range, value of <b>b104</b> ~ <b>b108</b>	✗	0.	Hz
<b>b107</b>	Free V/F setting, voltage.4	Set range, 0 ~ 800V	✗	0.0	V
<b>b108</b>	Free V/F setting, freq.5	Set range, value of <b>b108</b> ~ <b>b110</b>	✗	0.	Hz
<b>b109</b>	Free V/F setting, voltage.5	Set range, 0 ~ 800V	✗	0.0	V
<b>b110</b>	Free V/F setting, freq.6	Set range, value of <b>b108</b> ~ <b>b112</b>	✗	0.	Hz
<b>b111</b>	Free V/F setting, voltage.6	Set range, 0 ~ 800V	✗	0.0	V
<b>b112</b>	Free V/F setting, freq.7	Set range, <b>b110</b> ~ 400	✗	0.	Hz
<b>b113</b>	Free V/F setting, voltage.7	Set range, 0 ~ 800V	✗	0.0	V
<b>b120</b>	Brake control enable	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	00	-
<b>b121</b>	Brake Wait Time for Release	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b122</b>	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b123</b>	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 sec	✗	0.00	Sec

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b124</b>	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 sec	✗	0.00	Sec
<b>b125</b>	Brake release freq.	Set range: 0 to 400Hz	✗	0.00	Sec
<b>b126</b>	Brake release current	Set range: 0~200% of inverter rated current	✗	(rated current)	A
<b>b127</b>	Braking freq. setting	Set range: 0 to 400Hz	✗	0.00	Hz
<b>b130</b>	Deceleration overvoltage suppression enable	00...Disabled 01...Enabled 02...Enabled with accel.	✗	00	-
<b>b131</b>	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 200V class...330 to 395 400V class...660 to 790	✗	380 /760	V
<b>b132</b>	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: 0.10 ~ 30.00 sec.	✗	1.00	sec
<b>b133</b>	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	0.20	-
<b>b134</b>	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0	✓	1.0	sec
<b>b145</b>	GS input mode	Two option codes: 00...No trip (Hardware shutoff only) 01...Trip	✗	00	-
<b>b150</b>	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in: <b>d001 ~ d030</b>	✗	001	-
<b>b160</b>	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be monitored in d050. The two parameters are switched by up/down keys. Set range: <b>d001 ~ d030</b>	✗	001	-
<b>b161</b>	2nd parameter of Dual Monitor		✗	002	-
<b>b163</b>	Frequency set in monitoring	Two option codes: 00...Freq. set disabled 01...Freq. set enabled	✓	00	-
<b>b164</b>	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: 00...Disable 01...Enable	✓	00	-
<b>b165</b>	Ex. operator com. loss action	Five option codes: 00...Trip 01...Trip after deceleration to a stop 02...Ignore 03...Coasting (FRS) 04...Decelerates to a stop	✓	02	-

Func. Code	"b" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>b171</b>	Inverter mode selection	Three option codes: <b>00</b> ...No function <b>01</b> ...Std. IM (Induction Motor) <b>03</b> ...PM(Permanent Magnet Motor)	<b>×</b>	00	-
<b>b180</b>	Initialization trigger (*)	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: <b>00</b> ...Initialization disable <b>01</b> ...Perform initialization	<b>×</b>	00	-
<b>b190</b>	Password Settings A	0000(Invalid Password) 0001-FFFF>Password)	<b>×</b>	0000	-
<b>b191</b>	Password authentication A	0000-FFFF	<b>×</b>	0000	-
<b>b192</b>	Password Settings B	0000(Invalid Password) 0001-FFFF>Password)	<b>×</b>	0000	-
<b>b193</b>	Password authentication B	0000-FFFF	<b>×</b>	0000	-

## Intelligent Terminal Functions

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
C001	Input [1] function	Select input terminal [1] function, 68 options (see next section)	✗	00 [FW]	–
C002	Input [2] function	Select input terminal [2] function, 68 options (see next section)	✗	01 [RV]	–
C003	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	✗	02 [CF1]	–
C004	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	✗	03 [CF2]	–
C005	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	✗	09 [2CH]	–
C006	Input [6] function	Select input terminal [6] function, 68 options (see next section)	✗	18 [RS]	–
C007	Input [7] function	Select input terminal [7] function, 68 options (see next section)	✗	13 [USP]	–
C011	Input [1] active state	Select logic conversion, two option codes: 00...normally open [NO] 01...normally closed [NC]	✗	00	–
C012	Input [2] active state		✗	00	–
C013	Input [3] active state		✗	00	–
C014	Input [4] active state		✗	00	–
C015	Input [5] active state		✗	00	–
C016	Input [6] active state		✗	00	–
C017	Input [7] active state		✗	00	–
C021	Output [11] function [EDM assignable]	48 programmable functions available for logic (discrete) outputs (see next section)	✗	01 [FA1]	–
C022	Output [12] function		✗	00 [RUN]	–
C026	Alarm relay function	48 programmable functions available for logic (discrete) outputs (see next section)	✗	05 [AL]	–
C027	[EO] terminal selection (Pulse/PWM output)	13 programmable functions: 00...Output frequency (PWM) 01...Output current (PWM) 02...Output torque (PWM) 03...Output frequency (Pulse train) 04...Output voltage (PWM) 05...Input power (PWM) 06...Electronic thermal load ratio (PWM) 07...LAD frequency (PWM) 08...Output current (Pulse train) 10...Heat sink temperature (PWM) 12...General output (PWM) 15...Pulse train input monitor 16...Option(PWM)	✗	07	–

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
C028	[AM] terminal selection (Analog voltage output 0...10V)	11 programmable functions: 00...Output frequency 01...Output current 02...Output torque 04...Output voltage 05...Input power 06...Electronic thermal load ratio 07...LAD frequency 10...Heat sink temperature 11...Output torque (with code) 13...General output 16...Option	✗	07 [LAD]	-
C030	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	Rated current	A
C031	Output [11] active state	Select logic conversion, two option codes: 00...normally open [NO] 01...normally closed [NC]	✗	00	-
C032	Output [12] active state		✗	00	-
C036	Alarm relay active state		✗	01	-
C038	Output mode of low current detection	Two option codes: 00...During acceleration, deceleration and constant speed 01...During constant speed only	✗	01	-
C039	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	✗	INV rated current	A
C040	Output mode of overload warning	Two option codes: 00...During accel., decel. and constant speed 01...During constant speed only	✗	01	-
C041	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✗	Rated current x 1.15	A
C241	Overload warning level, 2 <sup>nd</sup> motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✗	Rated current x 1.15	A
C042	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	✗	0.0	Hz
C043	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	✗	0.0	Hz
C044	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	✗	3.0	%
C045	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	✗	0.00	Hz
C046	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	✗	0.00	Hz



“C” Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
<b>C047</b>	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	1.00	
<b>C052</b>	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	✗	100.0	%
<b>C053</b>	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	✗	0.0	%
<b>C054</b>	Over-torque/under-torque selection	Two option codes: <u>00...Over-torque</u> <u>01...Under-torque</u>	✗	00	-
<b>C055</b>	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	✗	100.	%
<b>C056</b>	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	✗	100.	%
<b>C057</b>	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	✗	100.	%
<b>C058</b>	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	✗	100.	%
<b>C059</b>	Signal output mode of Over/under-torque	Two option codes: <u>00...During accel., decel. and constant speed</u> <u>01...During constant speed only</u>	✗	01	-
<b>C061</b>	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	✗	90	%
<b>C063</b>	Zero speed detection level	Set range is 0.0 to 100.0Hz	✗	0.00	Hz
<b>C064</b>	Heat sink overheat warning	Set range is 0 to 110 °C	✗	100.	°C
<b>C071</b>	Communication speed	Eight option codes: <b>03</b> ...2,400 bps <b>04</b> ...4,800 bps <b>05</b> ...9,600 bps <b>06</b> ...19,200 bps <b>07</b> ...38,400 bps <b>08</b> ...57,600 bps <b>09</b> ...76,800 bps <b>10</b> ...115,200 bps	✗	05	baud
<b>C072</b>	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	✗	1.	-
<b>C074</b>	Communication parity	Three option codes: <b>00</b> ...No parity <b>01</b> ...Even parity <b>02</b> ...Odd parity	✗	00	-
<b>C075</b>	Communication stop bit	Two option codes: <b>1</b> ...1 bit <b>2</b> ...2 bit	✗	1	bit

Func. Code	"C" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
C076	Communication error select	Selects inverter response to communications error. Five options: 00...Trip 01...Decelerate to a stop and trip 02...Disable 03...Free run stop (coasting) 04...Decelerates to a stop	✗	02	-
C077	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 sec 0.0 = disabled	✗	0.00	sec.
C078	Communication wait time	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms	✗	0.	msec.
C081	O input span calibration	Scale factor between the external frequency command on terminals L-O (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%
C082	OI input span calibration	Scale factor between the external frequency command on terminals L-OI (voltage input) and the frequency output, range is 0.0 to 200%	✓	100.0	%
C085	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	✓	100.0	%
C091	Debug mode enable *	Displays debug parameters. Two option codes: 00...Disable 01...Enable <Do not set> (for factory use)	✓	00	-
C096	Communication selection	00...Modbus-RTU 01... EzCOM 02... EzCOM<administrator>	✗	00	-
C098	EzCOM start adr. of master	01-08	✗	01	-
C099	EzCOM end adr. of master	01-08	✗	01	-
C100	EzCOM starting trigger	00... Input terminal 01... Always	✗	00	-
C101	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle. Two option codes: 00...Clear last frequency (return to default frequency F001) 01...Keep last frequency adjusted by UP/DWN	✗	00	-

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
C102	Reset selection	Determines response to Reset input [RS]. Four option codes: 00...Cancel trip state at input signal ON transition, stops inverter if in Run Mode 01...Cancel trip state at signal OFF transition, stops inverter if in Run Mode 02...Cancel trip state at input ON transition, no effect if in Run Mode 03...Clear the memories only related to trip status	✗	00	-
C103	Restart mode after reset	Determines the restart mode after reset is given, three option codes: 00...Start with 0 Hz 01...Start with freq. matching 02...Start with active freq. matching	✗	00	-
C104	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes: 00...0 Hz 01...Original setting (in the EEPROM memory at power on)	✗	00	-
C105	EO gain adjustment	Set range is 50 to 200%	✓	100.	%
C106	AM gain adjustment	Set range is 50 to 200%	✓	100.	%
C109	AM bias adjustment	Set range is 0 to 100%	✓	0.	%
C111	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	Rated current x 1.15	A
C130	Output [11] on delay	Set range is 0.0 to 100.0 sec.	✗	0.0	Sec.
C131	Output [11] off delay		✗	0.0	Sec.
C132	Output [12] on delay	Set range is 0.0 to 100.0 sec.	✗	0.0	Sec.
C133	Output [12] off delay		✗	0.0	Sec.
C140	Relay output on delay	Set range is 0.0 to 100.0 sec.	✗	0.0	Sec.
C141	Relay output off delay		✗	0.0	Sec.
C142	Logic output 1 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	00	-
C143	Logic output 1 operand B		✗	00	-
C144	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	00	-
C145	Logic output 2 operand A	All the programmable functions	✗	00	-

"C" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
C146	Logic output 2 operand B	available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	00	-
C147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	00	-
C148	Logic output 3 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	00	-
C149	Logic output 3 operand B		✗	01	-
C150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	00	-
C160	Input [1] response time	Sets response time of each input terminal, set range: 0 (x 2 [ms]) to 200 (x 2 [ms]) (0 to 400 [ms])	✗	1.	-
C161	Input [2] response time		✗	1.	-
C162	Input [3] response time		✗	1.	-
C163	Input [4] response time		✗	1.	-
C164	Input [5] response time		✗	1.	-
C165	Input [6] response time		✗	1.	-
C166	Input [7] response time		✗	1.	-
C169	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	✗	0.	ms

## Motor Constants Functions

"H" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
H001	Auto-tuning selection	Three option codes: 00...Disabled 01...Enabled with motor stop 02...Enabled with motor rotation	✗	00	-
H002	Motor constant selection	Two option codes: 00...Hitachi standard motor 02...Auto tuned data	✗	00	-
H202	Motor constant selection, 2 <sup>nd</sup> motor		✗	00	-
H003	Motor capacity	Twelve selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/ 5.5/7.5/11/15/18.5	✗	Specified by the capacity of each inverter model	kW
H203	Motor capacity, 2 <sup>nd</sup> motor		✗		kW
H004	Motor poles setting	Five selections: 2 / 4 / 6 / ~ / 46 / 48	✗	4	poles
H204	Motor poles setting, 2 <sup>nd</sup> motor		✗	4	poles

"H" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
H005	Motor speed response constant	Set range is 1 to 1000	✓	100.	-
H205	Motor speed response constant, 2 <sup>nd</sup> motor		✓	100.	-
H006	Motor stabilization constant	Motor constant (factory set), range is 0 to 255	✓	100.	-
H206	Motor stabilization constant, 2 <sup>nd</sup> motor		✓	100.	-
H020	Motor constant R1 (Hitachi motor)	0.001~65.535 ohms	✗	Specified by the capacity of each inverter mode	Ohm
H220	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)		✗		Ohm
H021	Motor constant R2 (Hitachi motor)	0.001~65.535 ohms	✗		Ohm
H221	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		✗		Ohm
H022	Motor constant L (Hitachi motor)	0.01~655.35mH	✗		mH
H222	Motor constant L, 2 <sup>nd</sup> motor (Hitachi motor)		✗		mH
H023	Motor constant I0 (Hitachi motor)	0.01~655.35A	✗		A
H223	Motor constant I0, 2 <sup>nd</sup> motor (Hitachi motor)		✗		A
H024	Motor constant J (Hitachi motor)	0.001~9999 kgm <sup>2</sup>	✗		kgm <sup>2</sup>
H224	Motor constant J, 2 <sup>nd</sup> motor (Hitachi motor)		✗		kgm <sup>2</sup>
H030	Motor constant R1 (Auto tuned data)	0.001~65.535 ohms	✗	Specified by the capacity of each inverter mode	ohm
H230	Motor constant R1, 2 <sup>nd</sup> motor (Auto tuned data)		✗		ohm
H031	Motor constant R2 (Auto tuned data)	0.001~65.535 ohms	✗		ohm
H231	Motor constant R2, 2 <sup>nd</sup> motor (Auto tuned data)		✗		ohm
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	✗		mH
H232	Motor constant L, 2 <sup>nd</sup> motor (Auto tuned data)		✗		mH
H033	Motor constant I0 (Auto tuned data)	0.01~655.35A	✗		A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)		✗		A
H034	Motor constant J (Auto tuned data)	0.001~9999 kgm <sup>2</sup>	✗		kgm <sup>2</sup>
H234	Motor constant J, 2 <sup>nd</sup> motor (Auto tuned data)		✗		kgm <sup>2</sup>
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	✗	0.2	Times
H051	Slip compensation I gain for V/f control with FB	0.-1000.	✗	2.	(s)

“P” parameters will be appeared when the expansion option is connected.

Func. Code	“P” Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
P001	Reaction when option card error occurs	Two option codes: 00...Inverter trips 01...Ignores the error (Inverter continues operation)	✗	00	-
P003	[EA] terminal selection	Three option codes: 00...Speed reference (incl. PID) 01...For control with encoder feedback 02...Extended terminal for EzSQ	✗	00	-
P004	Pulse train input mode selection for feedback	Four option codes: 00...Single-phase pulse [EA] 01...2-phase pulse (90° difference) 1 ([EA] and [EB]) 02...2-phase pulse (90° difference) 2 ([EA] and [EB]) 03...Single-phase pulse [EA] and direction signal [EB]	✗	00	-
P011	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	✗	512.	-
P012	Simple positioning selection	Two option codes: 00...simple positioning deactivated 01...simple positioning activated	✗	00	-
P015	Creep Speed	Set range is start frequency (b082) ~10.00 Hz	✗	5.00	Hz
P026	Over-speed error detection level	Set range is 0~150%	✗	115.0	%
P027	Speed deviation error detection level	Set range is 0~120 Hz	✗	10.00	Hz
P031					
P033	Torque command input selection	Four option codes: 00...Analog voltage input [O] 01...Analog current input [OI] 03...Operator, 06...Option	✗	00	-
P034	Torque command level input	Set range is 0~200%	✓	0.	%
P036	Torque bias mode selection	Two option codes: 00...No bias 01...Operator	✗	00	-
P037	Torque bias value setting	Range is -200~200%	✓	0.	%
P038	Torque bias polar selection	Three option codes: 00...According to the sign 01...According to the rotation direction 05...Option	✗	00	-
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✓	0.00	Hz
P041	Speed / Torque control switching time	Set range is 0 to 1000 ms	✗	0.	ms

"P" Function			Run Mode Edit	Defaults	
Func. Code	Name	Description		Initial data	Units
P044	Communication watchdog timer (for option)	Set range is 0.00 to 99.99s	✗	1.00	s
P045	Inverter action on communication error (for option)	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	✗	00	-
P046	DeviceNet polled I/O: Output instance number	0-20	✗	1	-
P048	Inverter action on communication idle mode	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	✗	00	-
P049	Motor poles setting for RPM	0/2/4/6/8/10/12/14/16/18/20/22/24/26/28/30/32/34/36/38/40/42/44/46/48	✗	0	Poles
P055	Pulse train input frequency scale setting	Sets the pulse numbers at max. frequency, set range is 1.0~32.0 kHz	✗	25.0	kHz
P056	Pulse train input frequency filter time constant setting	Set range is 0.01~2.00 sec.	✗	0.10	sec
P057	Pulse train input bias setting	Set range is -100~100 %	✗	0.	%
P058	Limitation of the pulse train input setting	Set range is 0~100 %	✗	100.	%
P060	Multistage position 0	P073 to P072 (Displayed higher 4-digits only)	✓	0	Pulses
P061	Multistage position 1		✓	0	Pulses
P062	Multistage position 2		✓	0	Pulses
P063	Multistage position 3		✓	0	Pulses
P064	Multistage position 4		✓	0	Pulses
P065	Multistage position 5		✓	0	Pulses
P066	Multistage position 6		✓	0	Pulses
P067	Multistage position 7		✓	0	Pulses
P068	Homing mode selection	00...Low speed mode 01...High speed mode	✓	00	-
P069	Homing direction	00...Forward rotation side 01...Reverse rotation side	✓	01	-
P070	Low speed homing freq.	0 to 10Hz	✓	5.00	Hz
P071	High speed homing freq.	0 to 400Hz	✓	5.00	Hz
P072	Position range (Forward)	0 to +268435455(Higher 4-digits displayed)	✓	+268435455	Pulses
P073	Position range (Reverse)	-268435455 to 0(Higher 4-digits displayed)	✓	-268435455	Pulses

Func. Code	"P" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
P075	Positioning mode selection	00...With limitation 01...No limitation (shorter route) P004 is to be set 00 or 01	✗	00	-
P077	Encoder disconnection timeout	0.0 to 10.0 s	✓	1.0	s
P100 ~ P131	EzSQ user parameter U(00) ~ U(31)	Each set range is 0~65535	✓	0.	-
P140	EzCOM number of data	1 to 5	✓	5	-
P141	EzCOM destination 1 address	1 to 247	✓	1	-
P142	EzCOM destination 1 register	0000 to FFFF	✓	0000	-
P143	EzCOM source 1 register	0000 to FFFF	✓	0000	-
P144	EzCOM destination 2 address	1 to 247	✓	2	-
P145	EzCOM destination 2 register	0000 to FFFF	✓	0000	-
P146	EzCOM source 2 register	0000 to FFFF	✓	0000	-
P147	EzCOM destination 3 address	1 to 247	✓	3	-
P148	EzCOM destination 3 register	0000 to FFFF	✓	0000	-
P149	EzCOM source 3 register	0000 to FFFF	✓	0000	-
P150	EzCOM destination 4 address	1 to 247	✓	4	-
P151	EzCOM destination 4 register	0000 to FFFF	✓	0000	-
P152	EzCOM source 4 register	0000 to FFFF	✓	0000	-
P153	EzCOM destination 5 address	1 to 247	✓	5	-
P154	EzCOM destination 5 register	0000 to FFFF	✓	0000	-
P155	EzCOM source 5 register	0000 to FFFF	✓	0000	-
P160	Option I/F command register to write 1	0000 to FFFF	✓	0000	-
P161	Option I/F command register to write 2	0000 to FFFF	✓	0000	-
P162	Option I/F command register to write 3	0000 to FFFF	✓	0000	-
P163	Option I/F command register to write 4	0000 to FFFF	✓	0000	-
P164	Option I/F command register to write 5	0000 to FFFF	✓	0000	-
P165	Option I/F command register to write 6	0000 to FFFF	✓	0000	-
P166	Option I/F command register to write 7	0000 to FFFF	✓	0000	-
P167	Option I/F command register to write 8	0000 to FFFF	✓	0000	-
P168	Option I/F command register to write 9	0000 to FFFF	✓	0000	-
P169	Option I/F command register to write 10	0000 to FFFF	✓	0000	-
P170	Option I/F command register to read 1	0000 to FFFF	✓	0000	-
P171	Option I/F command register to read 2	0000 to FFFF	✓	0000	-
P172	Option I/F command register to read 3	0000 to FFFF	✓	0000	-



Func. Code	"P" Function		Run Mode Edit	Defaults	
	Name	Description		Initial data	Units
<b>P173</b>	Option I/F command register to read 4	0000 to FFFF	✓	0000	-
<b>P174</b>	Option I/F command register to read 5	0000 to FFFF	✓	0000	-
<b>P175</b>	Option I/F command register to read 6	0000 to FFFF	✓	0000	-
<b>P176</b>	Option I/F command register to read 7	0000 to FFFF	✓	0000	-
<b>P177</b>	Option I/F command register to read 8	0000 to FFFF	✓	0000	-
<b>P178</b>	Option I/F command register to read 9	0000 to FFFF	✓	0000	-
<b>P179</b>	Option I/F command register to read 10	0000 to FFFF	✓	0000	-
<b>P180</b>	Profibus Node address	0 to 125	✗	0.	-
<b>P181</b>	Profibus Clear Node address	00... 01...	✗	00	-
<b>P182</b>	Profibus Map selection	00... 01...	✗	00	-

# CE-EMC Installation Guidelines



---

In This Appendix...	page
- CE-EMC Installation Guidelines.....	2
- Hitachi EMC Recommendations .....	6

---

## CE-EMC Installation Guidelines

You are required to satisfy the machinery directive (2006/42/EC) and the EMC directive (2004/108/EC [until April 19<sup>th</sup> 2016], 2014/30/EU [from April 20<sup>th</sup> 2016]) when using a WJ200 inverter in an EU country.

To satisfy the EMC directive and to comply with standard, you need to use a dedicated EMC filter suitable for each model, and follow the guidelines in this section. Following table shows the compliance condition for reference.

Table 1. Condition for the compliance

Model	Cat.	Carrier f	Motor cable
All WJ200 series	C1	2kHz	20m (Shielded)

Table 2. Applicable EMC filter

Input class	Inverter model	Filter model (Schaffner)
1-ph. 200V class	WJ200-001SFE	FS24828-8-07
	WJ200-002SFE	
	WJ200-004SFE	
	WJ200-007SFE	FS24828-27-07
	WJ200-015SFE	
	WJ200-022SFE	
3-ph. 200V class	WJ200-001LFU	FS24829-8-07
	WJ200-002LFU	
	WJ200-004LFU	
	WJ200-007LFU	
	WJ200-015LFU	FS24829-16-07
	WJ200-022LFU	
	WJ200-037LFU	FS24829-25-07
	WJ200-055LFU	FS24829-50-07
	WJ200-075LFU	
WJ200-110LFU		
WJ200-150LFU	FS24829-75-07	
3-ph. 400V class	WJ200-004HFE	FS24830-6-07
	WJ200-007HFE	
	WJ200-015HFE	FS24830-12-07
	WJ200-022HFE	
	WJ200-030HFE	
	WJ200-040HFE	FS24830-15-07
	WJ200-055HFE	FS24830-29-07
	WJ200-075HFE	
WJ200-110HFE	FS24830-48-07	
WJ200-150HFE		

WJ200-110L, 110H and 150H needs to be installed in a metal cabinet and add ferrite core at the input cable to meet category C1. Unless otherwise category C2.

### Important notes

1. Input choke or other equipment is required if necessary to comply with EMC directive from the harmonic distortion point of view (IEC 61000-3-2 and 4).
2. If the motor cable length exceeds 20m, use output choke to avoid unexpected problem due to the leakage current from the motor cable (such as malfunction of the thermal relay, vibration of the motor, etc.).

3. As user you must ensure that the HF (high frequency) impedance between adjustable frequency inverter, filter, and ground is as small as possible.
  - Ensure that the connections are metallic and have the largest possible contact areas (zinc-plated mounting plates).
4. Avoid conductor loops that act like antennas, especially loops that encompass large areas.
  - Avoid unnecessary conductor loops.
  - Avoid parallel arrangement of low-level signal wiring and power-carrying or noise-prone conductors.
5. Use shielded wiring for the motor cable and all analog and digital control lines.
  - Allow the effective shield area of these lines to remain as large as possible; i.e., do not strip away the shield (screen) further away from the cable end than absolutely necessary.
  - With integrated systems (for example, when the adjustable frequency inverter is communicating with some type of supervisory controller or host computer in the same control cabinet and they are connected at the same ground + PE-potential), connect the shields of the control lines to ground + PE (protective earth) at both ends. With distributed systems (for example the communicating supervisory controller or host computer is not in the same control cabinet and there is a distance between the systems), we recommend connecting the shield of the control lines only at the end connecting to the adjustable frequency inverter. If possible, route the other end of the control lines directly to the cable entry section of the supervisory controller or host computer. The shield conductor of the motor cables always must connect to ground + PE at both ends.
  - To achieve a large area contact between shield and ground + PE-potential, use a PG screw with a metallic shell, or use a metallic mounting clip.
  - Use only cable with braided, tinned copper mesh shield (type “CY”) with 85% coverage.
  - The shielding continuity should not be broken at any point in the cable. If the use of reactors, contactors, terminals, or safety switches in the motor output is necessary, the unshielded section should be kept as short as possible.
  - Some motors have a rubber gasket between terminal box and motor housing. Very often, the terminal boxes, and particularly the threads for the metal PG screw connections, are painted. Make sure there is always a good metallic connection between the shielding of the motor cable, the metal PG screw connection, the terminal box, and the motor housing. If necessary, carefully remove paint between conducting surfaces.
6. Take measures to minimize interference that is frequently coupled in through installation cables.
  - Separate interfering cables with 0.25m minimum from cables susceptible to interference. A particularly critical point is laying parallel cables over longer distances. If two cables intersect (one crosses over the other), the interference is smallest if they intersect at an angle of 90°. Cables susceptible to interference should therefore only intersect motor cables, intermediate circuit cables, or the wiring of a rheostat at right angles and never be laid parallel to them over longer distances.
7. Minimize the distance between an interference source and an interference sink (interference- threatened device), thereby decreasing the effect of the emitted interference on the interference sink.
  - You should use only interference-free devices and maintain a minimum distance of 0.25 m from the adjustable frequency inverter.
8. Follow safety measures in the filter installation.


- If using external EMC filter, ensure that the ground terminal (PE) of the filter is properly connected to the ground terminal of the adjustable frequency inverter. An HF ground connection via metal contact between the housings of the filter and the adjustable frequency inverter, or solely via cable shield, is not permitted as a protective conductor connection. The filter must be solidly and permanently connected with the ground potential so as to preclude the danger of electric shock upon touching the filter if a fault occurs.

To achieve a protective ground connection for the filter:

- Ground the filter with a conductor of at least 10 mm<sup>2</sup> cross-sectional area.
  - Connect a second grounding conductor, using a separate grounding terminal parallel to the protective conductor. (The cross section of each single protective conductor terminal must be sized for the required nominal load.)
-

## Installation for WJ200 series (example of SFE models)

Model LFx (3-ph. 200V class) and HFx (3-ph. 400V class) are the same concept for the installation.

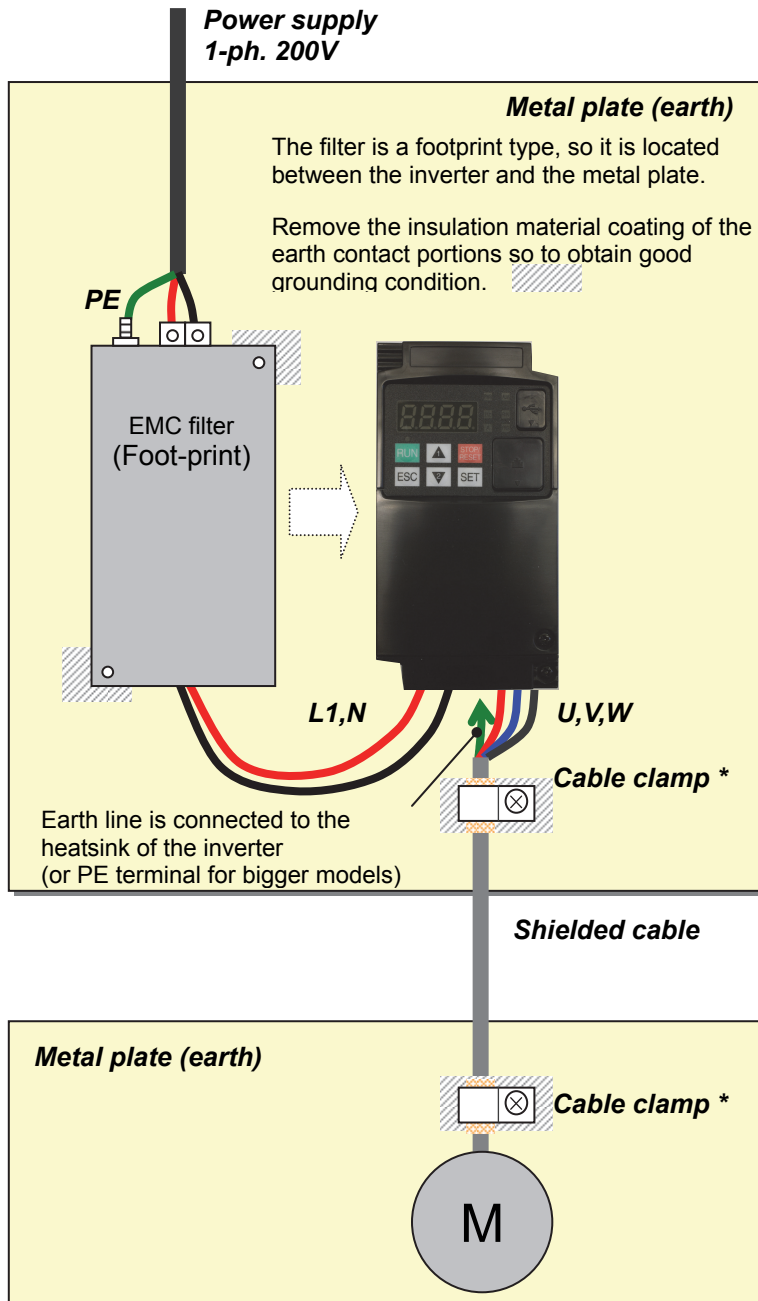

\*) Both earth portions of the shielded cable must be connected to the earth point by cable clamps.

Input choke or equipment to reduce harmonic current is necessary for CE marking (IEC 61000-3-2 and IEC61000-3-4) from the harmonic current point of view, even conducted emission and radiated emission passed without the input choke.

## Hitachi EMC Recommendations



---

**WARNING:** This equipment should be installed, adjusted, and serviced by qualified personal familiar with construction and operation of the equipment and the hazards involved. Failure to observe this precaution could result in bodily injury.

---

Use the following checklist to ensure the inverter is within proper operating ranges and conditions.

1. The power supply to WJ200 inverters must meet these specifications:
    - Voltage fluctuation  $\pm 10\%$  or less
    - Voltage imbalance  $\pm 3\%$  or less
    - Frequency variation  $\pm 4\%$  or less
    - Voltage distortion THD = 10% or less
  2. Installation measure:
    - Use a filter designed for WJ200 inverter. Refer to the instruction of the applicable external EMC filter.
  3. Wiring:
    - Shielded wire (screened cable) is required for motor wiring, and the length must be 20 meter or less.
    - If the motor cable length exceeds the value shown above, use output choke to avoid unexpected problem due to the leakage current from the motor cable.
    - The carrier frequency setting must be 2 kHz to satisfy EMC requirements.
    - Separate the power input and motor wiring from the signal/process circuit wiring.
  4. Environmental conditions—when using a filter, follow these guidelines:
    - Ambient temperature:  $-10$  to  $50$  °C (Derating is required when the ambient temperature exceeds  $40$  °C)
    - Humidity: 20 to 90% RH (non-condensing)
    - Vibration:  $5.9$  m/sec<sup>2</sup> (0.6 G)  $10 \sim 55$ Hz
    - Location: 1000 meters or less altitude, indoors (no corrosive gas or dust)
-

# Safety

## (ISO13849-1)



---

In This Appendix...	page
- Introduction .....	2
- Stop Category defined in EN60204-1 .....	2
- How it works .....	2
- Activation .....	3
- Installation .....	3
- Wiring example .....	4
- Components to be combined.....	6
- Periodical check(proof test).....	6
- Warning and Precautions.....	7
- EC DECLARATION OF CONFORMITY (Copy).....	8

---



## Introduction

The Gate Suppress function can be utilized to perform a safe stop according to the EN60204-1, stop category 0 (Uncontrolled stop by power removal) (as STO function of IEC/EN61800-5-2). It is designed to meet the requirements of the ISO13849-1, Cat.3 PL=d, IEC61508 SIL2 and IEC/EN61800-5-2 SIL2 only in a system in which EDM signal is monitored by an “external device monitor”.


## Stop Category defined in EN60204-1

- Category 0 : Uncontrolled stop by immediate (< 200 ms) shut-down of the power supply to the actuators. (as STO function of IEC/EN61800-5-2)
- Category 1 : Controlled stop by interrupting the power supply to the actuator level if, for example, the hazardous movement has been brought to a standstill (time-delayed shut-down of the power supply).  
(as SS1 function of IEC/EN61800-5-2)
- Category 2 : Controlled stop. The power supply to the drive element is not interrupted. Additional measures to EN 1037 (protection from unexpected restart) are necessary. (as SS2 function of IEC/EN61800-5-2)

## How it works

Interrupting the current to GS1 or GS2, for example removing the link between either GS1 or GS2 and PLC or both GS1/GS2 and PLC disables the drive output, i.e. the power supply to the motor is cut by stopping the switching of the output transistors in a safe way. EDM output is activated when GS1 and GS2 are given to the drive.

Always use both inputs to disable the drive. EDM output conducts when both GS1 and GS2 circuits are working properly. If for any reason only one channel is opened, the drive output is stopped but the EDM output is not activated. In this case the Safe Disable input wiring must be checked.

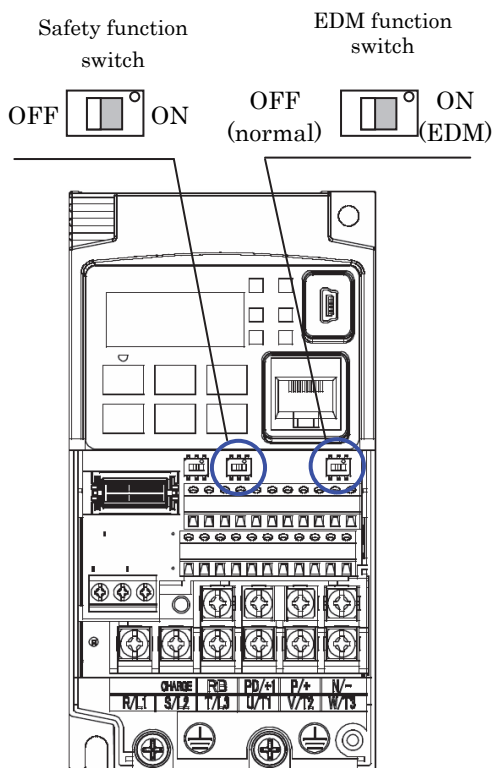

## Activation

Turning on the safety switch automatically assign the GS1 input and GS2 input automatically.

To assign EDM (external device monitor) output, please turn the EDM function switch on. EDM output is automatically assigned on intelligent output terminal 11.

(When safety switch or EDM switch is turned off, the intelligent input and output terminal assigned on will be set as "no" function, and contact will remain normally off.)

Always use both inputs to disable the drive. If for any reason only one channel is opened, the drive output is stopped but the EDM output is not activated. In this case the Safe Disable input wiring must be checked.

## Installation

According to the safety standard listed above, please install referring to the example. Please be sure to use the both GS1 and GS2, and construct the system that GS1 and GS2 are both turned off when safety input is given to the inverter.



Be sure to carry out the proof test when installation is ready before operation.

When the Gate Suppress function is utilized, connect the drive to a safety certified interrupting device utilizing EDM output signal to reconfirm both safety inputs GS1 and GS2. Follow the wiring instructions in this QRG and the instruction manual.


item	Function code	data	description
Input [3] and [4] function	C003	77	GS1: Safety input 1 (Note 1)
	C004	78	GS2 : Safety input 2 (Note 1)
Input [3] and [4] active state	C013	01	NC: Normally Closed (Note 1)
	C014	01	NC: Normally Closed (Note 1)
Output [11] function	C021	62	EDM : External Device Monitor(Note2)
Output [11] active state	C031	00	NO: Normally Open (Note 2)

Note 1) They are automatically set when safety switch is turned ON, cannot be changed.

Note 2) Those are automatically assigned when EDM switch is turned ON, cannot be changed.

## Wiring example

When the Gate Suppress function is utilized, connect the drive to a safety certified interrupting device utilizing EDM output signal to reconfirm both safety inputs GS1 and GS2. Follow the wiring instructions in the Instruction manual page 4-14.

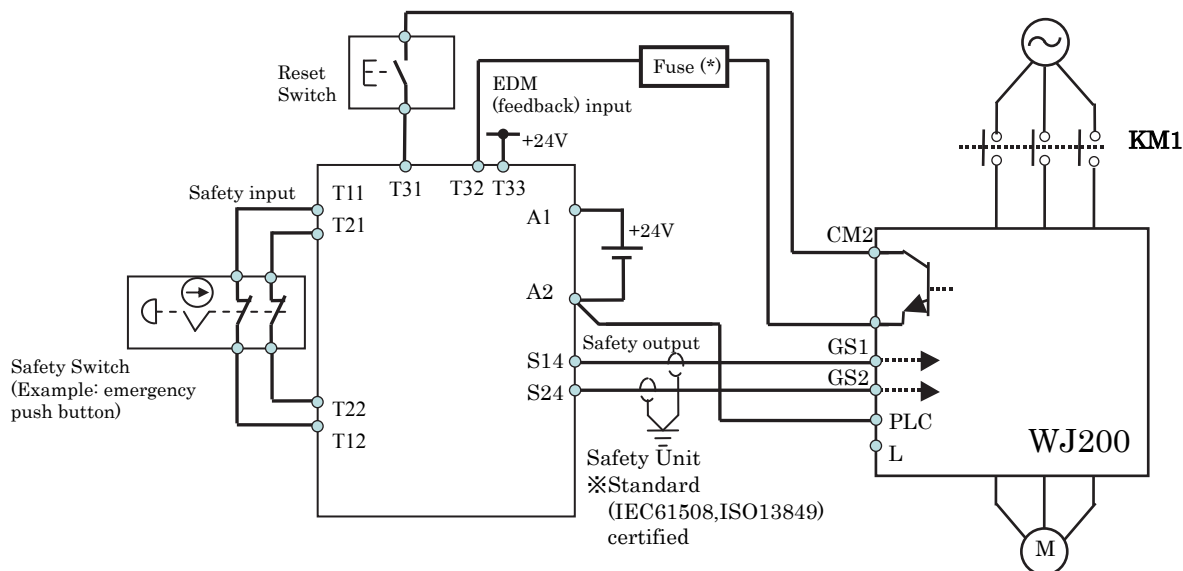

(\*) Specification of the fuse:

The arch extinguishing fuse with rated voltage AC250V, rated current 100mA complies to either IEC6127 -2/-3/-4

Example)

SOC... <http://www.socfuse.com>

EQ series AC250V, 100mA (UL, SEMKO, BSI)

Little... <http://www.littelfuse.co.jp>

216 series AC250V, 100mA (CCC, UL, CSA, SEMKO, CE, VDE)

Any external signal voltage connected to the WJ200 must be from a SELV Power Supply.

By pressing the emergency stop button, the current to GS1 and GS2 is shut off, and the inverter output is shut off. By this, motor is free-running. This behavior is according to the stop category 0 defined in EN60204.

Note 1: Above is the example to use the intelligent input terminal with source logic. When it is used with sink logic, the wiring is to be modified.

Note 2: The wire for safety relay and emergency input signal are to be shielded coaxial cable for example RS174/U (produced by LAPP) by MIL-C17, or KX2B by NF C 93-550 with diameter 2.9mm with less than 2 meters. Please be sure to ground the shielding.

Note 3: All the inductance related parts such as relay and contactor are required to contain the over-voltage protection circuit.




As described on page 4-14 of the Instruction manual, inverter doesn't block the current flowing into itself when it is not powered. This may cause the closed circuit when two or more inverters are connected to common I/O wiring as shown below to result in unexpected turning the on the input. This may lead to dangerous situation. To avoid this closed circuit, please put the diode (rated:50V/0.1A) in the path as described below.



IF the protection diodes used when the units are in wired parallel are only single diodes then their condition would be checked as part of the proof test.

In case of Source logic

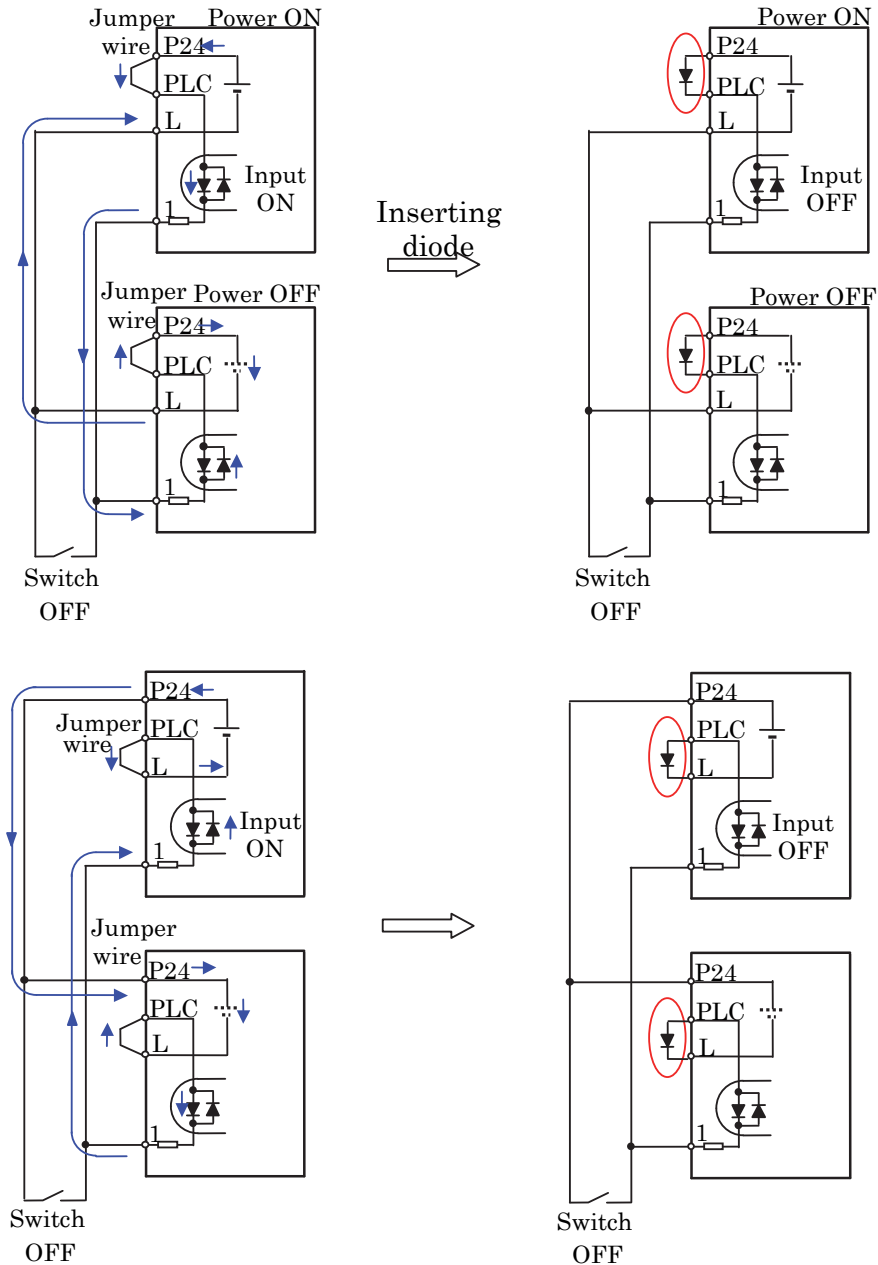

The current loop cause turn the input ON even the switch is off when diode is not inserted.

The current loop is to be prevented by inserting diode instead of short bar.

## Components to be combined

Followings are the example of the safety devices to be combined.

Series	Model	Norms to comply
GS9A	301	ISO13849-2 cat4, SIL3
G9SX	GS226-T15-RC	IEC61508 SIL1-3
NE1A	SCPU01-V1	IEC61508 SIL3

The configuration of and components used in any circuit other than an appropriately pre-approved safety module that interfaces with the WJ200 GS1/GS2 and EDM ports **MUST** be at least equivalent to Cat.3 PLd under ISO 13849-1:2006 in order to be able to claim an overall Cat.3 PLd for the WJ200 and external circuit combination.

The EMI level that the external module has been assessed to must be at least equivalent to that of Annex E in IEC 62061.

## Periodical check (proof test)

Proof test is essential to be able to reveal any dangerous undetected failures after a period of time, in this case 1 year. Carrying out this proof test at least one a year is the condition to comply the ISO13849-1 PLd.

- To activate (give current to) GS1 and GS2 simultaneously and separately to see output is allowed and EDM is conducting

Terminal	Status			
	current OFF	current ON	current OFF	current ON
GS1	current OFF	current ON	current OFF	current ON
GS2	current OFF	current OFF	current ON	current ON
EDM	conducted	not conducted	Not conducted	not conducted
(output)	forbidden	forbidden	forbidden	Allowed

- To activate (give current to) both GS1 and GS2 to see output is allowed and EDM is not conducting
- To activate (give current to) GS1, not to activate GS2 and see output is forbidden and EDM is not conducting
- To activate (give current to) GS2, not to activate GS1 and see output is forbidden and EDM is not conducting
- To deactivate (interrupt current to) both GS1 and GS2 to see output is forbidden and EDM is conducting

Be sure to carry out the proof test when installation is ready before operation.



IF the protection diodes used when the units are in wired parallel are only single diodes then their condition would be checked as part of the proof test. Check to reconfirm that the diodes are not damaged when proof test is done.

## Warning and Precautions

1. To assure, that the Safe Disable function appropriately fulfills the safety requirements of the application, a throughout risk assessment for the whole safety system has to be carried out.
2. The Safe Disable function does not cut the power supply to the drive and does not provide electrical isolation. Before any installation or maintenance work is done, the drives power supply must be switched off and place a tag/lock-out.
3. The wiring distance for the Safe Disable inputs should be shorter than 30 m.
4. The time from opening the Safe Disable input until the drive output is switched off is less than 10 ms.
5. The digital outputs (relay and/or open collector) available on the drive must not be considered as safety related signals. The outputs of the external safety relay must be used for integration into a safety related control/command circuit.
6. Dangerous voltage exists even after the Safe Stop is activated. It does NOT mean that the main power has been removed.



# EC DECLARATION OF CONFORMITY (Copy)

We, Hitachi Industrial Equipment Systems Co., Ltd., of  
1-1, Higashinarashino 7-chome, Narashino-shi, Chiba 275-8611 Japan  
declare under our sole responsibility that:-

the Hitachi Sanki WJ200 series of Inverter Drivers which consists of 27 models ranging from motor capacity 0.1kW to 15kW with the exact designated model numbers for the WJ200 series detailed as follows.

WJ200-(I)(II)(III)(IV)

(I)= 001, 002, 004, 007, 015, 022, 030, 037, 040, 055, 075, 110 or 150

(which stands for the applicable motor capacity in kW)

(II) = S, L or H

(S=single phase 200V power system;

L=3 phases 200V power system,

H=3 phases 400V power system)

(III) = F (product is provided with keypad)

(IV) = blank (These model numbers appear on the respective labels of these drives)

Serial number / (s) / range.....all models having the model code above

conforms to applicable Essential Health and Safety Requirements of the EU Machinery Directive (2006/42/EC) and the Protection Requirements of the EU EMC Directive (2014/30/EU).

The name and address of the person authorized to compile the technical file, established in the Community is:-

Hitachi Europe GmbH

Niederwassler Lohweg 191, 40547 Duesseldorf, Germany.

An EC Type Examination Certificate (Nr. 01/205/5342.02/18) has been issued by Notified Body (0035) under the EU Machinery Directive by TUV Rheinland Industrie Services GmbH of Alboinstr, 58 12103 Berlin Germany.

Harmonised standards used to support this Declaration of Conformity as referred to in Article 7(2), include:-

Harmonised standards forming the basis of conformity for the EU Machinery Directive

IEC61800-5-2:2016

EN ISO 13849-1:2015

EN61800-5-1:2007

EN62061:2005/A2:2015

EN60204-1:2016

Harmonised standards forming the basis of conformity for the EU EMC Directive

EN61800-3:2004/A1:2012

Place and date of the declaration:-

(left blank for DoC on user manual)

Identity and signature of the person empowered to draw up the declaration on behalf of the manufacturer

(left blank for DoC on user manual)

# Additional function For Version 2



In This Chapter...	page
- <b>PM Motor Drive</b> .....	<b>2</b>
- <b>Dynamic Braking related functions</b> .....	<b>15</b>
- <b>Data Read/Write selection</b> .....	<b>16</b>
- <b>Inverter mode selection</b> .....	<b>16</b>
- <b>Thermal detection system Error</b> .....	<b>17</b>
- <b>Modbus Data Listing</b> .....	<b>18</b>
- <b>Drive Parameter Setting Tables</b> .....	<b>48</b>

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.



## PM Motor Drive

### 14.1.1 Limitation

There is a limitation in the PM drive. Please note it.

#### ① About the specification

1. Please use for the application of reduced torque with the starting torque less than 50%. In case of use other than above, or in combination with the motor other than Hitachi standard motor, performance cannot be guaranteed to be sufficient.
2. It is not suitable for at the usage the constant-torque, the rapid acceleration/deceleration and low speed driving. Please never use it for the transportation machine, especially the gravity load usage such as elevators.
3. PM motor cannot be drive by the commercial power source.
4. The motor can drive at load moment of inertia 50 times or less the motor moment of inertia. When over 50 times the motor moment of inertia, you may not be able to obtain adequate motor characteristics.
5. Two or more motors cannot be driven with one inverter.
6. When the DC braking function is used and the inverter trips by over voltage, use a braking resistor.
7. Please let me drive the motor after the brake is released when there is a maintenance brake. The motor may generate out-of-step if timing is not suitable.
8. When starting, the motor may reverse. Please use the initial magnet position estimation function when Trouble is caused when reverse run.
9. When you use the inverter to drive a motor of which the rated current of the motor exceeds the rated current of the inverter, and the capacity is two classes lower than the maximum applicable capacity of the inverter, you may not be able to obtain adequate motor characteristics.
10. Please adjust the motor constant settings to the motor to be driven by the inverter. The motor constant data corresponding to the date of one phase of Y connection.
11. When the motor cable for the long (more than 20m as reference) distance, you may not be able to obtain adequate motor characteristics.
12. Please do not drive the motor that the maximum current of the motor (demagnetization level) falls below about 300% of the rated current of the inverter. The motor may be demagnetization. Degauss (magnetic conditioning).
  - Please note the effective value and the peak value. The rated current of the inverter in the manual is the effective value.
13. Please set carrier frequency (b083) 8.0kHz or higher.
14. Please set electric thermal setting (b012) to the rated current of motor (same as H105).

#### ② About the function

1. When the motor rotating at the speed of 50% or less of the base frequency (A003) is used the restarting with active matching frequency, the motor may restart 0Hz at retry.
2. When use the restarting with active matching frequency, the motor may generate over current trip if the motor direction of the rotation changes in free running.
3. When use the restarting with active matching frequency at 120Hz or more, generated the over current trip.
4. When the motor cable for the long (more than 20m as reference) distance if use the restarting with active matching frequency, the motor may generate over current trip.
  - Please restart after stopping the motor with the DC braking function or the external brake, etc.
5. A part of function cannot be used. Please refer to other material "14.1.2 Invalid functions" for details.

### 14.1.2 Invalid functions

The following functions invalids in the PM drive.

Function	Related code	Limitation method
2nd control	Item of *2**	
	Intelligent input terminal:SET(08)	
	Intelligent output terminal:SETM(60)	
Torque monitor · limit · control	C027,C028	02(Output torque)
	d009,d010,d012,b040~b045,C054~C059,P033,P034,P036~P041	
	Intelligent input terminal:TL(40),TRQ1(41),TRQ2(42),ATR(52)	
	Intelligent output terminal:OTQ(07),TRQ(10)	
Encoder feedback	P003	01(Encoder feedback)
	d008,d029,d030,H050,H051,P004,P011,P012,P015,P026,P027,P060~P073,P075,P077	
	Intelligent input terminal:PCLR(47),CP1(66)~CP3(68),ORL(69),ORG(70),SPD(73),EB(85)	
	Intelligent output terminal:DES(22),POK(23)	
Jog	A038,A039	
	Intelligent input terminal:JG(06)	
IM control	A041~A044,A046,A047,b100~b113,H002~H006,H020~H024,H030~H034	
V/f gain	A045	
AVR	A081,A083,A084	
Automatic energy-saving drive	A085,A086	
Restarting with active matching frequency	b001,b008	04(Restarting with active matching frequency)
	b088,C103	02(Restarting with active matching frequency)
	b028~b030	
Over current suppression	b027	
Reduced voltage start	b036	
Reverse run protection	b046	
Brake control	b120~b127	
	Intelligent input terminal:BOK(44)	
	Intelligent output terminal:BRK(19),BER(20)	
Offline auto-tuning	H001	02(Enable · rotation)
Dual Rating	b049	
Commercial power source switching	Intelligent input terminal:CS(14)	
LAD cancellation	Intelligent input terminal:LAC(46)	

**14.1.3 PM mode switching**



It changes to the PM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 03, and initialization is executed.

■ When using this mode, observe the following precautions.

- ① When 01 is set on the initialization trigger (b180), and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting.
- ② All data will be initialized regardless the setting of b094. b094
- ③ The settings of "P100" to "P131", running-time data, and power-on time data cannot be cleared.
- ④ When display is restricted by the function code display restriction function (b037) or software is locked by the software lock function (b031), you cannot initialize because the function codes of initialization are no-display. If you forget password that restrict setting (b031) and (b037), you cannot cancel it. (So you cannot initialize when software lock is active, you note that the setting password. (See section 7.6.11 the password function.))

Item	Function code	Data or range of data	Description
Inverter mode selection	b171	00	No
		03	PM mode
Initialization trigger	b180	00	No action
		01	Initialize

■ Way to PM mode switching

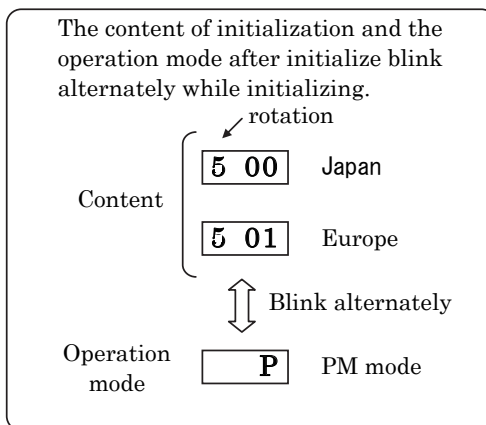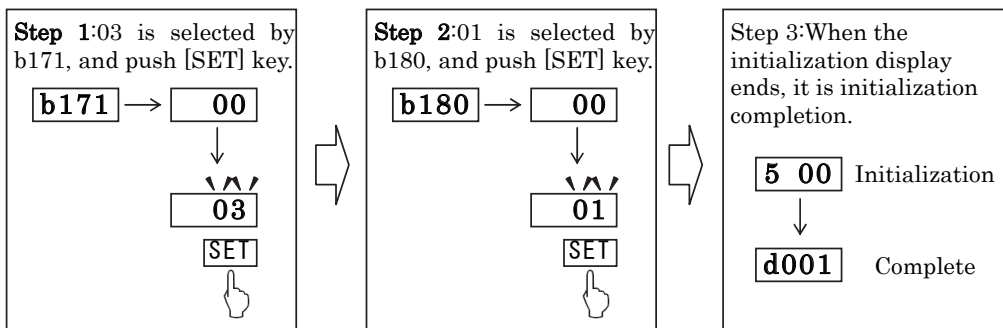

- Note 1: For prevent from initializing by mistake, (b084) and (b180) restore 00 after initialize or Re-power supply. Every time, please set it every time if you initialize.
- Note 2: Even if initialize, the initial data select (b085), the input span calibration (C081, C082), and the thermistor input (PTC) span calibration (C085) don't initialize.
- Note 3: There is not any way to restore the previous parameter setting after initialize.
- Note 4: The parameter is changed by this operation with A081=00, A281=00, C007=04.

## 14.1.4 Motor constants selection

·When PM dive, adjust the motor constant settings to the motor to be driven by the inverter.

·You can select the motor constants from the following three types:

(1) Motor constants of Hitachi standard motor

⇒ When 00 is set on PM motor code setting (H102), motor constants use (H106~H110). Initial values of (H106~H110) are set on motor constants of Hitachi standard motor.

(2) Motor constants tuned by offline auto-tuning

⇒ When 01 is set on PM motor code setting (H102) after the offline auto-tuning allows, motor constants use automatically measure values (H111~H113) and Hitachi standard motor values (H109~H110).

(3) Arbitrarily set motor constants

⇒ In above-mentioned both (1) and (2) cases, motor constants can be changed to the given value. Please change the value of (H106~H113) in the value of (H102).

Item	Function code	Data or range of data	Description
Base frequency (*1)	A003	30.0~Maximum frequency [Hz]	The base frequency of motor is set.
Maximum frequency (*1)	A004	Base frequency~400.0 [Hz]	The max frequency of motor is set.
PM motor code setting	H102	00	Hitachi standard (Use 106~H110 at motor constants)
		01	Auto-Tuning (Use 106~H110 at motor constants)
PM motor capacity (*2)	H103	0.1~18.5 [kW]	The capacity of motor is set.
PM motor pole setting	H104	2/4/6/8/···/48 [pole]	The pole of motor is set.
PM Rated Current	H105	(0.00~1.00) × Rated current of the inverter [A]	The rated current of motor is set.
Motor constants of Hitachi standard motor			Motor constants setting when auto-tuning don't use. The initial values are motor constants of Hitachi standard motor.
PM const R(Resistance)	H106	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H107	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H108	0.01~655.35 [mH]	
PM const Ke(Induction voltage constant) (*3)	H109	0.0001~6.5535 [V/(rad/s)]	
PM const J(Moment of inertia) (*4)	H110	0.001~9999.000 [kgm <sup>2</sup> ]	
Motor constants tuned by offline auto-tuning			Automatically measured motor constants when the offline auto-tuning is executed, and they are set. After auto-tuning, you can be changed to the given value.
PM const R (Resistance)	H111	0.001~65.535 [Ω]	
PM const Ld(d-axis inductance)	H112	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H113	0.01~655.35 [mH]	

\*1 The base frequency (the maximum frequency) calculates to the following by the rated revolution (the maximum revolution) of the motor and motor pole.

$$\text{Base frequency (Maximum frequency) [Hz]} = \frac{\text{Rated revolution (Maximum revolution) [min}^{-1}] \times \text{pole}}{120}$$

- 
- \*2 Please pay attention that settings of H104 to H110, A003 and A004 will be changed automatically, when PM motor capacity (H103) is changed.
  - \*3 PM induction voltage constant  $K_e$  is the peak voltage of one phase of per electrical angle speed (rad/s).
  - \*4 PM moment of inertia  $J$  is value ( $\text{kgm}^2$ ) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor.
-

### **14.1.5 PM offline auto-tuning function**

PM offline auto-tuning automatically measures motor constants necessary for sensorless vector control at special driving pattern different from usually besides driving, and accuracy of vector control is improved. PM induction voltage constant  $K_e$  and PM moment of inertia  $J$  cannot measure because motor don't revolute. Please set the induction voltage constant is the peak voltage of one phase of per electrical angle speed (rad/s), and the moment of inertia is value ( $\text{kgm}^2$ ) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor, by manual.

■ When using this mode, observe the following precautions.

- ① When you use vector control by the motor that doesn't understand constants, please measure motor constants by offline auto-tuning.
- ② The measured motor constant is the data of one phase of Y connection.
- ③ Please use auto-tuning with the motor has stopped. If the motor rotates, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- ④ Adjust the settings of base frequency (A003), maximum frequency (A004), AVR voltage select (A082), PM motor capacity (H103), PM motor pole setting (H104) and PM Rated Current (H105) to the motor specifications before use auto-tuning. When motor of outside set range of these parameters, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- ⑤ This function can properly apply to only the motors in the maximum applicable capacity class of your inverter or one class lower than the capacity class of your inverter. If this function is used for motors with other capacities, correct constant data may not be obtained. (In such cases, the auto-tuning operation may not be completed. If the auto-tuning operation is not completed, press the STOP/RESET key. The operation will end with an error code displayed.)
- ⑥ Specify "00" (disabling) for the DC braking enable. (The default setting is "00".) If "01" (enabling) is specified for the DC braking enable (A051), motor constants cannot be measured by offline auto-tuning.
- ⑦ When the motor cable for the long (more than 20m as reference) distance, correct constant data may not be obtained. Please set the motor cable length parameter (b033) according to the motor cable, and use auto-tuning. (The motor cable length parameter setting is a parameter that corrects the current detection accuracy by the difference of the length of the motor cable. The capacity of inverter of 11kW and 15kW need not be set.)
- ⑧ The motor may rotate slightly during auto-tuning, but this is not abnormal behavior.
- ⑨ The allophone and the vibration may generate during auto-tuning, but this is not abnormal behavior.
- ⑩ Please do not use auto-tuning with the shaft of the motor fixed with external brake etc. Otherwise correct motor constants may not be obtained.
- ⑪ Please use auto-tuning with the load machine attached to the motor. Otherwise right motor constants may not be obtained.

Item	Function code	Data or range of data	Description
Base frequency (*1)	A003	30.0~Maximum frequency [Hz]	The base frequency of motor is set.
Maximum frequency (*1)	A004	Base frequency~400.0 [Hz]	The max frequency of motor is set.
DC braking enable	A051	00	OFF
		01	ON
AVR voltage select	A082	200/215/220/230/240	When 200 V class inverter models.
		380/400/415/440/460/480	When 400 V class inverter models.
Motor cable length parameter	b033	5~20	According to the motor cable
Auto-tuning Setting	H001	00	OFF
		01	ON(STOP)
PM motor code setting	H102	00	Hitachi standard (Use 106~H110 at motor constants)
		01	Auto-Tuning (Use 106~H110 at motor constants)
PM motor capacity (*2)	H103	0.1~18.5 [kW]	The capacity of motor is set.
PM motor pole setting	H104	2/4/6/8/···/48 [pole]	The pole of motor is set.
PM Rated Current	H105	(0.00~1.00)×Rated current of the inverter [A]	The rated current of motor is set.
Motor constants of Hitachi standard motor			Motor constants setting when auto-tuning don't use. The initial values are motor constants of Hitachi standard motor.
PM const R(Resistance)	H106	0.001~65.535 [ $\Omega$ ]	
PM const Ld(d-axis inductance)	H107	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H108	0.01~655.35 [mH]	
PM const Ke(Induction voltage constant) (*3)	H109	0.0001~6.5535 [V/(rad/s)]	
PM const J(Moment of inertia) (*4)	H110	0.001~9999.000 [kgm <sup>2</sup> ]	
Motor constants tuned by offline auto-tuning			Automatically measured motor constants when the offline auto-tuning is executed, and they are set. After auto-tuning, you can be changed to the given value.
PM const R (Resistance)	H111	0.001~65.535 [ $\Omega$ ]	
PM const Ld(d-axis inductance)	H112	0.01~655.35 [mH]	
PM const Lq(q-axis inductance)	H113	0.01~655.35 [mH]	



\*1 The base frequency (the maximum frequency) calculates to the following by the rated revolution (the maximum revolution) of the motor and motor pole.

$$\text{Base frequency (Maximum frequency) [Hz]} = \frac{\text{Rated revolution (Maximum revolution) } [\text{min}^{-1}] \times \text{pole}}{120}$$

\*2 Please pay attention that settings of H104 to H110, A003 and A004 will be changed automatically, when PM motor capacity (H103) is changed.

\*3 PM induction voltage constant  $K_e$  is the peak voltage of one phase of per electrical angle speed (rad/s).

\*4 PM moment of inertia  $J$  is value ( $\text{kgm}^2$ ) that added the moment of inertia of the load machine that converting the moment of inertia into the motor shaft data to the moment of inertia of the motor.

\*5 Even if the auto-tuning has ended normally, you cannot operate the inverter with the tuning data left. If you intend to operate the inverter with the tuning data left, be sure to switch the setting of motor constant selection (H102) to "01".

\*6 If the auto-tuning has ended abnormally, you confirm the motor cable and the parameter setting, and retry it.

\*7 If you cancel the auto-tuning midway with a stop command (by pressing the STOP/RESET key or turning off the operation command), the constants set for auto-tuning may remain in the inverter. Before retrying the auto-tuning, initialize the inverter, and then readjust the settings for the auto-tuning. (Perform the same procedure also when you proceed to the normal inverter operation.)

---

■ Operating procedure

**Step 1:** Set to motor capacity, motor pole and motor current according to the motor.

**H103** Motor  
**H104** Motor pole  
**H105** Motor



**Step 2:** Set to base frequency, maximum frequency and motor voltage according to the motor.

**F003** Base  
**F004** Maximum  
**A082** Motor voltage



**Step 3:** 02 is set to Auto-tuning Setting (H001).

**H001** → **01**  
**SET**



After completing auto-tuning, display of auto-tuning result.

**---** **o** Normal  
**---** **J** Abnormal



Automatic driving begins.



**Step 4:** The operation command is input according to setting the run command source (A002). **RUN**



**Step 5:** After completing auto-tuning, to clear the result display, press the STOP/RESET key.

**STOP**



**Step 6:** Measured motor constants is reflected in driving data.

**H102** → **01**  
**SET**

When the operation command is input, the inverter performs an automatic operation in the following steps:

- (1) Initial Magnet Position Estimation (Motor don't revolution)
- (2) First DC excitation (Motor don't revolution)
- (3) First AC excitation (Motor don't revolution)
- (4) Second AC excitation (Motor don't revolution)
- (5) Display of auto-tuning result

## 14.1.6 PM drive

- This function estimates magnet position of PM by output voltage and current of inverter and setting motor constants, and drive PM.
- Before using this function, be sure to make optimum constant settings for the motor with reference to Section 14.1.4, "Motor constant selection."

Item	Function code	Data or range of data	Description
Level of electric thermal (*1)	b012	$(0.2\sim 1.0) \times$ Rated current of inverter [A]	
Carrier frequency (*2)	b083	2.0~15.0 [kHz]	
PM Speed Response	H116	1~1000 [%]	
PM Starting Current	H117	20.00~100.00 [%]	Current value for starting (100[%]=H105) (*3) (*4)
PM Starting Time	H118	0.01~60.00 [s]	Time of DC current passing for starting
PM Stabilization Constant	H119	0~120 [%]	(*5)
PM Minimum Frequency	H121	0.0~25.5 [%]	Frequency of control switching (100[%]=A003)
PM No-Load Current	H122	0.00~100.00 [%]	Current value for no-load (100[%]=H105)
PM Starting Method Select	H123	00	Normal
		01	Initial Magnet Position Estimation (*6) (*7)
PM Initial Magnet Position Estimation 0V Wait Times	H131	0~255	Number of times of 0V waiting in initial magnet position estimation.
PM Initial Magnet Position Estimation Detect Wait Times	H132	0~255	Number of times until current detecting in initial magnet position estimation.
PM Initial Magnet Position Estimation Detect Times	H133	0~255	Number of times of current detecting in initial magnet position estimation.
PM Initial Magnet Position Estimation Voltage Gain	H134	0~200	Output voltage gain in initial magnet position estimation.

\*1 Please set electric thermal setting (b012) to the rated current of motor (same as H105).

\*2 Please set carrier frequency (b083) 8.0kHz or higher.

\*3 automatically reduces the carrier frequency according to the PM Starting Current setting.

\*4 When too great setting, motor may generate overload trip.

\*5 When too small setting, you may not be able to obtain motor torque, and motor generate impact or generate over current trip near H121 setting.

\*6 The allophone may generate during initial magnet position estimation, but this is not abnormal behavior.

\*7 When use initial magnet position estimation, please start with the motor has stopped. When start with the motor has rotated, motor may rotate greatly or generate out-of-step.

·When using this function, observe the following precautions:

- ① In combination with the motor other than Hitachi standard motor, performance cannot be guaranteed to be sufficient.
- ② If you cannot obtain the desired characteristics from the motor driven under the sensorless vector control, readjust the motor constants according to the symptom, as described in the table below

Operation status	Symptom	Adjustment method	Adjustment item
Starting	Trouble is caused when reverse run.	Enable to the initial magnet position estimation function. - The motor may rotate slightly, but this is not abnormal behavior.	H123
	Generate out-of-step. Generate over current trip.	Increase the starting current. - Note the electronic thermal protection function.	H117
		Increase the starting time.	H118
	Need for early starting.	Enable to the initial magnet position estimation function, and reduce the starting time.	H118,H123
Less than H121 (PM minimum frequency) setting	Motor runs unsteadily.	Increase the starting current - Note the electronic thermal protection function.	H117
	Motor generate hunting.	Reduce the motor constant R step by step from the set value down to 0.7 times as high as the set value.	H106,H111
		Increase the motor constant Ld step by step from the set value up to 1.3 times as high as the set value. Increase the motor constant Lq step by step from the set value up to 1.3 times as high as the set value. - Please adjust to $Ld \leq Lq$ .	H107,H112 H108,H113
Near H121 (PM minimum frequency) setting	Motor generates an impact. Generate over current trip.	Adjust the speed response.	H116
		Adjust the minimum frequency when a load changes.	H121
More than H121 (PM minimum frequency) setting	Motor generate hunting.	Adjust the speed response.	H116
		Increase the no-load current.	H122
		Increase the carrier frequency current if low setting.	b083

Initial magnet position estimating	Need for short time of Initial magnet position estimation	Reduce the PM Initial Magnet Position Estimation 0V Wait Times. - When too small setting, motor may rotate greatly or generate out-of-step.	H131
		Reduce the PM Initial Magnet Position Estimation Detect Wait Times. - When too small setting, motor may rotate greatly or generate out-of-step.	H132
		Reduce the PM Initial Magnet Position Estimation Detect Times. - When too small setting, motor may rotate greatly or generate out-of-step.	H133
	Motor rotates greatly	Increase the PM Initial Magnet Position Estimation 0V Wait Times.	H131
		Increase the PM Initial Magnet Position Estimation Detect Wait Times	H132
		Increase the PM Initial Magnet Position Estimation Detect Times	H133
		Increase the PM Initial Magnet Position Estimation Voltage Gain step by step. - too great setting, may generate over current trip.	H134
	Generate over current trip.	Reduce the PM Initial Magnet Position Estimation Voltage Gain step by step. - When too small setting, motor may rotate greatly or generate out-of-step.	H134

## Dynamic Braking related functions

**Dynamic Braking related functions: b090, b095, b096, b097** – These parameters are for using the internal brake chopper so to get more regeneration torque of the motor.



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access.

“b” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b090</b>	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 s intervals, range is 0.0 to the value calculated by the inverter with b097. If the connected register’s allowable range is narrow than above range, the register’s range is prior. 0%: Function disabled >0%: Enabled, per value	✗	✓	0.0	%
<b>b095</b>	Dynamic braking control (BRD) selection	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable during run only <b>02</b> ...Enable always	✗	✓	00	-
<b>b096</b>	BRD activation level (As DC Voltage)	If DC Voltage > b096, the register consume. regeneration power.  Range is: 330 to 380V (200V class) 660 to 760V (400V class)	✗	✓	360/ 720	V
<b>b097</b>	BRD register	Set the value of the register connected to the inverter. By this setting, b090’s upper limit as the inverter hardware is calculated automatically. So, you can focus the usage ratio as the connected register.  Range is minimum connectable register Rbmin to 600.0[Ω]	✗	✓	Min. Resistance	Ω

## Data Read/Write selection

Setting b166 to “01”, you can inhibit **both** Read, Write function by WOP. This function is different from “software lock function”.



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access.

“b” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b166</b>	Data Read/Write selection	00...Read/Write enable 01...both Read, Write disable	✗	✓	00	–

## Inverter mode selection

- Current mode of the inverter is displayed in d060.
- When initializing or clearing trip history under PM operation mode, please set b084,b085 and b094, which is the same as a normal procedure of initialization, and execute initialization by setting the initialization trigger (b180) to 01. b171 setting is not needed.
- When changing the operation mode from PM mode to IM, same parameters will be used.

It changes to the PM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 03, and initialization is executed.

Oppositely, it changes to the IM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 01, and initialization is executed.

■ When changing inverter mode, observe the following precautions.

- ① The Factory default is IM mode.
- ② When inverter mode changing, b084 setting is not needed.
- ③ When PM mode, “Dual Rating Selection” is only “CT mode”.
- ④ When 01 is set on the initialization trigger (b180), and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting.
- ⑤ All data will be initialized independent of b094.
- ⑥ The settings of "P100" to "P131", running-time data, and power-on time data cannot be cleared.
- ⑦ When display is restricted by the function code display restriction function (b037) or software is locked by the software lock function (b031), you cannot initialize because the function codes of initialization are no-display. If you forget password that restrict setting (b031) and (b037), you cannot cancel it. (So you cannot initialize when software lock is active, you note that the setting password. (See section 7.6.11 the password function.))



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access.

“b” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b171</b>	Inverter mode selection	00...Not change inverter mode 01...IM mode 03...PM mode	✗	✗	00	–
<b>b180</b>	Initialization trigger	00... No action 01... Initialize	✗	✗	00	–

## Thermal detection system Error

Error Code	Name	Cause(s)
<b>E19</b>	Inverter thermal detection system error	When the thermal sensor in the inverter module is not connected.



# Modbus Data Listing

## Modbus Coil List

The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- **Coil Number** - The network *register address offset* for the coil. The coil data is a single bit (binary) value.
- **Name** - The functional name of the coil
- **R/W** - The read-only (R) or read-write (R/W) access permitted to the inverter data
- **Description** - The meaning of each of the states of the coils

Coil No.	Item	R/W	Setting
0000h	unused	-	(Inaccessible)
0001h	Operation command	R/W	1: Run, 0: Stop (valid when A002 = 03)
0002h	Rotation direction command	R/W	1: Reverse rotation, 0: Forward rotation (valid when A002 = 03)
0003h	External trip (EXT)	R/W	1: Trip
0004h	Trip reset (RS)	R/W	1: Reset
0005h	(Reserved)	-	-
0006h	(Reserved)	-	-
0007h	Intelligent input terminal [1]	R/W	1: ON, 0: OFF (*1)
0008h	Intelligent input terminal [2]	R/W	1: ON, 0: OFF (*1)
0009h	Intelligent input terminal [3]	R/W	1: ON, 0: OFF (*1)
000Ah	Intelligent input terminal [4]	R/W	1: ON, 0: OFF (*1)
000Bh	Intelligent input terminal [5]	R/W	1: ON, 0: OFF (*1)
000Ch	Intelligent input terminal [6]	R/W	1: ON, 0: OFF (*1)
000Dh	Intelligent input terminal [7]	R/W	1: ON, 0: OFF (*1)
000Eh	(Reserved)	-	-
000Fh	Operation status	R	1: Run, 0: Stop (interlocked to "d003")
0010h	Rotation direction	R	1: Reverse rotation, 0: Forward rotation (interlocked to "d003")
0011h	Inverter ready	R	1: Ready, 0: Not ready
0012h	(Reserved)	-	-
0013h	RUN (running)	R	1: Tripping, 0: Normal
0014h	FA1 (constant-speed reached)	R	1: ON, 0: OFF
0015h	FA2 (set frequency overreached)	R	1: ON, 0: OFF
0016h	OL (overload advance notice (1))	R	1: ON, 0: OFF
0017h	OD (output deviation for PID control)	R	1: ON, 0: OFF
0018h	AL (alarm signal)	R	1: ON, 0: OFF
0019h	FA3 (set frequency reached)	R	1: ON, 0: OFF
001Ah	OTQ (over-torque)	R	1: ON, 0: OFF
001Bh	(Reserved)	-	-
001Ch	UV (undervoltage)	R	1: ON, 0: OFF
001Dh	TRQ (torque limited)	R	1: ON, 0: OFF
001Eh	RNT (operation time over)	R	1: ON, 0: OFF
001Fh	ONT (plug-in time over)	R	1: ON, 0: OFF
0020h	THM (thermal alarm signal)	R	1: ON, 0: OFF
0021h	(Reserved)	-	-
0022h	(Reserved)	-	-
0023h	(Reserved)	-	-
0024h	(Reserved)	-	-
0025h	(Reserved)	-	-
0026h	BRK (brake release)	R	1: ON, 0: OFF
0027h	BER (brake error)	R	1: ON, 0: OFF
0028h	ZS (0 Hz detection signal)	R	1: ON, 0: OFF
0029h	DSE (speed deviation maximum)	R	1: ON, 0: OFF
002Ah	POK (positioning completed)	R	1: ON, 0: OFF
002Bh	FA4 (set frequency overreached 2)	R	1: ON, 0: OFF
002Ch	FA5 (set frequency reached 2)	R	1: ON, 0: OFF

Coil No.	Item	R/W	Setting
002Dh	OL2 (overload notice advance (2))	R	1: ON, 0: OFF
002Eh	ODc: Analog O disconnection detection	-	1: ON, 0: OFF
002Fh	OIDc: Analog OI disconnection detection	-	1: ON, 0: OFF
0030h	(Reserved)	-	-
0031h	(Reserved)	-	-
0032h	FBV (PID feedback comparison)	R	1: ON, 0: OFF
0033h	NDC (communication train disconnection)	R	1: ON, 0: OFF
0034h	LOG1 (logical operation result 1)	R	1: ON, 0: OFF
0035h	LOG2 (logical operation result 2)	R	1: ON, 0: OFF
0036h	LOG3 (logical operation result 3)	R	1: ON, 0: OFF
0037h	(Reserved)	-	-
0038h	(Reserved)	-	-
0039h	(Reserved)	-	-
003Ah	WAC (capacitor life warning)	R	1: ON, 0: OFF
003Bh	WAF (cooling-fan speed drop)	R	1: ON, 0: OFF
003Ch	FR (starting contact signal)	R	1: ON, 0: OFF
003Dh	OHF (heat sink overheat warning)	R	1: ON, 0: OFF
003Eh	LOC (low-current indication signal)	R	1: ON, 0: OFF
003Fh	M01 (general output 1)	R	1: ON, 0: OFF
0040h	M02 (general output 2)	R	1: ON, 0: OFF
0041h	M03 (general output 3)	R	1: ON, 0: OFF
0042h	(Reserved)	-	-
0043h	(Reserved)	-	-
0044h	(Reserved)	-	-
0045h	IRDY (inverter ready)	R	1: ON, 0: OFF
0046h	FWR (forward rotation)	R	1: ON, 0: OFF
0047h	RVR (reverse rotation)	R	1: ON, 0: OFF
0048h	MJA (major failure)	R	1: ON, 0: OFF
0049h	Data writing in progress	R	1: Writing in progress, 0: Normal status
004Ah	CRC error	R	1: Error detected, 0: No error (*2)
004Bh	Overrun	R	1: Error detected, 0: No error (*2)
004Ch	Framing error	R	1: Error detected, 0: No error (*2)
004Dh	Parity error	R	1: Error detected, 0: No error (*2)
004Eh	Sum check error	R	1: Error detected, 0: No error (*2)
004Fh	(Reserved)	-	-
0050h	WCO (window comparator O)	R	1: ON, 0: OFF
0051h	WCOI (window comparator OI)	R	1: ON, 0: OFF
0052h	(Reserved)	-	-
0053h	OPDc (option disconnection)	R	1: ON, 0: OFF
0054h	FREF (FQ command source)	R	1: Operator, 0: Others
0055h	REF (RUN command source)	R	1: Operator, 0: Others
0056h	SETM (2nd motor selected)	R	1: 2nd motor selected, 0: 1st motor selected
0057h	(Reserved)	-	-
0058h	EDM (Gate suppress monitor)	R	1: ON, 0: OFF
0059h-	unused	R	inaccessible

- \*1 Normally, this coil is turned on when the corresponding intelligent input terminal on the control circuit terminal block is turned on or the coil itself is set to on. In this regard, the operation of the intelligent input terminal has priority over the operation of the coil. If disconnection of the communication train has disabled the master system from turning off the coil, turn the corresponding intelligent input terminal on the control circuit block on and off. This operation turns off the coil.
- \*2 Communication error data is retained until an error reset command is input. (The data can be reset during the inverter operation.)

## Modbus Holding Registers

The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- **Function Code** - The inverter's reference code for the parameter or function (same as inverter keypad display)
- **Name** - The standard functional name of the parameter or function for the inverter
- **R/W** - The read-only(R) or read-write access(R/W) permitted to the data in the inverter
- **Description** - How the parameter or setting works (same as Chapter 3 description).
- **Reg.** - The network *register address offset* for the value. Some values have a high-byte and low-byte address.
- **Range** - The numerical range for the network value that is sent and/or received



**TIP:** The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

- **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0000h	unused	-	-	Inaccessible	
0001h	Frequency source	F001 (high)	R/W	0 to 40000 (valid when A001 = 03)	0.01 [Hz]
0002h		F001 (low)	R/W		
0003h	Inverter status A	-	R	0: Initial status 2: Stopping 3: Running 4: Free-run stop 5: Jogging 6: DC braking 7: Retrying 8: Tripping 9: Undervoltage (UV),	-
0004h	Inverter status B	-	R	0: Stopping, 1: Running, 2: Tripping	-
0005h	Inverter status C	-	R	0: --- 1: Stopping 2: Decelerating 3: Constant-speed operation 4: Accelerating 5: Forward rotation 6: Reverse rotation 7: Switching from fwd. to rev. rotation, 8: Switching from rev. to fwd. rotation, 9: Starting fwd. 10: Starting rev.	-
0006h	PID feedback	-	R/W	0 to 10000	0.01 [%]
0007h to 0010h	(Reserved)	-	R	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0011h	Trip Counter	d080	R	0 to 65530	1 [time]
0012h	Trip info. 1 (factor)	d081	R	See the list of inverter trip factors below	-
0013h	Trip info. 1 (inverter status)			See the list of inverter trip factors below	-
0014h	Trip info. 1 (frequency) (high)			0 to 100000	0.01[Hz]
0015h	Trip info. 1 (frequency) (low)				
0016h	Trip info. 1 (current)			Output current at tripping	0.01[A]
0017h	Trip info. 1 (voltage)			DC input voltage at tripping	1[V]
0018h	Trip info. 1 (running time) (high)			Cumulative running time at tripping	1[h]
0019h	Trip info. 1 (running time) (low)				
001Ah	Trip info. 1 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
001Bh	Trip info. 1 (power-on time) (low)				
001Ch	Trip info. 2 (factor)	d082	R	See the list of inverter trip factors below	-
001Dh	Trip info. 2 (inverter status)			See the list of inverter trip factors below	-
001Eh	Trip info. 2 (frequency) (high)			0 to 100000	0.01[Hz]
001Fh	Trip info. 2 (frequency) (low)				
0020h	Trip info. 2 (current)			Output current at tripping	0.01[A]
0021h	Trip info. 2 (voltage)			DC input voltage at tripping	1[V]
0022h	Trip info. 2 (running time) (high)			Cumulative running time at tripping	1[h]
0023h	Trip info. 2 (running time) (low)				
0024h	Trip info. 2 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0025h	Trip info. 2 (power-on time) (low)				
0026h	Trip info. 3 (factor)	d083	R	See the list of inverter trip factors below	-
0027h	Trip info. 3 (inverter status)			See the list of inverter trip factors below	-
0028h	Trip info. 3 (frequency) (high)			0 to 100000	0.01[Hz]
0029h	Trip info. 3 (frequency) (low)				
002Ah	Trip info. 3 (current)			Output current at tripping	0.01[A]
002Bh	Trip info. 3 (voltage)			DC input voltage at tripping	1[V]
002Ch	Trip info. 3 (running time) (high)			Cumulative running time at tripping	1[h]
002Dh	Trip info. 3 (running time) (low)				
002Eh	Trip info. 3 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
002Fh	Trip info. 3 (power-on time) (low)				
0030h	Trip info. 4 (factor)	d084	R	See the list of inverter trip factors below	-
0031h	Trip info. 4 (inverter status)			See the list of inverter trip factors below	-
0032h	Trip info. 4 (frequency) (high)			0 to 100000	0.01[Hz]
0033h	Trip info. 4 (frequency) (low)				
0034h	Trip info. 4 (current)			Output current at tripping	0.01[A]
0035h	Trip info. 4 (voltage)			DC input voltage at tripping	1[V]
0036h	Trip info. 4 (running time) (high)			Cumulative running time at tripping	1[h]
0037h	Trip info. 4 (running time) (low)				
0038h	Trip info. 4 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0039h	Trip info. 4 (power-on time) (low)				
003Ah	Trip info. 5 (factor)	d085	R	See the list of inverter trip factors below	-
003Bh	Trip info. 5 (inverter status)			See the list of inverter trip factors below	-
003Ch	Trip info. 5 (frequency) (high)			0 to 100000	0.01[Hz]
003Dh	Trip info. 5 (frequency) (low)				
003Eh	Trip info. 5 (current)			Output current at tripping	0.01[A]
003Fh	Trip info. 5 (voltage)			DC input voltage at tripping	1[V]
0040h	Trip info. 5 (running time) (high)			Cumulative running time at tripping	1[h]
0041h	Trip info. 5 (running time) (low)				
0042h	Trip info. 5 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
0043h	Trip info. 5 (power-on time) (low)				
0044h	Trip info. 6 (factor)	d086	R	See the list of inverter trip factors below	-
0045h	Trip info. 6 (inverter status)			See the list of inverter trip factors below	-
0046h	Trip info. 6 (frequency) (high)			0 to 100000	0.01[Hz]
0047h	Trip info. 6 (frequency) (low)				
0048h	Trip info. 6 (current)			Output current at tripping	0.01[A]
0049h	Trip info. 6 (voltage)			DC input voltage at tripping	1[V]
004Ah	Trip info. 6 (running time) (high)			Cumulative running time at tripping	1[h]
004Bh	Trip info. 6 (running time) (low)				
004Ch	Trip info. 6 (power-on time) (high)			Cumulative power-on time at tripping	1[h]
004Dh	Trip info. 6 (power-on time) (low)				

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
004Eh	Programming error monitoring	d090	R	Warning code	-
004Fh to 006Ch	(reserved)	-	-	-	-
006Dh to 08Efh	(reserved)	-	-	-	-
0900h	Writing to EEPROM	-	W	0: Motor constant recalculation 1: Save all data in EEPROM Other: Motor constant recalculation and save all data in EEPROM	-
0901h	Unused	-	-	Inaccessible	-
0902h	EEPROM write mode	-	W	0 (invalid) / 1 (valid)	-
0903h to 1000h	Unused	-	-	Inaccessible	-

Note 1: Assume that the rated current of the inverter is "1000".

Note 2: If a number not less than "1000" (100.0 seconds) is specified, the second value after the decimal point will be ignored.

Note 3: 0902h setting is referred for one time when following 06H command is executed.

## List of inverter trip factors

Upper part of trip factor code (indicating the factor)		Lower part of trip factor code (indicating the inverter status)	
Name	Code	Name	Code
No trip factor	0	Resetting	0
Over-current event while at constant speed	1	Stopping	1
Over-current event during deceleration	2	Decelerating	2
Over-current event during acceleration	3	Constant-speed operation	3
Over-current event during other conditions	4	Accelerating	4
Overload protection	5	Operating at zero frequency	5
Braking resistor overload protection	6	Starting	6
Overvoltage protection	7	DC braking	7
EEPROM error	8	Overload restricted	8
Undervoltage protection	9		
Current detection error	10		
CPU error	11		
External trip	12		
USP error	13		
Ground-fault protection	14		
Input overvoltage protection	15		
Thermistor thermal protection	19		
Inverter thermal trip	21		
CPU error	22		
Main circuit error	25		
Driver error	30		
Thermistor error	35		
Braking error	36		
Safe Stop	37		
Low-speed overload protection	38		
Operator connection	40		
Modbus communication error	41		
Easy sequence error (invalid instruction)	43		
Easy sequence error (invalid nesting count)	44		
Easy sequence execution error 1	45		
Easy sequence user trip 0 to 9	50 to 59		
Option error 0 to 9	60 to 69		
Encoder disconnection	80		
Excessive speed	81		
Position control range trip	83		

## (iii) List of registers (monitoring)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1001h	Output frequency monitor	d001 (high)	R	0 to 40000(100000)	0.01 [Hz]
1002h		d001 (low)			
1003h	Output current monitor	d002	R	0 to 65530	0.1 [A]
1004h	Rotation direction monitoring	d003	R	0: Stopping, 1: Forward rotation, 2: Reverse rotation	0.1 [Hz]
1005h	Process variable (PV), PID feedback monitoring	d004 (high)	R	0 to 1000000	0.1
1006h		d004 (low)			
1007h	Intelligent input terminal status	d005	R	2^0: Terminal 1 to 2^6: Terminal 7	1 bit
1008h	Intelligent output terminal status	d006	R	2^0: Terminal 11 to 2^1: Terminal 12/ 2^2: Relay Terminal	1 bit
1009h	Scaled output frequency monitor	d007 (high)	R	0 to 4000000(10000000)	0.01
100Ah		d007 (low)			
100Bh	Actual-frequency monitor	d008 (high)	R	-100000 to +100000	0.01 [Hz]
100Ch		d008 (low)	R		
100Dh	Torque command monitor	d009	R	-200 to +200	1 [%]
100Eh	Torque bias monitor	d010	R	-200 to +200	1 [%]
100Fh	(Reserved)	-	-	-	-
1010h	Torque monitor	d012	R	-200 to +200	1 [%]
1011h	Output voltage monitor	d013	R	0 to 6000	0.1 [V]
1012h	Power monitor	d014	R	0 to 1000	0.1 [kW]
1013h	Watt-hour monitor	d015 (high)	R	0 to 9999000	0.1
1014h		d015 (low)			
1015h	Elapsed RUN time monitor	d016 (high)	R	0 to 999900	1 [h]
1016h		d016 (low)			
1017h	Elapsed power-on time monitor	d017 (high)	R	0 to 999900	1 [h]
1018h		d017 (low)			
1019h	Heat sink temperature monitor	d018	R	-200 to 1500	0.1 [°C]
101Ah to 101Ch	(Reserved)	-	-	-	-
101Dh	Life-check monitor	d022	R	2^0: Capacitor on main circuit board 2^1: cooling-fan	1 bit
101Eh	EzSQ program counter	d023	R	0~1024	
101Fh	EzSQ program number	d024	R	0~9999	
1020h~1025h	(Reserved)	-	-	-	-
1026h	DC voltage monitoring (across P and N)	d102	R	0 to 10000	0.1 [V]
1027h	BRD load factor monitoring	d103	R	0 to 1000	0.1 [%]
1028h	Electronic thermal overload monitoring	d104	R	0 to 1000	0.1 [%]
1029h to 102Dh	(Reserved)	-	-	-	-
102Eh	User monitor 1	d025(HIGH)	R	-2147483647 to 2147483647	1
102Fh		d025(LOW)	R		
1030h	User monitor 2	d026(HIGH)	R	-2147483647 to 2147483647	1
1031h		d026(LOW)	R		
1032h	User monitor 3	d027(HIGH)	R	-2147483647 to 2147483647	1
1033h		d027(LOW)	R		
1034h to 1035h	(Reserved)	-	-	-	-
1036h	Position setting monitor	d029(HIGH)	R	-268435455 to 268435455	1
1037h		d029(LOW)	R		
1038h	Position feedback monitor	d030(HIGH)	R	-268435455 to 268435455	1
1039h		d030(LOW)	R		
103Ah to 1056h	(reserved)	-	-	-	-
1057h	Inverter mode monitor	d060	R	0(IM CT) 3(PM motor mode) 1(IM VT)	
1058h to 1102h	unused	-	-	Inaccessible	-

## (iv) List of registers

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1103h	Acceleration time (1)	F002 (high)	R/W	1 to 360000	0.01 [s]
1104h		F002 (low)			
1105h	Deceleration time (1)	F003 (high)	R/W	1 to 360000	0.01 [s]
1106h		F003 (low)			
1107h	Keypad Run key routing	F004	R/W	0 (forward rotation), 1 (reverse rotation)	-
1108h to 1200h	Unused	-	-	Inaccessible	-

## (v) List of registers (function modes)

## Parameter group A

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1201h	Frequency source	A001	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
1202h	Run command source (*)	A002	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
1203h	Base frequency	A003	R/W	300 to "maximum frequency"	0.1 [Hz]
1204h	Maximum frequency	A004	R/W	300 to 4000(10000)	0.1 [Hz]
1205h	[AT] selection	A005	R/W	0 (switching between O and OI terminals), 2 (switching between O terminal and keypad potentiometer), 3 (switching between OI terminal and keypad potentiometer)	-
1206h to 120Ah	(Reserved)	-	-	-	-
120Bh	[O] input active range start frequency	A011 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Ch		A011 (low)			
120Dh	[O] input active range end frequency	A012 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Eh		A012 (low)			
120Fh	[O] input active range start voltage	A013	R/W	0 to "[O]-[L] input active range end voltage"	1 [%]
1210h	[O] input active range end voltage	A014	R/W	"[O]-[L] input active range start voltage" to 100	1 [%]
1211h	[O] input start frequency select	A015	R/W	0 (external start frequency), 1 (0 Hz)	-
1212h	Analog input filter.	A016	R/W	1 to 30 or 31 (500 ms filter $\pm 0.1$ Hz with hysteresis)	1
1213h	EzSQ selection	A017	R/W	0 (disabling), 1 (PRG terminal), 2 (Always)	-
1214h	(Reserved)	-	-	-	-
1215h	Multi speed operation selection	A019	R/W	0 (binary), 1 (bit)	-
1216h	Multi-speed freq. 0	A020 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1217h		A020 (low)	R/W		
1218h	Multi-speed freq. 1	A021 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1219h		A021 (low)	R/W		
121Ah	Multi-speed freq. 2	A022 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Bh		A022 (low)	R/W		
121Ch	Multi-speed freq. 3	A023 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Dh		A023 (low)	R/W		
121Eh	Multi-speed freq. 4	A024 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Fh		A024 (low)	R/W		
1220h	Multi-speed freq. 5	A025 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1221h		A025 (low)	R/W		
1222h	Multi-speed freq. 6	A026 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1223h		A026 (low)	R/W		
1224h	Multi-speed freq. 7	A027 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1225h		A027 (low)	R/W		

After changing the setting, keep the time 40ms or longer before actually give run command



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1226h	Multi-speed freq. 8	A028 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1227h		A028 (low)	R/W		
1228h	Multi-speed freq. 9	A029 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1229h		A029 (low)	R/W		
122Ah	Multi-speed freq. 10	A030 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Bh		A030 (low)	R/W		
122Ch	Multi-speed freq. 11	A031 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Dh		A031 (low)	R/W		
122Eh	Multi-speed freq. 12	A032 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Fh		A032 (low)	R/W		
1230h	Multi-speed freq. 13	A033 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1231h		A033 (low)	R/W		
1232h	Multi-speed freq. 14	A034 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1233h		A034 (low)	R/W		
1234h	Multi-speed freq. 15	A035 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1235h		A035 (low)	R/W		
1236h	(Reserved)	-	-	-	-
1237h	(Reserved)	-	-	-	-
1238h	Jog frequency	A038	R/W	0.0, "Start frequency" to 999(10000)	0.01 [Hz]
1239h	Jog stop mode	A039	R/W	0 (free-running after jogging stops [disabled during operation]) 1 (deceleration and stop after jogging stops [disabled during operation]) 2 (DC braking after jogging stops [disabled during operation]) 3 (free-running after jogging stops [enabled during operation]) 4 (deceleration and stop after jogging stops [enabled during operation]) 5 (DC braking after jogging stops [enabled during operation])	-
123Ah	(Reserved)	-	-	-	-
123Bh	Torque boost method selection	A041	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
123Ch	Manual torque boost value	A042	R/W	0 to 200	0.1 [%]
123Dh	Manual torque boost frequency	A043	R/W	0 to 500	0.1 [%]
123Eh	V/f characteristic curve selection, 1st motor	A044	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control),	-
123Fh	V/f gain	A045	R/W	20 to 100	1 [%]
1240h	Voltage compensation gain setting for automatic torque boost, 1st motor	A046	R/W	0 to 255	1 [%]
1241h	Slippage compensation gain setting for automatic torque boost, 1st motor	A047	R/W	0 to 255	1 [%]
1242h to 1244h	(Reserved)	-	-	-	-
1245h	DC braking enable	A051	R/W	0 (disabling), 1 (enabling), 2 (output freq < [A052])	-
1246h	DC braking frequency	A052	R/W	0 to 6000	0.01 [Hz]
1247h	DC braking wait time	A053	R/W	0 to 50	0.1 [s]
1248h	DC braking force during deceleration	A054	R/W	0 to 100	1 [%]
1249h	DC braking time for deceleration	A055	R/W	0 to 600	0.1 [s]
124Ah	DC braking/edge or level detection for [DB] input	A056	R/W	0 (edge operation), 1 (level operation)	-
124Bh	DC braking force for starting	A057	R/W	0 to 100	1 [%]
124Ch	DC braking time for starting	A058	R/W	0 to 600	0.1 [s]
124Dh	DC braking carrier frequency setting	A059	R/W	20 to 150	0.1 [kHz]
124Eh	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
124Fh	Frequency upper limit	A061 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1250h		A061 (low)	R/W		
1251h	Frequency lower limit	A062 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1252h		A062 (low)	R/W		
1253h	Jump freq. (center) 1	A063 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1254h		A063 (low)	R/W		
1255h	Jump freq. width (hysteresis) 1	A064	R/W	0 to 1000(10000)	0.01 [Hz]
1256h	Jump freq. (center) 2	A065 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1257h		A065 (low)	R/W		
1258h	Jump freq. width (hysteresis) 2	A066	R/W	0 to 1000(10000)	0.01 [Hz]
1259h	Jump freq. (center) 3	A067 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
125Ah		A067 (low)	R/W		
125Bh	Jump freq. width (hysteresis) 3	A068	R/W	0 to 1000(10000)	0.01 [Hz]
125Ch	Acceleration hold frequency	A069 (high)	R/W	0 to 40000	0.01 [Hz]
125Dh		A069 (low)	R/W		
125Eh	Acceleration hold time	A070	R/W	0 to 600	0.1 [s]
125Fh	PID Function Enable	A071	R/W	0 (disabling), 1 (enabling), 2 (enabling inverted-data output)	-
1260h	PID proportional gain	A072	R/W	0 to 2500	0.10
1261h	PID integral time constant	A073	R/W	0 to 36000	0.1 [s]
1262h	PID derivative gain	A074	R/W	0 to 10000	0.01 [s]
1263h	PV scale conversion	A075	R/W	1 to 9999	0.01
1264h	PV source	A076	R/W	0 (input via OI), 1 (input via O), 2 (external communication), 3 (pulse train frequency input), 10 (operation result output)	-
1265h	Reverse PID	A077	R/W	00 (disabling), 01 (enabling)	-
1266h	PID output limiter	A078	R/W	0 to 1000	0.1 [%]
1267h	PID feed forward selection	A079	R/W	0 (disabled), 1(O input), 2 (OI input)	-
1268h	(Reserved)	-	R/W	-	-
1269h	AVR function select	A081	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
126Ah	AVR voltage select	A082	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
126Bh	AVR filter time constant	A083	R/W	0.000 to 10.00	0.001[s]
126Ch	AVR deceleration gain	A084	R/W	50 to 200	1[%]
126Dh	Energy-saving operation mode	A085	R/W	0 (normal operation), 1 (energy-saving operation)	-
126Eh	Energy-saving mode tuning	A086	R/W	0 to 1000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
126Fh to 1273h	(Reserved)	-	-	-	-
1274h	Acceleration time (2)	A092 (high)	R/W	1 to 360000	0.01 [s]
1275h		A092 (low)	R/W		
1276h	Deceleration time (2)	A093 (high)	R/W	1 to 360000	0.01 [s]
1277h		A093 (low)	R/W		
1278h	Select method to switch to Acc2/Dec2 profile	A094	R/W	0 (switching by 2CH terminal), 1 (switching by setting) 2 (Forward and reverse)	-
1279h	Acc1 to Acc2 frequency transition point	A095 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ah		A095 (low)	R/W		
127Bh	Dec1 to Dec2 frequency transition point	A096 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ch		A096 (low)	R/W		
127Dh	Acceleration curve selection	A097	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Eh	Deceleration curve setting	A098	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Fh	(Reserved)	-	-	-	-
1280h	(Reserved)	-	-	-	-
1281h	[OI] input active range start frequency	A101 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1282h		A101 (low)	R/W		
1283h	[OI] input active range end frequency	A102 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1284h		A102 (low)	R/W		
1285h	[OI] input active range start current	A103	R/W	0 to "[OI]-[L] input active range end current"	1 [%]
1286h	[OI] input active range end current	A104	R/W	"[OI]-[L] input active range start current" to 100	1 [%]
1287h	[OI] input start frequency select	A105	R/W	0 (external start frequency), 1 (0 Hz)	-
1288h to 12A4h	(Reserved)	-	-	-	-
12A5h	Acceleration curve constant	A131	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A6h	Deceleration curve constant	A132	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A7h to 12AEh	(Reserved)	-	-	-	-
12AFh	Operation-target frequency selection 1	A141	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
12B0h	Operation-target frequency selection 2	A142	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-
12B1h	Operator selection	A143	R/W	0 (addition: A141 + A142), 1 (subtraction: A141 - A142), 2 (multiplication: A141 x A142)	-
12B2h	(Reserved)	-	-	-	-
12B3h	Frequency to be added	A145 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
12B4h		A145 (low)	R/W		
12B5h	Sign of the frequency to be added	A146	R/W	00 (frequency command + A145), 01 (frequency command - A145)	-
12B6h to 12B8h	(Reserved)	-	-	-	-
12B9h	EL-S-curve acceleration/deceleration ratio 1	A150	R/W	0 to 50	1 [%]
12BAh	EL-S-curve acceleration/deceleration ratio 2	A151	R/W	0 to 50	1 [%]
12BBh	EL-S-curve deceleration/deceleration ratio 1	A152	R/W	0 to 50	1 [%]
12BCh	EL-S-curve deceleration/deceleration ratio 2	A153	R/W	0 to 50	1 [%]
12BDh	Deceleration hold frequency	A154 (high)	R/W	0~40000(100000)	0.01 [Hz]
12BEh		A154 (low)			
12BFh	Deceleration hold time	A155	R/W	0~600	0.1 [s]
12C0h	PID sleep function triggering level	A156 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C1h		A156 (low)			
12C2h	PID sleep function action delay time	A157	R/W	0~255	0.1 [s]
12C3h to 12C5h	(Reserved)	-	-	-	-
12C6h	[VR] input active range start frequency	A161 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C7h		A161 (low)			
12C8h	[VR] input active range end frequency	A162 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C9h		A162 (low)			
12CAh	[VR] input active range start %	A163	R/W	0~100	1 [%]
12CBh	[VR] input active range end %	A164	R/W	0~100	1 [%]
12CCh	[VR] input start frequency select	A165	R/W	0(start frequency A161) / 1(0Hz)	-
12CDh to 1300h	unused	-	-	Inaccessible	-

## Parameter group B

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1301h	Restart mode on power failure / under-voltage trip	b001	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
1302h	Allowable under-voltage power failure time	b002	R/W	3 to 250	0.1 [s]
1303h	Retry wait time before motor restart	b003	R/W	3 to 1000	0.1 [s]
1304h	Instantaneous power failure/under-voltage trip alarm enable	b004	R/W	0 (disabling), 1 (enabling), 2 (disabling during stopping and decelerating to stop)	-
1305h	Number of restarts on power failure/under-voltage trip events	b005	R/W	0 (16 times), 1 (unlimited)	-
1306h	(Reserved)	-	-	-	-
1307h	Restart frequency threshold	b007 (high)	R/W	0 to 40000	0.01 [Hz]
1308h		b007 (low)	R/W		
1309h	Restart mode on over voltage / over current	b008	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
130Ah	(Reserved)	-	-	-	-
130Bh	Number of retry on over voltage / over current	b010	R/W	1 to 3	1 [s]
130Ch	Retry wait time on over voltage / over current	b011	R/W	3 to 1000	0.1 [s]
130Dh	Level of electronic thermal	b012	R/W	200 to 1000	0.1 [%]
130Eh	Electronic thermal characteristic	b013	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
130Fh	(Reserved)	-	-	Inaccessible	-
1310h	Free setting, electronic thermal frequency (1)	b015	R/W	0 to 400	1 [Hz]
1311h	Free setting, electronic thermal current (1)	b016	R/W	0 to Rated current	0.1 [A]
1312h	Free setting, electronic thermal frequency (2)	b017	R/W	0 to 400	1 [Hz]
1313h	Free setting, electronic thermal current (2)	b018	R/W	0 to Rated current	0.1 [A]
1314h	Free setting, electronic thermal frequency (3)	b019	R/W	0 to 400	1 [Hz]
1315h	Free setting, electronic thermal current (3)	b020	R/W	0 to Rated current	0.1 [A]
1316h	Overload restriction operation mode	b021	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
1317h	Overload restriction level	b022	R/W	200 to 2000	0.1 [%]
1318h	Deceleration rate at overload restriction	b023	R/W	1 to 30000	0.1 [s]
1319h	Overload restriction operation mode (2)	b024	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
131Ah	Overload restriction level 2	b025	R/W	200 to 2000	0.1 [%]
131Bh	Deceleration rate at overload restriction (2)	b026	R/W	1 to 30000	0.1 [s]
131Ch	Over current suppression enable	b027	R/W	0 (disabling), 1 (enabling)	-
131Dh	Current level of active freq. matching	b028	R/W	100 to 2000	0.1 [%]
131Eh	Deceleration rate of active freq. matching	b029	R/W	1 to 30000	0.1 [s]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
131Fh	Start freq. of active frequency matching	b030	R/W	0 (frequency at the last shutoff), 1 (maximum frequency), 2 (set frequency)	-
1320h	Software lock mode selection	b031	R/W	0 (disabling change of data other than "b031" when SFT is on), 1 (disabling change of data other than "b031" and frequency settings when SFT is on), 2 (disabling change of data other than "b031"), 3 (disabling change of data other than "b031" and frequency settings), 10 (enabling data changes during operation)	-
1321h	(Reserved)	-	-	-	-
1322h	Motor cable length parameter	b033	R/W	5 to 20	-
1323h	Run/power-on warning time	b034 (high)	R/W	0 to 65535	1 [10h]
1324h		b034 (low)	R/W		
1325h	Rotation direction restriction	b035	R/W	0 (Enable for both dir)/ 1 (Enable for forward only)/ 2 (Enable for reverse only)	-
1326h	Reduced voltage start selection	b036	R/W	0 (minimum reduced voltage start time) to 255 (maximum reduced voltage start time)	-
1327h	Function code display restriction	b037	R/W	0 (full display), 1 (function-specific display), 2 (user setting), 3 (data comparison display), 4 (basic display), 5 (monitor display)	-
1328h	Initial display selection	b038	R/W	001-060	-
1329h	Automatic user parameter registration	b039	R/W	0 (disabling), 1 (enabling)	-
132Ah	Torque limit selection	b040	R/W	00 (quadrant-specific setting), 01 (switching by terminal), 02 (analog input)	-
132Bh	Torque limit 1 (fwd-power in 4-quadrant mode)	b041	R/W	0 to 200/255 (no)	1 [%]
132Ch	Torque limit 2 (rev/regen. in 4-quadrant mode)	b042	R/W	0 to 200/255 (no)	1 [%]
132Dh	Torque limit 3 (rev/power in 4-quadrant mode)	b043	R/W	0 to 200/255 (no)	1 [%]
132Eh	Torque limit 4 (fwd/regen. in 4-quadrant mode)	b044	R/W	0 to 200/255 (no)	1 [%]
132Fh	Torque limit LADSTOP enable	b045	R/W	0 (disabling), 1 (enabling)	-
1330h	Reverse Run protection enable	b046	R/W	0 (disabling), 1 (enabling)	-
1331h to 1332h	(Reserved)	-	-	-	-
1333h	Dual Rating Selection	b049	R/W	0(CT mode)/1(VT mode)	-
1334h	Controlled deceleration on power loss	b050	R/W	0 (disabling), 1 (enabling), 2, (nonstop operation at momentary power failure (no restoration)) 3, (nonstop operation at momentary power failure (restoration to be done))	-
1335h	DC bus voltage trigger level of ctrl. decel.	b051	R/W	0 to 10000	0.1 [V]
1336h	Over-voltage threshold of ctrl. decel.	b052	R/W	0 to 10000	0.1 [V]
1337h	Deceleration time of ctrl. decel.	b053 (high)	R/W	0.01 to 36000	0.01 [s]
1338h		b053 (low)	R/W		
1339h	Initial freq. drop of ctrl. decel.	b054	R/W	0 to 1000	0.01 [Hz]
133Ah to 133Eh	(Reserved)	-	-	-	-
133Fh	Maximum-limit level of window comparators O	b060	R/W	0. to 100. (lower limit : b061 + b062 *2) (%)	1 [%]
1340h	Minimum-limit level of window comparators O	b061	R/W	0. to 100. (lower limit : b060 - b062*2) (%)	1 [%]
1341h	Hysteresis width of window comparators O	b062	R/W	0. to 10. (lower limit : b061 - b062 / 2) (%)	1 [%]
1342h	Maximum-limit level of window comparators OI	b063	R/W	0. to 100. (lower limit : b064 + b066 *2) (%)	1 [%]
1343h	Minimum-limit level of window comparators OI	b064	R/W	0. to 100. (lower limit : b063 - b066 *2) (%)	1 [%]
1344h	Hysteresis width of window comparators OI	b065	R/W	0. to 10. (lower limit : b063 - b064 / 2) (%)	1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1345h to 1348h	(Reserved)	-	-	-	-
1349h	Operation level at O disconnection	b070	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Ah	Operation level at Oi disconnection	b071	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Bh to 134Dh	(reserved)	-	-	-	-
134Eh	Ambient temperature	b075	R/W	-10 to 50	1 [°c]
134Fh to 1350	(reserved)	-	-	-	-
1351h	Cumulative input power data clearance	b078	R/W	Clearance by setting "1"	-
1352h	Watt-hour display gain	b079	R/W	1 to 1000	1
1353h to 1354h	(Reserved)	-	-	-	-
1355h	Start frequency	b082	R/W	10 to 999	0.01 [Hz]
1356h	Carrier frequency	b083	R/W	20 to 150	0.1 [kHz]
1357h	Initialization mode (parameters or trip history)	b084	R/W	0,1 (clearing the trip history), 2 (initializing the data), 3 (clearing the trip history and initializing the data), 4 (clearing the trip history and initializing the data and EzSQ program)	-
1358h	Country code for initialization	b085	R/W	0 (area A), 1 (area B)	-
1359h	Frequency scaling conversion factor	b086	R/W	1 to 9999	0.01
135Ah	STOP key enable	b087	R/W	0 (enabling), 1 (disabling), 2 (disabling only stop)	-
135Bh	Restart mode after FRS	b088	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (starting with active matching frequency)	-
135Ch	Automatic carrier frequency reduction	b089	R/W	0(disabling)/1(enabling( output current controlled))/2(enabling( fin temperature controlled))	-
135Dh	Dynamic braking usage ratio	b090	R/W	0 to 1000	0.1 [%]
135Eh	Stop mode selection	b091	R/W	0 (deceleration until stop), 1 (free-run stop)	-
135Fh	Cooling fan control	b092	R/W	0 (always operating the fan), 1 (operating the fan only during inverter operation [including 5 minutes after power-on and power-off]) ,2	-
1360h	Clear elapsed time of cooling fan	b093	R/W	0(count)/1(clear)	-
1361h	Initialization target data	b094	R/W	0 to 3	-
1362h	Dynamic braking control	b095	R/W	0 (disabling), 1 (enabling [disabling while the motor is stopped]), 2 (enabling [enabling also while the motor is stopped])	-
1363h	Dynamic braking activation level	b096	R/W	330 to 380, 660 to 760	1. [V]
1364h	BRD resistor value	b097	R/W	Min.Resistance to 6000	0.1[Ω]
1365h to 1366h	(Reserved)	-	-	-	-
1367h	Free-setting V/f frequency (1)	b100	R/W	0. to "free-setting V/f frequency (2)"	1 [Hz]
1368h	Free-setting V/f voltage (1)	b101	R/W	0. to 8000	0.1 [V]
1369h	Free-setting V/f frequency (2)	b102	R/W	0. to "free-setting V/f frequency (3)"	1 [Hz]
136Ah	Free-setting V/f voltage (2)	b103	R/W	0. to 8000	0.1 [V]
136Bh	Free-setting V/f frequency (3)	b104	R/W	0. to "free-setting V/f frequency (4)"	1 [Hz]
136Ch	Free-setting V/f voltage (3)	b105	R/W	0. to 8000	0.1 [V]
136Dh	Free-setting V/f frequency (4)	b106	R/W	0. to "free-setting V/f frequency (5)"	1 [Hz]
136Eh	Free-setting V/f voltage (4)	b107	R/W	0. to 8000	0.1 [V]
136Fh	Free-setting V/f frequency (5)	b108	R/W	0. to "free-setting V/f frequency (6)"	1 [Hz]
1370h	Free-setting V/f voltage (5)	b109	R/W	0. to 8000	0.1 [V]
1371h	Free-setting V/f frequency (6)	b110	R/W	0. to "free-setting V/f frequency (7)"	1 [Hz]
1372h	Free-setting V/f voltage (6)	b111	R/W	0. to 8000	0.1 [V]
1373h	Free-setting V/f frequency (7)	b112	R/W	0. to 400.	1 [Hz]
1374h	Free-setting V/f voltage (7)	b113	R/W	0. to 8000	0.1 [V]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1375h to 137Ah	(Reserved)	-	-	-	-
137Bh	Brake Control Enable	b120	R/W	0 (disabling), 1 (enabling)	-
137Ch	Brake Wait Time for Release	b121	R/W	0 to 500	0.01 [s]
137Dh	Brake Wait Time for Acceleration	b122	R/W	0 to 500	0.01 [s]
137Eh	Brake Wait Time for Stopping	b123	R/W	0 to 500	0.01 [s]
137Fh	Brake Wait Time for Confirmation	b124	R/W	0 to 500	0.01 [s]
1380h	Brake Release Frequency	b125	R/W	0 to 40000	0.01 [Hz]
1381h	Brake Release Current	b126	R/W	0 to 2000	0.1 [%]
1382h	Braking frequency	b127	R/W	0 to 40000	0.01 [Hz]
1383h	(Reserved)	-	-	-	-
1384h	(Reserved)	-	-	-	-
1385h	Deceleration over voltage suppression enable	b130	R/W	0 (disabling), 1 (enabling), 2 (enabling with acceleration)	-
1386h	Decel. over volt. suppress level	b131	R/W	200 V class: 330 to 390 (V) 400 V class: 660 to 780 (V)	1 [V]
1387h	Decel. over volt. suppress const.	b132	R/W	10 to 3000	0.01 [s]
1388h	Decel. overvolt. suppress proportional gain	b133	R/W	0 to 500	0.01
1389h	Decel. overvolt. suppress Integral time	b134	R/W	0 to 1500	0.1 [s]
138Ah to 1393h	(Reserved)	-	-	-	-
1394h	GS input mode	b145	R/W	0(non Trip) /1(Trip)	-
1395h~1399h	(Reserved)	-	-	-	-
139Ah	Display ex.operator connected	b150	R/W	001 to 060	-
139Bh~13A2h	(Reserved)	-	-	-	-
13A3h	1st parameter of Dual Monitor	b160	R/W	001 to 030	-
13A4h	2nd parameter of Dual Monitor	b161	R/W	001 to 030	-
13A5h	(Reserved)	-	-	-	-
13A6h	Freq. set in monitoring	b163	R/W	0 (disabling), 1 (enabling)	-
13A7h	Automatic return to the initial display	b164	R/W	0 (disabling), 1 (enabling)	-
13A8h	Ex. operator com. loss action	b165	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
13A9h	Data Read/Write select	b166	R/W	0 (Read/Write OK) / 1 (Protected)	-
13AAh~13ADh	(Reserved)	-	-	-	-
13AEh	Inverter mode selection	b171	R/W	0 (disabling), 1 (IM mode), 3 (PM motor mode)	-
13AFh~13B6h	(Reserved)	-	-	-	-
13B7h	Initialization trigger	b180	R/W	0 (disabling), 1 (enabling)	-
13B8h~1400h	unused	-	-	Inaccessible	-



## Parameter group C

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1401h	Input [1] function	C001	R/W	1 (RV: Reverse RUN), 2 (CF1: Multispeed 1 setting), 3 (CF2: Multispeed 2 setting), 4 (CF3: Multispeed 3 setting), 5 (CF4: Multispeed 4 setting), 6 (JG: Jogging), 7 (DB: external DC braking), 8 (SET: Set 2nd motor data), 9 (2CH: 2-stage acceleration/deceleration), 11 (FRS: free-run stop), 12 (EXT: external trip), 13 (USP: unattended start protection), 14: (CS: commercial power source enable), 15 (SFT: software lock), 16 (AT: analog input voltage/current select), 18 (RS: reset), 20 (STA: starting by 3-wire input), 21 (STP: stopping by 3-wire input), 22 (F/R: forward/reverse switching by 3-wire input), 23 (PID: PID disable), 24 (PIDC: PID reset), 27 (UP: remote control UP function), 28 (DWN: remote control DOWN function), 29 (UDC: remote control data clearing), 31 (OPE: forcible operation), 32 (SF1: multispeed bit 1), 33 (SF2: multispeed bit 2), 34 (SF3: multispeed bit 3), 35 (SF4: multispeed bit 4), 36 (SF5: multispeed bit 5), 37 (SF6: multispeed bit 6), 38 (SF7: multispeed bit 7), 39 (OLR: overload restriction selection), 40 (TL: torque limit enable), 41 (TRQ1: torque limit selection bit 1), 42 (TRQ2: torque limit selection bit 2), 44 (BOK: braking confirmation), 46 (LAC: LAD cancellation), 47 (PCLR: clearance of position deviation), 50 (ADD: trigger for frequency addition [A145]), 51 (F-TM: forcible-terminal operation), 52 (ATR: permission of torque command input), 53 (KHC: cumulative power clearance), 56 (MI1: general-purpose input 1), 57 (MI2: general-purpose input 2), 58 (MI3: general-purpose input 3), 59 (MI4: general-purpose input 4), 60 (MI5: general-purpose input 5), 61 (MI6: general-purpose input 6), 62 (MI7: general-purpose input 7), 65 (AHD: analog command holding), 66 (CP1: multistage position settings selection 1), 67 (CP2: multistage position settings selection 2), 68 (CP3: multistage position settings selection 3), 69 (ORL: Zero-return limit function), 70 (ORG: Zero-return trigger function), 73 (SPD: speed / position switching), 77 (GS1: safety input 1), 78 (GS2: safety input 2), 81 (485: EzCOM), 82 (PRG: executing EzSQ program), 83 (HLD: retain output frequency), 84 (ROK: permission of run command), 85 (EB: Rotation direction detection(for V/f with ENC), 86 (DISP: Display limitation), 255 (no: no assignment),	-
1402h	Input [2] function	C002	R/W		-
1403h	Input [3] function	C003	R/W		-
1404h	Input [4] function	C004	R/W		-
1405h	Input [5] function	C005	R/W		-
1406h	Input [6] function	C006	R/W		-
1407h	Input [7] function	C007	R/W		-
1408h to 140Ah	(Reserved)	-	-	Inaccessible	-
140Bh	Input [1] active state	C011	R/W	0 (NO), 1 (NC)	-
140Ch	Input [2] active state	C012	R/W	0 (NO), 1 (NC)	-
140Dh	Input [3] active state	C013	R/W	0 (NO), 1 (NC)	-
140Eh	Input [4] active state	C014	R/W	0 (NO), 1 (NC)	-
140Fh	Input [5] active state	C015	R/W	0 (NO), 1 (NC)	-
1410h	Input [6] active state	C016	R/W	0 (NO), 1 (NC)	-
1411h	Input [7] active state	C017	R/W	0 (NO), 1 (NC)	-
1412h to 1414h	(Reserved)	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1415h	Output [11] function	C021	R/W	0 (RUN: running), 1 (FA1: constant-speed reached), 2 (FA2: set frequency overreached), 3 (OL: overload notice advance signal (1)), 4 (OD: output deviation for PID control), 5 (AL: alarm signal), 6 (FA3: set frequency reached), 7 (OTQ: over-torque), 9 (UV: undervoltage), 10 (TRQ: torque limited), 11 (RNT: operation time over), 12 (ONT: plug-in time over), 13 (THM: thermal alarm signal), 19 (BRK: brake release), 20 (BER: braking error), 21 (ZS: 0 Hz detection signal), 22 (DSE: speed deviation maximum), 23 (POK: positioning completed), 24 (FA4: set frequency overreached 2), 25 (FA5: set frequency reached 2), 26 (OL2: overload notice advance signal (2)), 31 (FBV: PID feedback comparison), 32 (NDC: communication line disconnection), 33 (LOG1: logical operation result 1), 34 (LOG2: logical operation result 2), 35 (LOG3: logical operation result 3), 39 (WAC: capacitor life warning), 40 (WAF: cooling-fan), 41 (FR: starting contact signal), 42 (OHF: heat sink overheat warning), 43 (LOC: low-current indication signal), 44 (M01: general-purpose output 1), 45 (M02: general-purpose output 2), 46 (M03: general-purpose output 3), 50 (IRDY: inverter ready), 51 (FWR: forward rotation), 52 (RVR: reverse rotation), 53 (MJA: major failure), 54 (WCO: window comparator O), 55 (WCO: window comparator Oi), 58(FREF),59(REF),60(SETM),62(EDM),63(OPO:Option)	-
1416h	Output [12] function	C022	R/W		-
1421h to 1423h	(Reserved)	-	-		-
141Ah	Alarm relay function	C026	R/W		-
141Bh	[EO] terminal selection	C027	R/W	0 (output frequency), 1 (output current), 2 (output torque), 3 (digital output frequency), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 8 (digital current monitoring), 10 (heat sink temperature), 12 (general-purpose output YA0),15 ,16(option)	-
141Ch	[AM] terminal selection	C028	R/W	0 (output frequency), 1 (output current), 2 (output torque), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 10 (heat sink temperature), 11 (output torque [signed value]), 13 (general-purpose output YA1),16(option)	-
141Dh	(reserved)	-	-	-	-
141Eh	Digital current monitor reference value	C030	R/W	200 to 2000	0.1 [%]
141Fh	Output [11] active state	C031	R/W	0 (NO), 1 (NC)	-
1420h	Output [12] active state	C032	R/W	0 (NO), 1 (NC)	-
1421h to 1423h	(Reserved)	-	-	-	-
1424h	Alarm relay active state	C036	R/W	0 (NO), 1 (NC)	-
1425h	(Reserved)	-	-	-	-
1426h	Output mode of low current detection	C038	R/W	0 (output during acceleration/deceleration and constant-speed operation), 1 (output only during constant-speed operation)	-
1427h	Low current detection level	C039	R/W	0 to 2000	0.1 [%]
1428h	Overload signal output mode	C040	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1429h	Overload warning level	C041	R/W	0 to 2000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
142Ah	Frequency arrival setting for accel.	C042 (high)	R/W	0 to 40000	0.01 [Hz]
142Bh		C042 (low)	R/W		
142Ch	Frequency arrival setting for decel.	C043 (high)	R/W	0 to 40000	0.01 [Hz]
142Dh		C043 (low)	R/W		
142Eh	PID deviation level	C044	R/W	0 to 1000	0.1 [%]
142Fh	Frequency arrival setting 2 for accel.	C045 (high)	R/W	0 to 40000	0.01 [Hz]
1430h		C045 (low)	R/W		
1431h	Frequency arrival setting 2 for decel.	C046 (high)	R/W	0 to 40000	0.01 [Hz]
1432h		C046 (low)	R/W		
1433h	Pulse train input scale conversion for EO output	C047	R/W	0.01 – 99.99	-
1434h to 1437h	(Reserved)	-	-	-	-
1438h	Maximum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
1439h	Minimum PID feedback data	C053	R/W	0 to 1000	0.1 [%]
143Ah	Over-torque/under-torque selection	C054	R/W	0(Over torque)/1(under torque)	-
143Bh	Over-torque (forward-driving) level setting	C055	R/W	0 to 200	1 [%]
143Ch	Over-torque (reverse regenerating) level setting	C056	R/W	0 to 200	1 [%]
143Dh	Over-torque (reverse driving) level setting	C057	R/W	0 to 200	1 [%]
143Eh	Over-torque (forward regenerating) level setting	C058	R/W	0 to 200	1 [%]
143Fh	Signal output mode of Over/under torque	C059	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1440h	(Reserved)	-	-	-	-
1441h	Electronic thermal warning level	C061	R/W	0 to 100	1 [%]
1442h	(Reserved)	-	-	-	-
1443h	Zero speed detection level	C063	R/W	0 to 10000	0.01 [Hz]
1444h	Heat sink overheat warning level	C064	R/W	0 to 110	1 [°c]
1445h to 144Ah	(Reserved)	-	-	-	-
144Bh	Communication speed	C071	R/W	03(2400bps), 04(4800bps), 05(9600bps), 06(19.2kbps), 07(38.4kbps), 08(57.6kbps), 09(76.8kbps), 10(115.2kbps)	-
144Ch	Modbus address	C072	R/W	1. to 247.	-
144Dh	(Reserved)	-	-	-	-
144Eh	Communication parity	C074	R/W	00 (no parity), 01 (even parity), 02 (odd parity)	-
144Fh	Communication stop bit	C075	R/W	1 (1 bit), 2 (2 bits)	-
1450h	Selection of the operation after communication error	C076	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1451h	Communication timeout limit	C077	R/W	0 to 9999	0.01 [s]
1452h	Communication wait time	C078	R/W	0 to 1000	1 [ms]
1453h to 1454h	(Reserved)	-	-	-	-
1455h	[O] input span calibration	C081	R/W	0 to 2000	0.1
1456h	[OI] input span calibration	C082	R/W	0 to 2000	0.1
1457h to 1458h	(Reserved)	-	-	-	-
1459h	Thermistor input tuning	C085	R/W	0 to 2000	0.1
145Ah to 145Eh	(Reserved)	-	-	-	-
145Fh	Debug mode enable	C091	R	0/1	-
1460h to 1463h	(Reserved)	-	-	-	-
1464h	Communication selection	C096	R/W	0(Modbus-RTU) 1(EzCOM) 2(EzCOM<administrator>)	-
1465h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1466h	EzCOM start adr. of master	C098	R/W	1~8	
1467h	EzCOM end adr. of master	C099	R/W	1~8	
1468h	EzCOM starting trigger	C100	R/W	00(Input terminal), 01(Always)	
1469h	Up/Down memory mode selection	C101	R/W	0 (not storing the frequency data), 1 (storing the frequency data)	-
146Ah	Reset mode selection	C102	R/W	0 (resetting the trip when RS is on), 1 (resetting the trip when RS is off), 2 (enabling resetting only upon tripping [resetting when RS is on]), 3(resetting only trip)	-
146Bh	Restart mode after reset	C103	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (restarting with active matching frequency)	-
146Ch	UP/DWN clear mode	C104	R/W	0 (0Hz)/1 (EEPROM data)	-
146Dh	FM gain adjustment	C105	R/W	50 to 200	1 [%]
146Eh	AM gain adjustment	C106	R/W	50 to 200	1 [%]
146Fh	(Reserved)	-	-	Inaccessible	1 [%]
1471h	AM bias adjustment	C109	R/W	0 to 100	1 [%]
1472h	(Reserved)	-	-	-	1 [%]
1473h	Overload warning level 2	C111	R/W	0 to 2000	0.1 [%]
1474h to 1485h	(Reserved)	-	-	-	-
1486h	Output [11] on-delay time	C130	R/W	0 to 1000	0.1 [s]
1487h	Output [11] off-delay time	C131	R/W	0 to 1000	0.1 [s]
1488h	Output [12] on-delay time	C132	R/W	0 to 1000	0.1 [s]
1489h	Output [12] off-delay time	C133	R/W	0 to 1000	0.1 [s]
148Ah to 148F	(Reserved)	-	-	-	-
1490h	Output RY on-delay time	C140	R/W	0 to 1000	0.1 [s]
1491h	Output RY off-delay time	C141	R/W	0 to 1000	0.1 [s]
1492h	Logic output 1 operand A	C142	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1493h	Logic output 1 operand B	C143	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1494h	Logical output 1 operator	C144	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1495h	Logic output 2 operand A	C145	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1496h	Logic output 2 operand B	C146	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1497h	Logical output 2 operator	C147	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1498h	Logic output 3 operand A	C148	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1499h	Logic output 3 operand B	C149	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
149Ah	Logical output 3 operator	C150	R/W	0 (AND), 1 (OR), 2 (XOR)	-
149Bh to 14A3h	(Reserved)	-	-	-	-
14A4h	Input [1] response time	C160	R/W	0 to 200	
14A5h	Input [2] response time	C161	R/W	0 to 200	
14A6h	Input [3] response time	C162	R/W	0 to 200	
14A7h	Input [4] response time	C163	R/W	0 to 200	
14A8h	Input [5] response time	C164	R/W	0 to 200	
14A9h	Input [6] response time	C165	R/W	0 to 200	
14AAh	Input [7] response time	C166	R/W	0 to 200	
14ABh to 14ACh	(Reserved)	-	-	-	
14ADh	Multistage speed/position determination time	C169	R/W	0 to 200	
14A4h to 1500h	unused	-	-	Inaccessible	-

## Parameter group H

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1501h	Auto-tuning Setting	H001	R/W	0 (disabling auto-tuning), 1 (auto-tuning without rotation), 2 (auto-tuning with rotation)	-
1502h	Motor data selection, 1st motor	H002	R/W	0 (Hitachi standard data), 2 (auto-tuned data)	-
1503h	Motor capacity, 1st motor	H003	R/W	00(0.1kW)- 15 (18.5kW)	-
1504h	Motor poles setting, 1st motor	H004	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
1505h	(Reserved)	-	-	-	-
1506h	Motor speed constant, 1st motor	H005	R/W	0 to 1000	1[%]
1508h~1514h	(Reserved)	-	-	-	-
1516h	Motor stabilization constant, 1st motor	H006	R/W	0 to 255	1
1517h	(Reserved)	-	-	-	-
1516h	Motor constant R1, 1st motor	H020	R/W	1 to 65530	0.001 [Ω]
1517h	(Reserved)	-	-	-	-
1518h	Motor constant R2, 1st motor	H021	R/W	1 to 65530	0.001 [Ω]
1519h	(Reserved)	-	-	-	-
151Ah	Motor constant L, 1st motor	H022	R/W	1 to 65530	0.01 [mH]
151Bh	(Reserved)	-	-	-	-
151Ch	Motor constant I <sub>o</sub>	H023	R/W	1 to 65530	0.01 [A]
151Dh	Motor constant J	H024 (high)	R/W	1 to 9999000	0.001
151Eh		H024 (low)	R/W		
151Hf~1524h	(Reserved)	-	-	-	-
1525h	Auto constant R1, 1st motor	H030	R/W	1 to 65530	0.001 [Ω]
1526h	(Reserved)	-	-	Inaccessible	-
1527h	Auto constant R2, 1st motor	H031	R/W	1 to 65530	0.001 [Ω]
1528h	(Reserved)	-	-	-	-
1529h	Auto constant L, 1st motor	H032	R/W	1 to 65530	0.01 [mH]
152Ah	(Reserved)	-	-	Inaccessible	-
152Bh	Auto constant I <sub>o</sub> , 1st motor	H033	R/W	1 to 65530	0.01 [A]
152Ch	Auto constant J, 1st motor	H034 (high)	R/W	1 to 9999000	0.001
152Dh		H034 (low)	R/W		
152Eh~153Ch	(Reserved)	-	-	-	-
153Dh	Slip compensation P gain for V/f control with FB	H050	R/W	0 to 10000	0.1
153Eh	Slip compensation P gain for V/f control with FB	H051	R/W	0 to 10000	1
153Fh~1600h	unused	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1571h	PM motor code setting	H102	R/W	00 (Hitachi standard data)/ 01 (auto-tuned data)	-
1572h	PM motor capacity	H103	R/W	0(0.1) 4(0.75) 8(3.0) 12(7.5) 1(0.2) 5(1.1) 9(3.7) 13(11.0) 2(0.4) 6(1.5) 10(4.0) 14(15.0) 3(0.55) 7(2.2) 11(5.5) 15(18.5)	-
1573h	PM motor pole setting	H104	R/W	0(2P) 6(14P) 12(26P) 18(38P) 1(4P) 7(16P) 13(28P) 19(40P) 2(6P) 8(18P) 14(30P) 20(42P) 3(8P) 9(20P) 15(32P) 21(44P) 4(10P) 10(22P) 16(34P) 22(46P) 5(12P) 11(24P) 17(36P) 23(48P)	-
1574h	PM Rated Current	H105	R/W	0~1000	0.1[%]
1575h	PM const R(Resistance)	H106	R/W	1 to 65535	0.001[Ω]
1576h	PM const Ld(d-axis inductance)	H107	R/W	1 to 65535	0.01[mH]
1577h	PM const Lq(q-axis inductance)	H108	R/W	1 to 65535	0.01[mH]
1578h	PM const Ke(Induction voltage constant)	H109	R/W	1 to 65535	0.0001 [V/(rad/s)]
1579h	PM const J(Moment of inertia)	H110	R/W	1 to 9999000	0.001 [kgm <sup>2</sup> ]
157Ah	(Reserved)	-	-	-	-
157Bh	PM const R (Resistance)	H111	R/W	1 to 65535	0.001[Ω]
157Ch	PM const Ld(d-axis inductance)	H112	R/W	1 to 65535	0.01[mH]
157Dh	PM const Lq(q-axis inductance)	H113	R/W	1 to 65535	0.01[mH]
157Eh	(Reserved)	-	-	-	-
157Fh	(Reserved)	-	-	-	-
1580h	(Reserved)	-	-	-	-
1581h	PM Speed Response	H116	R/W	1 to 1000	1[%]
1582h	PM Starting Current	H117	R/W	2000 to 10000	0.01[%]
1583h	PM Starting Time	H118	R/W	1 to 6000	0.01[s]
1584h	PM Stabilization Constant	H119	R/W	0 to 120	1[%]
1585h	(Reserved)	-	-	-	-
1586h	PM Minimum Frequency	H121	R/W	0 to 255	0.1[%]
1587h	PM No-Load Current	H122	R/W	0 to 10000	0.01[%]
1588h	PM Starting Method Select	H123	R/W	00 (disabling)/ 01 (enabling)	-
1589h	(Reserved)	-	-	-	-
158Ah	PM Initial Magnet Position Estimation 0V Wait Times	H131	R/W	0 to 255	1
158Bh	PM Initial Magnet Position Estimation Detect Wait Times	H132	R/W	0 to 255	1
158Ch	PM Initial Magnet Position Estimation Detect Times	H133	R/W	0 to 255	1
158Dh	PM Initial Magnet Position Estimation Voltage Gain	H134	R/W	0 to 200	1
158Eh~1600h	Unused	-	-	-	-

## Parameter group P

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1601h	Operation mode on expansion card 1 error	P001	R/W	0 (tripping), 1 (continuing operation)	-
1602h	(Reserved)	-	-	-	-
1603h	[EA] terminal selection	P003	R/W	00 (Speed reference, incl. PID) 01 (Encoder feedback) 02 (Extended terminal for EzSQ)	
1604h	Pulse train input mode for feedback	P004	R/W	00 (Single-phase pulse [EA]) 01 (2-phase pulse [90° difference] 1 ([EA] and [EB])) 02 (2-phase pulse [90° difference] 2 ([EA] and [EB])) 03 (Single-phase pulse [EA] and direction signal [EB])	
1605h to 160Ah	(Reserved)	-	-	-	-
160Bh	Encoder pulse-per-revolution (PPR) setting	P011	R/W	32 to 1024	1
160Ch	Simple positioning selection	P012	R/W	00 (simple positioning deactivated) 02 (simple positioning activated)	-
160Dh to 160Eh	(Reserved)	-	-	-	-
160Fh	Creep speed	P015	R/W	"start frequency" to 1000	0.01 [Hz]
1610h to 1619h	(Reserved)	-	-	-	-
161Ah	Over-speed error detection level	P026	R/W	0 to 1500	0.1 [%]
161Bh	Speed deviation error detection level	P027	R/W	0 to 12000	0.01 [Hz]
161Ch to 161Eh	(Reserved)	-	-	-	-
161Fh	Accel/decel time input selection	P031	R/W	0 (digital operator), 3 (easy sequence)	-
1620h	(Reserved)	-	-	-	-
1621h	Torque command input selection	P033	R/W	0 (O terminal), 1 (OI terminal), 3 (digital operator), 06 (Option)	-
1622h	Torque command setting	P034	R/W	0 to 200	1 [%]
1623h	(Reserved)	-	-	-	-
1624h	Torque bias mode	P036	R/W	0 (disabling the mode), 1 (digital operator),	-
1625h	Torque bias value	P037	R/W	-200 to +200	1 [%]
1626h	Torque bias polarity selection	P038	R/W	0 (as indicated by the sign), 1 (depending on the operation direction), 05(Option)	-
1627h	Speed limit for torque-controlled operation (forward rotation)	P039 (high)	R/W	0 to 12000	0.01 [Hz]
1628h		P039 (low)	R/W		
1629h	Speed limit for torque-controlled operation (reverse rotation)	P040 (high)	R/W	0 to 12000	0.01 [Hz]
162Ah		P040 (low)	R/W		
162Bh	Speed / torque control switching time	P041	R/W	0 to 1000	-
162Ch to 162Dh	(Reserved)	-	-	-	-
162Eh	Communication watchdog timer	P044	R/W	0 to 9999	0.01 [s]
162Fh	Inverter action on communication error	P045	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1630h	DeviceNet polled I/O: Output instance number	P046	R/W	0-20	-
1631h	(Reserved)	-	-	-	-
1632h	Inverter action on communication idle mode	P048	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1633h	Motor poles setting for RPM	P049	R/W	0 (0 pole), 1 (2 poles), 2 (4 poles), 3 (6 poles), 4 (8 poles), 5 (10 poles), 6 (12 poles), 7 (14 poles), 8 (16 poles), 9 (18 poles), 10 (20 poles), 11 (22 poles), 12 (24poles), 13 (26 poles), 14 (28 poles), 15 (30 poles), 16 (32 poles), 17 (34 poles), 18 (36 poles), 19 (38 poles), 20 (40 poles), 21 (42 poles), 22 (44poles), 23 (46 poles), 24 (48 poles)	-
1634h to 1638h	(Reserved)	-	-	-	-
1639h	Pulse train frequency scale	P055	R/W	10 to 320 (input frequency corresponding to the allowable maximum frequency)	0.1 [kHz]
163Ah	Time constant of pulse train frequency filter	P056	R/W	1 to 200	0.01 [s]
163Bh	Pulse train frequency bias	P057	R/W	-100 to +100	1 [%]
163Ch	Pulse train frequency limit	P058	R/W	0 to 100	1 [%]
163Dh	(Reserved)	-	-	-	-
163Eh	Multistage position 0	P060(HIGH)	R/W		1
163Fh		P060(LOW)	R/W		
1640h	Multistage position 1	P061(HIGH)	R/W		1
1641h		P061(LOW)	R/W		
1642h	Multistage position 2	P062(HIGH)	R/W		1
1643h		P062(LOW)	R/W		
1644h	Multistage position 3	P063(HIGH)	R/W		1
1645h		P063(LOW)	R/W		
1646h	Multistage position 4	P064(HIGH)	R/W		1
1647h		P064(LOW)	R/W		
1648h	Multistage position 5	P065(HIGH)	R/W		1
1649h		P065(LOW)	R/W		
164Ah	Multistage position 6	P066(HIGH)	R/W		1
164Bh		P066(LOW)	R/W		
164Ch	Multistage position 7	P067(HIGH)	R/W		1
164Dh		P067(LOW)	R/W		
164Eh	Homing mode selection	P068	R/W	0(Low) / 1(High)	
164Fh	Homing direction	P069	R/W	0(FW) / 1(RV)	
1650h	Low-speed homing frequency	P070	R/W	0 to 1000	
1651h	High-speed homing frequency	P071	R/W	0 to 40000	
1652h	Position range (forward)	P072(HIGH)	R/W	0 to 268435455	1
1653h		P072(LOW)	R/W		
1654h	Position range (reverse)	P073(HIGH)	R/W	-268435455 to 0	1
1655h		P073(LOW)	R/W		
1656h	(Reserved),	-	-	-	-
1657h	Positioning mode	P075	R/W	00...With limitation 01...No limitation (fastest control)	
1658h	(Reserved),	-	-	-	-
1659h	Encoder disconnection timeout	P077	R/W	0 to 100	0.1[s]
165Ah to 1665h	(Reserved),	-	-	-	-
1656h to 1665h	(Reserved)	-	-	-	-



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1666h	EzSQ user parameter U (00)	P100	R/W	0 to 65530	1
1667h	EzSQ user parameter U (01)	P101	R/W	0 to 65530	1
1668h	EzSQ user parameter U (02)	P102	R/W	0 to 65530	1
1669h	EzSQ user parameter U (03)	P103	R/W	0 to 65530	1
166Ah	EzSQ user parameter U (04)	P104	R/W	0 to 65530	1
166Bh	EzSQ user parameter U (05)	P105	R/W	0 to 65530	1
166Ch	EzSQ user parameter U (06)	P106	R/W	0 to 65530	1
166Dh	EzSQ user parameter U (07)	P107	R/W	0 to 65530	1
166Eh	EzSQ user parameter U (08)	P108	R/W	0 to 65530	1
166Fh	EzSQ user parameter U (09)	P109	R/W	0 to 65530	1
1670h	EzSQ user parameter U (10)	P110	R/W	0 to 65530	1
1671h	EzSQ user parameter U (11)	P111	R/W	0 to 65530	1
1672h	EzSQ user parameter U (12)	P112	R/W	0 to 65530	1
1673h	EzSQ user parameter U (13)	P113	R/W	0 to 65530	1
1674h	EzSQ user parameter U (14)	P114	R/W	0 to 65530	1
1675h	EzSQ user parameter U (15)	P115	R/W	0 to 65530	1
1676h	EzSQ user parameter U (16)	P116	R/W	0 to 65530	1
1677h	EzSQ user parameter U (17)	P117	R/W	0 to 65530	1
1678h	EzSQ user parameter U (18)	P118	R/W	0 to 65530	1
1679h	EzSQ user parameter U (19)	P119	R/W	0 to 65530	1
167Ah	EzSQ user parameter U (20)	P120	R/W	0 to 65530	1
167Bh	EzSQ user parameter U (21)	P121	R/W	0 to 65530	1
167Ch	EzSQ user parameter U (22)	P122	R/W	0 to 65530	1
167Dh	EzSQ user parameter U (23)	P123	R/W	0 to 65530	1
167Eh	EzSQ user parameter U (24)	P124	R/W	0 to 65530	1
167Fh	EzSQ user parameter U (25)	P125	R/W	0 to 65530	1
1680h	EzSQ user parameter U (26)	P126	R/W	0 to 65530	
1681h	EzSQ user parameter U (27)	P127	R/W	0 to 65530	
1682h	EzSQ user parameter U (28)	P128	R/W	0 to 65530	1
1683h	EzSQ user parameter U (29)	P129	R/W	0 to 65530	1
1684h	EzSQ user parameter U (30)	P130	R/W	0 to 65530	1
1685h	EzSQ user parameter U (31)	P131	R/W	0 to 65530	1
1686h to 168Dh	(Reserved),	-	-	-	-
168Eh	EzCOM number of data	P140	R/W	1 to 5	
168Fh	EzCOM destination 1 address	P141	R/W	1 to 247	
1690h	EzCOM destination 1 register	P142	R/W	0000 to FFFF	
1691h	EzCOM source 1 register	P143	R/W	0000 to FFFF	
1692h	EzCOM destination 2 address	P144	R/W	1 to 247	
1693h	EzCOM destination 2 register	P145	R/W	0000 to FFFF	
1694h	EzCOM source 2 register	P146	R/W	0000 to FFFF	
1695h	EzCOM destination 3 address	P147	R/W	1 to 247	
1696h	EzCOM destination 3 register	P148	R/W	0000 to FFFF	
1697h	EzCOM source 3 register	P149	R/W	0000 to FFFF	
1698h	EzCOM destination 4 address	P150	R/W	1 to 247	
1699h	EzCOM destination 4 register	P151	R/W	0000 to FFFF	
169Ah	EzCOM source 4 register	P152	R/W	0000 to FFFF	
169Bh	EzCOM destination 5 address	P153	R/W	1 to 247	
169Ch	EzCOM destination 5 register	P154	R/W	0000 to FFFF	
169Dh	EzCOM source 5 register	P155	R/W	0000 to FFFF	
169Eh~16A1h	(Reserved),	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
16A2h	Option I/F command register to write 1	P160	R/W	0000 to FFFF	-
16A3h	Option I/F command register to write 2	P161	R/W	0000 to FFFF	-
16A4h	Option I/F command register to write 3	P162	R/W	0000 to FFFF	-
16A5h	Option I/F command register to write 4	P163	R/W	0000 to FFFF	-
16A6h	Option I/F command register to write 5	P164	R/W	0000 to FFFF	-
16A7h	Option I/F command register to write 6	P165	R/W	0000 to FFFF	-
16A8h	Option I/F command register to write 7	P166	R/W	0000 to FFFF	-
16A9h	Option I/F command register to write 8	P167	R/W	0000 to FFFF	-
16AAh	Option I/F command register to write 9	P168	R/W	0000 to FFFF	-
16ABh	Option I/F command register to write 10	P169	R/W	0000 to FFFF	-
16ACh	Option I/F command register to read 1	P170	R/W	0000 to FFFF	-
16ADh	Option I/F command register to read 2	P171	R/W	0000 to FFFF	-
16AEh	Option I/F command register to read 3	P172	R/W	0000 to FFFF	-
16AFh	Option I/F command register to read 4	P173	R/W	0000 to FFFF	-
16B0h	Option I/F command register to read 5	P174	R/W	0000 to FFFF	-
16B1h	Option I/F command register to read 6	P175	R/W	0000 to FFFF	-
16B2h	Option I/F command register to read 7	P176	R/W	0000 to FFFF	-
16B3h	Option I/F command register to read 8	P177	R/W	0000 to FFFF	-
16B4h	Option I/F command register to read 9	P178	R/W	0000 to FFFF	-
16B5h	Option I/F command register to read 10	P179	R/W	0000 to FFFF	-
16B6h	Profibus Node address	P180	R/W	0 to 125	-
16B7h	Profibus Clear Node address	P181	R/W	0(clear)/1(not clear)	-
16B8h	Profibus Map selection	P182	R/W	0(PPO)/1(Converntional) )/ 2 (Flexible Mode Format Selection)	-
16B9h to 16BAh	(Reserved),	-	-	-	-
16BBh	CANopen Node address	P185	R/W	0 to 127	-
16BCh	CAN open communication speed	P186	R/W	0 (automatic)    5 (250kbps) 1 (10kbps)        6 (500kbps) 2 (20kbps)        7 (800kbps) 3 (50kbps)        8 (1Mbps) 4 (125kbps)	-
16BDh~16BFh	(Reserved),	-	-	-	-
16C0h	CompoNet Node address	P190	R/W	00 to 63	1
16C1h	(Reserved),	-	-	-	-
16C2h	DeviceNet MAC ID	P192	R/W	00 to 63	1
16C3h	(Reserved)	-	-	-	-
16C4h	(Reserved)	-	-	-	-
16C5h	ML2 frame length	P195	R/W	0(32bytes) / 1(17bytes)	1
16C6h	ML2 Node address	P196	R/W	21h to 3Eh	1
16C7h to 1E00h	Unused	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1E02h	Coil data 2	-	R/W	2 <sup>0</sup> : coil number 0020h – 2 <sup>15</sup> : coil number 002Fh -	-
1E03h	Coil data 3	-	R/W	2 <sup>0</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1E04h	Coil data 4	-	R/W	2 <sup>0</sup> : coil number 0030h – 2 <sup>15</sup> : coil number 003Fh -	-
1E05h	Coil data 5	-	R/W	2 <sup>0</sup> : coil number 0040h – 2 <sup>15</sup> : coil number 004Fh -	-
1E06h to 1F18h	(reserved)	-	-	-	-
1E19h to 1F00h	Unused	-	-	-	-
1F01h	Coil data 0	-	R/W	2 <sup>0</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1F02h to 1F1Dh	(reserved)	-	-	(note: 2)	-
1F1Eh to 2102h	Unused	-	-	Inaccessible	-

Note 1: above register (coil data 0 to 5) is consisted with 16 coil data. EzCOM communication (inverter to inverter) doesn't support coil, but only register is supporte, in case of need to access coil, please use above registers.

Note 2: Be sure not to write into above 1F02h to 1F1Dh.

## (vi) List of registers (2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2103h	Acceleration time (1), 2nd motor	F202 (high)	R/W	1 to 360000	0.01 [s]
2104h		F202 (low)	R/W		
2105h	Deceleration time (1), 2nd motor	F203 (high)	R/W	1 to 360000	0.01 [s]
2106h		F203 (low)	R/W		
2107h to 2200h	unused	-	-	Inaccessible	-

## (vii) List of registers (function modes for the 2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2201h	Frequency source, 2nd motor	A201	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
2202h	Frequency source, 2nd motor	A202	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
2203h	Base frequency, 2nd motor	A203	R/W	300 to "maximum frequency, 2nd motor"	0.1 [Hz]
2204h	Maximum frequency, 2nd motor	A204	R/W	300 to 4000	0.1 [Hz]
2205h to 2215h	(Reserved)	-	-	Inaccessible	-
2216h	Multispeed frequency setting, 2nd motor	A220 (high)	R/W	0 or "start frequency" to "maximum frequency, 2nd motor"	0.01 [Hz]
2217h		A220 (low)	R/W		
2218h to 223Ah	(Reserved)	-	-	Inaccessible	-
223Bh	Torque boost method selection, 2nd motor	A241	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
223Ch	Manual torque boost value, 2nd motor	A242	R/W	20 to 200	1 [%]
223Dh	Manual torque boost frequency, 2nd motor	A243	R/W	0 to 255	1 [%]
223Eh	V/f characteristic curve selection, 2nd motor	A244	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control)	-
223Fh	V/f gain, 2nd motor	A245	R/W	20 to 100	1 [%]
2240h	Voltage compensation gain setting for automatic torque boost, 2nd motor	A246	R/W	0 to 255	1
2241h	Slippage compensation gain setting for automatic torque boost, 2nd motor	A247	R/W	0 to 255	1
2242h to 224Eh	(Reserved)	-	-	Inaccessible	-
224Fh	Frequency upper limit, 2nd motor	A261 (high)	R/W	00 or "2nd minimum frequency limit" to "maximum frequency, 2nd motor"	0.01 [Hz]
2250h		A261 (low)	R/W		
2251h	Frequency lower limit, 2nd motor	A262 (high)	R/W	00 or "start frequency" to "maximum frequency, 2nd motor limit"	0.01 [Hz]
2252h		A262 (low)	R/W		
2253h to 2268h	(Reserved)	-	-	Inaccessible	-
2269h	AVR function select, 2nd motor	A281	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
226Ah	AVR voltage select, 2nd motor	A282	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
226Bh to 226Eh	(Reserved)	-	-	Inaccessible	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
226Fh	Acceleration time (2), 2nd motor	A292 (high)	R/W	1 to 360000	0.01 [s]
2270h		A292 (low)	R/W		
2271h	Deceleration time (2), 2nd motor	A293 (high)	R/W	1 to 360000	0.01 [s]
2272h		A293 (low)	R/W		
2273h	Select method to switch to Acc2/Dec2, 2nd motor	A294	R/W	0 (switching by 2CH terminal), 1 (switching by setting), 2 (switching only when the rotation is reversed)	-
2274h	Acc1 to Acc2 frequency transition point, 2nd motor	A295 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2275h		A295 (low)	R/W		
2276h	Dec1 to Dec2 frequency transition point, 2nd motor	A296 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2277h		A296 (low)	R/W		
2278h to 230Bh	(Reserved)	-	-	-	-
230Ch	Level of electronic thermal, 2nd motor	b212	R/W	200 to 1000	0.1 [%]
230Dh	Electronic thermal characteristic, 2nd motor	b213	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
230Eh to 2315h	(Reserved)	-	-	-	-
2316h	Overload restriction operation mode, 2nd motor	b221	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
2317h	Overload restriction level, 2nd motor	b222	R/W	100 to 2000	0.1[%]
2318h	Deceleration rate at overload restriction, 2nd motor	b223	R/W	1 to 30000	0.1[s]
2319h to 2428h	unused	-	-	Inaccessible	-
2429h	Overload warning level 2, 2nd motor	C241	R/W	0 to 2000	0.1[%]
242Ah to 2501h	Unused	-	-	Inaccessible	-
2502h	Motor data selection, 2nd motor	H202	R/W	0 (Hitachi standard data), 2 (auto-tuned data),	-
2503h	Motor capacity, 2nd motor	H203	R/W	00(0.1kW)- 15 (18.5kW)	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2504h	Motor poles setting, 2nd motor	H204	R/W	0 (2 poles), 1 (4 poles), 2 (6 poles), 3 (8 poles), 4 (10 poles)	-
2505h	Motor speed constant, 2nd motor	H205 (high)	R/W	1 to 1000	0.001
2506h		H205 (low)	R/W		
2507h	Motor stabilization constant, 2nd motor	H206	R/W	0 to 255	1
2508h to 2515h	(Reserved)	-	-	-	-
2516h	Motor constant R1, 2nd motor	H220 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2517h	(Reserved)	-	-	-	-
2518h	Motor constant R2, 2nd motor	H221 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2519h	(Reserved)	-	-	-	-
251Ah	Motor constant L, 2nd motor	H222 (high)	R/W	1 to 65535	0.01 [mH]
251Bh	(Reserved)	-	-	-	-
251Ch	Motor constant lo, 2nd motor	H223 (high)	R/W	1 to 65535	0.01 [A]
251Dh	Motor constant J, 2nd motor	H224 (high)	R/W	1 to 9999000	0.001
251Eh		H224 (low)	R/W		
251Fh to 2524h	(Reserved)	-	-	-	-
2525h	Auto constant R1, 2nd motor	H230 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2526h	(Reserved)	-	-	-	-
2527h	Auto constant R2, 2nd motor	H231 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2528h	(Reserved)	-	-	-	-
2529h	Auto constant L, 2nd motor	H232 (high)	R/W	1 to 65530	0.01 [mH]
252Ah	(Reserved)	-	-	-	-
252Bh	Auto constant lo, 2nd motor	H233 (high)	R/W	1 to 65530	0.01 [A]
252Ch	Auto constant J, 2nd motor	H234 (high)	R/W	1 to 9999000	0.001
252Dh		H234 (low)	R/W		
252Eh ~	Unused	-	-	Inaccessible	-

# Drive Parameter Setting Tables

## Introduction


This appendix lists the user-programmable parameters for the WJ200 for version2 series inverters and the default values for European and U.S. product types. The right-most column of the tables is blank, so you can record values you have changed from the default. This involves just a few parameters for most applications. This appendix presents the parameters in a format oriented toward the keypad on the inverter.


## Parameter Settings for Keypad Entry

WJ200 for version2 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model	WJ200		}	This information is printed on the specification label located on the right side of the inverter
MFG. No.				

## Main Profile Parameters

 **NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.

 **NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access.

“F” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>F001</b>	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	✓	✓	0.0	Hz
<b>F002</b>	Acceleration time (1)	Standard default acceleration, range is 0.01 to 3600 seconds.	✓	✓	10.0	s
<b>F202</b>	Acceleration time (1), 2 <sup>nd</sup> motor		✓	✓	10.0	s
<b>F003</b>	Deceleration time (1)	Standard default deceleration, range is 0.01 to 3600 seconds.	✓	✓	10.0	s
<b>F203</b>	Deceleration time (1), 2 <sup>nd</sup> motor		✓	✓	10.0	s
<b>F004</b>	Keypad RUN key routing	Two options; select codes: <b>00</b> ...Forward <b>01</b> ...Reverse	✗	✗	00	-

## Standard Functions



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access

“A” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A001</b>	Frequency source	Eight options; select codes: <b>00</b> ...POT on ext. operator <b>01</b> ...Control terminal <b>02</b> ...Function F001 setting <b>03</b> ...Modbus network input <b>04</b> ...Option <b>06</b> ...Pulse train input <b>07</b> ...via EzSQ <b>10</b> ...Calculate function output	✗	✗	01	–
<b>A201</b>	Frequency source, 2 <sup>nd</sup> motor		✗	✗	01	–
<b>A002</b>	Run command source	Four options; select codes: <b>01</b> ...Control terminal <b>02</b> ...Run key on keypad, or digital operator <b>03</b> ...Modbus network input <b>04</b> ...Option	✗	✗	01	–
<b>A202</b>	Run command source, 2 <sup>nd</sup> motor		✗	✗	01	–
<b>A003</b>	Base frequency	Settable from 30 Hz to the maximum frequency( <b>A004</b> )	✗	✗	50.0	Hz
<b>A203</b>	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency( <b>A204</b> )	✗	✗	50.0	Hz
<b>A004</b>	Maximum frequency	Settable from the base frequency to 400 Hz	✗	✗	50.0	Hz
<b>A204</b>	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400 Hz	✗	✗	50.0	Hz
<b>A005</b>	[AT] selection	Three options; select codes: <b>00</b> ...Select between [O] and [OI] at [AT] (ON=OI, OFF=O) <b>02</b> ...Select between [O] and external POT at [AT] (ON=POT, OFF=O) <b>03</b> ...Select between [OI] and external POT at [AT] (ON=POT, OFF=OI)	✗	✗	00	–
<b>A011</b>	[O] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0	✗	✓	0.00	Hz
<b>A012</b>	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.0 to 400.0	✗	✓	0.00	Hz
<b>A013</b>	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	✗	✓	0.	%
<b>A014</b>	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	✗	✓	100.	%
<b>A015</b>	[O] input start frequency enable	Two options; select codes: <b>00</b> ...Use offset ( <b>A011</b> value) <b>01</b> ...Use 0Hz	✗	✓	01	–



"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A016</b>	Analog input filter	Range n = 1 to 31, 1 to 30 : • 2ms filter 31: 500ms fixed filter with $\pm 0.1$ kHz hys.	✗	✓	8.	Spl.
<b>A017</b>	Simple sequence function selection (EzSQ)	00 (disabling), 01 (PRG terminal) ,02 (Always)	✓	✓	00	-
<b>A019</b>	Multi-speed operation selection	Select codes: <b>00</b> ...Binary operation (16 speeds selectable with 4 terminals) <b>01</b> ...Bit operation (8 speeds selectable with 7 terminals)	✗	✗	00	-
<b>A020</b>	Multi-speed freq. 0	Defines the first speed of a multi-speed profile, range is 0.0 / start frequency to 400Hz <b>A020 = Speed 0 (1st motor)</b>	✓	✓	6.00	Hz
<b>A220</b>	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.0 / start frequency to 400Hz <b>A220 = Speed 0 (2nd motor)</b>	✓	✓	6.00	Hz
<b>A021 to A035</b>	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is 0.0 / start frequency to 400 Hz. <b>A021=Speed 1 ~ A035=Speed15</b>	✓	✓	See next row	Hz
		<b>A021 ~ A035</b>	✓	✓	0.0	Hz
<b>A038</b>	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	✓	6.00	Hz
<b>A039</b>	Jog stop mode	Define how end of jog stops the motor; six options: <b>00</b> ...Free-run stop (invalid during run) <b>01</b> ...Controlled deceleration (invalid during run) <b>02</b> ...DC braking to stop(invalid during run) <b>03</b> ...Free-run stop (valid during run) <b>04</b> ...Controlled deceleration (valid during run) <b>05</b> ...DC braking to stop(valid during run)	✗	✓	04	-
<b>A041</b>	Torque boost select	Two options: <b>00</b> ...Manual torque boost <b>01</b> ...Automatic torque boost	✗	✗	00	-
<b>A241</b>	Torque boost select, 2 <sup>nd</sup> motor		✗	✗	00	-
<b>A042</b>	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve, range is 0.0 to 20.0%	✓	✓	1.0	%
<b>A242</b>	Manual torque boost value, 2 <sup>nd</sup> motor		✓	✓	1.0	%
<b>A043</b>	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost, range is 0.0 to 50.0%	✓	✓	5.0	%
<b>A243</b>	Manual torque boost frequency, 2 <sup>nd</sup> motor		✓	✓	5.0	%
<b>A044</b>	V/f characteristic curve	Four available V/f curves: <b>00</b> ...Constant torque <b>01</b> ...Reduced torque (1.7)	✗	✗	00	-
<b>A244</b>	V/f characteristic curve, 2 <sup>nd</sup> motor	<b>02</b> ...Free V/F <b>03</b> ...Sensorless vector (SLV)	✗	✗	00	-

"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A045</b>	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	✓	100.	%
<b>A245</b>	V/f gain, 2 <sup>nd</sup> motor		✓	✓	100.	%
<b>R046</b>	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	✓	✓	100.	-
<b>R246</b>	Voltage compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	✓	100.	-
<b>R047</b>	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	✓	100.	-
<b>R247</b>	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	✓	100.	-
<b>A051</b>	DC braking enable	Three options; select codes: <b>00</b> ...Disable <b>01</b> ...Enable during stop <b>02</b> ...Frequency detection	✗	✓	00	-
<b>A052</b>	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency ( <b>b082</b> ) to 60Hz	✗	✓	0.50	Hz
<b>A053</b>	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 seconds.	✗	✓	0.0	s
<b>A054</b>	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	✗	✓	50.	%
<b>A055</b>	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds.	✗	✓	0.5	s
<b>A056</b>	DC braking / edge or level detection for [DB] input	Two options; select codes: <b>00</b> ...Edge detection <b>01</b> ...Level detection	✗	✓	01	-
<b>R057</b>	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	✗	✓	0.	%
<b>R058</b>	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds.	✗	✓	0.0	s
<b>R059</b>	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	✗	✓	5.0	kHz
<b>A061</b>	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency ( <b>A004</b> ). Range is from frequency lower limit ( <b>A062</b> ) to maximum frequency ( <b>A004</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
<b>A261</b>	Frequency upper limit, 2nd motor	Sets a limit on output frequency less than the maximum frequency ( <b>A204</b> ). Range is from frequency lower limit ( <b>A262</b> ) to maximum frequency ( <b>A204</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz

"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A062</b>	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A061</b> ) 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
<b>A262</b>	Frequency lower limit, 2nd motor	Sets a limit on output frequency greater than zero. Range is start frequency ( <b>b082</b> ) to frequency upper limit ( <b>A261</b> ) 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
<b>A063</b> <b>A065</b> <b>A067</b>	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) Range is 0.0 to 400.0 Hz	✗	✓	0.0 0.0 0.0	Hz
<b>A064</b> <b>A066</b> <b>A068</b>	Jump freq. width (hysteresis) 1 to 3	Defines the distance from the center frequency at which the jump around occurs Range is 0.0 to 10.0 Hz	✗	✓	0.5 0.5 0.5	Hz
<b>A069</b>	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0Hz	✗	✓	0.00	Hz
<b>A070</b>	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds.	✗	✓	0.0	s
<b>A071</b>	PID enable	Enables PID function, three option codes: <b>00</b> ...PID Disable <b>01</b> ...PID Enable <b>02</b> ...PID Enable with reverse output	✗	✓	00	-
<b>A072</b>	PID proportional gain	Proportional gain has a range of 0.00 to 25.00	✓	✓	1.00	-
<b>A073</b>	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds.	✓	✓	1.0	s
<b>A074</b>	PID derivative time constant	Derivative time constant has a range of 0.0 to 100 seconds.	✓	✓	0.00	s
<b>A075</b>	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	✗	✓	1.00	-
<b>A076</b>	PV source	Selects source of Process Variable (PV), option codes: <b>00</b> ...[OI] terminal (current in) <b>01</b> ...[O] terminal (voltage in) <b>02</b> ...Modbus network <b>03</b> ...Pulse train input <b>10</b> ...Calculate function output	✗	✓	00	-
<b>A077</b>	Reverse PID action	Two option codes: <b>00</b> ...PID input = SP-PV <b>01</b> ...PID input = -(SP-PV)	✗	✓	00	-
<b>A078</b>	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	✗	✓	0.0	%
<b>R079</b>	PID feed forward selection	Selects source of feed forward gain, option codes: <b>00</b> ...Disabled <b>01</b> ...[O] terminal (voltage in) <b>02</b> ...[OI] terminal (current in)	✗	✓	00	-
<b>A081</b>	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions,	✗	✗	02	-

"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>#281</b>	AVR function select, 2 <sup>nd</sup> motor	three option codes: <b>00</b> ...AVR enabled <b>01</b> ...AVR disabled <b>02</b> ...AVR enabled except during deceleration	✗	✗	02	-
<b>A082</b>	AVR voltage select	200V class inverter settings: .....200/215/220/230/240	✗	✗	230/ 400	V
<b>#282</b>	AVR voltage select, 2 <sup>nd</sup> motor	400V class inverter settings: .....380/400/415/440/460/480	✗	✗	230/ 400	V
<b>#083</b>	AVR filter time constant	Define the time constant of the AVR filter, range is 0 to 10 seconds.	✗	✓	0.300	s
<b>#084</b>	AVR deceleration gain	Gain adjustment of the braking performance, range is 50 to 200%	✗	✓	100.	%
<b>A085</b>	Energy-saving operation mode	Two option codes: <b>00</b> ...Normal operation <b>01</b> ...Energy-saving operation	✗	✗	00	-
<b>A086</b>	Energy-saving mode tuning	Range is 0.0 to 100 %.	✓	✓	50.0	%
<b>A092</b>	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.01 to 3600 seconds.	✓	✓	10.00	s
<b>A292</b>	Acceleration time (2), 2 <sup>nd</sup> motor		✓	✓	10.00	s
<b>A093</b>	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.01 to 3600 seconds.	✓	✓	10.00	s
<b>A293</b>	Deceleration time (2), 2 <sup>nd</sup> motor		✓	✓	10.00	s
<b>A094</b>	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel: <b>00</b> ...2CH input from terminal	✗	✗	00	-
<b>A294</b>	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor	<b>01</b> ...Transition frequency <b>02</b> ...Forward and reverse	✗	✗	00	-
<b>A095</b>	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.0 to 400.0 Hz	✗	✗	0.00	Hz
<b>A295</b>	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		✗	✗	0.00	Hz
<b>A096</b>	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.0 to 400.0 Hz	✗	✗	0.00	Hz
<b>A296</b>	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor		✗	✗	0.00	Hz
<b>A097</b>	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options: <b>00</b> ...linear <b>01</b> ...S-curve <b>02</b> ...U-curve <b>03</b> ...Inverse U-curve <b>04</b> ...EL S-curve	✗	✗	01	-
<b>A098</b>	Deceleration curve selection	Set the characteristic curve of Dec1 and Dec2, options are same as above ( <b>#097</b> )	✗	✗	01	-
<b>A101</b>	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz

"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A102</b>	[OI] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>A103</b>	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	✗	✓	20.	%
<b>A104</b>	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	✗	✓	100.	%
<b>A105</b>	[OI] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A101</b> value) <b>01</b> ...Use 0Hz	✗	✓	00	-
<b>R131</b>	Acceleration curve constant	Range is 01 to 10.	✗	✓	02	-
<b>R132</b>	Deceleration curve constant	Range is 01 to 10.	✗	✓	02	-
<b>A141</b>	A input select for calculate function	Seven options: <b>00</b> ...Operator <b>01</b> ...VR <b>02</b> ...Terminal [O] input <b>03</b> ...Terminal [OI] input <b>04</b> ...RS485 <b>05</b> ...Option <b>07</b> ...Pulse train input	✗	✓	02	-
<b>A142</b>	B input select for calculate function	Seven options: <b>00</b> ...Operator <b>01</b> ...VR <b>02</b> ...Terminal [O] input <b>03</b> ...Terminal [OI] input <b>04</b> ...RS485 <b>05</b> ...Option <b>07</b> ...Pulse train input	✗	✓	03	-
<b>A143</b>	Calculation symbol	Calculates a value based on the A input source ( <b>A141</b> selects) and B input source ( <b>A142</b> selects). Three options: <b>00</b> ...ADD (A input + B input) <b>01</b> ...SUB (A input - B input) <b>02</b> ...MUL (A input * B input)	✗	✓	00	-
<b>A145</b>	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>A146</b>	ADD direction select	Two options: <b>00</b> ...Plus (adds <b>A145</b> value to the output frequency setting) <b>01</b> ...Minus (subtracts <b>A145</b> value from the output frequency setting)	✗	✓	00	-
<b>R150</b>	Curvature of EL-S-curve at the start of acceleration	Range is 0 to 50%	✗	✗	10.	%
<b>R151</b>	Curvature of EL-S-curve at the end of acceleration	Range is 0 to 50%	✗	✗	10.	%
<b>R152</b>	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	✗	✗	10.	%
<b>R153</b>	Curvature of EL-S-curve at the end of deceleration	Range is 0 to 50%	✗	✗	10.	%
<b>R154</b>	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.0 to 400.0Hz	✗	✓	0.00	Hz

"A" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>A155</b>	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds.	✗	✓	0.0	s
<b>A156</b>	PID sleep function action threshold	Sets the threshold for the action, set range 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>A157</b>	PID sleep function action delay time	Sets the delay time for the action, set range 0.0 to 25.5 seconds.	✗	✓	0.0	s
<b>A161</b>	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>A162</b>	[VR] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>A163</b>	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.%	✗	✓	0.	%
<b>A164</b>	[VR] input active range end %	The ending point (offset) for the current input range, range is 0. to 100.%	✗	✓	100.	%
<b>A165</b>	[VR] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A161</b> value) <b>01</b> ...Use 0Hz	✗	✓	01	-

## Fine Tuning Functions



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access

“b” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b001</b>	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes: <b>00</b> ...Alarm output after trip, no automatic restart <b>01</b> ...Restart at 0Hz <b>02</b> ...Resume operation after frequency matching <b>03</b> ...Resume previous freq. after freq. matching, then decelerate to stop and display trip info <b>04</b> ...Resume operation after active freq. matching	✗	✓	00	-
<b>b002</b>	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	✗	✓	1.0	s
<b>b003</b>	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	✗	✓	1.0	s
<b>b004</b>	Instantaneous power failure / under-voltage trip alarm enable	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable <b>02</b> ...Disable during stop and decelerates to a stop	✗	✓	00	-
<b>b005</b>	Number of restarts on power failure / under-voltage trip events	Two option codes: <b>00</b> ...Restart 16 times <b>01</b> ...Always restart	✗	✓	00	-
<b>b007</b>	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0 to 400Hz	✗	✓	0.00	Hz
<b>b008</b>	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes: <b>00</b> ...Alarm output after trip, no automatic restart <b>01</b> ...Restart at 0Hz <b>02</b> ...Resume operation after frequency matching <b>03</b> ...Resume previous freq. after active freq. matching, then decelerate to stop and display trip info <b>04</b> ...Resume operation after active freq. matching	✗	✓	00	-
<b>b010</b>	Number of retry on over voltage / over current trip	Range is 1 to 3 times	✗	✓	3	-
<b>b011</b>	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	✗	✓	1.0	s
<b>b012</b>	Level of electronic thermal	Set a level between 20% and 100% for the	✗	✓	Rated	A

"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b212</b>	Level of electronic thermal, 2 <sup>nd</sup> motor	rated inverter current.	✗	✓	current for each inverter model *1	A
<b>b013</b>	Electronic thermal characteristic	Select from three curves, option codes: <b>00</b> ...Reduced torque	✗	✓	01	-
<b>b213</b>	Electronic thermal characteristic, 2 <sup>nd</sup> motor	<b>01</b> ...Constant torque <b>02</b> ...Free setting	✗	✓	01	-
<b>b015</b>	Free setting electronic thermal ~freq.1	Range is 0 to 400Hz	✗	✓	0.0	Hz
<b>b016</b>	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	✗	✓	0.00	A
<b>b017</b>	Free setting electronic thermal ~freq.2	Range is 0 to 400Hz	✗	✓	0.0	Hz
<b>b018</b>	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	✗	✓	0.00	A
<b>b019</b>	Free setting electronic thermal ~freq.3	Range is 0 to 400Hz	✗	✓	0.0	Hz
<b>b020</b>	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	✗	✓	0.00	A
<b>b021</b>	Overload restriction operation mode	Select the operation mode during overload conditions, four options, option codes:	✗	✓	01	-
<b>b221</b>	Overload restriction operation mode, 2 <sup>nd</sup> motor	<b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	✓	01	-
<b>b022</b>	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	✓	Rated current x 1.5	A
<b>b222</b>	Overload restriction level, 2 <sup>nd</sup> motor		✗	✓	Rated current x 1.5	A
<b>b023</b>	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1 seconds.	✗	✓	1.0	s
<b>b223</b>	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor		✗	✓	1.0	s
<b>b024</b>	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled for acceleration and constant speed <b>02</b> ...Enabled for constant speed only <b>03</b> ...Enabled for acceleration and constant speed, increase speed at regen.	✗	✓	01	-
<b>b025</b>	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	✓	Rated current x 1.5	
<b>b026</b>	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1 seconds.	✗	✓	1.0	s
<b>b027</b>	OC suppression selection *	Two option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled	✗	✓	00	-



"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b028</b>	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.1*inverter rated current to 2.0*inverter rated current, resolution 0.1 seconds.	✗	✓	Rated current	A
<b>b029</b>	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1 seconds.	✗	✓	0.5	s
<b>b030</b>	Start freq. of active freq. matching	Three option codes: <b>00</b> ...freq at previous shutoff <b>01</b> ...start from max. Hz <b>02</b> ...start from set frequency	✗	✓	00	-
<b>b031</b>	Software lock mode selection	Prevents parameter changes, in five options, option codes: <b>00</b> ...all parameters except <b>b031</b> are locked when [SFT] terminal is ON <b>01</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked when [SFT] terminal is ON <b>02</b> ...all parameters except <b>b031</b> are locked <b>03</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked <b>10</b> ...High level access including <b>b031</b> See appendix C for the accessible parameters in this mode.	✗	✓	01	-
<b>b033</b>	Motor cable length parameter	Set range is 5 to 20.	✓	✓	10.	-
<b>b034</b>	Run/power ON warning time	Range is, <b>0</b> :Warning disabled <b>1</b> . to <b>9999</b> .: 10~99,990 hrs (unit: 10) <b>1000</b> to <b>6553</b> : 100,000~655,350 hrs (unit: 100)	✗	✓	0.	Hrs.
<b>b035</b>	Rotation direction restriction	Three option codes: <b>00</b> ...No restriction <b>01</b> ...Reverse rotation is restricted <b>02</b> ...Forward rotation is restricted	✗	✗	00	-
<b>b036</b>	Reduced voltage start selection	Set range, <b>0</b> (disabling the function), <b>1</b> (approx. 6ms) to <b>255</b> (approx. 1.5s)	✗	✓	2	-
<b>b037</b>	Function code display restriction	Six option codes: <b>00</b> ...Full display <b>01</b> ...Function-specific display <b>02</b> ...User setting (and <b>b037</b> ) <b>03</b> ...Data comparison display <b>04</b> ...Basic display <b>05</b> ...Monitor display only	✓	✓	00	-
<b>b038</b>	Initial display selection	<b>000</b> ...Func. code that SET key pressed last displayed.(*) <b>001~030</b> ... <b>d001~d030</b> displayed <b>201</b> ... <b>F001</b> displayed <b>202</b> ...B display of LCD operator	✗	✓	001	-
<b>b039</b>	Automatic user parameter registration	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	✓	00	-
<b>b040</b>	Torque limit selection	Three option codes: <b>00</b> ...Quadrant-specific setting mode <b>01</b> ...Terminal-switching mode <b>02</b> ...Analog voltage input mode(O)	✗	✓	00	-
<b>b041</b>	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	✗	✓	200	%
<b>b042</b>	Torque limit 2 (fwd/power)	Torque limit level in forward powering quadrant, range is 0 to 200%/no(disabled)	✗	✓	200	%
<b>b043</b>	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0 to 200%/no(disabled)	✗	✓	200	%

"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b044</b>	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0 to 200%/no(disabled)	✗	✓	200	%
<b>b045</b>	Torque LAD STOP selection	Two option codes: 00...Disable 01...Enable	✗	✓	00	-
<b>b046</b>	Reverse run protection	Two option codes: 00...No protection 01...Reverse rotation is protected	✗	✓	00	-
<b>b049</b>	Dual Rating Selection	00... (CT mode) / 01... (VT mode)	✗	✗	00	
<b>b050</b>	Controlled deceleration on power loss	Four option codes: 00...Trips 01...Decelerates to a stop 02...Decelerates to a stop with DC bus voltage controlled 03...Decelerates to a stop with DC bus voltage controlled, then restart	✗	✗	00	-
<b>b051</b>	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	✗	✗	220.0/ 440.0	V
<b>b052</b>	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	✗	✗	360.0/ 720.0	V
<b>b053</b>	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0 seconds.	✗	✗	1.00	s
<b>b054</b>	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.0 to 10.0 Hz	✗	✗	0.00	Hz
<b>b060</b>	Maximum-limit level of window comparator (O)	Set range, {Min.-limit level ( <b>b061</b> ) + hysteresis width ( <b>b062</b> )x2} to 100 % (Minimum of 0%)	✓	✓	100.	%
<b>b061</b>	Minimum-limit level of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - hysteresis width ( <b>b062</b> )x2} % (Maximum of 0%)	✓	✓	0.	%
<b>b062</b>	Hysteresis width of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - Min.-limit level ( <b>b061</b> )/2} % (Maximum of 10%)	✓	✓	0.	%
<b>b063</b>	Maximum-limit level of window comparator (OI)	Set range, {Min.-limit level ( <b>b064</b> ) + hysteresis width ( <b>b065</b> )x2} to 100 % (Minimum of 0%)	✓	✓	100.	%
<b>b064</b>	Minimum-limit level of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - hysteresis width ( <b>b065</b> )x2} % (Maximum of 0%)	✓	✓	0.	%
<b>b065</b>	Hysteresis width of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - Min.-limit level ( <b>b064</b> )/2} % (Maximum of 10%)	✓	✓	0.	%
<b>b070</b>	Operation level at O disconnection	Set range, 0 to 100%, or "no" (ignore)	✗	✓	no	-
<b>b071</b>	Operation level at OI disconnection	Set range, 0 to 100%, or "no" (ignore)	✗	✓	no	-
<b>b075</b>	Ambient temperature setting	Set range is, -10~50 °C	✓	✓	40	°C
<b>b078</b>	Watt-hour clearance	Two option codes: 00...OFF 01...ON (press STR then clear)	✓	✓	00	-
<b>b079</b>	Watt-hour display gain	Set range is, 1.~1000.	✓	✓	1.	
<b>b082</b>	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	✗	✓	0.50	Hz
<b>b083</b>	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	✗	✓	10.0	kHz

“b” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b084</b>	Initialization mode (parameters or trip history)	Select initialized data, five option codes: <b>00</b> ...Initialization disabled <b>01</b> ...Clears Trip history <b>02</b> ...Initializes all Parameters <b>03</b> ...Clears Trip history and initializes all parameters <b>04</b> ...Clears Trip history and initializes all parameters and EzSQ program	✗	✗	00	–
<b>b085</b>	Country for initialization	Select default parameter values for country on initialization, two option codes: <b>00</b> ...area A <b>01</b> ...area B	✗	✗	01	–
<b>b086</b>	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for <b>d007</b> monitor, range is 0.01 to 99.99	✓	✓	1.00	–
<b>b087</b>	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes: <b>00</b> ...Enabled <b>01</b> ...Disabled always <b>02</b> ... Disabled for stop	✗	✓	00	–
<b>b088</b>	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options: <b>00</b> ...Restart from 0Hz <b>01</b> ...Restart from frequency detected from real speed of motor (freq. matching) <b>02</b> ...Restart from frequency detected from real speed of motor (active freq. matching)	✗	✓	00	–
<b>b089</b>	Automatic carrier frequency reduction	Three option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled, depending on the output current <b>02</b> ...Enabled, depending on the heat-sink temperature	✗	✗	01	–
<b>b090</b>	Dynamic braking usage ratio	Selects the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to the value calculated by the inverter with b097. If the connected register's allowable range is narrow than above range, the register's range is prior. 0%: Function disabled >0%: Enabled, per value	✗	✓	0.0	%
<b>b091</b>	Stop mode selection	00 (DEC (decelerate to stop)) / 01 (FRS (free-run to stop))	✗	✓	00	
<b>b092</b>	Cooling fan control Note 2)	00 (Fan is always ON) / 01 (Fan is ON during run, OFF during stop (5 minute delay from ON to OFF)) / 02 (Fan is temperature controlled)	✗	✓	01	
<b>b093</b>	Clear elapsed time of cooling fan Note 2)	00 (Count) / 01 (Clear)	✗	✗	00	
<b>b094</b>	Initialization target data	00 (All parameters)/ 01 (All parameters except in/output terminals and communication.)/ 02 (Only registered parameters in □xxx.)/ 03 (All parameters except registered parameters in Uxxx and b037.)	✗	✗	00	
<b>b095</b>	Dynamic braking control (BRD) selection	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable during run only <b>02</b> ...Enable always	✗	✓	00	–

"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b096</b>	BRD activation level (As DC Voltage)	If DC Voltage > b096, the register consume. regeneration power.  Range is: 330 to 380V (200V class) 660 to 760V (400V class)	✗	✓	360/ 720	V
<b>b097</b>	BRD register	Set the value of the register connected to the inverter.By this setting, b090's upper limit as the inverter hardware is calculated automatically.So, you can focus the usage ratio as the connected register.  Range is minimum connectable register Rbmin to 600.0[Ω]	✗	✓	Min. Resistance	Ω
<b>b100</b>	Free V/F setting, freq.1	Set range, 0 ~ value of <b>b102</b>	✗	✗	0.	Hz
<b>b101</b>	Free V/F setting, voltage.1	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b102</b>	Free V/F setting, freq.2	Set range, value of <b>b100 ~b104</b>	✗	✗	0.	Hz
<b>b103</b>	Free V/F setting, voltage.2	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b104</b>	Free V/F setting, freq.3	Set range, value of <b>b102 ~b106</b>	✗	✗	0.	Hz
<b>b105</b>	Free V/F setting, voltage.3	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b106</b>	Free V/F setting, freq.4	Set range, value of <b>b104 ~b108</b>	✗	✗	0.	Hz
<b>b107</b>	Free V/F setting, voltage.4	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b108</b>	Free V/F setting, freq.5	Set range, value of <b>b108 ~b110</b>	✗	✗	0.	Hz
<b>b109</b>	Free V/F setting, voltage.5	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b110</b>	Free V/F setting, freq.6	Set range, value of <b>b108 ~b112</b>	✗	✗	0.	Hz
<b>b111</b>	Free V/F setting, voltage.6	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b112</b>	Free V/F setting, freq.7	Set range, <b>b110 ~ 400</b>	✗	✗	0.	Hz
<b>b113</b>	Free V/F setting, voltage.7	Set range, 0 ~ 800V	✗	✗	0.0	V
<b>b120</b>	Brake control enable	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	✓	00	-
<b>b121</b>	Brake Wait Time for Release	Set range: 0.00 to 5.00 seconds.	✗	✓	0.00	s
<b>b122</b>	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 seconds.	✗	✓	0.00	s
<b>b123</b>	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 s seconds.	✗	✓	0.00	s
<b>b124</b>	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 seconds.	✗	✓	0.00	s
<b>b125</b>	Brake release freq.	Set range: 0 to 400Hz	✗	✓	0.00	Hz
<b>b126</b>	Brake release current	Set range: 0~200% of inverter rated current	✗	✓	(rated current)	A
<b>b127</b>	Braking freq. setting	Set range: 0 to 400Hz	✗	✓	0.00	Hz
<b>b130</b>	Deceleration overvoltage suppression enable	<b>00</b> ...Disabled <b>01</b> ...Enabled <b>02</b> ...Enabled with accel.	✗	✓	00	-
<b>b131</b>	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 200V class...330 to 395 400V class...660 to 790	✗	✓	380 /760	V

"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b132</b>	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: 0.10 ~ 30.00 seconds.	✗	✓	1.00	s
<b>b133</b>	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	✓	0.20	-
<b>b134</b>	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.00 to 150.0 seconds.	✓	✓	1.0	s
<b>b145</b>	GS input mode	Two option codes: 00...No trip (Hardware shutoff only) 01...Trip	✗	✓	00	-
<b>b150</b>	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in: <b>d001 ~ d030</b>	✓	✓	001	-
<b>b160</b>	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be monitored in d050.	✓	✓	001	-
<b>b161</b>	2nd parameter of Dual Monitor	The two parameters are switched by up/down keys. Set range: <b>d001 ~ d030</b>	✓	✓	002	-
<b>b163</b>	Frequency set in monitoring	Two option codes: 00...Freq. set disabled 01...Freq. set enabled	✓	✓	00	-
<b>b164</b>	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: 00...Disable 01...Enable	✓	✓	00	-
<b>b165</b>	Ex. operator com. loss action	Five option codes: 00...Trip 01...Trip after deceleration to a stop 02...Ignore 03...Coasting (FRS) 04...Decelerates to a stop	✓	✓	02	-
<b>b166</b>	Data Read/Write select	00... Read/Write OK 01... Protected	✗	✓	00	-
<b>b171</b>	Inverter mode selection	Three option codes: 00...No function 01...Std. IM (Induction Motor) 03...PM(Permanent Magnet Motor)	✗	✗	00	-
<b>b180</b>	Initialization trigger (*)	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: 00...Initialization disable 01...Perform initialization	✗	✗	00	-
<b>b190</b>	Password Settings A	0000(Invalid Password) 0001-FFFF>Password	✗	✗	0000	-
<b>b191</b>	Password authentication A	0000-FFFF	✗	✗	0000	-
<b>b192</b>	Password Settings B	0000(Invalid Password) 0001-FFFF>Password	✗	✗	0000	-
<b>b193</b>	Password authentication B	0000-FFFF	✗	✗	0000	-

## Intelligent Terminal Functions



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access

“C” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
C001	Input [1] function	Select input terminal [1] function, 68 options (see next section)	✗	✓	00 [FW]	-
C002	Input [2] function	Select input terminal [2] function, 68 options (see next section)	✗	✓	01 [RV]	-
C003	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	✗	✓	12 [EXT]	-
C004	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	✗	✓	18 [RS]	-
C005	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	✗	✓	02 [CF1]	-
C006	Input [6] function	Select input terminal [6] function, 68 options (see next section)	✗	✓	03 [CF1]	-
C007	Input [7] function	Select input terminal [7] function, 68 options (see next section)	✗	✓	06 [JG]	-
C011	Input [1] active state	Select logic conversion, two option codes: 00...normally open [NO] 01...normally closed [NC]	✗	✓	00	-
C012	Input [2] active state		✗	✓	00	-
C013	Input [3] active state		✗	✓	00	-
C014	Input [4] active state		✗	✓	00	-
C015	Input [5] active state		✗	✓	00	-
C016	Input [6] active state		✗	✓	00	-
C017	Input [7] active state		✗	✓	00	-
C021	Output [11] function [EDM assignable]	48 programmable functions available for logic (discrete) outputs (see next section)	✗	✓	00 [RUN]	-
C022	Output [12] function		✗	✓	01 [FA1]	-
C026	Alarm relay function	48 programmable functions available for logic (discrete) outputs (see next section)	✗	✓	05 [AL]	-
C027	[EO] terminal selection (Pulse/PWM output)	13 programmable functions: 00...Output frequency (PWM) 01...Output current (PWM) 02...Output torque (PWM) 03...Output frequency (Pulse train) 04...Output voltage (PWM) 05...Input power (PWM) 06...Electronic thermal load ratio (PWM) 07...LAD frequency (PWM) 08...Output current (Pulse train) 10...Heat sink temperature (PWM) 12...General output (PWM) 15...Pulse train input monitor 16...Option(PWM)	✗	✓	07 [LAD]	-

"C" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>C028</b>	[AM] terminal selection (Analog voltage output 0...10V)	11 programmable functions: <b>00</b> ...Output frequency <b>01</b> ...Output current <b>02</b> ...Output torque <b>04</b> ...Output voltage <b>05</b> ...Input power <b>06</b> ...Electronic thermal load ratio <b>07</b> ...LAD frequency <b>10</b> ...Heat sink temperature <b>11</b> ...Output torque (with code) <b>13</b> ...General output <b>16</b> ...Option	✗	✓	07 [LAD]	-
<b>C030</b>	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	✓	Rated current	A
<b>C031</b>	Output [11] active state	Select logic conversion, two option codes: <b>00</b> ...normally open [NO] <b>01</b> ...normally closed [NC]	✗	✓	00	-
<b>C032</b>	Output [12] active state		✗	✓	00	-
<b>C036</b>	Alarm relay active state		✗	✓	01	-
<b>C038</b>	Output mode of low current detection	Two option codes: <b>00</b> ...During acceleration, deceleration and constant speed <b>01</b> ...During constant speed only	✗	✓	01	-
<b>C039</b>	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0*inverter rated current	✓	✓	INV rated current	A
<b>C040</b>	Output mode of overload warning	Two option codes: <b>00</b> ...During accel., decel. and constant speed <b>01</b> ...During constant speed only	✗	✓	01	-
<b>C041</b>	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	✓	Rated current x 1.15	A
<b>C241</b>	Overload warning level, 2 <sup>nd</sup> motor	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	✓	Rated current x 1.15	A
<b>C042</b>	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>C043</b>	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>C044</b>	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	✗	✓	3.0	%
<b>C045</b>	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>C046</b>	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0 Hz	✗	✓	0.00	Hz
<b>C047</b>	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	✓	1.00	-
<b>C052</b>	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	✗	✓	100.0	%
<b>C053</b>	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	✗	✓	0.0	%

"C" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>C054</b>	Over-torque/under-torque selection	Two option codes: <b>00</b> ...Over-torque <b>01</b> ...Under-torque	✗	✓	00	–
<b>C055</b>	Over/under-torque level (Forward powering mode)	Set range is 0 to 200%	✗	✓	100.	%
<b>C056</b>	Over/under-torque level (Reverse regen. mode)	Set range is 0 to 200%	✗	✓	100.	%
<b>C057</b>	Over/under-torque level (Reverse powering mode)	Set range is 0 to 200%	✗	✓	100.	%
<b>C058</b>	Over/under-torque level (Forward regen. mode)	Set range is 0 to 200%	✗	✓	100.	%
<b>C059</b>	Signal output mode of Over/under-torque	Two option codes: <b>00</b> ...During accel, decel and constant speed <b>01</b> ...During constant speed only	✗	✓	01	–
<b>C061</b>	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	✗	✓	90	%
<b>C063</b>	Zero speed detection level	Set range is 0.0 to 100.0Hz	✗	✓	0.00	Hz
<b>C064</b>	Heat sink overheat warning	Set range is 0 to 110 °C	✗	✓	100.	°C
<b>C071</b>	Communication speed	Eight option codes: <b>03</b> ...2,400 bps <b>04</b> ...4,800 bps <b>05</b> ...9,600 bps <b>06</b> ...19,200 bps <b>07</b> ...38,400 bps <b>08</b> ...57,600 bps <b>09</b> ...76,800 bps <b>10</b> ...115,200 bps	✗	✓	05	bps
<b>C072</b>	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	✗	✓	1.	–
<b>C074</b>	Communication parity	Three option codes: <b>00</b> ...No parity <b>01</b> ...Even parity <b>02</b> ...Odd parity	✗	✓	00	–
<b>C075</b>	Communication stop bit	Two option codes: <b>1</b> ...1 bit <b>2</b> ...2 bit	✗	✓	1	bit
<b>C076</b>	Communication error select	Selects inverter response to communications error. Five options: <b>00</b> ...Trip <b>01</b> ...Decelerate to a stop and trip <b>02</b> ...Disable <b>03</b> ...Free run stop (coasting) <b>04</b> ...Decelerates to a stop	✗	✓	02	–
<b>C077</b>	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 seconds. 0.0 = disabled	✗	✓	0.00	s
<b>C078</b>	Communication wait time	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. m seconds.	✗	✓	0.	ms
<b>C081</b>	O input span calibration	Scale factor between the external frequency command on terminals L–O (voltage input) and the frequency output, range is 0.0 to 200%	✓	✓	100.0	%
<b>C082</b>	OI input span calibration	Scale factor between the external frequency command on terminals L–OI (voltage input) and the frequency output, range is 0.0 to 200%	✓	✓	100.0	%



"C" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>C085</b>	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200%	✓	✓	100.0	%
<b>C091</b>	Debug mode enable *	Displays debug parameters. Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable <Do not set> (for factory use)	✓	✓	00	-
<b>C096</b>	Communication selection	<b>00</b> ...Modbus-RTU <b>01</b> ... EzCOM <b>02</b> ... EzCOM<administrator>	✗	✗	00	-
<b>C098</b>	EzCOM start adr. of master	1. to 8.	✗	✗	1.	-
<b>C099</b>	EzCOM end adr. of master	1. to 8.	✗	✗	1.	-
<b>C100</b>	EzCOM starting trigger	<b>00</b> ... Input terminal <b>01</b> ... Always	✗	✗	00	-
<b>C101</b>	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle. Two option codes: <b>00</b> ...Clear last frequency (return to default frequency <b>F001</b> ) <b>01</b> ...Keep last frequency adjusted by UP/DWN	✗	✓	00	-
<b>C102</b>	Reset selection	Determines response to Reset input [RS]. Four option codes: <b>00</b> ...Cancel trip state at input signal ON transition, stops inverter if in Run Mode <b>01</b> ...Cancel trip state at signal OFF transition, stops inverter if in Run Mode <b>02</b> ...Cancel trip state at input ON transition, no effect if in Run Mode <b>03</b> ...Clear the memories only related to trip status	✓	✓	00	-
<b>C103</b>	Restart mode after reset	Determines the restart mode after reset is given, three option codes: <b>00</b> ...Start with 0 Hz <b>01</b> ...Start with freq. matching <b>02</b> ...Start with active freq. matching	✗	✓	00	-
<b>C104</b>	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes: <b>00</b> ...0 Hz <b>01</b> ...Original setting (in the EEPROM memory at power on)	✗	✓	00	-
<b>C105</b>	EO gain adjustment	Set range is 50 to 200%	✓	✓	100.	%
<b>C106</b>	AM gain adjustment	Set range is 50 to 200%	✓	✓	100.	%
<b>C109</b>	AM bias adjustment	Set range is 0 to 100%	✓	✓	0.	%
<b>C111</b>	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	✓	Rated current x 1.15	A
<b>C130</b>	Output [11] on delay	Set range is 0.0 to 100.0 seconds.	✗	✓	0.0	s
<b>C131</b>	Output [11] off delay		✗	✓	0.0	s
<b>C132</b>	Output [12] on delay	Set range is 0.0 to 100.0 seconds.	✗	✓	0.0	s
<b>C133</b>	Output [12] off delay		✗	✓	0.0	s
<b>C140</b>	Relay output on delay	Set range is 0.0 to 100.0 seconds.	✗	✓	0.0	s

"C" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
C141	Relay output off delay		✗	✓	0.0	s
C142	Logic output 1 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C143	Logic output 1 operand B		✗	✓	00	-
C144	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-
C145	Logic output 2 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C146	Logic output 2 operand B		✗	✓	00	-
C147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-
C148	Logic output 3 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C149	Logic output 3 operand B		✗	✓	01	-
C150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-
C160	Input [1] response time	Sets response time of each input terminal, set range: 0 (x 2 [ms]) to 200 (x 2 [ms]) (0 to 400 [ms])	✗	✓	1.	-
C161	Input [2] response time		✗	✓	1.	-
C162	Input [3] response time		✗	✓	1.	-
C163	Input [4] response time		✗	✓	1.	-
C164	Input [5] response time		✗	✓	1.	-
C165	Input [6] response time		✗	✓	1.	-
C166	Input [7] response time		✗	✓	1.	-
C169	Multistage speed/position determination time		Set range is 0. to 200. (x 10ms)	✗	✓	0.

**Input Function Summary Table** – This table shows all thirty-one intelligent input functions at a glance. Detailed description of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Input Terminals" on page 4-8.

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	FW	FORWARD Run/Stop	ON	Inverter is in Run Mode, motor runs forward
			OFF	Inverter is in Stop Mode, motor stops
01	RV	Reverse Run/Stop	ON	Inverter is in Run Mode, motor runs reverse
			OFF	Inverter is in Stop Mode, motor stops
02	CF1 *1	Multi-speed Select,	ON	Binary encoded speed select, Bit 0, logical 1

		Bit 0 (LSB)	OFF	Binary encoded speed select, Bit 0, logical 0
03	CF2	Multi-speed Select, Bit 1	ON	Binary encoded speed select, Bit 1, logical 1
			OFF	Binary encoded speed select, Bit 1, logical 0
04	CF3	Multi-speed Select, Bit 2	ON	Binary encoded speed select, Bit 2, logical 1
			OFF	Binary encoded speed select, Bit 2, logical 0
05	CF4	Multi-speed Select, Bit 3 (MSB)	ON	Binary encoded speed select, Bit 3, logical 1
			OFF	Binary encoded speed select, Bit 3, logical 0
06	JG	Jogging	ON	Inverter is in Run Mode, output to motor runs at jog parameter frequency
			OFF	Inverter is in Stop Mode
07	DB	External DC braking	ON	DC braking will be applied during deceleration
			OFF	DC braking will not be applied
08	SET	Set (select) 2nd Motor Data	ON	The inverter uses 2nd motor parameters for generating frequency output to motor
			OFF	The inverter uses 1st (main) motor parameters for generating frequency output to motor
09	2CH	2-stage Acceleration and Deceleration	ON	Frequency output uses 2nd-stage acceleration and deceleration values
			OFF	Frequency output uses standard acceleration and deceleration values
11	FRS	Free-run Stop	ON	Causes output to turn OFF, allowing motor to free run (coast) to stop
			OFF	Output operates normally, so controlled deceleration stop motor
12	EXT	External Trip	ON	When assigned input transitions OFF to ON, inverter latches trip event and displays <b>E 12</b>
			OFF	No trip event for ON to OFF, any recorded trip events remain in history until reset
13	USP	Unattended Start Protection	ON	On power up, the inverter will not resume a Run command (mostly used in the US)
			OFF	On power up, the inverter will resume a Run command that was active before power loss
14	CS	Commercial power source switchover	ON	Motor can be driven by commercial power
			OFF	Motor is driven via the inverter
15	SFT	Software Lock	ON	The keypad and remote programming devices are prevented from changing parameters
			OFF	The parameters may be edited and stored
16	AT	Analog Input Voltage/Current Select	ON	Refer to "Analog Input Settings" on page 3-13.
			OFF	
18	RS	Reset Inverter	ON	The trip condition is reset, the motor output is turned OFF, and power up reset is asserted
			OFF	Normal power-ON operation
19	PTC	PTC thermistor Thermal Protection (C005 only)	ANLG	When a thermistor is connected to terminal [5] and [L], the inverter checks for over-temperature and will cause trip event and turn OFF output to motor
			OPEN	A disconnect of the thermistor causes a trip event, and the inverter turns OFF the motor

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
20	STA	Start (3-wire interface)	ON	Starts the motor rotation
			OFF	No change to present motor status
21	STP	Stop (3-wire interface)	ON	Stops the motor rotation
			OFF	No change to present motor status
22	F/R	FWD, REV (3-wire interface)	ON	Selects the direction of motor rotation: ON = FWD. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
			OFF	Selects the direction of motor rotation: OFF = REV. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
23	PID	PID Disable	ON	Temporarily disables PID loop control. Inverter output turns OFF as long as PID Enable is active (A071=01)

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
			OFF	Has no effect on PID loop operation, which operates normally if PID Enable is active ( <b>A071=01</b> )
24	PIDC	PID Reset	ON	Resets the PID loop controller. The main consequence is that the integrator sum is forced to zero
			OFF	No effect on PID controller
27	UP	Remote Control UP Function (motorized speed pot.)	ON	Accelerates (increases output frequency) motor from current frequency
			OFF	Output to motor operates normally
28	DWN	Remote Control Down Function (motorized speed pot.)	ON	Decelerates (decreases output frequency) motor from current frequency
			OFF	Output to motor operates normally
29	UDC	Remote Control Data Clearing	ON	Clears the UP/DWN frequency memory by forcing it to equal the set frequency parameter F001. Setting <b>C101</b> must be set= <b>00</b> to enable this function to work
			OFF	UP/DWN frequency memory is not changed
31	OPE	Operator Control	ON	Forces the source of the output frequency setting <b>A001</b> and the source of the Run command <b>A002</b> to be from the digital operator
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
32	SF1	Multi-speed Select, Bit operation Bit 1	ON	Bit encoded speed select, Bit 1, logical 1
			OFF	Bit encoded speed select, Bit 1, logical 0
33	SF2	Multi-speed Select, Bit operation Bit 2	ON	Bit encoded speed select, Bit 2, logical 1
			OFF	Bit encoded speed select, Bit 2, logical 0
34	SF3	Multi-speed Select, Bit operation Bit 3	ON	Bit encoded speed select, Bit 3, logical 1
			OFF	Bit encoded speed select, Bit 3, logical 0
35	SF4	Multi-speed Select, Bit operation Bit 4	ON	Bit encoded speed select, Bit 4, logical 1
			OFF	Bit encoded speed select, Bit 4, logical 0
36	SF5	Multi-speed Select, Bit operation Bit 5	ON	Bit encoded speed select, Bit 5, logical 1
			OFF	Bit encoded speed select, Bit 5, logical 0
37	SF6	Multi-speed Select, Bit operation Bit 6	ON	Bit encoded speed select, Bit 6, logical 1
			OFF	Bit encoded speed select, Bit 6, logical 0
38	SF7	Multi-speed Select, Bit operation Bit 7	ON	Bit encoded speed select, Bit 7, logical 1
			OFF	Bit encoded speed select, Bit 7, logical 0
39	OLR	Overload Restriction Source Changeover	ON	Perform overload restriction
			OFF	Normal operation
40	TL	Torque Limit Selection	ON	Setting of <b>b040</b> is enabled
			OFF	Max. torque is limited with 200%
41	TRQ1	Torque limit switch 1	ON	Torque limit related parameters of Powering/regen, and FW/RV modes are selected by the combinations of these inputs.
			OFF	
42	TRQ2	Torque limit switch 2	ON	
			OFF	

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
44	BOK	Brake confirmation	ON	Brake wait time ( <b>b124</b> ) is valid
			OFF	Brake wait time ( <b>b124</b> ) is not valid
46	LAC	LAD cancellation	ON	Set ramp times are ignored. Inverter output immediately follows the freq. command.
			OFF	Accel. and/or decel. is according to the set ramp time
47	PCLR	Pulse counter clear	ON	Clear the position deviation data
			OFF	Maintain the position deviation data
50	ADD	ADD frequency enable	ON	Adds the <b>A145</b> (add frequency) value to the output frequency
			OFF	Does not add the <b>A145</b> value to the output frequency
51	F-TM	Force Terminal Mode	ON	Force inverter to use input terminals for output frequency and Run command sources
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
52	ATR	Enable torque command input	ON	Torque control command input is enabled
			OFF	Torque control command input is disabled

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
53	KHC	Clear watt-hour data	ON	Clear watt-hour data
			OFF	No action
56	MI1	General purpose input (1)	ON	General purpose input (1) is made ON under EzSQ
			OFF	General purpose input (1) is made OFF under EzSQ
57	MI2	General purpose input (2)	ON	General purpose input (2) is made ON under EzSQ
			OFF	General purpose input (2) is made OFF under EzSQ
58	MI3	General purpose input (3)	ON	General purpose input (3) is made ON under EzSQ
			OFF	General purpose input (3) is made OFF under EzSQ
59	MI4	General purpose input (4)	ON	General purpose input (4) is made ON under EzSQ
			OFF	General purpose input (4) is made OFF under EzSQ
60	MI5	General purpose input (5)	ON	General purpose input (5) is made ON under EzSQ
			OFF	General purpose input (5) is made OFF under EzSQ
61	MI6	General purpose input (6)	ON	General purpose input (6) is made ON under EzSQ
			OFF	General purpose input (6) is made OFF under EzSQ
62	MI7	General purpose input (7)	ON	General purpose input (7) is made ON under EzSQ
			OFF	General purpose input (7) is made OFF under EzSQ
65	AHD	Analog command hold	ON	Analog command is held
			OFF	Analog command is not held
66	CP1	Multistage position switch (1)	ON	Multistage position commands are set according to the combination of these switches.
			OFF	
67	CP2	Multistage position switch (2)	ON	
			OFF	
68	CP3	Multistage position switch (3)	ON	
			OFF	
69	ORL	Limit signal of homing	ON	Limit signal of homing is ON
			OFF	Limit signal of homing is OFF
70	ORG	Trigger signal of homing	ON	Starts homing operation
			OFF	No action
73	SPD	Speed/position changeover	ON	Speed control mode
			OFF	Position control mode

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
77	GS1 *	GS1 input	ON	EN60204-1 related signals: Signal input of "Safe torque off" function.
			OFF	
78	GS2 *	GS2 input	ON	
			OFF	
81	485	Start EzCOM	ON	Starts EzCOM
			OFF	No execution
82	PRG	Executing EzSQ program	ON	Executing EzSQ program
			OFF	No execution
83	HLD	Retain output frequency	ON	Retain the current output frequency
			OFF	No retention
84	ROK	Permission of Run command	ON	Run command permitted
			OFF	Run command is not permitted
85	EB	Rotation direction detection (C007 only)	ON	Forward rotation
			OFF	Reverse rotation
86	DISP	Display limitation	ON	Only a parameter configured in <b>b038</b> is shown
			OFF	All the monitors can be shown
255	no	No function	ON	(input ignored)
			OFF	(input ignored)

**Output Function Summary Table** – This table shows all functions for the logical outputs (terminals [11], [12] and [AL]) at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in "Using Intelligent Output Terminals" in chapter 4.

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	RUN	Run Signal	ON	When the inverter is in Run Mode

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
01	FA1	Frequency Arrival Type 1-Constant Speed	OFF	When the inverter is in Stop Mode
			ON	When output to motor is at the set frequency
02	FA2	Frequency Arrival Type 2-Over frequency	OFF	When output to motor is OFF, or in any acceleration or deceleration ramp
			ON	When output to motor is at or above the set freq., even if in accel (C042) or decel (C043) ramps
03	OL	Overload Advance Notice Signal 1	OFF	When output to motor is OFF, or at a level below the set frequency
			ON	When output current is more than the set threshold (C041) for the overload signal
04	OD	Output Deviation for PID Control	OFF	When output current is less than the set threshold for the deviation signal
			ON	When PID error is more than the set threshold for the deviation signal
05	AL	Alarm Signal	OFF	When PID error is less than the set threshold for the deviation signal
			ON	When an alarm signal has occurred and has not been cleared
06	FA3	Frequency Arrival Type 3-Set frequency	OFF	When no alarm has occurred since the last cleaning of alarm(s)
			ON	When output to motor is at the set frequency, during accel (C042) and decel (C043).
07	OTQ	Over/under Torque Signal	OFF	When output to motor is OFF, or is not at a level of the set frequency
			ON	Estimated motor torque exceeds the specified level
09	UV	Undervoltage	ON	Estimated motor torque is lower than the specified level
			OFF	Inverter is in Undervoltage
10	TRQ	Torque Limited Signal	OFF	Inverter is not in Undervoltage
			ON	Torque limit function is executing
11	RNT	Run Time Expired	OFF	Torque limit function is not executing
			ON	Total running time of the inverter exceeds the specified value
12	ONT	Power ON time Expired	OFF	Total running time of the inverter does not exceed the specified value
			ON	Total power ON time of the inverter exceeds the specified value
13	THM	Thermal Warning	OFF	Total power ON time of the inverter does not exceed the specified value
			ON	Accumulated thermal count exceeds the C061 set value
19	BRK	Brake Release Signal	OFF	Accumulated thermal count does not exceed the C061 set value
			ON	Output for brake release
20	BER	Brake Error Signal	OFF	No action for brake
			ON	Brake error has occurred
21	ZS	Zero Hz Speed Detection Signal	OFF	Brake performance is normal
			ON	Output frequency falls below the threshold specified in C063
22	DSE	Speed Deviation Excessive	OFF	Output frequency is higher than the threshold specified in C063
			ON	Deviation of speed command and actual speed exceeds the specified value P027.
23	POK	Positioning Completion	OFF	Deviation of speed command and actual speed does not exceed the specified value P027.
			ON	Positioning is completed
24	FA4	Frequency Arrival Type 4-Over frequency	OFF	Positioning is not completed
			ON	When output to motor is at or above the set freq., even if in accel (C045) or decel (C046) ramps
25	FA5	Frequency Arrival Type 5-Set frequency	OFF	When output to motor is OFF, or at a level below the set frequency
			ON	When output to motor is at the set frequency, during accel (C045) and decel (C046).
26	OL2	Overload Advance Notice Signal 2	OFF	When output to motor is OFF, or is not at a level of the set frequency
			ON	When output current is more than the set threshold (C111) for the overload signal
			OFF	When output current is less than the set threshold for the deviation signal

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
27	ODc	Analog Voltage Input Disconnect Detection	ON	When the [O] input value < <b>b070</b> setting (signal loss detected)
			OFF	When no signal loss is detected
28	OIDc	Analog Current input Disconnect Detection	ON	When the [OI] input value < <b>b071</b> setting (signal loss detected)
			OFF	When no signal loss is detected
31	FBV	PID Second Stage Output	ON	Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit ( <b>C053</b> )
			OFF	Transitions to OFF when the PID Process Variable (PV) exceeds the PID High Limit ( <b>C052</b> ), and transitions to OFF when the inverter goes from Run Mode to Stop Mode
32	NDc	Network Disconnect Detection	ON	When the communications watchdog timer (period specified by <b>C077</b> ) has time out
			OFF	When the communications watchdog timer is satisfied by regular communications activity
33	LOG1	Logic Output Function 1	ON	When the Boolean operation specified by <b>C143</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C143</b> has a logical "0" result
34	LOG2	Logic Output Function 2	ON	When the Boolean operation specified by <b>C146</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C146</b> has a logical "0" result
35	LOG3	Logic Output Function 3	ON	When the Boolean operation specified by <b>C149</b> has a logical "1" result
			OFF	When the Boolean operation specified by <b>C149</b> has a logical "0" result
39	WAC	Capacitor Life Warning Signal	ON	Lifetime of internal capacitor has expired.
			OFF	Lifetime of internal capacitor has not expired.
40	WAF	Cooling Fan Warning Signal	ON	Lifetime of cooling fan has expired.
			OFF	Lifetime of cooling fan has not expired.
41	FR	Starting Contact Signal	ON	Either FW or RV command is given to the inverter
			OFF	No FW or RV command is given to the inverter, or both are given to the inverter
42	OHF	Heat Sink Overheat Warning	ON	Temperature of the heat sink exceeds a specified value ( <b>C064</b> )
			OFF	Temperature of the heat sink does not exceed a specified value ( <b>C064</b> )
43	LOC	Low load detection	ON	Motor current is less than the specified value ( <b>C039</b> )
			OFF	Motor current is not less than the specified value ( <b>C039</b> )
44	MO1	General Output 1	ON	General output 1 is ON
			OFF	General output 1 is OFF
45	MO2	General Output 2	ON	General output 2 is ON
			OFF	General output 2 is OFF
46	MO3	General Output 3	ON	General output 3 is ON
			OFF	General output 3 is OFF
50	IRDY	Inverter Ready Signal	ON	Inverter can receive a run command
			OFF	Inverter cannot receive a run command
51	FWR	Forward Rotation	ON	Inverter is driving the motor in forward direction
			OFF	Inverter is not driving the motor in forward direction
52	RVR	Reverse Rotation	ON	Inverter is driving the motor in reverse direction
			OFF	Inverter is not driving the motor in reverse direction
53	MJA	Major Failure Signal	ON	Inverter is tripping with major failure
			OFF	Inverter is normal, or is not tripping with major failure
54	WCO	Window Comparator for Analog Voltage Input	ON	Analog voltage input value is inside of the window comparator
			OFF	Analog voltage input value is outside of the window comparator
55	WCOI	Window Comparator for Analog Current Input	ON	Analog current input value is inside of the window comparator
			OFF	Analog current input value is outside of the window comparator
58	FREF	Frequency Command	ON	Frequency command is given from the operator



Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
		Source	OFF	Frequency command is not given from the operator
59	REF	Run Command Source	ON	Run command is given from the operator
			OFF	Run command is not given from the operator
60	SETM	2 <sup>nd</sup> Motor Selection	ON	2 <sup>nd</sup> motor is being selected
			OFF	2 <sup>nd</sup> motor is not being selected
62	EDM	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	ON	STO is being performed
			OFF	STO is not being performed
63	OPO	Option card output	ON	(output terminal for option card)
			OFF	(output terminal for option card)
255	no	Not used	ON	-
			OFF	-

## Motor Constants Functions



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access

“F” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
H001	Auto-tuning selection	Three option codes: 00...Disabled 01...Enabled with motor stop 02...Enabled with motor rotation	✗	✗	00	-
H002	Motor constant selection	Two option codes: 00...Hitachi standard motor 02...Auto tuned data	✗	✗	00	-
H202	Motor constant selection, 2 <sup>nd</sup> motor		✗	✗	00	-
H003	Motor capacity	Twelve selections: 0.1/0.2/0.4/0.75/1.5/2.2/3.7/ 5.5/7.5/11/15/18.5	✗	✗	Specified by the capacity of each inverter model	kW
H203	Motor capacity, 2 <sup>nd</sup> motor		✗	✗		kW
H004	Motor poles setting	Five selections: 2 / 4 / 6 / 8 / 10	✗	✗	4	poles
H204	Motor poles setting, 2 <sup>nd</sup> motor		✗	✗	4	poles
H005	Motor speed response constant	Set range is 1 to 1000	✓	✓	100.	-
H205	Motor speed response constant, 2 <sup>nd</sup> motor		✓	✓	100.	-
H006	Motor stabilization constant	Motor constant (factory set), range is 0 to 255	✓	✓	100.	-
H206	Motor stabilization constant, 2 <sup>nd</sup> motor		✓	✓	100.	-
H020	Motor constant R1 (Hitachi motor)	0.001~65.535 Ω	✗	✗	Specified by the capacity of each	Ω
H220	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)		✗	✗		Ω



"F" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
H021	Motor constant R2 (Hitachi motor)	0.001~65.535 Ω	×	×	inverter mode	Ω
H221	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		Ω
H022	Motor constant L (Hitachi motor)	0.01~655.35mH	×	×		mH
H222	Motor constant L, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		mH
H023	Motor constant I0 (Hitachi motor)	0.01~655.35A	×	×		A
H223	Motor constant I0, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		A
H024	Motor constant J (Hitachi motor)	0.001~9999 kgm <sup>2</sup>	×	×		kgm <sup>2</sup>
H224	Motor constant J, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		kgm <sup>2</sup>
H030	Motor constant R1 (Auto tuned data)	0.001~65.535Ω	×	×	Specified by the capacity of each inverter mode	Ω
H230	Motor constant R1, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		Ω
H031	Motor constant R2 (Auto tuned data)	0.001~65.535Ω	×	×		Ω
H231	Motor constant R2, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		Ω
H032	Motor constant L (Auto tuned data)	0.01~655.35mH	×	×		mH
H232	Motor constant L, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		mH
H033	Motor constant I0 (Auto tuned data)	0.01~655.35A	×	×		A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		A
H034	Motor constant J (Auto tuned data)	0.001~9999 kgm <sup>2</sup>	×	×		kgm <sup>2</sup>
H234	Motor constant J, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		kgm <sup>2</sup>
H050	Slip compensation P gain for V/f control with FB	0.00-10.00	✓	✓	0.20	-
H051	Slip compensation I gain for V/f control with FB	0.-1000.	✓	✓	2.	-

## PM Motor Constants Functions



**NOTE:** Mark “✓” in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set “10”, high level access.



**NOTE:** Mark “✓” in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set “10”, high level access

“F” Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
H102	PM motor code setting	00...Hitachi standard (Use H106-H110 at motor constants) 01...Auto-Tuning (Use H109-H110, H111-H113 at motor constants)	✗	✗	00	-
H103	PM motor capacity	0.1/0.2/0.4/0.55/0.75/1.1/1.5/2.2/3.0/3.7/4.0/5.5/7.5/11.0/15.0/18.5	✗	✗	kW dependent	kW
H104	PM motor pole setting	2/4/6/8/10/12/14/16/18/20/22/24/26/28/30/32/34/36/38/40/42/44/46/48	✗	✗	kW dependent	Poles
H105	PM Rated Current	(0.00-1.00)×Rated current of the inverter [A]	✗	✗	kW dependent	A
H106	PM const R(Resistance)	0.001-65.535 [Ω]	✗	✗	kW dependent	Ω
H107	PM const Ld(d-axis inductance)	0.01-655.35 [mH]	✗	✗	kW dependent	mH
H108	PM const Lq(q-axis inductance)	0.01-655.35 [mH]	✗	✗	kW dependent	mH
H109	PM const Ke(Induction voltage constant)	0.0001-6.5535 [V/(rad/s)]	✗	✗	kW dependent	V/(rad/s)
H110	PM const J(Moment of inertia)	0.001-9999.000 [kgm <sup>2</sup> ]	✗	✗	kW dependent	kgm <sup>2</sup>
H111	PM const R (Resistance, Auto)	0.001-65.535 [Ω]	✗	✗	kW dependent	Ω
H112	PM const Ld(d-axis inductance, Auto)	0.01-655.35 [mH]	✗	✗	kW dependent	mH
H113	PM const Lq(q-axis inductance, Auto)	0.01-655.35 [mH]	✗	✗	kW dependent	mH
H116	PM Speed Response	1-1000 [%]	✓	✓	100	%
H117	PM Starting Current	20.00-100.00 [%]	✗	✗	70.00[%]	%
H118	PM Starting Time	0.01-60.00 [s]	✗	✗	1.00[s]	s
H119	PM Stabilization Constant	0-120 [%]	✓	✓	100[%]	%
H121	PM Minimum Frequency	0.0-25.5 [%]	✓	✓	8.0 [%]	%
H122	PM No-Load Current	0.00-100.00 [%]	✓	✓	10.00 [%]	%
H123	PM Starting Method Select	00... Normal 01... Initial Magnet Position Estimation	✗	✗	0	-

"F" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
H131	PM Initial Magnet Position Estimation 0V Wait Times	0-255	✗	✗	10	-
H132	PM Initial Magnet Position Estimation Detect Wait Times	0-255	✗	✗	10	-
H133	PM Initial Magnet Position Estimation Detect Times	0-255	✗	✗	30	-
H134	PM Initial Magnet Position Estimation Voltage Gain	0-200	✗	✗	100	-

H102 to H134 are displayed only when PM mode. PM mode only.

## Expansion Card Functions

"P" parameters will be appeared when the expansion option is connected.



**NOTE:** Mark "✓" in A line of [ Run Mode Edit] shows the accessible parameters when b031 is not set "10", high level access.



**NOTE:** Mark "✓" in B line of [ Run Mode Edit] shows the accessible parameters when b031 is set "10", high level access

"P" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
P001	Reaction when option card error occurs	Two option codes: 00...Inverter trips 01...Ignores the error (Inverter continues operation)	✗	✓	00	-
P003	[EA] terminal selection	Three option codes: 00...Speed reference (incl. PID) 01...For control with encoder feedback 02...Extended terminal for EzSQ	✗	✗	00	-
P004	Pulse train input mode selection for feedback	Four option codes: 00...Single-phase pulse [EA] 01...2-phase pulse (90° difference) 1 ([EA] and [EB]) 02...2-phase pulse (90° difference) 2 ([EA] and [EB]) 03...Single-phase pulse [EA] and direction signal [EB]	✗	✗	00	-
P011	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32~1024 pulses	✗	✗	512.	-
P012	Simple positioning selection	Two option codes: 00...simple positioning deactivated 01...simple positioning activated	✗	✗	00	-
P015	Creep Speed	Set range is start frequency (b082) ~10.00 Hz	✗	✓	5.00	Hz
P026	Over-speed error detection level	Set range is 0~150%	✗	✓	115.0	%
P027	Speed deviation error detection level	Set range is 0~120 Hz	✗	✓	10.00	Hz
P031	Deceleration time Input Type	00...Operator, 01...EzSQ	✗	✗	00	-

"P" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
P033	Torque command input selection	Four option codes: 00...Analog voltage input [O] 01...Analog current input [OI] 03...Operator, 06...Option	✗	✗	00	-
P034	Torque command level input	Set range is 0~200%	✓	✓	0.	%
P036	Torque bias mode selection	Two option codes: 00...No bias 01...Operator	✗	✗	00	-
P037	Torque bias value setting	Range is -200~200%	✓	✓	0.	%
P038	Torque bias polar selection	Three option codes: 00...According to the sign 01...According to the rotation direction 05...Option	✗	✗	00	-
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✗	✗	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00~120.00Hz	✗	✗	0.00	Hz
P041	Speed / Torque control switching time	Set range is 0 to 1000 ms.	✗	✗	0.	ms
P044	Communication watchdog timer (for option)	Set range is 0.00 to 99.99 seconds.	✗	✗	1.00	s
P045	Inverter action on communication error (for option)	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	✗	✗	00	-
P046	DeviceNet polled I/O: Output instance number	0 to 20	✗	✗	01	-
P048	Inverter action on communication idle mode	00 (tripping), 01 (tripping after decelerating and stopping the motor), 02 (ignoring errors), 03 (stopping the motor after free-running), 04 (decelerating and stopping the motor)	✗	✗	00	-
P049	Motor poles setting for RPM	0/2/4/6/8/10/12/14/16/18/20/22/24/26/28/30/32/34/36/38/40/42/44/46/48	✗	✗	0	Poles
P055	Pulse train input frequency scale setting	Sets the pulse numbers at max. frequency, set range is 1.0~32.0 kHz	✗	✓	1.5	kHz
P056	Pulse train input frequency filter time constant setting	Set range is 0.01~2.00 seconds.	✗	✓	0.10	s
P057	Pulse train input bias setting	Set range is -100~100 %	✗	✓	0.	%
P058	Limitation of the pulse train input setting	Set range is 0~100 %	✗	✓	100.	%
P060	Multistage position 0	P073 to P072 (Displayed higher 4-digits only)	✓	✓	0	Pulses
P061	Multistage position 1		✓	✓	0	Pulses
P062	Multistage position 2		✓	✓	0	Pulses
P063	Multistage position 3		✓	✓	0	Pulses
P064	Multistage position 4		✓	✓	0	Pulses
P065	Multistage position 5		✓	✓	0	Pulses

"P" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
P066	Multistage position 6		✓	✓	0	Pulses
P067	Multistage position 7		✓	✓	0	Pulses
P068	Homing mode selection	00...Low speed mode 01...High speed mode	✓	✓	00	-
P069	Homing direction	00...Forward rotation side 01...Reverse rotation side	✓	✓	01	-
P070	Low speed homing freq.	0 to 10Hz	✓	✓	5.00	Hz
P071	High speed homing freq.	0 to 400Hz	✓	✓	5.00	Hz
P072	Position range (Forward)	0 to +268435455(Higher 4-digits displayed)	✓	✓	268435455	Pulses
P073	Position range (Reverse)	-268435455 to 0(Higher 4-digits displayed)	✓	✓	-268435455	Pulses
P075	Positioning mode selection	00...With limitation 01...No limitation (shorter route) P004 is to be set 00 or 01	✗	✗	00	-
P077	Encoder disconnection timeout	0.0 to 10.0 seconds.	✓	✓	1.0	s
P100 ~ P131	EzSQ user parameter U(00) ~ U(31)	Each set range is 0~65535	✓	✓	0.	-
P140	EzCOM number of data	1 to 5	✓	✓	5	-
P141	EzCOM destination 1 address	1 to 247	✓	✓	1	-
P142	EzCOM destination 1 register	0000 to FFFF	✓	✓	0000	-
P143	EzCOM source 1 register	0000 to FFFF	✓	✓	0000	-
P144	EzCOM destination 2 address	1 to 247	✓	✓	2	-
P145	EzCOM destination 2 register	0000 to FFFF	✓	✓	0000	-
P146	EzCOM source 2 register	0000 to FFFF	✓	✓	0000	-
P147	EzCOM destination 3 address	1 to 247	✓	✓	3	-
P148	EzCOM destination 3 register	0000 to FFFF	✓	✓	0000	-
P149	EzCOM source 3 register	0000 to FFFF	✓	✓	0000	-
P150	EzCOM destination 4 address	1 to 247	✓	✓	4	-
P151	EzCOM destination 4 register	0000 to FFFF	✓	✓	0000	-
P152	EzCOM source 4 register	0000 to FFFF	✓	✓	0000	-
P153	EzCOM destination 5 address	1 to 247	✓	✓	5	-
P154	EzCOM destination 5 register	0000 to FFFF	✓	✓	0000	-
P155	EzCOM source 5 register	0000 to FFFF	✓	✓	0000	-
P160 to P169	Option I/F command register to write[1]~[10]	0000 to FFFF	✓	✓	0000	-
P170 to P179	Option I/F command register to read[1]~[10]	0000 to FFFF	✓	✓	0000	-
P180	Profibus Node address	0 to 125	✗	✗	0.	-

"P" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>P181</b>	Profibus Clear Node address	00(clear)/01(not clear)	×	×	00	-
<b>P182</b>	Profibus Map selection	00(PPO)/01(Conventional)/ 02 (Flexible Mode Format Selection)	×	×	00	-
<b>P185</b>	CANOpen Node address	0 to 127	×	×	0	-
<b>P186</b>	CANOpen speed selection	00 to 08	×	×	06	-
<b>P190</b>	CompoNet Node address	0 to 63	×	×	0	-
<b>P192</b>	DeviceNet MAC ID	0 to 63	×	×	63	-
<b>P195</b>	ML2 frame length	00 (32bytes) / 01(17bytes)	×	×	00	-
<b>P196</b>	ML2 Node address	21h to 3Eh	×	×	21h	h

# Additional function

## For Version 3



In This Chapter...	page
- Inverter mode selection.....	2
- Operation condition of speed detection .....	3
- "Position feedback monitor (d030)" enabling at "simple positioning"-off .....	3
- Frequency source monitor .....	3
- Run source monitor .....	3
- LAD cancel by setting ACC/DEC .....	4
- Analog input O/OI monitor(always active) .....	4
- Pulse train input monitor (always active) .....	4
- PID deviation monitor .....	5
- PID output monitor .....	5
- Over-current Trip Suppression: b027-.....	6
- Output frequency range from 0.01Hz to 400Hz .....	7
- Support of multiple pole 3 Phase Induction motors(Up to 48 pole motor) .....	7
- Creep pulse ratio(simple positioning).....	8
- Frequency reference by pulse train input.....	10
- Restarting simple positioning .....	11
- Simple positioning & Brake control co-operation .....	14
- Simple positioning(current position store at shut down) .....	16
- Simple positioning(preset function by PSET terminal) .....	16
- Electronic thermal improve .....	17
- IRDY old/new spec. selection.....	21
- Initial value change of the PM motor control relations parameter .....	22
- Modbus Mapping function .....	23
- Holding register big endian · Little endian select .....	64
- Electronic Thermal detection system Error.....	85
- Modbus Data Listing.....	86
- Drive Parameter Setting Tables .....	120

**Note :**

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

## Inverter mode selection

- Current mode of the inverter is displayed in d060.
- It changes to the PM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 03, and initialization is executed. Oppositely, it changes to the IM mode by setting the initialization trigger (b180) to 01 after setting the inverter mode selection (b171) to 01, and initialization is executed.

■ When changing inverter mode, observe the following precautions.

- ① The Factory default is IM mode.
- ② When inverter mode changing, b084 setting is not needed.
- ③ When PM mode, "Dual Rating Selection" is only "CT mode".
- ④ When 01 is set on the initialization trigger (b180), and SET key is pressed, initialization starts immediately and there is not any way to restore the previous parameter setting.
- ⑤ All data will be initialized independent of b094.
- ⑥ The settings of "P100" to "P131", running-time data, and power-on time data cannot be cleared.
- ⑦ When display is restricted by the function code display restriction function (b037) or software is locked by the software lock function (b031), you cannot initialize because the function codes of initialization are no-display. If you forget password that restrict setting (b031) and (b037), you cannot cancel it. (So you cannot initialize when software lock is active, you note that the setting password. (See section 7.6.11 the password function.))



**NOTE:** Parameters marked with "✓" in A column are accessible even in inverter running.  
Parameters marked with "✗" in B column are accessible even in inverter running when in the high level access mode, which means that b031 is set to "10".

"b" Function			Run Mode Edit		Defaults	
Func. Code	Name	Description	A	B	Initial data	Units
<b>b171</b>	Inverter mode selection	00...Not change inverter mode 01...IM mode 03...PM mode	✗	✗	00	-
<b>b180</b>	Initialization trigger	00... No action 01... Initialize	✗	✗	00	-



## Operation condition of speed detection

·"Actual-frequency monitor(d008)" is valid, when P003=01, even if both "V/f control with FB" and "simple positioning" are invalid. In a word, That is independent of the setting of A044 and P012.

## "Position feedback monitor (d030)" enabling at "simple positioning"-off

·"Position feedback monitor (d030)" for "simple positioning" is valid, when P003=01. That is independent of the setting of P012. d030 is cleared with even P012=00 ("simple positioning" invalidity) and PCLR ON.

In the case of P012=00, terminal function PCLR, PSET is valid.

## Frequency source monitor

·It displays the frequency source that considered the A001 / A201 and intelligent input selections (CF1 – CF4, JG, SET, AT, OPE, SF1 – SF7, and F-TM).Following are the related parameters for this function.

Func. Code	Name	Frequency source	Front Panel Display
d062	Frequency source monitor	Operator	0
		Multi-speed freq. 1 to 15	1 ~ 15
		Jog frequency	16
		Modbus network	18
		Option	19
		Potentiometer	21
		Pulse train	22
		Calculate function output	23
		EzSQ	24
		[O] input	25
		[OI] input	26
		[O] + [OI]	27

## Run source monitor

·It displays the RUN source that considered the A002 / A202 and intelligent input selections (SET, OPE, and F-TM).Following are the related parameters for this function.

Func. Code	Name	Run source	Front Panel Display
d063	Run source monitor	Terminal	1
		Operator	2
		Modbus network	3
		Option	4

## LAD cancel by setting ACC/DEC

·The lower limit of the acceleration/deceleration time's set range,such as F002/F003,is 0.00.

Object parameter:

F002, F202, F003, F203, A092, A292, A093, A293

·When the applied acceleration/deceleration time is 0.00[s], the inverter operate similar to LAC ON.

·The inverter sets the instruction frequency into the output frequency whenever the driving instruction FW/RV is ON and LAC is ON. And, the inverter sets 0Hz into the output frequency when the driving instruction FW/RV is OFF.


## Analog input O/OI monitor(always active)

·About “Analog input O”, monitor display (d130) newly added. Its data range is 0-1023 and always active.

About “Analog input OI”, monitor display(d131) newly added. Its data range is 0-1023 and always active.

## Pulse train input monitor (always active)

·The monitor of the pulse train input to the terminal EA is always valid and is independent of any parameter setting. That is displayed in the menu "d133" newly installed. That is the value after the Full Scale(P055) conversion and the filter processing with the time constant(P056), and before bias(P057) processing. The unit of the data is [0.01%(Full Scale(P055) standard)].The data can be read from Modbus and EzSQ.

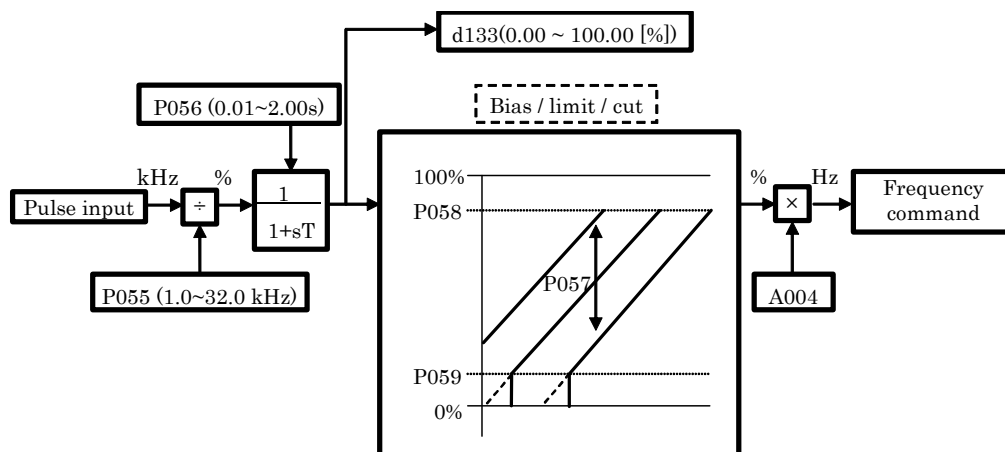

## PID deviation monitor

·PID deviation monitor added. It is enabled to monitor it only at PID function effective (A071 = 01 or 02).

Following are the related parameters for this function

$$d153 = \text{PID deviation} \times \text{PID scale (A075)}$$

Following are the related parameters for this function.

Func. Code	Name	Description
<b>d153</b>	PID deviation monitor	-999~9999. [%]
<b>A071</b>	PID enable	<b>00</b> ... PID disable <b>01</b> ... PID enable <b>02</b> ... PID enable with reverse output
<b>A075</b>	PV scale conversion	0.01 ~99.99

## PID output monitor

·It displays the scaled PID output. It is enabled to monitor it only at PID function effective (A071 = 01 or 02).Following are the related parameters for this function.

$$d155 = \text{PID output value}$$

\* "PID output value" is a value limited by frequency limit (A061/A261,A062/A262) and PID output limit (A078).


d155 displays a value after it was set a limit.

Func. Code	Name	Description
<b>d155</b>	PID output monitor	0.00~100.0[%] (A071 = 01) -100.~100.0[%] (A071 = 02)
<b>A071</b>	PID enable	<b>00</b> ... PID disable <b>01</b> ...PID enable <b>02</b> ...PID enable with reverse output

## Over-current Trip Suppression: b027-

The Over-current Trip Suppression function monitors the motor current and actively changes the output frequency profile to maintain the motor current within the limits. Although "LAD" refers to "linear acceleration / deceleration", the inverter only "STOPS" the acceleration and deceleration ramp so that it will not cause an over-current trip event.

The graph at right shows an inverter output profile that starts acceleration to a constant speed. At two different points during the acceleration, motor current increases and exceeds the fixed level of Over-current Trip Suppression level.

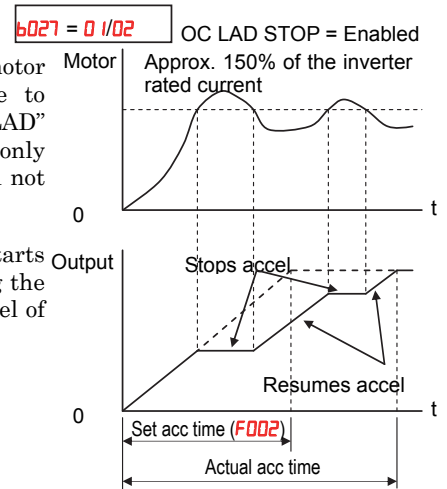

When the Over-current Trip Suppression feature is enabled by **b027 = 01/02**, the inverter stops the acceleration ramp in each case until the motor current level is again less than the threshold value, which is approximately 180% of the rated current of the inverter.

When using the Over-current Trip Suppression feature, please note the following:

- When the feature is enabled (**b027 = 01/02**), the actual acceleration may be longer than the value set by parameters **F002/F202** in some cases.
- The Over-current Trip Suppression feature does not operate by maintaining a constant motor current, so it does not prevent Over-current Trip events completely. Over-current trip event may happen during extreme acceleration or by the short-circuit states for example.
- When **b027** set to "02...Enable with voltage reduction", the Over-current Trip Suppression function raises the effect by reducing output voltage after an acceleration and deceleration halt. Following are the related parameters for this function.

Func. Code	Name	Description
<b>b027</b>	OC suppression selection	<b>00</b> ...Disabled
		<b>01</b> ...Enabled without voltage reduction
		<b>02</b> ...Enable with voltage reduction (Added by Ver.3.0)

## Output frequency range from 0.01Hz to 400Hz

· Start frequency adjustment – When the inverter starts to run, the output frequency does not ramp from 0Hz. Instead, it steps directly to the “Start frequency” (b082), and the ramp proceeds upward from there. When you set the “Start frequency” to 0.01Hz, the output frequency starts from 0.01Hz.

The Following are the related parameters for this function.

Func. Code	Name	Description
<b>b082</b>	Start frequency	0.01~9.99[Hz]

〈Caution〉

If you set the “Set frequency” (F001) to extremely low value, the motor may stall or be unstable rotating. Especially in the simple positioning mode, if you set the “Creep speed” (P015) to low value, the simple positioning may not work properly because of motor stalled.

## Support of multiple pole 3 Phase Induction motors (Up to 48 pole motor)

· Following are the related parameters for this function.

Func. Code	Name	Description
<b>H004</b>	Motor poles setting	2(0)/4(1)/6(2)/8(3)/10(4)/12(5)/14(6)/16(7)/18(8)/ 20(9)/22(10)/24(11)/26(12)/28(13)/30(14)/32(15)/
<b>H204</b>	Motor poles setting, 2nd motor	34(16)/36(17)/38(18)/40(19)/42(20)/44(21)/46(22)/ 48(23)[pole(data)]

〈Caution〉

In the case of "Motor capacity" (H003/H203) and "motor poles setting" (H004/AH204) are configured to correspond with the motor, the values of "motor constant data" (H020/H220 to H024/H224) are automatically overridden by Hitachi standard motor's value.

With Hitachi inverter, if 8 poles or more poles are set up, 8 poles, which is Hitachi Standard mortar value, are automatically applied. If necessary, manually configure motor constants.

Please note working of motors with 8 poles or more are not guaranteed. Some mortar may work unstable in such cases..

## Creep pulse ratio(simple positioning)

· A parameter to appoint creep interval at the time of the simple position control added.

Following is the related parameter for this function.

Func. Code	Name	Description
<b>P014</b>	Creep pulse ratio	0.0~400.0[%]
<b>P011</b>	Encoder pulse setting	32~1024[pulse]
<b>P015</b>	Creep Speed	Start Frequency(b082)~10.00[Hz]
<b>H004</b>	Motor poles setting	2(0)/4(1)/6(2)/8(3)/10(4)/12(5)/14(6)/16(7)/18(8)/
<b>H204</b>	Motor poles setting,2nd motor	20(9)/22(10)/24(11)/26(12)/28(13)/30(14)/32(15)/
		34(16)/36(17)/38(18)/40(19)/42(20)/44(21)/46(22)/
		48(23)[pole(data)]
<b>b082</b>	Start frequency	0.01~9.99[Hz]

· Here, P014 indicates the “Internal special parameter” for “Creep pulse ratio”, that can be set by specifying the address with Debug Mode. It is only one method.

Creep ratio adjustment – The creep driving time is determined by counting the number of pulse during creep driving. “Creep pulse ratio” is possible to set the number of creep pulse as the ratio of the encoder pulse setting.

The number of creep pulse (N[pulse]) is calculated as follows.

$$N(\text{pulse}) = P011(\text{pulse : Encoder pulse setting}) \times \frac{P014(\% : \text{Creep Pulse ratio})}{100}$$

The time during the creep driving (T[s]) is calculated as follows.

$$T(\text{s}) = \frac{1}{P015(\text{Hz : Creep speed})} \times \frac{H004\text{or}H204(\text{Pole : Motor poles setting})}{2} \times \frac{N(\text{pulse : Creep pulse})}{P011(\text{pulse : Encoder pulse setting})}$$

Default setting “125%” is equivalent to 5/4 cycle of the motor when counting pulse of one cycle are equivalent to the encoder pulse setting (P011). This is the current spec

〈Caution〉

If you set the “Creep ratio” to extremely low value, the simple positioning may not work properly because of motor overshoot.





○Example

Settings : P011=1000[pulse]; P015=1.00[Hz]; H004=4[pole]

Case1 : P014=50.0[%] ; N[pulse]=500[pulse]; T[s]=1.0[s]

Case2 : P014=100.0[%] ; N[pulse]=1000[pulse]; T[s]=2.0[s]

Case3 : P014=200.0[%] ; N[pulse]=2000[pulse]; T[s]=4.0[s]

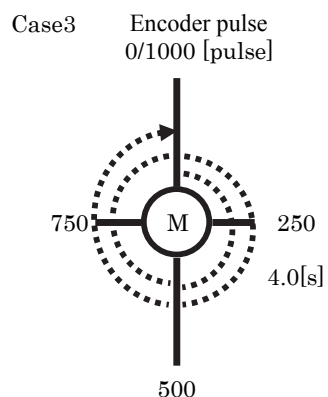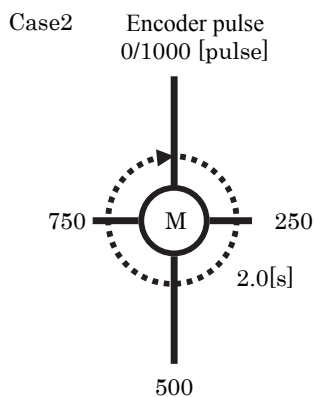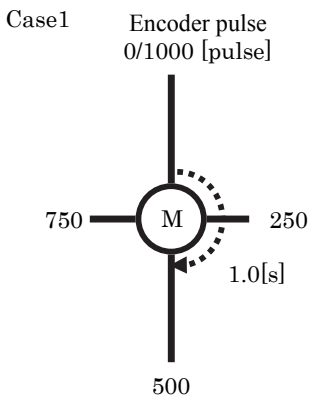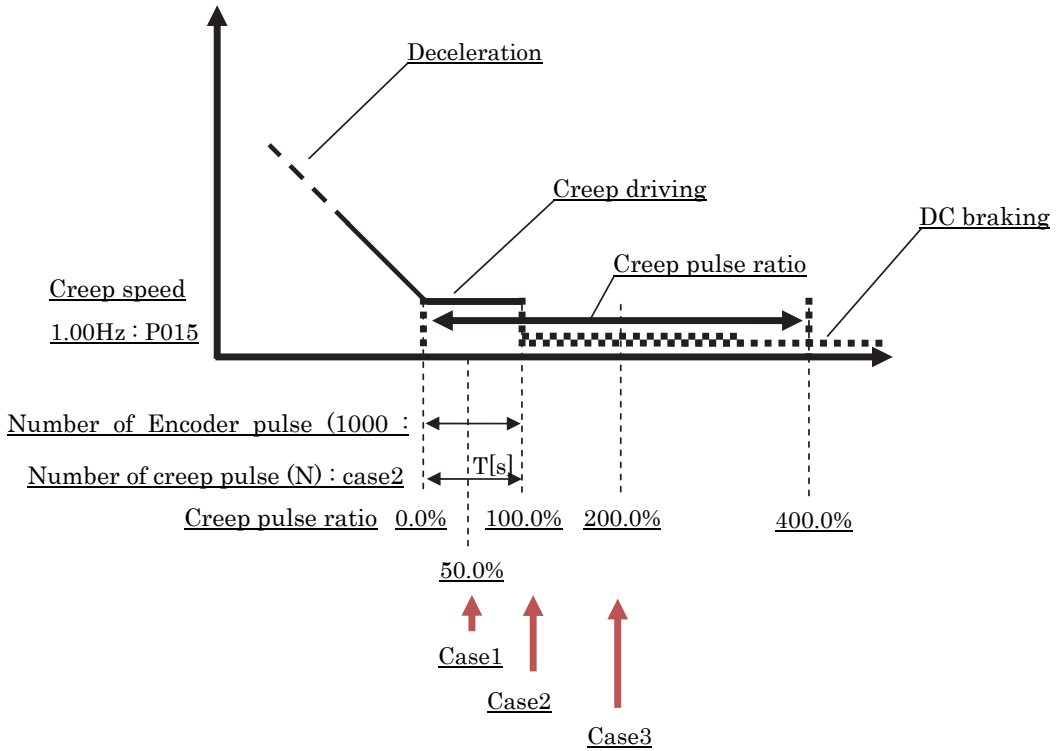


## Frequency reference by pulse train input

· Pulse input trigger at slow speed – The pulse train input frequency detected is 0% less than the Pulse input lower cut setting. If the pulse is not detected, the inverter’s reaction is too slow when the pulse can be detected to low speed. Pulse input lower cut setting can be set the pulse input trigger and the reaction to stop can be quick.

Default setting “1.00%” is 0.5Hz (as the maximum frequency is 50.0Hz) which is equivalent to default setting of the start frequency (b082).

Following are the related parameter for this function.

Func. Code	Name	Description
d133	Pulse train input monitor	0.00~100.00[%]
A004/ A204	Maximum frequency 1st/2nd	30.0~400.0[Hz]
P055	Pulse train input frequency scale setting	1.0~32.0[kHz]
P056	Pulse train input frequency filter time constant setting	0.01~2.00[s]
P057	Pulse train input bias setting	-100.~100.[%]
P058	Limitation of the pulse train input setting	0.~100.[%]
P059	Pulse input lower cut setting	0.01~20.00[%]

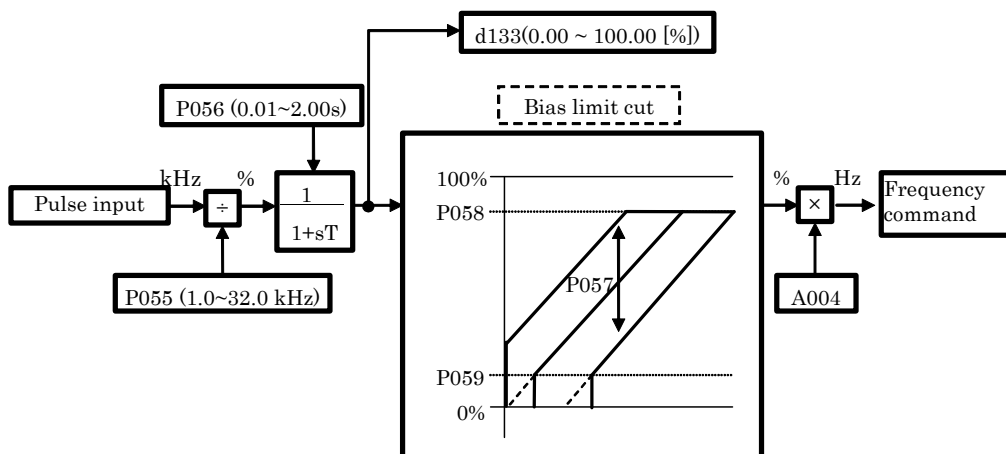

Pulse input block

〈Caution〉

If you set the “Pulse input lower cut setting” to high value, the motor may start to run slowly to cut the input frequency.



## Restarting simple positioning

· If the new addition parameter P080 is not "0",  
when the condition

$$| \text{Position error} | > P080$$

is TRUE, the inverter cancel DB and restart position management.

To avoid repetition of a stop and the restarting of the position management,  
Please set parameter P080 so that condition

$$P080 > P017$$

is TRUE.

· In the case of P080=0, the simple positioning function operate same as Step 2-3 and before that.

In other words, when the condition

$$| \text{Position error} | \leq P017$$

is TRUE, the inverter stop position management and operate DB.

In this state, as a result of a motor was turned in external force, evenif the condition


$$| \text{Position error} | > P017$$

is TRUE, the inverter maintain DB, and does not restart position management.


※The inverter handles both values of P017, P080 as 4 multiply value.

And the inverter directly compares these values with a position error inside level and judge.

Func. Code	Name	Description
<b>P017</b>	Positioning completion range	0 to 9999. /1000 (10000) [pulse]
<b>P080</b>	Positioning restart range	0 to 9999. /1000 (10000) [pulse]

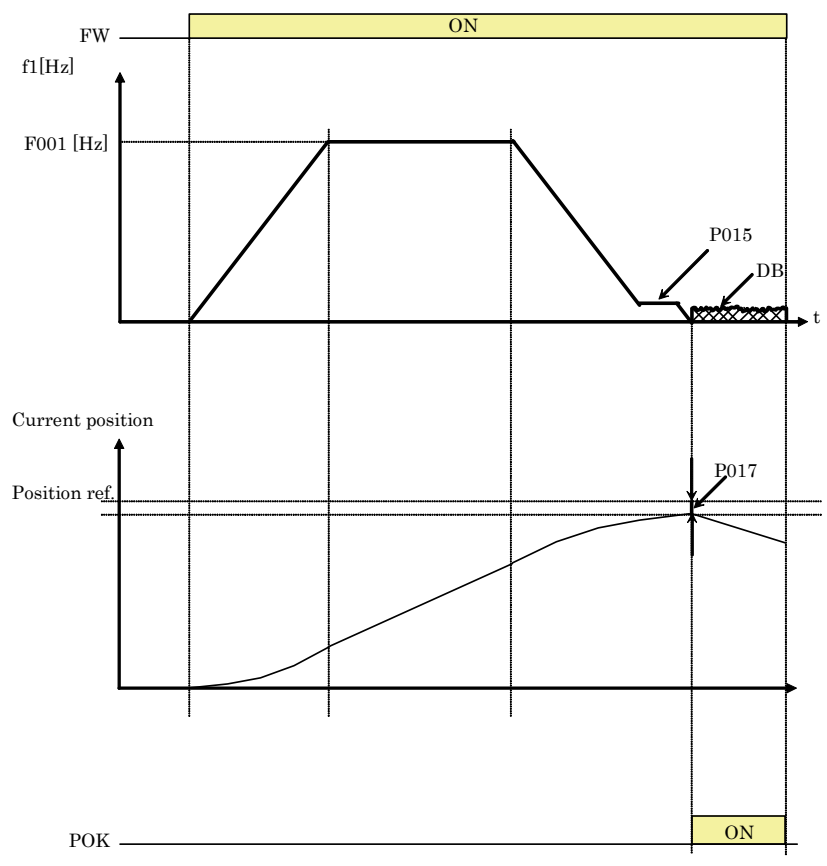


Restarting simple positioning OFF( P080 = 0.)

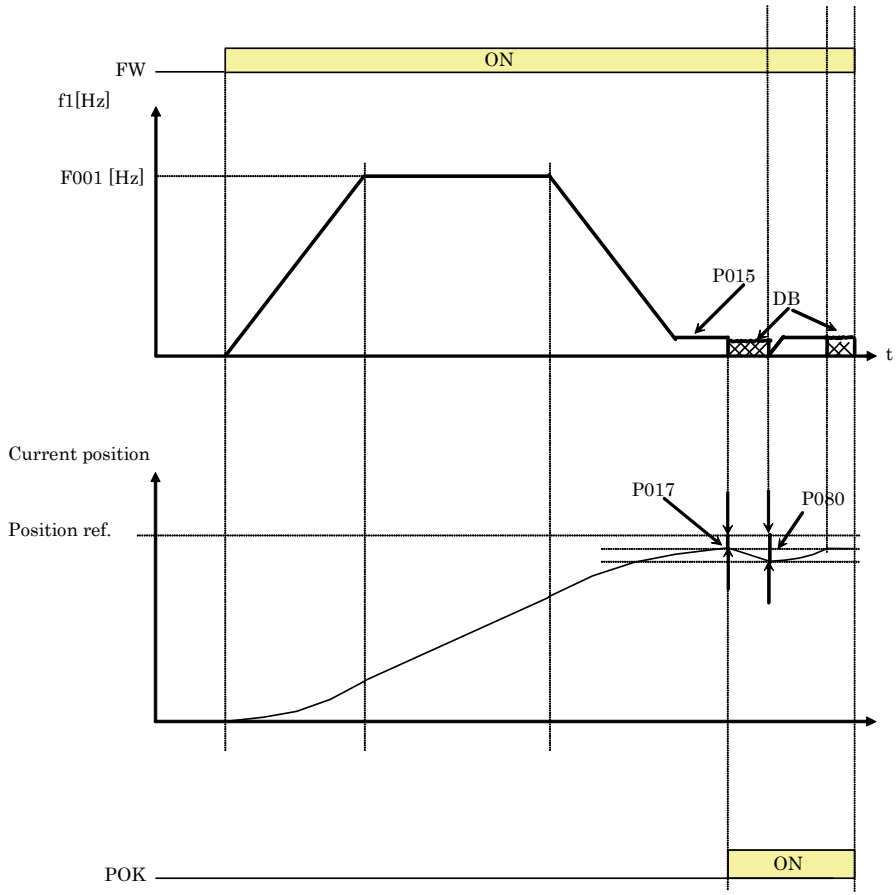

Restarting simple positioning ON( P080 ≠ 0)

## Simple positioning & Brake control co-operation

· In the case of brake control function is enable(b120=01 or 02) and simple positioning function is enabled(P012=02), the inverter turns Brake ON, when position management was terminated. At this time, the inverter automatically ignores (b127) and applies Creep speed setting(P015) as Brake on frequency. And the inverter automatically ignores (b125) and applies Creep speed setting(P015) as Brake release frequency.

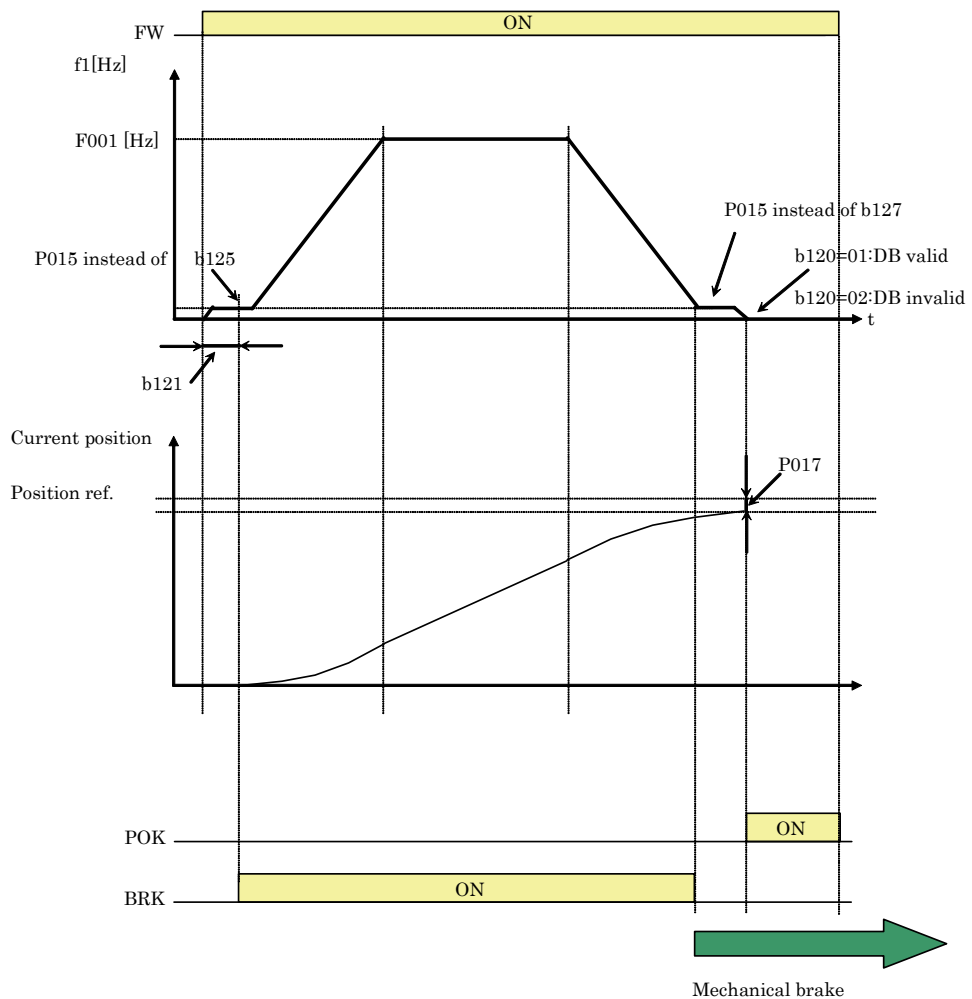

Link operation of Simple positioning and Brake control function(b120=01 or 02, P012=02)

· In the case of b120 = 01 or 02, it becomes the action of the list shown below about DB (direct current braking) at position control end time. Following are the related parameter for this function.

Func. Code	Name	Description
<b>b120</b>	Brake control enable	Two option codes: <b>00</b> ...Disable <b>01</b> ...P012=00:Enable/ P012=02:Enable with DC breaking at positioning end <b>02</b> ... P012=00:Enable/ P012=02:Enable without DC breaking at positioning end
<b>P012</b>	Simple positioning selection	Two option codes: <b>00</b> ...simple positioning deactivated <b>02</b> ...simple positioning activated

Mode of cooperation of the simple positioning and the braking control

P012	b120	Simple positioning	Brake control
00	00	OFF	OFF
	01		ON
	02		ON (Same as b120=01)
02	00	ON (position management end: DB valid)	OFF
	01	ON (position management end: DB valid)	ON
	02	ON (position management end: DB invalid)	ON (Same as b120=01)

## Simple positioning(current position store at shut down)

- In the case of P081 = 01 of the new addition, the inverter stores a current position (inside 4 multiply data) into P082 on the EEPROM at the time of power supply shut down. And at the time of power activation, the inverter set a value of P082 into a current position inside level.
- Please handle P082 as Read Only parameter

## Simple positioning(preset function by PSET terminal)

- When input terminal function, "PSET(91) which added newly as a set range of C001 ~ C007 " is ON, the inverter set a value of (P083 \*4) into a current position inside level. Here, P083 is the value that is not 4 multiply like a position command.
  - This function is effective about P075( Positioning Mode Selection) = 00.  
In addition, it is effective about both of P012 (simple positioning selection) = 00 (invalid) or 02 (valid).
-

## Electronic thermal improve

· It is with separation action possibility in inverter use and the electronic thermal for the motor when I establish it with  $b910 \neq 00$ . It depends on plural pattern / rate and becomes able to subtract electronic thermal integrated value from in consideration of the heat production of the motor then.

I establish subtract rate in each pattern in  $b911/b912$ . Please establish the large value with enough margins for the characteristic of the application motor.

It becomes  $b910 = 00$  and the conventional action not to separate motor use and inverter use when I establish it.

· I establish electronic thermal totalizing gain of  $b910=01 - 03:00$  in  $b913$ .

If I establish 100%, it becomes the totalizing same as before. The time to trip gets longer when you establish  $b913$  small, and, please warn him because a protection is a direction becoming late.

Characteristics of electronic thermal protection for inverter according to  $b910$  setting

Item		b910 (electronic thermal protection subtraction function selection)			
		00	01	02	03
Electronic Thermal protection for INV	Characteristics	Before Ver.3.0 (common to Motor)	Characteristics for inverter thermal protection is fixed (Identical to the constant torque characteristics before Ver.3.0 with thermal level $b012$ of rated current)		
	$b012 \sim b020$	valid	invalid		
	Time constant (accumulation)	Dual Rating (2 modes : VT/VT)			
	Subtraction	Not Available			
	Error Code	E05	E38 (Inverter Electronic Thermal Protection)		

Characteristics of electronic thermal protection for motor according to  $b910$  setting

Item		b910 (electronic thermal protection subtraction function selection)			
		00	01	02	03
Electronic Thermal protection for Motor	Characteristics	Before Ver.3.0 (Common to inverter)	Not common with inverter when subtraction valid		
	$b012 \sim b020$	valid	Valid (only for motor)		
	Time constant (accumulation)	Prepared for Dual rating (CT/VT)	Time constant for 1 mode of CT is used ( $b913$ is applied)		
	Subtraction	Not Available	Subtraction max to zero in 10 minutes.	Subtraction max to zero in the time defined with $b911$	Subtraction with time constant set as $b912$
	Error Code	E05			

## Electronic thermal subtract function association parameter

Func. Code	Name	Description
<b>b910</b>	Electronic thermal subtraction function selection	<b>00</b> ...OFF <b>01</b> ...Linear subtraction: pre-fixed ratio <b>02</b> ...Linear subtraction: ratio set in b911 <b>03</b> ...Subtraction with first-order lag filter: ratio set in b912
<b>b911</b>	Thermal subtraction time	Out of warranty when setting less than initial value (600[s]) [this function is valid when electronic thermal protection selection (b910)=02]  0.10 to 100000.00[s] (upper four digits are shown)
<b>b912</b>	Thermal subtraction time constant	Out of warranty when setting less than initial value (120[s]) [this function is valid when electronic thermal protection selection (b910)=03]  0.10 to 100000.00[s] (upper four digits are shown)
<b>b913</b>	Thermal accumulation gain	Out of warranty when setting less than initial value (100[%])  1.0 to 200.0 [%]



## (1) Subtraction function of electronic thermal for motor

Electronic thermal protection selection parameter (b910) is prepared to be able to select from 3 patterns. When b90=0 is set, subtraction is invalid and identical to function before Ver.3.0.

## ① when b910 = 01

when output current is less than thermal count level, subtracted constantly with fixed rate as max value thermal counter (trip level) down to 0 in 10 minutes.

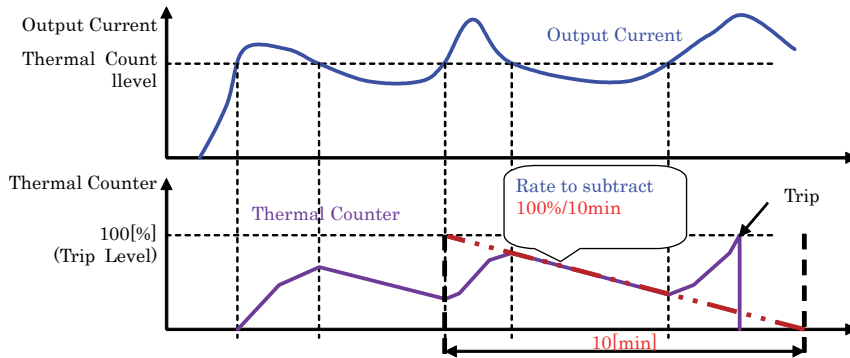


Fig.1 Thermal Counter subtraction image when b910=01

② When  $b910 = 02$

when output current is less than thermal count level, subtracted constantly with fixed rate as max value thermal counter (trip level) down to 0 within the time defined with thermal subtraction time ( $b911$ ).

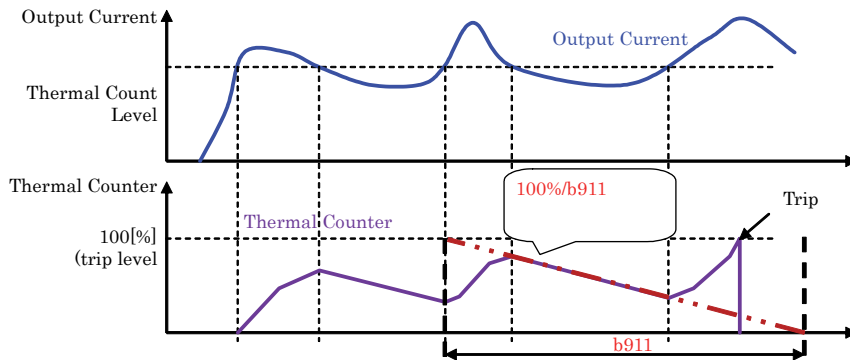


Fig.2 Thermal Counter Subtraction Image when  $b910=02$

③ when  $b910 = 03$

When output current is less than thermal count level, subtracted with the value equal to thermal counter value multiplied with linear filter of time constant ( $b912$ ) and target as 0. (when output current keeps to be less than thermal count level, thermal counter becomes 0 within a time approximately 5 times  $b912$ )

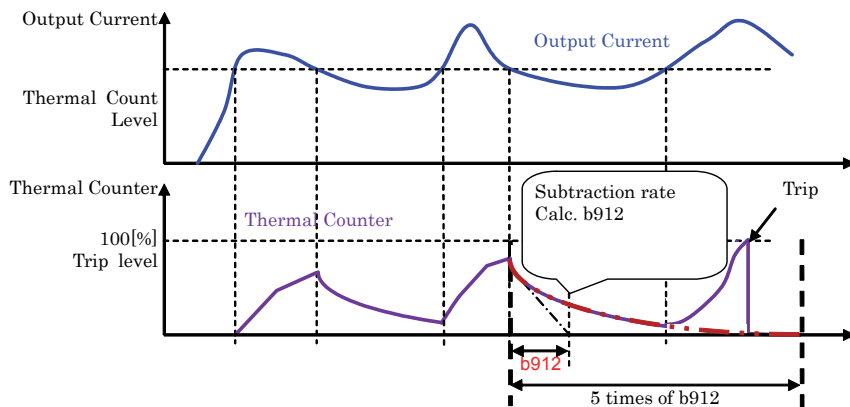


Fig.3. Thermal Counter Subtraction Image when  $b910=03$

## (2) Electronic Thermal Accumulation Gain

Only for accumulation for motor electronic thermal protection, value to accumulate is multiplied with electronic thermal accumulation gain (b913) instead of standard value. When b910=00 and common to inverter protection, b913 is void.

## (3) Electronic Thermal Function for inverter

when electronic thermal protection subtraction selection (b910) is set other than 0, electronic thermal protection for inverter and motor are separated. Electronic thermal protection for inverter in this case is as described below.

## ① Thermal protection characteristics for inverter is fixed

(Identical to the electronic thermal protection before Ver.3.0 with constant torque characteristics with thermal level b012 with rated current)

## ② Characteristics is independent from b012-b020 setting therefore. (only for electronic thermal protection for Motor is valid)

## ③ To be remarked that dual rating is considered. (it follows to CT/VT time constant)

④ Error code for inverter's electronic thermal protection is E38 (inverter thermal protection). (Error code for motor electronic thermal protection remains to be E05)  
E38 trip cannot be reset for 10 seconds, identical to E05.

## ⑤ Subtraction is invalid for inverter electronic thermal protection.

When b910=0, electronic thermal protection for inverter and motor is common. (same before Ver.3.0)

Following Table is summary of electronic thermal protection according to b910 setting

## IRDY old/new spec. selection

· With the inverter which there is parameter C900 in ON condition of the IRDY signal,

It can be selected whether GS1/GS2 signal is added by that parameter.

Code	Name	Description	Initial data
C900	IRDY action selection	<p>00...Before Ver. 3.0 01...After Ver. 3.0</p> <p>If you set "01 : After Ver. 3.0", "GS1 and GS2 Both Close (operation possible side)" is added to condition of IRDY turning ON as "Logical product".</p>	01

## Initial value change of the PM motor control relations parameter

·Initial value of the parameters listed below will be changed to appropriate values for PM motors when an inverter mode is changed to PM mode.

Func. Code	Name	Initial data	
		Before Ver.3.0	After Ver.3.0
<b>b083</b>	Carrier Frequency	2.0[kHz]	10.0[kHz]
<b>b089</b>	Automatic Carrier Reduction	01	00

## Modbus Mapping function

With this function, the register numbers that you have been using and any Hitachi register numbers can be linked together.

Although the usages of Modbus register numbers are different from instrument to instrument, those register numbers can be handled in unified way by using Mapping function. EX) You can replace a slave instrument that you have been using with a Hitachi inverter (a slave instrument) without changing, for example, an operation frequency configuration by Modbus of a master instrument.

You can read and write Hitachi register numbers by accessing the register numbers you would like to use, by linking together the register numbers you are going to use (external register number) and Hitachi register numbers (internal register numbers). Scaling (multiplication/division) and format (with/without sign) can be designated when making a link with an external register and an internal register. The following shows examples. (All the explanations use Big Endian.)

Func. Code	Name	Range	Description
P200	Register Mapping setting	00	Standard Mapping function disabled (default)
		01	Modbus Mapping function enabled
P201 – P210	External register Selection	0000h - FFFFh	0000h (default) is deemed as not setting
P211 – P220	Format of external register	00	Unsigned 16-bit data (Word data)
		01	Signed 16-bit data
P221 – P230	Scaling data	0.001-65.535	1.000(default)
P301 – P310	Select Internal register	0000h - FFFFh	0000h (default) is deemed as not setting

[Note]


- Up to ten mappings can be made.
- When you use mapping, please use 16-bit Holding register as an internal register. Do not select 32-bit register neither lower nor higher.

It allows a part of the parameter of 2 register length considered that you use it to access it as 1 register length parameter restrictively.

Please refer to “The list of 16-bit registers that originate 32-bit registers” (Page Ver.3-63)

- When you set internal registers and external registers from an operator, please input the address as they are. No need to minus 1 as you do in Query.
  - Changes related to register mapping setting requires either power cycle or reset when C102 is not 03, for the change to be reflected. (Enter command cannot validate the change.)
  - When you choose Format selection, please select the as Format of an internal register. (Internal and external Format should be linked together with the same Format.)
  - If you designate register number by Query in which external register, P201 to P210 are not registered, they work as internal register.
-

## The conceptual diagram

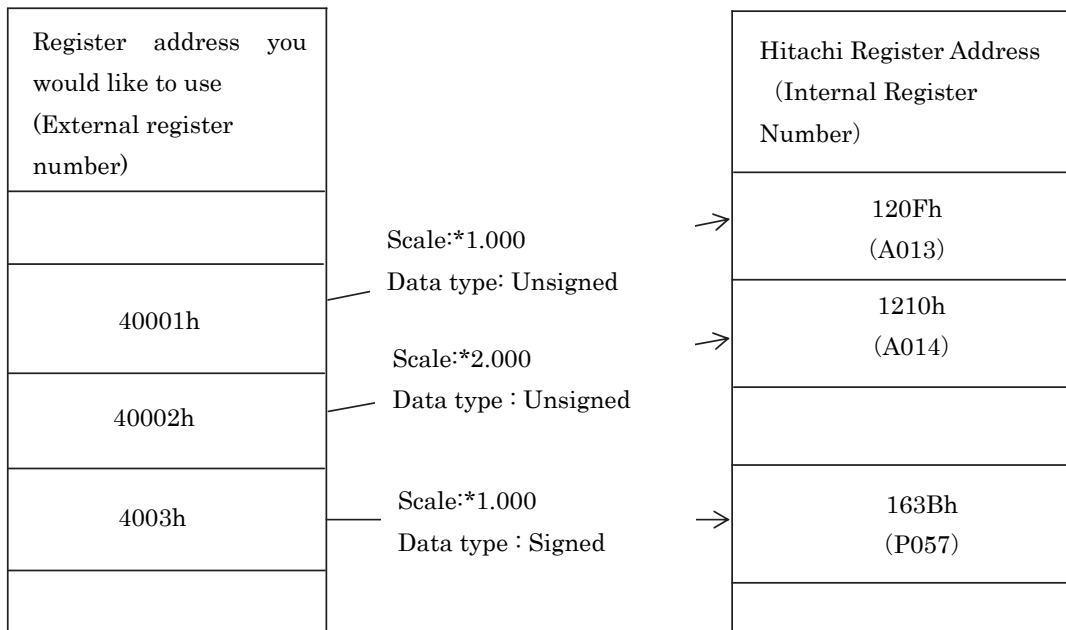

- ① Linking 4001h to 120FH (A013) together with 1:1 magnification, Unsigned.
- ② Linking 40002 to 1210h (A014) together with 2:1 magnification, Unsigned. (Writing to internal registers is multiplied by 2; reading from internal register is multiplied by 1/2, because of inverse function.)
- ③ Linking 4003h to 163Bh (P057) together with 1:1 magnification, Signed.

This explanation document introduces below example.

If you link the register address you have been using (= external register number) with Hitachi Register address (=internal register address), the cases will be roughly divided into three cases and they are further subdivided. But don't worry. Each case will be meticulously examined. The example begins very basic to a bit complicated one.

[1] Hitachi register number list is not included in external register number (No overlapping) (ex1 to ex3)

**Ex1**

A case where you use an external register number (16bit) and internal register number (16-bit) with the 1:1 magnification(=no magnification),

**Ex 2**

A case where you multiply an external register by n (ex. Multiply 2) written to an internal register.

**Ex 3**

A case where data range includes minus value.

(Suppose the multiplication of external register and internal register is the same, for simple explanation)

[2] Hitachi register address list include external register numbers. (Overlapping occurs, ex4 – ex6)

**Ex 4**

A case where the register address number (16-bit) you are going to use and the internal register number you need to use overlaps. Let's assume the no multiplication is involved for simple explanation.

**Ex 5**

A case occurs that where the external register number overlaps with the high order of Hitachi register number (32-bit).

**Ex 6**

A case occurs that where the external register number overlaps with the low order of Hitachi register number (32-bit)

---



[3] An internal register number (1201h) is shared by an external register number (ex.1201h) and as pair

**Ex 7**

First pair:

The external register you are going to use: 50001h

Hitachi register number (=internal register number = 1201h (A001))


Second pair:

The external register number you are going to use: 1201

Hitachi register number (internal register number) = 1210h (A014)

In the case above, 1201h is share by both as an external register and as an internal register.

1201h used by both internal and external register (Internal register as the first pair, and external register as the second pair).

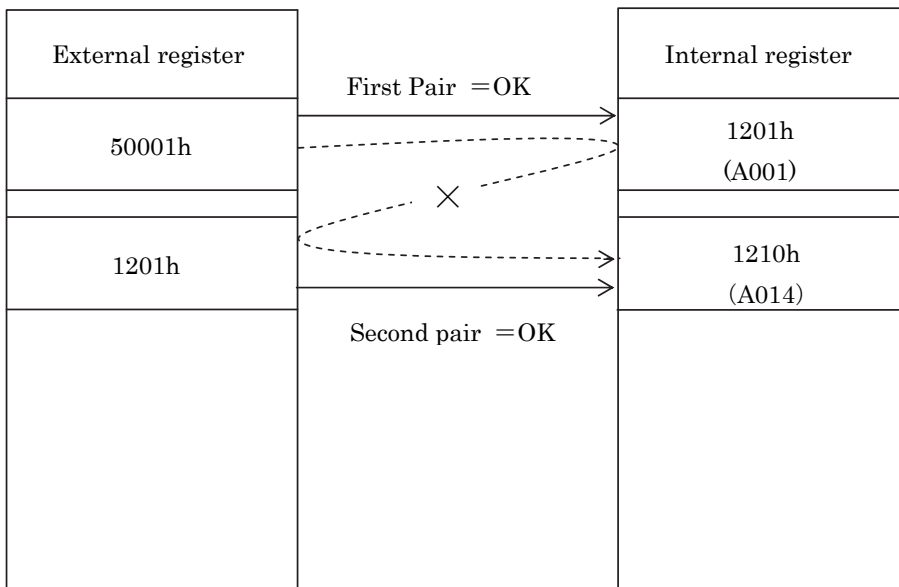

Please refer to Ex.7 page for detail and example

[4]Error judgments

**Ex 8**

Case one: in which internal registers is invalid. (When trying to use internal register numbers that cannot be used)

**Ex 9**

Cases where external register is invalid (Two or more different internal register are set for one external register).

**Ex1** A case where you read an external register number (16bit) and internal Holding register (16-bit) without magnification.

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	Scaling	Format
4001h	120Fh(A013)	1.000	unsigned

When the value of *[O] input active range start voltage*(120Fh)=16%

(1) Reading out Holding register [03h], Target register: External register

Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Register start address (high order)	40	} Register address value = Register Number - 1
4	Register start address (low order)	00	
5	Number of holding registers (high order)	00	} One Register
6	Number of holding registers (low order)	01	
7	CRC-16 (high order)	91	
8	CRC-16 (low order)	CA	

Response:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Data size (in bytes)	02	
4	Register data 1 (high order)	00	} 0010h→16d→16%
5	Register data 1 (low order)	10	
6	CRC-16 (high order)	B9	
7	CRC-16 (low order)	88	

(1) Writing in Holding register [06h], target register: external register

When writing 48 % ( 30) as the Holding register [O] input active range start voltage.

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	30
7	CRC-16 (high order)	9C
8	CRC-16 (low order)	1E

} Register address value = Register  
Number - 1  
} 0030h→48d→48%

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	30
7	CRC-16 (high order)	9C
8	CRC-16 (low order)	1E

} Register address value = Register  
Number - 1  
} 0030h→48d→48%

**Ex2** A case where you multiply an external register by n (ex. Multiply 2) written to an internal register.

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal number	Scaling	Format
4002h	1210h (A014)	2.000	Unsigned

When *[O] input active range end voltage (A014) =16%*

(1) Reading out Holding Register [03h]、Target Register : External Register

Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Register start address (high order)	40	} Register address value = Register Number · 1
4	Register start address (low order)	01	
5	Number of holding registers (high order)	00	} One Register
6	Number of holding registers (low order)	01	
7	CRC-16 (high order)	CA	
8	CRC-16 (low order)	0A	

Response:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Data size (in bytes)	02	
4	Register data 1 (high order)	00	} 0008h→8d→8%
5	Register data 1 (low order)	08	
6	CRC-16 (high order)	B9	
7	CRC-16 (low order)	82	

Since writing is doubled to internal register by scaling, two-half of value is read out (08h) from internal register (please refer to the conceptual figure)

(2) Writing Holding Registers [06h], Target Register: External Register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	01
5	Change data (high order)	00
6	Change data (low order)	30
7	CRC-16 (high order)	CD
8	CRC-16 (low order)	DE

Register address value = Register Number - 1

0030h→48d→48%

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	01
5	Change data (high order)	00
6	Change data (low order)	30
7	CRC-16 (high order)	CD
8	CRC-16 (low order)	DE

Register address value = Register Number - 1

0030h→48d→48%

After Modbus communication above, operator show A014 as 96%. Designated value 48 %( 30h) is doubled by scaling, 96 %( 60h) is written in the internal register. (Please refer to the conceptual figure.)

**Ex 3** A case where data range includes minus value.

(Suppose the multiplication of external register and internal register is the same)

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	scaling	Format
4003h	163Bh (P057)	1.000	Signed

When the value of *Pulse train frequency bias* = -10 (Range of P057 : -100 to +100%)

(1) Reading out Holding Register 03h], Target Register : External Register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	40
4	Register start address (low order)	02
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	30
8	CRC-16 (low order)	0A

} Register address value = Register Number - 1

} One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	FF
5	Register data 1 (low order)	F6
6	CRC-16 (high order)	79
7	CRC-16 (low order)	F2

} FFF6h represents -10 in two's compliment

(2) Writing Holding Register [06h] 、 Target Register: External Register

Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	06	
3	Register start address (high order)	40	} Register address value = Register Number - 1
4	Register start address (low order)	02	
5	Change data (high order)	FF	} FFFFh represents -1 in two's compliment
6	Change data (low order)	FF	
7	CRC-16 (high order)	3C	
8	CRC-16 (low order)	7A	

Response:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	06	
3	Register start address (high order)	40	} Register address value = Register Number - 1
4	Register start address (low order)	02	
5	Change data (high order)	FF	} FFFFh represents -1 in two's compliment
6	Change data (low order)	FF	
7	CRC-16 (high order)	3C	
8	CRC-16 (low order)	7A	

After the Modbus communication above, -1% is observed by the Operator.



Please use “Signed” format when range of internal register data include minus value, as seen Example 3. If you use “Unsigned” erroneously, you will get exceptional response in some cases.

When value of P057 = -10

Reading holding register [03h], Target Register : External Register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	40
4	Register start address (low order)	02
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	30
8	CRC-16 (low order)	0A

Register address value = Register Number - 1

One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	FF
5	Register data 1 (low order)	F6
6	CRC-16 (high order)	79
7	CRC-16 (low order)	F2

FFF6h represents -10 in two's compliment

\*No exception occurs when reading out data. The data read correctly.

Writing Holding Register [06h] , Target Register: External Register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	02
5	Change data (high order)	FF
6	Change data (low order)	FF
7	CRC-16 (high order)	3C
8	CRC-16 (low order)	7A

Register address value = Register Number - 1

Since unsigned is designated, two's compliment is not applied and converted to 65535d

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	86
3	Exception code	21
4	CRC-16 (high order)	82
5	CRC-16 (low order)	78

The exception Response above is caused by supposedly writing -1, but by actually writing very big data (65535) because of designating unsigned conversion that exclude range of internal register data. If you properly choose "Signed" format, this Query can be executed without giving exception.

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	02
5	Change data (high order)	FF
6	Change data (low order)	FF
7	CRC-16 (high order)	CC
8	CRC-16 (low order)	7A

Register address value = Register Number - 1  
 FFF6h represents -1 in two's compliment in signed conversion

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	40
4	Register start address (low order)	02
5	Change data (high order)	FF
6	Change data (low order)	FF
7	CRC-16 (high order)	3C
8	CRC-16 (low order)	7A

Register address value = Register Number - 1

FFFFh represents -1 in two's compliment

You can confirm P057 value as -1% by the operator.

**Ex 4** The external register addresses use and Hitachi register number with the same multiplication.(When external addresses are already included in Hitachi register address list.)

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	Scaling	Format
1201h (Same number as A001)	1210h(A014)	1.000	unsigned

When [O] *input active range end voltage* (A014) = 100% (64h)

(1) Reading out Holding register [03h] , Target register: External Register

Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Register start address (high order)	12	} Register address value = Register Number - 1
4	Register start address (low order)	00	
5	Number of holding registers (high order)	00	} One register
6	Number of holding registers (low order)	01	
7	CRC-16 (high order)	81	
8	CRC-16 (low order)	72	

Response:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Data size (in bytes)	02	
4	Register data 1 (high order)	00	} The value of 1210 (A014), that is directly linked with 1201(A001), is read out
5	Register data 1 (low order)	64	
6	CRC-16 (high order)	B9	
7	CRC-16 (low order)	AF	

The value of internal register 1210h (A012) is read out.

(2) Writing Holding Register[06h], target register: External register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	50
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	8E

} Register address value = Register Number - 1

} 0050h→80d→80%


Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	50
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	8E

} Register address value = Register Number - 1

} 0050h→80d→80%

After Modbus communication above, 80% is written as [0] input active range end voltage (A014)

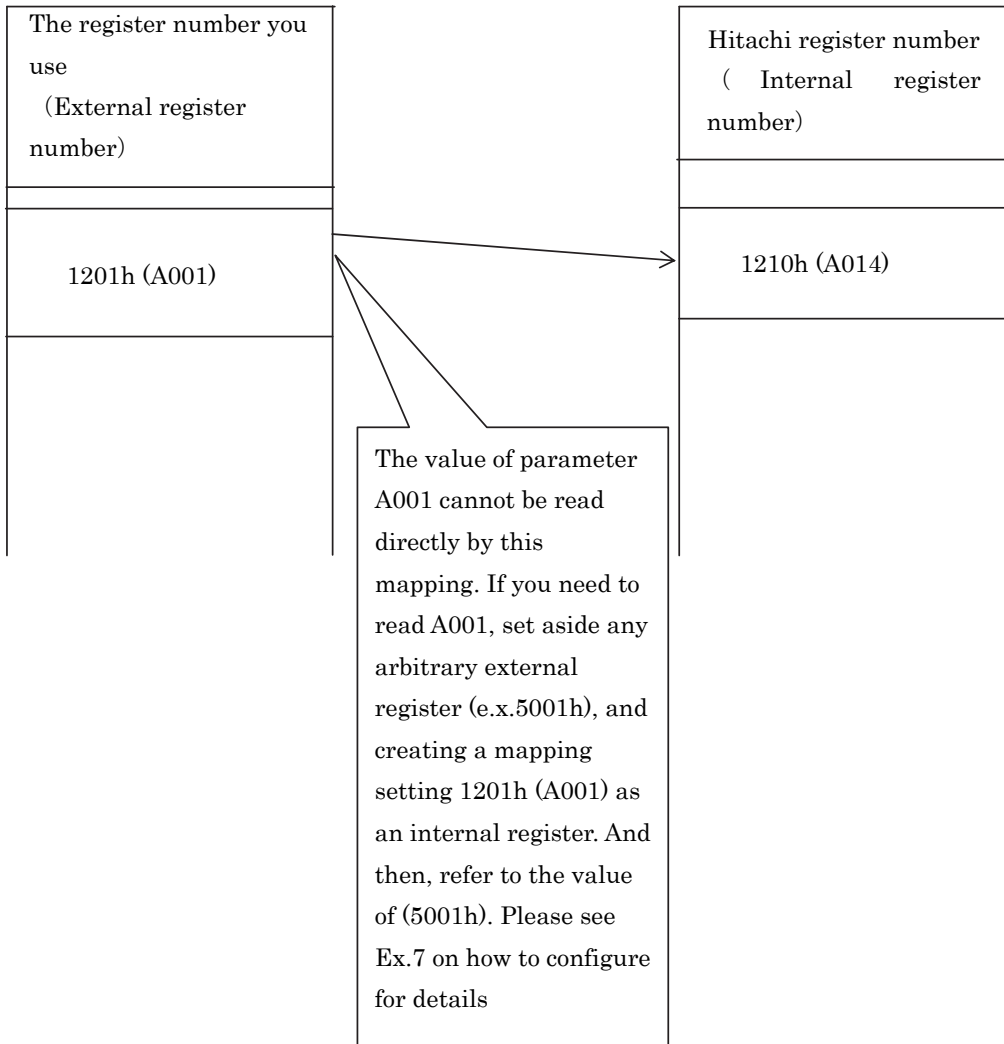

**Ex 5** The external register number you would like to use is already listed in Hitachi register number(in this case, overlapping with high order of 32-bit parameter)

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	Scaling	Format
1218h (A021 (HIGH))	120Fh (A013)	1.000	Unsigned

When [O] input active range start voltage = 33 % ( 21h)

(1) Reading Holding Register [03h] 、 target register : External Register

Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Register start address (high order)	12	} Register address value = Register Number - 1
4	Register start address (low order)	17	
5	Number of holding registers (high order)	00	} One register
6	Number of holding registers (low order)	01	
7	CRC-16 (high order)	31	
8	CRC-16 (low order)	76	

Response:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Data size (in bytes)	02	
4	Register data 1 (high order)	00	} 0021h→33d→33%
5	Register data 1 (low order)	21	
6	CRC-16 (high order)	78	
7	CRC-16 (low order)	5C	

The value of internal register number 120Fh(A013), that is linked to external register, is read out. If you create a mapping like above, access to low order side of register number 1219 (A021) is forbidden. Because 1218h belongs to A021(High), 1218h is used for mapping function. Thus, you are forbidden to use 1218h and 1219h directly as A021. Please refer to the below example.

When an error occurs when reading out

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	18
5	Number of holding registers (high order)	00
6	Number of holding registers low order)	01
7	CRC-16 (high order)	01
8	CRC-16 (low order)	75

Register address value = Register Number - 1


One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	32
4	CRC-16 (high order)	C0
5	CRC-16 (low order)	E5

Exception code 31 and 32 represent access error of overlapping register.(Mapping Error)



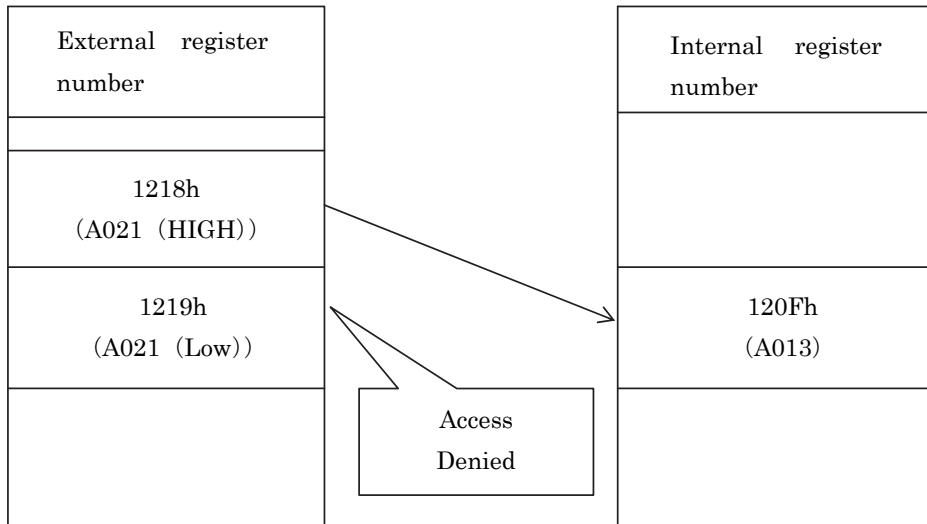

An error occurs with writing data

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	18
5	Change data (high order)	10
6	Change data (low order)	00
7	CRC-16 (high order)	01
8	CRC-16 (low order)	75

} Register address value = Register Number - 1

} 1000h → 4096d → 40.96Hz

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	86
3	Exception code	32
4	CRC-16 (high order)	C3
5	CRC-16 (low order)	B5

If you create a mapping like above, access to low order side of register number 1219 (A021) is forbidden. Because if use of parameter A021 (Low) is allowed, A012 (High) area might be overridden when very big number is entered in A021. Please refer to the example above.

**Ex 6** The external number you would like to use is already listed in Hitachi register number(In this case, low order of 32-bit parameter overlaps.)

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	Scaling	Format
1217h (A020 (Low))	120Fh (A013)	1.000	Unsigned

Joint Multi-speed freq. 0(A020, 1216h,1216h, Low order) with [O] input active range start voltage(A013)

(1) Reading out Holding Register[03h]、Target Register : External register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	16
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	60
8	CRC-16 (low order)	B6

} Register address value = Register Number - 1

} One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	00
5	Register data 1 (low order)	21
6	CRC-16 (high order)	78
7	CRC-16 (low order)	5C

} 0021h→33d→33%

As same as in which an external register number is overlapped with Hitachi register number (High order), access to high order of A020 is forbidden, because only high order of 32-bit register cannot store meaningful information. Please refer to the example below.

Query:


No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	15
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	90
8	CRC-16 (low order)	B6

Register address value = Register Number - 1

One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	32
4	CRC-16 (high order)	C0
5	CRC-16 (low order)	E5

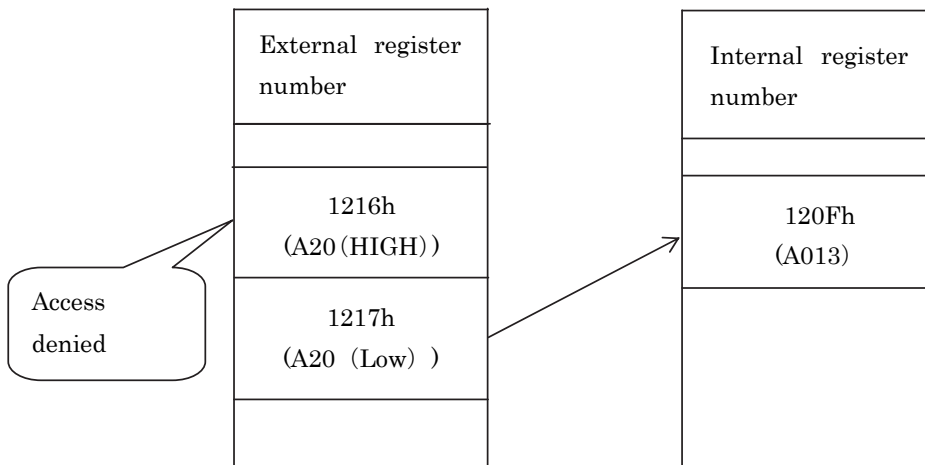

An error occur with writing data

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	15
5	Change data (high order)	10
6	Change data (low order)	00
7	CRC-16 (high order)	90
8	CRC-16 (low order)	B6

} Register address value = Register  
Number - 1

} 1000h → 4096d → 40. 96Hz

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	86
3	Exception code	32
4	CRC-16 (high order)	C3
5	CRC-16 (low order)	B5

**Ex 7** A Hitachi register number is shared by both external register and internal register.

\*Below setting must be entered from the operator before Modbus communication, with power cycle.  
 (This example shows only value of direct link is read out, not the value two step further))

First pair

External register number	Internal register number	Scaling	Format
50001h	1201h (A001)	1.000	Unsigned

Second pair

External register number	Internal register number	Scaling	Format
1201 h (A001)	1210h (A014)	1.000	Unsigned

\*In the case above, 1201h is used for both external register number and internal register number.

When *Frequency source (A001)* = 1 (01h) and *[O] input active range end voltage (A014)* = 100%

(1) [03h]、Reading out Holding register : target register (external register) (second pair)

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	00
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	81
8	CRC-16 (low order)	72

Register address value = Register Number - 1  
 One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	00
5	Register data 1 (low order)	64
6	CRC-16 (high order)	B9
7	CRC-16 (low order)	AF

The value of internal register is exactly read out.

The value of internal register 1210h (A014) is read out.

(1) Reading out Holding register[03h] 、 Target register: Internal register (second pair)

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	0F
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	B1
8	CRC-16 (low order)	71

Register address value = Register Number - 1

One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	00
5	Register data 1 (low order)	64
6	CRC-16 (high order)	B9
7	CRC-16 (low order)	AF

The value of internal register is exactly read out.



(2) Writing Holding register[06h], Target register: External register (second pair)

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	50
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	8E

Register address value = Register Number - 1

0050h → 80d → 80%

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high order)	12
4	Register start address (low order)	00
5	Change data (high order)	00
6	Change data (low order)	50
7	CRC-16 (high order)	8C
8	CRC-16 (low order)	8E

Register address value = Register Number - 1

0050h → 80d → 80%

(3) Reading Holding Register [03h], Target register (Second pair)

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	12
4	Register start address (low order)	0F
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	B1
8	CRC-16 (low order)	71

} Register address value = Register  
Number - 1  
} One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	00
5	Register data 1 (low order)	50
6	CRC-16 (high order)	B8
7	CRC-16 (low order)	78

} 0050h → 80d → 80%

(4) Reading out Holding Register[03h],Target register: External register (First pair)

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	50
4	Register start address (low order)	00
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	95
8	CRC-16 (low order)	0A


} Register address value = Register Number - 1  
 } One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	02
4	Register data 1 (high order)	00
5	Register data 1 (low order)	01
6	CRC-16 (high order)	79
7	CRC-16 (low order)	84

} 0001h → 1d → 1

In the description above, when reading out 5001, the value of 1201h (A001), which is directly linked with 1201h (A001), is read out. (Although 1210h (A014) is indirectly connected with 5001, indirect access is disabled and only the value with direct access is available.)

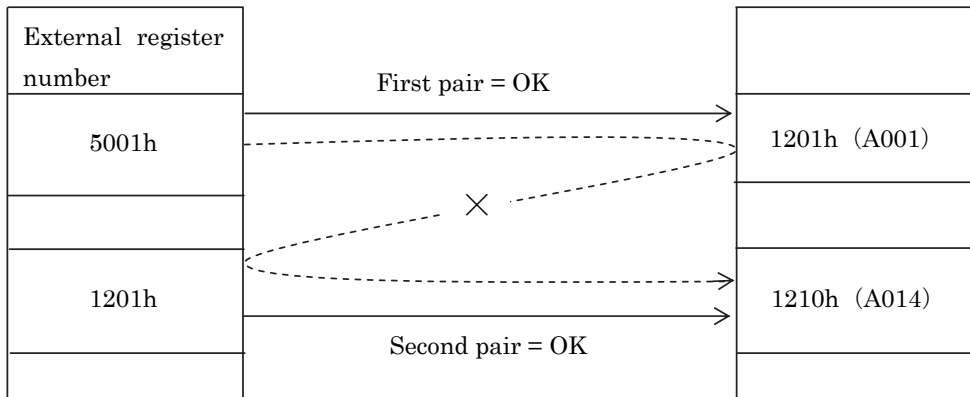

**Ex 8** Cases where internal registers are invalid

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

Case 1 A case where internal register not yet is selected (Please refer to document page1 for setting range))

External register number	Internal register number	Scaling	Format
6001h	0000h	1.000	Unsigned

Case 2: When selecting 32-bit parameter for an internal register. (Please refer to the page 1 for setting range.)

External register number	Internal register number	Scaling	Format
6002h	1216h (A20 (HIGH))	1.000	Unsigned

Case 3: When selecting 32-bit parameter for an internal register. (Please refer to the page 1 for setting range.)

External register number	Internal register number	Scaling	Format
6003h	1217h (A20 (LOW))	1.000	Unsigned

Case 4 When Hitachi register number does not exit.

External register number	Internal register number	Scaling	Format
6004h	12FFh (No corresponding code in parameter)	1.000	Unsigned

**Ex 8** Cases where internal registers are invalid

Case 1 : A case where internal register not yet is selected (Please refer to document page1 for setting range))

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	60
4	Register start address (low order)	00
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	9A
8	CRC-16 (low order)	0A

} Register address value = Register Number - 1  
 } One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	31
4	CRC-16 (high order)	80
5	CRC-16 (low order)	E4

An Exceptional response is given when 0000h is set as internal register because it is interpreted as not yet set.

Case 2: When selecting 32-bit parameter for an internal register. (Please refer to the page 1 for setting range.

Reading Holding Register [03h] , Target register = external register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	60
4	Register start address (low order)	01
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	CB
8	CRC-16 (low order)	CA

} Register address value = Register Number - 1  
} One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	31
4	CRC-16 (high order)	80
5	CRC-16 (low order)	E4

Only 16-bit Holding register can be designated as an internal register. So You will get an exception response if you choose 32-bit register for an internal register.

Case 3: When selecting 32-bit parameter for an internal register. (Please refer to the page 1 for setting range.)

Reading out Holding register [03h], target register=external register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	60
4	Register start address (low order)	02
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	3B
8	CRC-16 (low order)	CA

} Register address value = Register Number - 1

} One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	31
4	CRC-16 (high order)	80
5	CRC-16 (low order)	E4

As same as case 2, an exceptional response is given because 32-bit register is designated as an internal register.



Case 4: A case where Hitachi register numbers do not exist in the list.  
 Reading out Holding register[03h], Target register = external register

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high order)	60
4	Register start address (low order)	03
5	Number of holding registers (high order)	00
6	Number of holding registers (low order)	01
7	CRC-16 (high order)	6A
8	CRC-16 (low order)	0A

Register address value = Register Number - 1

One register

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	31
4	CRC-16 (high order)	80
5	CRC-16 (low order)	E4

Exceptional response is given because corresponding internal parameter.

**Ex 9** A case where an external register is invalid (An external register number is linked together to two or more different internal register number.)

\*Below setting must be entered from the operator before Modbus communication, with power cycle.

External register number	Internal register number	Scaling	Format
6001h	120Fh (A013)	1.000	Unsigned
6001h	1210h (A014)	1.000	Unsigned

(1) Reading Holding Register [03h] 、 Target register = external register


Query:

No	Field Name	Example (Hex)	
1	Slave address	01	
2	Function code	03	
3	Register start address (high order)	60	} Register address value = Register Number - 1
4	Register start address (low order)	00	
5	Number of holding registers (high order)	00	} One register
6	Number of holding registers (low order)	01	
7	CRC-16 (high order)	9A	
8	CRC-16 (low order)	0A	

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	83
3	Exception code	31
4	CRC-16 (high order)	80
5	CRC-16 (low order)	E4

Exceptional response is given because two different internal parameters are set for the same external register number.

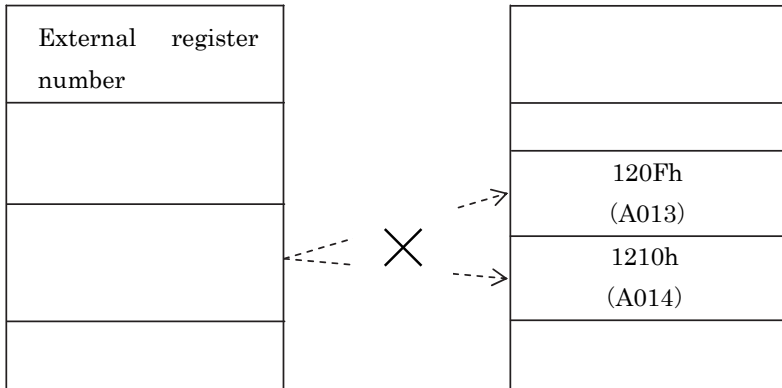

The list of 16-bit registers that originate 32-bit registers

Register number	Register number for Modbus	Function name	Parameter No	R/W	Data Range	Data resolution
1E21h	1E20h	Output frequency monitor	d001	R	0.00~400.00 (~655.35) [Hz]	0.01Hz
1E22h	1E21h	PID feedback value monitor	d004	R	0.00~655.35	0.01
1E23h	1E22h	Output frequency monitor (after conversion)	d007	R	0.00~655.35	0.01
1E24h	1E23h	Real frequency monitor	d008	R	-327.68 ~ 327.68 [Hz]	0.01Hz
1E25h	1E24h	Trip info. 1 Output frequency	d081	R	0.00~655.35 [Hz]	0.01Hz
1F31h	1F30h	Output frequency setting	F001	R/W	"start frequency" to "maximum frequency"	0.01Hz
1F32h	1F31h	1st Acceleration time 1	F002	R/W	0.01 ~ 655.35 (sec)	0.01s
1F33h	1F32h	1st Deceleration time 1	F003	R/W	0.01 ~ 655.35 (sec)	0.01s
1F34h	1F33h	1st Multi-step speed reference 0	A020	R/W	start frequency" to "1st maximum frequency"	0.01Hz
1F35h	1F34h	Multi-step speed reference 1	A021	R/W	"start frequency" to "maximum frequency"	0.01Hz
1F36h	1F35h	Multi-step speed reference 2	A022	R/W	"start frequency" to "maximum frequency"	0.01Hz
1F37h	1F36h	Multi-step speed reference 3	A023	R/W	"start frequency" to "maximum frequency"	0.01Hz
1F38h	1F37h	1st Frequency upper limit	A061	R/W	" Frequency lower limit " to	0.01Hz

Register number	Register number for Modbus	Function name	Parameter No	R/W	Data Range	Data resolution
					"maximum frequency"	
1F39h	1F38h	1st Frequency lower limit	A062	R/W	0.00 to "Frequency upper limit "	0.01Hz
1F3Ah	1F39h	Acceleration holding frequency	A069	R/W	0.00~400.00(~655.35) [Hz]	0.01Hz
1F3Bh	1F3Ah	Frequency addition amount	A145	R/W	0.00~400.00(~655.35) [Hz]	0.01Hz
1F3Ch	1F3Bh	Deceleration holding frequency	A154	R/W	0.00~400.00(~655.35) [Hz]	0.01Hz
1F3Dh	1F3Ch	PID sleep function operation level	A156	R/W	0.00~400.00(~655.35) [Hz]	0.01Hz
1F3Eh	1F3Dh	Frequency matching lower limit frequency setting	b007	R/W	0.00~400.00(~655.35) [Hz]	0.01Hz

## Holding register big endian · Little endian select

The purpose of this document is to explain what Endians are and how they work. After reading this document, you can configure the Endian setting for Modbus communications for your purposes.

Endian means how data are arranged in a particular order.

There are three kinds of Endians: Big endian, Little endian and Special endian.

[Setting range]

Item	Function code	Data	Description
Endian Setting	P400	00	Big Endian (Default)
		01	Little Endian
		02	Special Endian

Constraint:

Only data in Queries and Responses are subject to this Endian function.

Therefore Coils, register addresses and function codes are not affected by this function.

When any Endian setting is changed, either power cycle or reset is required for the change to become effective.

[1]Communication command that can be used by this function

The list of the communication that can use this function is shown below.

Table: Modbus communication command (RS485, USB)

No	Modbus Function Code	Function name
1	03H	Read Holding Resister
2	06H	Write in Holding Register
3	10H	Write in Registers
4	17H	Read/Write Holding Register

[2] How data are arranged in each endian.

The following charts show example of how Endian works with data in a 16-bit Holding register and in a 32-bit register (=two consecutive Holding registers given the same parameter name)

1) In the case of 16-bit registers

Example) 16-bit data = 0102h

Original sending data

Byte data (High byte)	01
Byte data (Low byte)	02

Table: Endian of 16-bit data

No	Item	Big endian	Little Endian	Special endian
1	Byte data in the register (High byte)	01	02	01
2	Byte data in the register (Low byte)	02	01	02

In the case of Big Endian, high order byte of 16-bit data is stored in the Holding register first, followed by low order byte of the 16-bit data.

In the case of Little Endian, low order byte of 16-bit data is stored in the Holding register first, followed by the high order byte of the 16-bit data.

Special Endian works the same as Big Endian does for 16-bit Holding registers. Because Special Endian works in the unit of two bytes, no change involves for data in 16-bit Holding registers.

2) In the case of 32-bit registers (=two consecutive Holding registers given the same parameter name)

Example) 32-bit data = 01020304h

Original sending data

Byte data (High byte of the high register)	01
Byte data (Low byte of the high register)	02
Byte data (High byte of the low register)	03
Byte data (Low byte of the low register)	04

Table: Endian of 32-bit data

No	Item	Big endian	Little endian	Special endian
1	Byte data (High byte of the high register)	01	04	03
2	Byte data (Low byte of the high register)	02	03	04
3	Byte data (High byte of the low register)	03	02	01
4	Byte data (Low byte of the low register)	04	01	02

In the case of Big Endian, the “High byte of the high register” is stored first. Other data follow in the order of Number shown in the above table’s each column, so the “Low byte of the low register” is stored last.

In the case of Little Endian, the “Low byte of the low register” is stored first. Other data follow in reverse order of Number shown in the above table’s each column, so “High byte of the high register“ is stored last.

In the case of Special Endian, those data are stored in an order to show next,

- the “High byte of the low register”,
- the “Low byte of the low register”,
- the “High byte of the high register”,
- the “Low byte of the high register”.

Note) Special Endian is designed for Hitachi PLC.



The following provides examples of how to use Big, Little and Special Endian.

(1) Examples of writing data

When you use a function code for writing data, the arrangements of write data in both a query and its response are subject to the Endian setting.

The orders of write data in a query and its response become the same.

Example 1 provides explanations for both a query and its response for your understanding. But since arrangement of data in the response is always the same as that of the query, response examples are omitted in example 2 to 4.

Example1: How arrangements of data in a query and its response change by changing the Endian setting. (Both the query and its response examples are provided)

Example 2: When writing 32-bit data (Double Word Data) (Only query examples are provided.)

Example 3: When writing 16-bit data (Word Data) (Only query examples are provided)

Example 4: When writing several parameters at the same time (16-bit data (Word Data) and 32-bit data (Double Word Data)). (Only query examples are provided.)

(2) An example of reading out data

Example 5: When several parameters are read out at the same time (16-bit data (Word Data) and 32-bit data (Double Word Data)). (Both the query and its response examples are provided.)

---

Example1: How arrangements of data in a query and its response change by changing the Endian setting.  
(Both the query and its response examples are provided)

Example 1-1: Writing 16-bit data with Big Endian

Example 1-2: Writing 16-bit data with Little Endian

Example 1-3: Writing 16-bit data with Special Endian

Example 1-4: Writing and reading out 32-bit data at the same time with Special Endian


Since Special Endian works in the unit of two byte, no change involves in the case of 16-bit data. Therefore, Example1-3, which uses 16-bit data, cannot explain how Special Endian really works. So Example 1-4 provides an explanation of how Special Endian works in the query and its response by using 32-bit data.

---

Example 1-1: When writing 100Hz as 16-bit data to slave one inverter with Big Endian. (The holding register is Base frequency, the parameter is A003, the register No = 1203h. Since data resolution of Base frequency is 0.1Hz, 1000d need to be written, which are 03E8h.):


Query:

No.	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	03
6	Change data (low byte)	E8
7	CRC-16 (high byte)	2D
8	CRC-16 (low byte)	CC

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	03
6	Change data (low byte)	E8
7	CRC-16 (high byte)	2D
8	CRC-16 (low byte)	CC

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Notice the sixth and seventh data in the query and its response above.

The arrangements of Change data are subject to the Endian Function.

The arrangements of the Write Data (Change data) in Query are kept in the Change data in the Response (A value in high byte of Change data in Query is also written in high byte of Change data in Response.)


(As for the data arrangements of Big Endian, please refer to "[2] How data are arranged by each endian.")

The arrangements of the Change data in the query and the response are both Big Endian.

Example 1-2: When writing 100Hz as 16-bit data to slave one inverter with Little Endian. (The holding register is Base frequency, the parameter is A003, the register No = 1203h. Since data resolution of Base frequency is 0.1Hz, 1000d need to be written, which are 03E8h.):


Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	E8
6	Change data (low byte)	03
7	CRC-16 (high byte)	23
8	CRC-16 (low byte)	73

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	E8
6	Change data (low byte)	03
7	CRC-16 (high byte)	23
8	CRC-16 (low byte)	73

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Notice the sixth and seventh data in the Query and its Response above.

Write data (Change data) are subject to the Endian function.


(As for the data arrangements of Little Endian, please refer to "[2] How data are arranged by each endian.")

The arrangements of write data (Change data) of the Query and its Response are both Little Endian.

Example 1-3: When writing 100Hz as 16-bit data to slave one inverter with Special Endian. (The holding register is Base frequency, the parameter is A003, the register No = 1203h. Since data resolution of Base frequency is 0.1Hz, 1000d need to be written, which are 03E8h.):


Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	03
6	Change data (low byte)	E8
7	CRC-16 (high byte)	2D
8	CRC-16 (low byte)	CC

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	02
5	Change data (high byte)	03
6	Change data (low byte)	E8
7	CRC-16 (high byte)	2D
8	CRC-16 (low byte)	CC

} Register address value = Register Number - 1  
 Subject to Endian function :  
 Write Data : 03E8h

Notice the sixth and seventh data in the Query and its Response above.

Write data (Change data) are subject to the Endian function.

The arrangements of the write data (Change data) is kept in the write data (Change data) of the Response. (As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

Note) Since Special Endian works in the unit of two bytes, no change is observed for these 16-bit data. (The data arrangements of the example above are the same as the Example 1-1.)

As a result, the data arrangements above using 16-bit data are the same as that of Big Endian.

To explain how Special Endian really works, Example 1-4 shows how arrangements of Big Endian will be when 32-bit data is involved.

Example 1-4: When reading and writing 32-bit data at the same time with Special Endian.

Reading and writing below data from slave one inverter with Special Endian

Reading: Acceleration time (2) (A092, register number = 1274h, 1275h), read data = 1300.14sec, since the data resolution of Acceleration time (2) Holding register is 0.01sec, 130014d=0001FBDEh


Writing: Deceleration time (2) (A093, register number = 1276h, 1277h), write data = 3500.00sec, since the data resolution of Deceleration time (2) Holding register is 0.01sec, 350000d=00055730h

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	17
3	Start address to read (high byte)	12
4	Start address to read (low byte)	73
5	Number of holding registers to read (high byte)	00
6	Number of holding registers to read (low byte)	02
7	Start address to write (high byte)	12
8	Start address to write (low byte)	75
9	Number of holding registers to write (high byte)	00
10	Number of holding registers to write (low byte)	02
11	Byte number to write	04
12	Change data 1 (high byte)	57
13	Change data 1 (low byte)	30
14	Change data 2 (high byte)	00
15	Change data 2 (low byte)	05
16	CRC-16 (high byte)	78
17	CRC-16 (low byte)	2A

Register address value = Register Number - 1

Register address value = Register Number - 1



 
Subject to Endian function :  
Write Data : 00055730h

Notice the data from 12<sup>th</sup> to 15<sup>th</sup>. Write data (Change data) are subject to Endian function.

(As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	17
3	Byte number n	04
4	Register Data 1 (high byte)	FB
5	Register Data 1 (low byte)	DE
6	Register Data 2 (high byte)	00
7	Register Data 2 (low byte)	01
8	CRC-16 (high byte)	69
9	CRC-16 (low byte)	F9



Subject to Endian function :  
Read Data : 0001FBDEh

Notice the data from fourth to seventh. The Read data (Register Data 1, 2) are subject to Endian function. (As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

As you have seen in these examples, Endian function is applied not only to the data in Query but also to the data in Response. Therefore, aside from when necessary, Response examples will be left out henceforth.

Example 2: When writing 32-bit data

Example 2-1: When writing 32-bit data with Big Endian:

A Query that can write 3000sec as the Acceleration time (1) (F002, register number = 1103h) in an inverter having slave addresses one (the data resolution of this Holding register is 0.01sec, thus  $300000d=000493E0h$ ) is:

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	02
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	02
7	Byte number	04
8	Change data 1 (high byte)	00
9	Change data 1 (low byte)	04
10	Change data 2 (high byte)	93
11	Change data 2 (low byte)	E0
12	CRC-16 (high byte)	9E
13	CRC-16 (low byte)	9F

} Register address value = Register Number - 1

↑ Subject to Endian function :  
Write Data : 000493E0h

Notice the data from eighth to eleventh.

Write data (Change data 1, 2) are subject to the Endian function.

(As for the data arrangements of Big Endian, please refer to "[2] How data are arranged by each endian.")



Example 2-2: When writing 32-bit data with Little Endian : As same as example 2-1, where 3000 sec is written as the Acceleration time (1) (F002, register number = 1103h) in an inverter having slave address one, the data resolution of the Holding register is 0.01sec, so the data to be written is 300000d=000493E0h. But the arrangement of the data is different from the previous example.

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	02
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	02
7	Byte number	04
8	Change data 1 (high byte)	E0
9	Change data 1 (low byte)	93
10	Change data 2 (high byte)	04
11	Change data 2 (low byte)	00
12	CRC-16 (high byte)	77
13	CRC-16 (low byte)	0B

Register address value = Register Number - 1

Subject to Endian function :  
Write Data : 000493E0h

Notice the data from eighth to eleventh.

Write data (Change data 1, 2) are subject to the Endian function.

(As for the data arrangements of Little Endian, please refer to "[2] How data are arranged by each endian.")


Example 2-3: As same as the Query in example 2-1, this query sets 3000sec to Acceleration time (1) (F002, register number = 1103h). But the data resolution of this Holding register is 0.01sec, so the data to be written is 300000d = 000493E0h.

Compared with Example 2-1 in which Big Endian is used, this Special Endian example swaps data in high order (2bytes) and low order (2 bytes).

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	02
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	02
7	Byte number	04
8	Change data 1 (high byte)	93
9	Change data 1 (low byte)	E0
10	Change data 2 (high byte)	00
11	Change data 2 (low byte)	04
12	CRC-16 (high byte)	9F
13	CRC-16 (low byte)	57

 } Register address value = Register Number - 1



Subject to Endian function :  
Write Data : 000493E0h

Notice the data from eighth to eleventh.

Write data (Change data 1, 2) are subject to the Endian function.

(As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

Example3: When writing 16-bit data


This Query sets 50.00Hz to the low byte of Multi-speed freq. 0(A020, register numbers are 1216 and 1217) of slave one inverter.

But the data resolution of the Holding registers is 0.01Hz, so the data to be written is 5000d=1388h.

Example3-1:

Query (Big Endian) :

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	16
5	Change data (high byte)	13
6	Change data (low byte)	88
7	CRC-16 (high byte)	60
8	CRC-16 (low byte)	20

} Register address value = Register Number - 1  
 A020 Write Data:

Notice the data from fifth to sixth.


Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Big Endian, please refer to "[2] How data are arranged by each endian.")

Example3-2:

Query (Little Endian) :

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	16
5	Change data (high byte)	88
6	Change data (low byte)	13
7	CRC-16 (high byte)	4A
8	CRC-16 (low byte)	4B

} Register address value = Register Number - 1  
 A020 Write Data: 1388h

Notice the data from fifth to sixth.

Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Little Endian, please refer to "[2] How data are arranged by each endian.")

Example3-3:

Query (Special Endian) :

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	06
3	Register start address (high byte)	12
4	Register start address (low byte)	16
5	Change data (high byte)	13
6	Change data (low byte)	88
7	CRC-16 (high byte)	60
8	CRC-16 (low byte)	20

} Register address value = Register Number - 1

↕ A020 Write Data: 1388h

Notice the data from fifth to sixth.

Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

Example4: When writing several parameters at the same time (16-bit data (Word Data) and 32-bit data (Double Word Data))

When several parameters are involved, parameter data are sent in order of register address value. (F003 is sent first, followed by F004)

The arrangements of data in each parameter are subject to the Endian setting.

With slave one inverter, if you would like to set 3000.00sec to Deceleration time (1) (F003, register numbers are 1105, 1106), the data resolution of the Holding registers is 0.01sec, so 30000d=000493E0h should be written. And at the same time if you would like to write 01h to Keypad Run key routing (F004, register number is 1107).

Example 4-1:

Query (Big Endian):

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	04
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	03
7	Byte number	06
8	Change data 1 (high byte)	00
9	Change data 1 (low byte)	04
10	Change data 2 (high byte)	93
11	Change data 2 (low byte)	E0
12	Change data 3 (high byte)	00
13	Change data 3 (low byte)	01
14	CRC-16 (high byte)	EB
15	CRC-16 (low byte)	DB

} Register address value = Register Number - 1

↑ F003 Write data: 000493E0h  
 ↓ F004 Write data: 01h  
 } The order of parameters is not affected by the Endian setting.

Notice the data from eighth to thirteenth.

Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Big Endian, please refer to "[2] How data are arranged by each endian.")

Note) When several parameters are involved, the order of parameter does not change.


The Endian function is applied to data in each parameter

Example 4-2:

Query (Little Endian):

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	04
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	03
7	Byte number	06
8	Change data 1 (high byte)	E0
9	Change data 1 (low byte)	93
10	Change data 2 (high byte)	04
11	Change data 2 (low byte)	00
12	Change data 3 (high byte)	01
13	Change data 3 (low byte)	00
14	CRC-16 (high byte)	65
15	CRC-16 (low byte)	B4

} Register address value = Register Number - 1

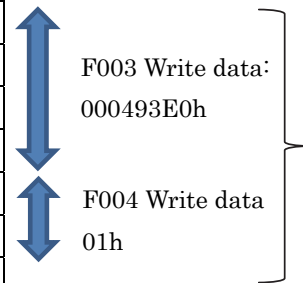

} The order of parameters is not affected by the Endian setting.

Notice the data from eighth to thirteenth.

Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Little Endian, please refer to "[2] How data are arranged by each endian.")

Note) When several parameters are involved, the order of parameter does not change.

The Endian function is applied to data in each parameter

Example 4-3:

Query (Special Endian):

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	10
3	Start address (high byte)	11
4	Start address (low byte)	04
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	03
7	Byte number	06
8	Change data 1 (high byte)	93
9	Change data 1 (low byte)	E0
10	Change data 2 (high byte)	00
11	Change data 2 (low byte)	04
12	Change data 3 (high byte)	00
13	Change data 3 (low byte)	01
14	CRC-16 (high byte)	EB
15	CRC-16 (low byte)	DD

Register address value = Register Number - 1

F003 Write data: 000493E0h

F004 Write data: 01h

The order of parameters is not affected by the Endian setting.

Notice the data from eighth to thirteenth.

Write data (Change data) are subject to the Endian function.

(As for the data arrangements of Special Endian, please refer to "[2] How data are arranged by each endian.")

Note) When several parameters are involved, the order of parameter does not change.

The Endian function is applied to data in each parameter

Example 5: When several parameters are read out at the same time (16-bit data (Word Data) and 32-bit data (Double Word Data))

In the case of several parameters are involved, the parameter whose register address is the smallest is read out first, followed by other register in order of their register address. The order of parameters is not affected by changing the Endian setting. The Endian setting affects only the arrangement of data in each parameter.

With slave address one inverter, read out Deceleration time (1) (F003, register numbers are 1105 and 1106), whose original value is 000493E0h, and Keypad Run key routing (F004, register number is 1107), whose original value is 01h.

Query:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Register start address (high byte)	11
4	Register start address (low byte)	04
5	Number of holding registers (high byte)	00
6	Number of holding registers (low byte)	03
7	CRC-16 (high byte)	41
8	CRC-16 (low byte)	36

} Register address value = Register Number - 1



## Example 5-1: Read out with Big Endian

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	06
4	Register data 1 (high byte)	00
5	Register data 1 (low byte)	04
6	Register data 2 (high byte)	93
7	Register data 2 (low byte)	E0
8	Register data 3 (high byte)	00
9	Register data 3 (low byte)	01
10	CRC-16 (high byte)	3D
11	CRC-16 (low byte)	C7



F003 Read data :  
000493E0h

F004 Read data:  
0001h

The order of parameters is not affected by the Endian setting.

## Example 5-2: Read out with Little Endian

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	06
4	Register data 1 (high byte)	E0
5	Register data 1 (low byte)	93
6	Register data 2 (high byte)	04
7	Register data 2 (low byte)	00
8	Register data 3 (high byte)	01
9	Register data 3 (low byte)	00
10	CRC-16 (high byte)	B3
11	CRC-16 (low byte)	A8



F003 Read data :  
000493E0h

F004 Read data:  
0001h

The order of parameters is not affected by the Endian setting.

**Example 5-3: Read out with Special Endian**

Response:

No	Field Name	Example (Hex)
1	Slave address	01
2	Function code	03
3	Data size (in bytes)	06
4	Register data 1 (high byte)	93
5	Register data 1 (low byte)	E0
6	Register data 2 (high byte)	00
7	Register data 2 (low byte)	04
8	Register data 3 (high byte)	00
9	Register data 3 (low byte)	01
10	CRC-16 (high byte)	3D
11	CRC-16 (low byte)	C1

F003 Read data :  
000493E0hF004 Read data:  
0001h

The order of parameters is not affected by the Endian setting.

## Electronic Thermal detection system Error

Case of b910 = 00

Error Code	Name	Cause(s)
<b>E05</b>	Overload protection	When <b>inverter/motor</b> overload are detected by the electronic thermal function, the inverter trips and turns OFF its output. Same as before Ver.3.0.
<b>E38</b>	Low-speed overload protection	If overload occurs during the <b>inverter</b> operation at a very low speed, the inverter will detect the overload and shut off the inverter output. Same as before Ver.3.0.

Note:About these trip, reset is not allowed in 10 second after trip.

Case of b910 = 01 to 03

Error Code	Name	Cause(s)
<b>E05</b>	<b>Motor</b> Electronic Thermal Protection	When a <b>motor</b> overload is detected by the electronic thermal function, the inverter trips and turns OFF its output. (Electronic thermal subtraction function is valid for motor.)
<b>E38</b>	<b>Inverter</b> Electronic Thermal Protection	If overload occurs during the <b>inverter</b> operation at a very low/normal speed, the inverter will detect the overload and shut off the inverter output.

Note:About these trip, reset is not allowed in 10 second after trip.

## Modbus Data Listing

### Modbus Coil List

The following tables list the primary coils for the inverter interface to the network. The table legend is given below.

- **Coil Number** - The network *register address offset* for the coil. The coil data is a single bit (binary) value.
- **Name** - The functional name of the coil
- **R/W** - The read-only (R) or read-write (R/W) access permitted to the inverter data
- **Description** - The meaning of each of the states of the coils

Coil No.	Item	R/W	Setting
0000h	unused	-	(Inaccessible)
0001h	Operation command	R/W	1: Run, 0: Stop (valid when A002 = 03)
0002h	Rotation direction command	R/W	1: Reverse rotation, 0: Forward rotation (valid when A002 = 03)
0003h	External trip (EXT)	R/W	1: Trip
0004h	Trip reset (RS)	R/W	1: Reset
0005h	(Reserved)	-	-
0006h	(Reserved)	-	-
0007h	Intelligent input terminal [1]	R/W	1: ON, 0: OFF (*1)
0008h	Intelligent input terminal [2]	R/W	1: ON, 0: OFF (*1)
0009h	Intelligent input terminal [3]	R/W	1: ON, 0: OFF (*1)
000Ah	Intelligent input terminal [4]	R/W	1: ON, 0: OFF (*1)
000Bh	Intelligent input terminal [5]	R/W	1: ON, 0: OFF (*1)
000Ch	Intelligent input terminal [6]	R/W	1: ON, 0: OFF (*1)
000Dh	Intelligent input terminal [7]	R/W	1: ON, 0: OFF (*1)
000Eh	(Reserved)	-	-
000Fh	Operation status	R	1: Run, 0: Stop (interlocked to "d003")
0010h	Rotation direction	R	1: Reverse rotation, 0: Forward rotation (interlocked to "d003")
0011h	Inverter ready	R	1: Ready, 0: Not ready
0012h	(Reserved)	-	-
0013h	RUN (running)	R	1: Tripping, 0: Normal
0014h	FA1 (constant-speed reached)	R	1: ON, 0: OFF
0015h	FA2 (set frequency overreached)	R	1: ON, 0: OFF
0016h	OL (overload advance notice (1))	R	1: ON, 0: OFF
0017h	OD (output deviation for PID control)	R	1: ON, 0: OFF
0018h	AL (alarm signal)	R	1: ON, 0: OFF
0019h	FA3 (set frequency reached)	R	1: ON, 0: OFF
001Ah	OTQ (over-torque)	R	1: ON, 0: OFF
001Bh	(Reserved)	-	-
001Ch	UV (undervoltage)	R	1: ON, 0: OFF
001Dh	TRQ (torque limited)	R	1: ON, 0: OFF
001Eh	RNT (operation time over)	R	1: ON, 0: OFF
001Fh	ONT (plug-in time over)	R	1: ON, 0: OFF
0020h	THM (thermal alarm signal)	R	1: ON, 0: OFF
0021h	(Reserved)	-	-
0022h	(Reserved)	-	-
0023h	(Reserved)	-	-
0024h	(Reserved)	-	-
0025h	(Reserved)	-	-
0026h	BRK (brake release)	R	1: ON, 0: OFF
0027h	BER (brake error)	R	1: ON, 0: OFF
0028h	ZS (0 Hz detection signal)	R	1: ON, 0: OFF
0029h	DSE (speed deviation maximum)	R	1: ON, 0: OFF
002Ah	POK (positioning completed)	R	1: ON, 0: OFF
002Bh	FA4 (set frequency overreached 2)	R	1: ON, 0: OFF
002Ch	FA5 (set frequency reached 2)	R	1: ON, 0: OFF

Coil No.	Item	R/W	Setting
002Dh	OL2 (overload notice advance (2))	R	1: ON, 0: OFF
002Eh	ODc: Analog O disconnection detection	-	1: ON, 0: OFF
002Fh	OIDc: Analog OI disconnection detection	-	1: ON, 0: OFF
0030h	(Reserved)	-	-
0031h	(Reserved)	-	-
0032h	FBV (PID feedback comparison)	R	1: ON, 0: OFF
0033h	NDC (communication train disconnection)	R	1: ON, 0: OFF
0034h	LOG1 (logical operation result 1)	R	1: ON, 0: OFF
0035h	LOG2 (logical operation result 2)	R	1: ON, 0: OFF
0036h	LOG3 (logical operation result 3)	R	1: ON, 0: OFF
0037h	(Reserved)	-	-
0038h	(Reserved)	-	-
0039h	(Reserved)	-	-
003Ah	WAC (capacitor life warning)	R	1: ON, 0: OFF
003Bh	WAF (cooling-fan speed drop)	R	1: ON, 0: OFF
003Ch	FR (starting contact signal)	R	1: ON, 0: OFF
003Dh	OHF (heat sink overheat warning)	R	1: ON, 0: OFF
003Eh	LOC (low-current indication signal)	R	1: ON, 0: OFF
003Fh	M01 (general output 1)	R	1: ON, 0: OFF
0040h	M02 (general output 2)	R	1: ON, 0: OFF
0041h	M03 (general output 3)	R	1: ON, 0: OFF
0042h	(Reserved)	-	-
0043h	(Reserved)	-	-
0044h	(Reserved)	-	-
0045h	IRDY (inverter ready)	R	1: ON, 0: OFF
0046h	FWR (forward rotation)	R	1: ON, 0: OFF
0047h	RVR (reverse rotation)	R	1: ON, 0: OFF
0048h	MJA (major failure)	R	1: ON, 0: OFF
0049h	Data writing in progress	R	1: Writing in progress, 0: Normal status
004Ah	CRC error	R	1: Error detected, 0: No error (*2)
004Bh	Overrun	R	1: Error detected, 0: No error (*2)
004Ch	Framing error	R	1: Error detected, 0: No error (*2)
004Dh	Parity error	R	1: Error detected, 0: No error (*2)
004Eh	Sum check error	R	1: Error detected, 0: No error (*2)
004Fh	(Reserved)	-	-
0050h	WCO (window comparator O)	R	1: ON, 0: OFF
0051h	WCOI (window comparator OI)	R	1: ON, 0: OFF
0052h	(Reserved)	-	-
0053h	OPDc (option disconnection)	R	1: ON, 0: OFF
0054h	FREF (FQ command source)	R	1: Operator, 0: Others
0055h	REF (RUN command source)	R	1: Operator, 0: Others
0056h	SETM (2nd motor selected)	R	1: 2nd motor selected, 0: 1st motor selected
0057h	(Reserved)	-	-
0058h	EDM (Gate suppress monitor)	R	1: ON, 0: OFF
0059h-	unused	R	inaccessible

- \*1 Normally, this coil is turned on when the corresponding intelligent input terminal on the control circuit terminal block is turned on or the coil itself is set to on. In this regard, the operation of the intelligent input terminal has priority over the operation of the coil. If disconnection of the communication train has disabled the master system from turning off the coil, turn the corresponding intelligent input terminal on the control circuit block on and off. This operation turns off the coil.
- \*2 Communication error data is retained until an error reset command is input. (The data can be reset during the inverter operation.)

## Modbus Holding Registers

The following tables list the holding registers for the inverter interface to the network. The table legend is given below.

- **Function Code** - The inverter's reference code for the parameter or function (same as inverter keypad display)
- **Name** - The standard functional name of the parameter or function for the inverter
- **R/W** - The read-only(R) or read-write access(R/W) permitted to the data in the inverter
- **Description** - How the parameter or setting works (same as Chapter 3 description).
- **Reg.** - The network *register address offset* for the value. Some values have a high-byte and low-byte address.
- **Range** - The numerical range for the network value that is sent and/or received



**TIP:** The network values are binary integers. Since these values cannot have an embedded decimal point, for many parameters it represents the actual value (in engineering units) multiplied by a factor of 10 or 100. Network communications must use the listed range for network data. The inverter automatically divides received values by the appropriate factor in order to establish the decimal point for internal use. Likewise, the network host computer must apply the same factor when it needs to work in engineering units. However, when sending data to the inverter, the network host computer must scale values to the integer range listed for network communications.

- **Resolution** - This is the quantity represented by the LSB of the network value, in engineering units. When the network data range is greater than the inverter's internal data range, this 1-bit resolution will be fractional.

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
0000h	unused	-	-	Inaccessible	
0001h	Frequency source	F001 (high)	R/W	0 to 40000 (valid when A001 = 03)	0.01 [Hz]
0002h		F001 (low)	R/W		
0003h	Inverter status A	-	R	0: Initial status 2: Stopping 3: Running 4: Free-run stop 5: Jogging 6: DC braking 7: Retrying 8: Tripping 9: Undervoltage (UV),	-
0004h	Inverter status B	-	R	0: Stopping, 1: Running, 2: Tripping	-
0005h	Inverter status C	-	R	0: --- 1: Stopping 2: Decelerating 3: Constant-speed operation 4: Accelerating 5: Forward rotation 6: Reverse rotation 7: Switching from fwd. to rev. rotation, 8: Switching from rev. to fwd. rotation, 9: Starting fwd. 10: Starting rev.	-
0006h	PID feedback	-	R/W	0 to 10000	0.01 [%]
0007h to 0010h	(Reserved)	-	R	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution		
0011h	Trip Counter	d080	R	0 to 65530	1 [time]		
0012h	Trip info. 1 (factor)	d081	R	See the list of inverter trip factors below	-		
0013h	Trip info. 1 (inverter status)			See the list of inverter trip factors below	-		
0014h	Trip info. 1 (frequency) (high)			0 to 100000	0.01[Hz]		
0015h	Trip info. 1 (frequency) (low)						
0016h	Trip info. 1 (current)			Output current at tripping	0.01[A]		
0017h	Trip info. 1 (voltage)			DC input voltage at tripping	1[V]		
0018h	Trip info. 1 (running time) (high)			Cumulative running time at tripping	1[h]		
0019h	Trip info. 1 (running time) (low)						
001Ah	Trip info. 1 (power-on time) (high)			Cumulative power-on time at tripping	1[h]		
001Bh	Trip info. 1 (power-on time) (low)						
001Ch	Trip info. 2 (factor)			d082	R	See the list of inverter trip factors below	-
001Dh	Trip info. 2 (inverter status)					See the list of inverter trip factors below	-
001Eh	Trip info. 2 (frequency) (high)	0 to 100000	0.01[Hz]				
001Fh	Trip info. 2 (frequency) (low)						
0020h	Trip info. 2 (current)	Output current at tripping	0.01[A]				
0021h	Trip info. 2 (voltage)	DC input voltage at tripping	1[V]				
0022h	Trip info. 2 (running time) (high)	Cumulative running time at tripping	1[h]				
0023h	Trip info. 2 (running time) (low)						
0024h	Trip info. 2 (power-on time) (high)	Cumulative power-on time at tripping	1[h]				
0025h	Trip info. 2 (power-on time) (low)						
0026h	Trip info. 3 (factor)	d083	R			See the list of inverter trip factors below	-
0027h	Trip info. 3 (inverter status)					See the list of inverter trip factors below	-
0028h	Trip info. 3 (frequency) (high)			0 to 100000	0.01[Hz]		
0029h	Trip info. 3 (frequency) (low)						
002Ah	Trip info. 3 (current)			Output current at tripping	0.01[A]		
002Bh	Trip info. 3 (voltage)			DC input voltage at tripping	1[V]		
002Ch	Trip info. 3 (running time) (high)			Cumulative running time at tripping	1[h]		
002Dh	Trip info. 3 (running time) (low)						
002Eh	Trip info. 3 (power-on time) (high)			Cumulative power-on time at tripping	1[h]		
002Fh	Trip info. 3 (power-on time) (low)						
0030h	Trip info. 4 (factor)			d084	R	See the list of inverter trip factors below	-
0031h	Trip info. 4 (inverter status)					See the list of inverter trip factors below	-
0032h	Trip info. 4 (frequency) (high)	0 to 100000	0.01[Hz]				
0033h	Trip info. 4 (frequency) (low)						
0034h	Trip info. 4 (current)	Output current at tripping	0.01[A]				
0035h	Trip info. 4 (voltage)	DC input voltage at tripping	1[V]				
0036h	Trip info. 4 (running time) (high)	Cumulative running time at tripping	1[h]				
0037h	Trip info. 4 (running time) (low)						
0038h	Trip info. 4 (power-on time) (high)	Cumulative power-on time at tripping	1[h]				
0039h	Trip info. 4 (power-on time) (low)						
003Ah	Trip info. 5 (factor)	d085	R			See the list of inverter trip factors below	-
003Bh	Trip info. 5 (inverter status)					See the list of inverter trip factors below	-
003Ch	Trip info. 5 (frequency) (high)			0 to 100000	0.01[Hz]		
003Dh	Trip info. 5 (frequency) (low)						
003Eh	Trip info. 5 (current)			Output current at tripping	0.01[A]		
003Fh	Trip info. 5 (voltage)			DC input voltage at tripping	1[V]		
0040h	Trip info. 5 (running time) (high)			Cumulative running time at tripping	1[h]		
0041h	Trip info. 5 (running time) (low)						
0042h	Trip info. 5 (power-on time) (high)			Cumulative power-on time at tripping	1[h]		
0043h	Trip info. 5 (power-on time) (low)						
0044h	Trip info. 6 (factor)			d086	R	See the list of inverter trip factors below	-
0045h	Trip info. 6 (inverter status)					See the list of inverter trip factors below	-
0046h	Trip info. 6 (frequency) (high)	0 to 100000	0.01[Hz]				
0047h	Trip info. 6 (frequency) (low)						
0048h	Trip info. 6 (current)	Output current at tripping	0.01[A]				
0049h	Trip info. 6 (voltage)	DC input voltage at tripping	1[V]				
004Ah	Trip info. 6 (running time) (high)	Cumulative running time at tripping	1[h]				
004Bh	Trip info. 6 (running time) (low)						
004Ch	Trip info. 6 (power-on time) (high)	Cumulative power-on time at tripping	1[h]				
004Dh	Trip info. 6 (power-on time) (low)						

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
004Eh	Programming error monitoring	d090	R	Warning code	-
004Fh to 006Ch	(reserved)	-	-	-	-
006Dh to 08Efh	(reserved)	-	-	-	-
0900h	Writing to EEPROM	-	W	0: Motor constant recalculation 1: Save all data in EEPROM Other: Motor constant recalculation and save all data in EEPROM	-
0901h	Unused	-	-	Inaccessible	-
0902h	EEPROM write mode	-	W	0 (invalid) / 1 (valid)	-
0903h to 1000h	Unused	-	-	Inaccessible	-

Note 1: Assume that the rated current of the inverter is "1000".

Note 2: If a number not less than "1000" (100.0 seconds) is specified, the second value after the decimal point will be ignored.

Note 3: 0902h setting is referred for one time when following 06H command is executed.



## List of inverter trip factors

Upper part of trip factor code (indicating the factor)		Lower part of trip factor code (indicating the inverter status)	
Name	Code	Name	Code
No trip factor	0	Resetting	0
Over-current event while at constant speed	1	Stopping	1
Over-current event during deceleration	2	Decelerating	2
Over-current event during acceleration	3	Constant-speed operation	3
Over-current event during other conditions	4	Accelerating	4
Overload protection	5	Operating at zero frequency	5
Braking resistor overload protection	6	Starting	6
Overvoltage protection	7	DC braking	7
EEPROM error	8	Overload restricted	8
Undervoltage protection	9		
Current detection error	10		
CPU error	11		
External trip	12		
USP error	13		
Ground-fault protection	14		
Input overvoltage protection	15		
Thermistor thermal protection	19		
Inverter thermal trip	21		
CPU error	22		
Main circuit error	25		
Driver error	30		
Thermistor error	35		
Braking error	36		
Safe Stop	37		
Low-speed overload protection	38		
Operator connection	40		
Modbus communication error	41		
Easy sequence error (invalid instruction)	43		
Easy sequence error (invalid nesting count)	44		
Easy sequence execution error 1	45		
Easy sequence user trip 0 to 9	50 to 59		
Option error 0 to 9	60 to 69		
Encoder disconnection	80		
Excessive speed	81		
Position control range trip	83		

(iii) List of registers (monitoring)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1001h	Output frequency monitor	d001 (high)	R	0 to 40000(100000)	0.01 [Hz]
1002h		d001 (low)			
1003h	Output current monitor	d002	R	0 to 65530	0.1 [A]
1004h	Rotation direction monitoring	d003	R	0: Stopping, 1: Forward rotation, 2: Reverse rotation	0.1 [Hz]
1005h	Process variable (PV), PID feedback monitoring	d004 (high)	R	0 to 1000000	0.1
1006h		d004 (low)			
1007h	Intelligent input terminal status	d005	R	2^0: Terminal 1 to 2^6: Terminal 7	1 bit
1008h	Intelligent output terminal status	d006	R	2^0: Terminal 11 to 2^1: Terminal 12/ 2^2: Relay Terminal	1 bit
1009h	Scaled output frequency monitor	d007 (high)	R	0 to 4000000(10000000)	0.01
100Ah		d007 (low)			
100Bh	Actual-frequency monitor	d008 (high)	R	-100000 to +100000	0.01 [Hz]
100Ch		d008 (low)	R		
100Dh	Torque command monitor	d009	R	-200 to +200	1 [%]
100Eh	Torque bias monitor	d010	R	-200 to +200	1 [%]
100Fh	(Reserved)	-	-	-	-
1010h	Torque monitor	d012	R	-200 to +200	1 [%]
1011h	Output voltage monitor	d013	R	0 to 6000	0.1 [V]
1012h	Power monitor	d014	R	0 to 1000	0.1 [kW]
1013h	Watt-hour monitor	d015 (high)	R	0 to 9999000	0.1
1014h		d015 (low)			
1015h	Elapsed RUN time monitor	d016 (high)	R	0 to 999900	1 [h]
1016h		d016 (low)			
1017h	Elapsed power-on time monitor	d017 (high)	R	0 to 999900	1 [h]
1018h		d017 (low)			
1019h	Heat sink temperature monitor	d018	R	-200 to 1500	0.1 [°C]
101Ah to 101Ch	(Reserved)	-	-	-	-
101Dh	Life-check monitor	d022	R	2^0: Capacitor on main circuit board 2^1: cooling-fan	1 bit
101Eh	EzSQ program counter	d023	R	0~1024	
101Fh	EzSQ program number	d024	R	0~9999	
1020h to 1025h	(Reserved)	-	-	-	-
1026h	DC voltage monitoring (across P and N)	d102	R	0 to 10000	0.1 [V]
1027h	BRD load factor monitoring	d103	R	0 to 1000	0.1 [%]
1028h	Electronic thermal overload monitoring	d104	R	0 to 1000	0.1 [%]
1029h to 102Dh	(Reserved)	-	-	-	-
102Eh	User monitor 1	d025(HIGH)	R	-2147483647 to 2147483647	1
102Fh		d025(LOW)	R		
1030h	User monitor 2	d026(HIGH)	R	-2147483647 to 2147483647	1
1031h		d026(LOW)	R		
1032h	User monitor 3	d027(HIGH)	R	-2147483647 to 2147483647	1
1033h		d027(LOW)	R		
1034h to 1035h	(Reserved)	-	-	-	-
1036h	Position setting monitor	d029(HIGH)	R	-268435455 to 268435455	1
1037h		d029(LOW)	R		
1038h	Position feedback monitor	d030(HIGH)	R	-268435455 to 268435455	1
1039h		d030(LOW)	R		
103Ah to 1056h	(reserved)	-	-	-	-
1057h	Inverter mode monitor	d060	R	0(IM CT) 3(PM motor mode) 1(IM VT)	

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1058h	unused			Inaccessible	
1059h	Frequency source monitor <sup>*2</sup>	d062	R	0(Operator), 1-15(1-15 Multi-speed), 16(Jog frequency), 18(Modbus communication), 19(Option), 21(Potentiometer. available with OPE-SR or OPE-SRmini), 22(Pulse train), 23(Calculate function output), 24(EzSQ),25([O] input), 26([OI] input), 27([O] + [OI] input)	-
105Ah	Run command source monitor <sup>*2</sup>	d063	R	1(Control terminal), 2(Operator), 3(Modbus network), 4(Option)	-
105Bh to 108Dh	unused	-	-	Inaccessible	-
108Eh	Analog input O monitor <sup>*2</sup>	d130	R	0 to 1023	1
108Fh	Analog input OI monitor <sup>*2</sup>	d131	R	0 to 1023	1
1090h	unused	-	-	Inaccessible	-
1091h	Pulse train input monitor <sup>*2</sup>	d133	R	0 to 10000	0.01[%]
1092h to 10ADh	unused	-	-	Inaccessible	-
10AEh	PID deviation monitor <sup>*2</sup>	d153(HIGH)	R	-999900~999900	0.01[%]
10AFh		d153(LOW)	R		
10B0h to 10B1h	unused	-	-	Inaccessible	-
10B2h	PID output monitor <sup>*2</sup>	d155(HIGH)	R	-999900~999900	0.01[%]
10B3h		d155(LOW)	R		
10B4h to 1102h	unused	-	-	Inaccessible	-

\*1: Range modified from version 3.0

\*2: Available from version 3.0

### (iv) List of registers

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1103h	Acceleration time (1) **	F002 (high)	R/W	0 to 360000	0.01 [s]
1104h		F002 (low)			
1105h	Deceleration time (1) **	F003 (high)	R/W	0 to 360000	0.01 [s]
1106h		F003 (low)			
1107h	Keypad Run key routing	F004	R/W	0 (forward rotation), 1 (reverse rotation)	-
1108h to 1200h	Unused	-	-	Inaccessible	-

\*\* : Range modified from version 3.0

### (v) List of registers (function modes)

#### Parameter group A

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1201h	Frequency source	A001	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
1202h	Run command source (*)	A002	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
1203h	Base frequency	A003	R/W	300 to "maximum frequency"	0.1 [Hz]
1204h	Maximum frequency	A004	R/W	300 to 4000(10000)	0.1 [Hz]
1205h	[AT] selection	A005	R/W	0 (switching between O and OI terminals), 2 (switching between O terminal and keypad potentiometer), 3 (switching between OI terminal and keypad potentiometer)	-
1206h to 120Ah	(Reserved)	-	-	-	-
120Bh	[O] input active range start frequency	A011 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Ch		A011 (low)			
120Dh	[O] input active range end frequency	A012 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
120Eh		A012 (low)			
120Fh	[O] input active range start voltage	A013	R/W	0 to "[O]-[L] input active range end voltage"	1 [%]
1210h	[O] input active range end voltage	A014	R/W	"[O]-[L] input active range start voltage" to 100	1 [%]
1211h	[O] input start frequency select	A015	R/W	0 (external start frequency), 1 (0 Hz)	-
1212h	Analog input filter.	A016	R/W	1 to 30 or 31 (500 ms filter $\pm 0.1$ Hz with hysteresis)	1
1213h	EzSQ selection	A017	R/W	0 (disabling), 1 (PRG terminal), 2 (Always)	-
1214h	(Reserved)	-	-	-	-
1215h	Multi speed operation selection	A019	R/W	0 (binary), 1 (bit)	-
1216h	Multi-speed freq. 0	A020 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1217h		A020 (low)	R/W		
1218h	Multi-speed freq. 1	A021 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1219h		A021 (low)	R/W		
121Ah	Multi-speed freq. 2	A022 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Bh		A022 (low)	R/W		
121Ch	Multi-speed freq. 3	A023 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Dh		A023 (low)	R/W		
121Eh	Multi-speed freq. 4	A024 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
121Fh		A024 (low)	R/W		
1220h	Multi-speed freq. 5	A025 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1221h		A025 (low)	R/W		
1222h	Multi-speed freq. 6	A026 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1223h		A026 (low)	R/W		
1224h	Multi-speed freq. 7	A027 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1225h		A027 (low)	R/W		

After changing the setting, keep the time 40ms or longer before actually give run command

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1226h	Multi-speed freq. 8	A028 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1227h		A028 (low)	R/W		
1228h	Multi-speed freq. 9	A029 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1229h		A029 (low)	R/W		
122Ah	Multi-speed freq. 10	A030 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Bh		A030 (low)	R/W		
122Ch	Multi-speed freq. 11	A031 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Dh		A031 (low)	R/W		
122Eh	Multi-speed freq. 12	A032 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
122Fh		A032 (low)	R/W		
1230h	Multi-speed freq. 13	A033 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1231h		A033 (low)	R/W		
1232h	Multi-speed freq. 14	A034 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1233h		A034 (low)	R/W		
1234h	Multi-speed freq. 15	A035 (high)	R/W	0 or "start frequency" to "maximum frequency"	0.01 [Hz]
1235h		A035 (low)	R/W		
1236h	(Reserved)	-	-	-	-
1237h	(Reserved)	-	-	-	-
1238h	Jog frequency	A038	R/W	0.0, "Start frequency" to 999(10000)	0.01 [Hz]
1239h	Jog stop mode	A039	R/W	0 (free-running after jogging stops [disabled during operation]) 1 (deceleration and stop after jogging stops [disabled during operation]) 2 (DC braking after jogging stops [disabled during operation]) 3 (free-running after jogging stops [enabled during operation]) 4 (deceleration and stop after jogging stops [enabled during operation]) 5 (DC braking after jogging stops [enabled during operation])	-
123Ah	(Reserved)	-	-	-	-
123Bh	Torque boost method selection	A041	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
123Ch	Manual torque boost value	A042	R/W	0 to 200	0.1 [%]
123Dh	Manual torque boost frequency	A043	R/W	0 to 500	0.1 [%]
123Eh	V/f characteristic curve selection, 1st motor	A044	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control),	-
123Fh	V/f gain	A045	R/W	20 to 100	1 [%]
1240h	Voltage compensation gain setting for automatic torque boost, 1st motor	A046	R/W	0 to 255	1 [%]
1241h	Slippage compensation gain setting for automatic torque boost, 1st motor	A047	R/W	0 to 255	1 [%]
1242h to 1244h	(Reserved)	-	-	-	-
1245h	DC braking enable	A051	R/W	0 (disabling), 1 (enabling), 2 (output freq < [A052])	-
1246h	DC braking frequency	A052	R/W	0 to 6000	0.01 [Hz]
1247h	DC braking wait time	A053	R/W	0 to 50	0.1 [s]
1248h	DC braking force during deceleration	A054	R/W	0 to 100	1 [%]
1249h	DC braking time for deceleration	A055	R/W	0 to 600	0.1 [s]
124Ah	DC braking/edge or level detection for [DB] input	A056	R/W	0 (edge operation), 1 (level operation)	-
124Bh	DC braking force for starting	A057	R/W	0 to 100	1 [%]
124Ch	DC braking time for starting	A058	R/W	0 to 600	0.1 [s]
124Dh	DC braking carrier frequency setting	A059	R/W	20 to 150	0.1 [kHz]
124Eh	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
124Fh	Frequency upper limit	A061 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1250h		A061 (low)	R/W		
1251h	Frequency lower limit	A062 (high)	R/W	0 or "maximum frequency limit" to "maximum frequency"	0.01 [Hz]
1252h		A062 (low)	R/W		
1253h	Jump freq. (center) 1	A063 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1254h		A063 (low)	R/W		
1255h	Jump freq. width (hysteresis) 1	A064	R/W	0 to 1000(10000)	0.01 [Hz]
1256h	Jump freq. (center) 2	A065 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1257h		A065 (low)	R/W		
1258h	Jump freq. width (hysteresis) 2	A066	R/W	0 to 1000(10000)	0.01 [Hz]
1259h	Jump freq. (center) 3	A067 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
125Ah		A067 (low)	R/W		
125Bh	Jump freq. width (hysteresis) 3	A068	R/W	0 to 1000(10000)	0.01 [Hz]
125Ch	Acceleration hold frequency	A069 (high)	R/W	0 to 40000	0.01 [Hz]
125Dh		A069 (low)	R/W		
125Eh	Acceleration hold time	A070	R/W	0 to 600	0.1 [s]
125Fh	PID Function Enable	A071	R/W	0 (disabling), 1 (enabling), 2 (enabling inverted-data output)	-
1260h	PID proportional gain	A072	R/W	0 to 2500	0.10
1261h	PID integral time constant	A073	R/W	0 to 36000	0.1 [s]
1262h	PID derivative gain	A074	R/W	0 to 10000	0.01 [s]
1263h	PV scale conversion	A075	R/W	1 to 9999	0.01
1264h	PV source	A076	R/W	0 (input via OI), 1 (input via O), 2 (external communication), 3 (pulse train frequency input), 10 (operation result output)	-
1265h	Reverse PID	A077	R/W	00 (disabling), 01 (enabling)	-
1266h	PID output limiter	A078	R/W	0 to 1000	0.1 [%]
1267h	PID feed forward selection	A079	R/W	0 (disabled), 1(O input), 2 (OI input)	-
1268h	(Reserved)	-	R/W	-	-
1269h	AVR function select	A081	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
126Ah	AVR voltage select	A082	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
126Bh	AVR filter time constant	A083	R/W	0.000 to 10.00	0.001[s]
126Ch	AVR deceleration gain	A084	R/W	50 to 200	1[%]
126Dh	Energy-saving operation mode	A085	R/W	0 (normal operation), 1 (energy-saving operation)	-
126Eh	Energy-saving mode tuning	A086	R/W	0 to 1000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
126Fh to 1273h	(Reserved)	-	-	-	-
1274h	Acceleration time (2) **	A092 (high)	R/W	0 to 360000	0.01 [s]
1275h		A092 (low)	R/W		
1276h	Deceleration time (2) **	A093 (high)	R/W	0 to 360000	0.01 [s]
1277h		A093 (low)	R/W		
1278h	Select method to switch to Acc2/Dec2 profile	A094	R/W	0 (switching by 2CH terminal), 1 (switching by setting) 2 (Forward and reverse)	-
1279h	Acc1 to Acc2 frequency transition point	A095 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ah		A095 (low)	R/W		
127Bh	Dec1 to Dec2 frequency transition point	A096 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
127Ch		A096 (low)	R/W		
127Dh	Acceleration curve selection	A097	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Eh	Deceleration curve setting	A098	R/W	0 (linear), 1 (S curve), 2 (U curve), 3 (inverted-U curve), 4 (EL-S curve)	-
127Fh	(Reserved)	-	-	-	-
1280h	(Reserved)	-	-	-	-
1281h	[OI] input active range start frequency	A101 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1282h		A101 (low)	R/W		
1283h	[OI] input active range end frequency	A102 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
1284h		A102 (low)	R/W		
1285h	[OI] input active range start current	A103	R/W	0 to "[OI]-[L] input active range end current"	1 [%]
1286h	[OI] input active range end current	A104	R/W	"[OI]-[L] input active range start current" to 100	1 [%]
1287h	[OI] input start frequency select	A105	R/W	0 (external start frequency), 1 (0 Hz)	-
1288h to 12A4h	(Reserved)	-	-	-	-
12A5h	Acceleration curve constant	A131	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A6h	Deceleration curve constant	A132	R/W	1 (smallest swelling) to 10 (largest swelling)	-
12A7h to 12AEh	(Reserved)	-	-	-	-
12AFh	Operation-target frequency selection 1	A141	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-

\*\*1: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
12B0h	Operation-target frequency selection 2	A142	R/W	0 (digital operator), 1 (keypad potentiometer), 2 (input via O), 3 (input via OI), 4 (external communication), 5 (option ), 7 (pulse train frequency input)	-
12B1h	Operator selection	A143	R/W	0 (addition: A141 + A142), 1 (subtraction: A141 - A142), 2 (multiplication: A141 x A142)	-
12B2h	(Reserved)	-	-	-	-
12B3h	Frequency to be added	A145 (high)	R/W	0 to 40000(100000)	0.01 [Hz]
12B4h		A145 (low)	R/W		
12B5h	Sign of the frequency to be added	A146	R/W	00 (frequency command + A145), 01 (frequency command - A145)	-
12B6h to 12B8h	(Reserved)	-	-	-	-
12B9h	EL-S-curve acceleration/deceleration ratio 1	A150	R/W	0 to 50	1 [%]
12BAh	EL-S-curve acceleration/deceleration ratio 2	A151	R/W	0 to 50	1 [%]
12BBh	EL-S-curve deceleration/deceleration ratio 1	A152	R/W	0 to 50	1 [%]
12BCh	EL-S-curve deceleration/deceleration ratio 2	A153	R/W	0 to 50	1 [%]
12BDh	Deceleration hold frequency	A154 (high)	R/W	0~40000(100000)	0.01 [Hz]
12BEh		A154 (low)			
12BFh	Deceleration hold time	A155	R/W	0~600	0.1 [s]
12C0h	PID sleep function triggering level	A156 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C1h		A156 (low)			
12C2h	PID sleep function action delay time	A157	R/W	0~255	0.1 [s]
12C3h to 12C5h	(Reserved)	-	-	-	-
12C6h	[VR] input active range start frequency	A161 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C7h		A161 (low)			
12C8h	[VR] input active range end frequency	A162 (high)	R/W	0~40000(100000)	0.01 [Hz]
12C9h		A162 (low)			
12CAh	[VR] input active range start %	A163	R/W	0~100	1 [%]
12CBh	[VR] input active range end %	A164	R/W	0~100	1 [%]
12CCh	[VR] input start frequency select	A165	R/W	0(start frequency A161) / 1(0Hz)	-
12CDh to 1300h	unused	-	-	Inaccessible	-



## Parameter group B

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1301h	Restart mode on power failure / under-voltage trip	b001	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
1302h	Allowable under-voltage power failure time	b002	R/W	3 to 250	0.1 [s]
1303h	Retry wait time before motor restart	b003	R/W	3 to 1000	0.1 [s]
1304h	Instantaneous power failure/under-voltage trip alarm enable	b004	R/W	0 (disabling), 1 (enabling), 2 (disabling during stopping and decelerating to stop)	-
1305h	Number of restarts on power failure/under-voltage trip events	b005	R/W	0 (16 times), 1 (unlimited)	-
1306h	(Reserved)	-	-	-	-
1307h	Restart frequency threshold	b007 (high)	R/W	0 to 40000	0.01 [Hz]
1308h		b007 (low)	R/W		
1309h	Restart mode on over voltage / over current	b008	R/W	0 (tripping), 1 (starting with 0 Hz), 2 (starting with matching frequency), 3 (tripping after deceleration and stopping with matching frequency), 4 (restarting with active matching frequency)	-
130Ah	(Reserved)	-	-	-	-
130Bh	Number of retry on over voltage / over current	b010	R/W	1 to 3	1 [s]
130Ch	Retry wait time on over voltage / over current	b011	R/W	3 to 1000	0.1 [s]
130Dh	Level of electronic thermal	b012	R/W	200 to 1000	0.1 [%]
130Eh	Electronic thermal characteristic	b013	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
130Fh	(Reserved)	-	-	Inaccessible	-
1310h	Free setting, electronic thermal frequency (1)	b015	R/W	0 to 400	1 [Hz]
1311h	Free setting, electronic thermal current (1)	b016	R/W	0 to Rated current	0.1 [A]
1312h	Free setting, electronic thermal frequency (2)	b017	R/W	0 to 400	1 [Hz]
1313h	Free setting, electronic thermal current (2)	b018	R/W	0 to Rated current	0.1 [A]
1314h	Free setting, electronic thermal frequency (3)	b019	R/W	0 to 400	1 [Hz]
1315h	Free setting, electronic thermal current (3)	b020	R/W	0 to Rated current	0.1 [A]
1316h	Overload restriction operation mode	b021	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
1317h	Overload restriction level	b022	R/W	200 to 2000	0.1 [%]
1318h	Deceleration rate at overload restriction	b023	R/W	1 to 30000	0.1 [s]
1319h	Overload restriction operation mode (2)	b024	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
131Ah	Overload restriction level 2	b025	R/W	200 to 2000	0.1 [%]
131Bh	Deceleration rate at overload restriction (2)	b026	R/W	1 to 30000	0.1 [s]
131Ch	Over current suppression enable <sup>1)</sup>	b027	R/W	0 (disabling), 1(Enabled without voltage reduction), 2(Enable with voltage reduction)	-
131Dh	Current level of active freq. matching	b028	R/W	100 to 2000	0.1 [%]
131Eh	Deceleration rate of active freq. matching	b029	R/W	1 to 30000	0.1 [s]

<sup>1)</sup>: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
131Fh	Start freq. of active frequency matching	b030	R/W	0 (frequency at the last shutoff), 1 (maximum frequency), 2 (set frequency)	-
1320h	Software lock mode selection	b031	R/W	0 (disabling change of data other than "b031" when SFT is on), 1 (disabling change of data other than "b031" and frequency settings when SFT is on), 2 (disabling change of data other than "b031"), 3 (disabling change of data other than "b031" and frequency settings), 10 (enabling data changes during operation)	-
1321h	(Reserved)	-	-	-	-
1322h	Motor cable length parameter	b033	R/W	5 to 20	-
1323h	Run/power-on warning time	b034 (high)	R/W	0 to 65535	1 [10h]
1324h		b034 (low)	R/W		
1325h	Rotation direction restriction	b035	R/W	0 (Enable for both dir)/ 1 (Enable for forward only)/ 2 (Enable for reverse only)	-
1326h	Reduced voltage start selection	b036	R/W	0 (minimum reduced voltage start time) to 255 (maximum reduced voltage start time)	-
1327h	Function code display restriction	b037	R/W	0 (full display), 1 (function-specific display), 2 (user setting), 3 (data comparison display), 4 (basic display), 5 (monitor display)	-
1328h	Initial display selection	b038	R/W	001-060	-
1329h	Automatic user parameter registration	b039	R/W	0 (disabling), 1 (enabling)	-
132Ah	Torque limit selection	b040	R/W	00 (quadrant-specific setting), 01 (switching by terminal), 02 (analog input)	-
132Bh	Torque limit 1 (fwd-power in 4-quadrant mode)	b041	R/W	0 to 200/255 (no)	1 [%]
132Ch	Torque limit 2 (rev/regen. in 4-quadrant mode)	b042	R/W	0 to 200/255 (no)	1 [%]
132Dh	Torque limit 3 (rev/power in 4-quadrant mode)	b043	R/W	0 to 200/255 (no)	1 [%]
132Eh	Torque limit 4 (fwd/regen. in 4-quadrant mode)	b044	R/W	0 to 200/255 (no)	1 [%]
132Fh	Torque limit LADSTOP enable	b045	R/W	0 (disabling), 1 (enabling)	-
1330h	Reverse Run protection enable	b046	R/W	0 (disabling), 1 (enabling)	-
1331h to 1332h	(Reserved)	-	-	-	-
1333h	Dual Rating Selection	b049	R/W	0(CT mode)/1(VT mode)	-
1334h	Controlled deceleration on power loss	b050	R/W	0 (disabling), 1 (enabling), 2, (nonstop operation at momentary power failure (no restoration)) 3, (nonstop operation at momentary power failure (restoration to be done))	-
1335h	DC bus voltage trigger level of ctrl. decel.	b051	R/W	0 to 10000	0.1 [V]
1336h	Over-voltage threshold of ctrl. decel.	b052	R/W	0 to 10000	0.1 [V]
1337h	Deceleration time of ctrl. decel.	b053 (high)	R/W	0.01 to 36000	0.01 [s]
1338h		b053 (low)	R/W		
1339h	Initial freq. drop of ctrl. decel.	b054	R/W	0 to 1000	0.01 [Hz]
133Ah to 133Eh	(Reserved)	-	-	-	-
133Fh	Maximum-limit level of window comparators O	b060	R/W	0. to 100. (lower limit : b061 + b062 *2) (%)	1 [%]
1340h	Minimum-limit level of window comparators O	b061	R/W	0. to 100. (lower limit : b060 - b062*2) (%)	1 [%]
1341h	Hysteresis width of window comparators O	b062	R/W	0. to 10. (lower limit : b061 - b062 / 2) (%)	1 [%]
1342h	Maximum-limit level of window comparators OI	b063	R/W	0. to 100. (lower limit : b064 + b066 *2) (%)	1 [%]
1343h	Minimum-limit level of window comparators OI	b064	R/W	0. to 100. (lower limit : b063 - b066 *2) (%)	1 [%]
1344h	Hysteresis width of window comparators OI	b065	R/W	0. to 10. (lower limit : b063 - b064 / 2) (%)	1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1345h to 1348h	(Reserved)	-	-	-	-
1349h	Operation level at O disconnection	b070	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Ah	Operation level at Oi disconnection	b071	R/W	0. to 100. (%) or "no" (ignore)	1 [%]
134Bh to 134Dh	(reserved)	-	-	-	-
134Eh	Ambient temperature	b075	R/W	-10 to 50	1 [°c]
134Fh to 1350	(reserved)	-	-	-	-
1351h	Cumulative input power data clearance	b078	R/W	Clearance by setting "1"	-
1352h	Watt-hour display gain	b079	R/W	1 to 1000	1
1353h to 1354h	(Reserved)	-	-	-	-
1355h	Start frequency <sup>1)</sup>	b082	R/W	1 to 999	0.01 [Hz]
1356h	Carrier frequency	b083	R/W	20 to 150	0.1 [kHz]
1357h	Initialization mode (parameters or trip history)	b084	R/W	0,1 (clearing the trip history), 2 (initializing the data), 3 (clearing the trip history and initializing the data), 4 (clearing the trip history and initializing the data and EzSQ program)	-
1358h	Country code for initialization	b085	R/W	0 (area A), 1 (area B)	-
1359h	Frequency scaling conversion factor	b086	R/W	1 to 9999	0.01
135Ah	STOP key enable	b087	R/W	0 (enabling), 1 (disabling), 2 (disabling only stop)	-
135Bh	Restart mode after FRS	b088	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (starting with active matching frequency)	-
135Ch	Automatic carrier frequency reduction	b089	R/W	0(disabling)/1(enabling( output current controlled))/2(enabling( fin temperature controlled))	-
135Dh	Dynamic braking usage ratio	b090	R/W	0 to 1000	0.1 [%]
135Eh	Stop mode selection	b091	R/W	0 (deceleration until stop), 1 (free-run stop)	-
135Fh	Cooling fan control	b092	R/W	0 (always operating the fan), 1 (operating the fan only during inverter operation [including 5 minutes after power-on and power-off]) ,2	-
1360h	Clear elapsed time of cooling fan	b093	R/W	0(count)/1(clear)	-
1361h	Initialization target data	b094	R/W	0 to 3	-
1362h	Dynamic braking control	b095	R/W	0 (disabling), 1 (enabling [disabling while the motor is stopped]), 2 (enabling [enabling also while the motor is stopped])	-
1363h	Dynamic braking activation level	b096	R/W	330 to 380, 660 to 760	1. [V]
1364h	BRD resistor value	b097	R/W	Min.Resistance to 6000	0.1[Ω]
1365h to 1366h	(Reserved)	-	-	-	-
1367h	Free-setting V/f frequency (1)	b100	R/W	0. to "free-setting V/f frequency (2)"	1 [Hz]
1368h	Free-setting V/f voltage (1)	b101	R/W	0. to 8000	0.1 [V]
1369h	Free-setting V/f frequency (2)	b102	R/W	0. to "free-setting V/f frequency (3)"	1 [Hz]
136Ah	Free-setting V/f voltage (2)	b103	R/W	0. to 8000	0.1 [V]
136Bh	Free-setting V/f frequency (3)	b104	R/W	0. to "free-setting V/f frequency (4)"	1 [Hz]
136Ch	Free-setting V/f voltage (3)	b105	R/W	0. to 8000	0.1 [V]
136Dh	Free-setting V/f frequency (4)	b106	R/W	0. to "free-setting V/f frequency (5)"	1 [Hz]
136Eh	Free-setting V/f voltage (4)	b107	R/W	0. to 8000	0.1 [V]
136Fh	Free-setting V/f frequency (5)	b108	R/W	0. to "free-setting V/f frequency (6)"	1 [Hz]
1370h	Free-setting V/f voltage (5)	b109	R/W	0. to 8000	0.1 [V]
1371h	Free-setting V/f frequency (6)	b110	R/W	0. to "free-setting V/f frequency (7)"	1 [Hz]
1372h	Free-setting V/f voltage (6)	b111	R/W	0. to 8000	0.1 [V]
1373h	Free-setting V/f frequency (7)	b112	R/W	0. to 400.	1 [Hz]
1374h	Free-setting V/f voltage (7)	b113	R/W	0. to 8000	0.1 [V]

<sup>1)</sup>: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1375h to 137Ah	(Reserved)	-	-	-	-
137Bh	Brake Control Enable <sup>*1</sup>	b120	R/W	0(Disable), 1(P012=00:Enable/ P012=02:Enable with DC breaking at positioning end), 2(P012=00:Enable/ P012=02:Enable without DC breaking at positioning end)	-
137Ch	Brake Wait Time for Release	b121	R/W	0 to 500	0.01 [s]
137Dh	Brake Wait Time for Acceleration	b122	R/W	0 to 500	0.01 [s]
137Eh	Brake Wait Time for Stopping	b123	R/W	0 to 500	0.01 [s]
137Fh	Brake Wait Time for Confirmation	b124	R/W	0 to 500	0.01 [s]
1380h	Brake Release Frequency	b125	R/W	0 to 40000	0.01 [Hz]
1381h	Brake Release Current	b126	R/W	0 to 2000	0.1 [%]
1382h	Braking frequency	b127	R/W	0 to 40000	0.01 [Hz]
1383h	(Reserved)	-	-	-	-
1384h	(Reserved)	-	-	-	-
1385h	Deceleration over voltage suppression enable	b130	R/W	0 (disabling), 1 (enabling), 2 (enabling with acceleration)	-
1386h	Decel. over volt. suppress level	b131	R/W	200 V class: 330 to 390 (V) 400 V class: 660 to 780 (V)	1 [V]
1387h	Decel. over volt. suppress const.	b132	R/W	10 to 3000	0.01 [s]
1388h	Decel. overvolt. suppress propotional gain	b133	R/W	0 to 500	0.01
1389h	Decel. overvolt. suppress Integral time	b134	R/W	0 to 1500	0.1 [s]
138Ah to 1393h	(Reserved)	-	-	-	-
1394h	GS input mode	b145	R/W	0(non Trip) /1(Trip)	-
1395h~1399h	(Reserved)	-	-	-	-
139Ah	Display ex.operator connected	b150	R/W	001 to 060	-
139Bh~13A2h	(Reserved)	-	-	-	-
13A3h	1st parameter of Dual Monitor	b160	R/W	001 to 030	-
13A4h	2nd parameter of Dual Monitor	b161	R/W	001 to 030	-
13A5h	(Reserved)	-	-	-	-
13A6h	Freq. set in monitoring	b163	R/W	0 (disabling), 1 (enabling)	-
13A7h	Automatic return to the initial display	b164	R/W	0 (disabling), 1 (enabling)	-
13A8h	Ex. operator com. loss action	b165	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
13A9h	Data Read/Write select	b166	R/W	0 (Read/Write OK) / 1 (Protected)	-
13AAh~13ADh	(Reserved)	-	-	-	-
13AEh	Inverter mode selection	b171	R/W	0 (disabling), 1 (IM mode), 3 (PM motor mode)	-
13AFh~13B6h	(Reserved)	-	-	-	-
13B7h	Initialization trigger	b180	R/W	0 (disabling), 1 (enabling)	-
13B8h~13C5h	unused	-	-	Inaccessible	-
13C6h	Electronic thermal subtraction function selection	b910	R/W	0(OFF), 1(Linear subtraction: pre-fixed ratio), 2(Linear subtraction: ratio set in b911), 3(Subtraction with first-order lag filter: ratio set in b912)	-
13C7h	Thermal subtraction time	b911(high)	R/W	10 to 10000000	0.01[s]
13C8h		b911(low)	R/W		
13C9h	Thermal subtraction time	b912(high)	R/W	10 to 10000000	0.01[s]
13CAh	constant	b912(low)	R/W		
13CBh	Thermal accumulation gain	b913	R/W	10 to 2000	0.1[%]
13CCh ~ 1400h	unused	-	-	Inaccessible	-

\*1: Range modified from version 3.0

## Parameter group C

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1401h	Input [1] function <sup>*1</sup>	C001	R/W	1 (RV: Reverse RUN), 2 (CF1: Multispeed 1 setting), 3 (CF2: Multispeed 2 setting), 4 (CF3: Multispeed 3 setting), 5 (CF4: Multispeed 4 setting), 6 (JG: Jogging), 7 (DB: external DC braking), 8 (SET: Set 2nd motor data), 9 (2CH: 2-stage acceleration/deceleration), 11 (FRS: free-run stop), 12 (EXT: external trip), 13 (USP: unattended start protection), 14: (CS: commercial power source enable), 15 (SFT: software lock), 16 (AT: analog input voltage/current select), 18 (RS: reset), 20 (STA: starting by 3-wire input), 21 (STP: stopping by 3-wire input), 22 (F/R: forward/reverse switching by 3-wire input), 23 (PID: PID disable), 24 (PIDC: PID reset), 27 (UP: remote control UP function), 28 (DWN: remote control DOWN function), 29 (UDC: remote control data clearing), 31 (OPE: forcible operation), 32 (SF1: multispeed bit 1), 33 (SF2: multispeed bit 2), 34 (SF3: multispeed bit 3), 35 (SF4: multispeed bit 4), 36 (SF5: multispeed bit 5), 37 (SF6: multispeed bit 6), 38 (SF7: multispeed bit 7), 39 (OLR: overload restriction selection), 40 (TL: torque limit enable), 41 (TRQ1: torque limit selection bit 1), 42 (TRQ2: torque limit selection bit 2), 44 (BOK: braking confirmation), 46 (LAC: LAD cancellation), 47 (PCLR: clearance of position deviation), 50 (ADD: trigger for frequency addition [A145]), 51 (F-TM: forcible-terminal operation), 52 (ATR: permission of torque command input), 53 (KHC: cumulative power clearance), 56 (MI1: general-purpose input 1), 57 (MI2: general-purpose input 2), 58 (MI3: general-purpose input 3), 59 (MI4: general-purpose input 4), 60 (MI5: general-purpose input 5), 61 (MI6: general-purpose input 6), 62 (MI7: general-purpose input 7), 65 (AHD: analog command holding), 66 (CP1: multistage position settings selection 1), 67 (CP2: multistage position settings selection 2), 68 (CP3: multistage position settings selection 3), 69 (ORL: Zero-return limit function), 70 (ORG: Zero-return trigger function), 73 (SPD: speed / position switching), 77 (GS1: safety input 1), 78 (GS2: safety input 2), 81 (485: EzCOM), 82 (PRG: executing EzSQ program), 83 (HLD: retain output frequency), 84 (ROK: permission of run command), 85 (EB: Rotation direction detection(for V/f with ENC), 86 (DISP: Display limitation), 91(PSET: "PSET" simple position control retains preset place.), 255 (no: no assignment),	-
1402h	Input [2] function <sup>*1</sup>	C002	R/W		-
1403h	Input [3] function <sup>*1</sup>	C003	R/W		-
1404h	Input [4] function <sup>*1</sup>	C004	R/W		-
1405h	Input [5] function <sup>*1</sup>	C005	R/W		-
1406h	Input [6] function <sup>*1</sup>	C006	R/W		-
1407h	Input [7] function <sup>*1</sup>	C007	R/W		-
1408h to 140Ah	(Reserved)	-	-	Inaccessible	-
140Bh	Input [1] active state	C011	R/W	0 (NO), 1 (NC)	-
140Ch	Input [2] active state	C012	R/W	0 (NO), 1 (NC)	-
140Dh	Input [3] active state	C013	R/W	0 (NO), 1 (NC)	-
140Eh	Input [4] active state	C014	R/W	0 (NO), 1 (NC)	-
140Fh	Input [5] active state	C015	R/W	0 (NO), 1 (NC)	-
1410h	Input [6] active state	C016	R/W	0 (NO), 1 (NC)	-
1411h	Input [7] active state	C017	R/W	0 (NO), 1 (NC)	-
1412h to 1414h	(Reserved)	-	-	Inaccessible	-

\*1: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1415h	Output [11] function	C021	R/W	0 (RUN: running), 1 (FA1: constant-speed reached), 2 (FA2: set frequency overreached), 3 (OL: overload notice advance signal (1)), 4 (OD: output deviation for PID control), 5 (AL: alarm signal), 6 (FA3: set frequency reached), 7 (OTQ: over-torque), 9 (UV: undervoltage), 10 (TRQ: torque limited), 11 (RNT: operation time over), 12 (ONT: plug-in time over), 13 (THM: thermal alarm signal), 19 (BRK: brake release), 20 (BER: braking error), 21 (ZS: 0 Hz detection signal), 22 (DSE: speed deviation maximum), 23 (POK: positioning completed), 24 (FA4: set frequency overreached 2), 25 (FA5: set frequency reached 2), 26 (OL2: overload notice advance signal (2)), 31 (FBV: PID feedback comparison), 32 (NDC: communication line disconnection), 33 (LOG1: logical operation result 1), 34 (LOG2: logical operation result 2), 35 (LOG3: logical operation result 3), 39 (WAC: capacitor life warning), 40 (WAF: cooling-fan), 41 (FR: starting contact signal), 42 (OHF: heat sink overheat warning), 43 (LOC: low-current indication signal), 44 (M01: general-purpose output 1), 45 (M02: general-purpose output 2), 46 (M03: general-purpose output 3), 50 (IRDY: inverter ready), 51 (FWR: forward rotation), 52 (RVR: reverse rotation), 53 (MJA: major failure), 54 (WCO: window comparator O), 55 (WCO: window comparator Oi), 58(FREF),59(REF),60(SETM),62(EDM),63(OPO:Option)	-
1416h	Output [12] function	C022	R/W		-
1421h to 1423h	(Reserved)	-	-		-
141Ah	Alarm relay function	C026	R/W		-
141Bh	[EO] terminal selection	C027	R/W	0 (output frequency), 1 (output current), 2 (output torque), 3 (digital output frequency), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 8 (digital current monitoring), 10 (heat sink temperature), 12 (general-purpose output YA0),15 ,16(option)	-
141Ch	[AM] terminal selection	C028	R/W	0 (output frequency), 1 (output current), 2 (output torque), 4 (output voltage), 5 (input power), 6 (electronic thermal overload), 7 (LAD frequency), 10 (heat sink temperature), 11 (output torque [signed value]), 13 (general-purpose output YA1),16(option)	-
141Dh	(reserved)	-	-	-	-
141Eh	Digital current monitor reference value	C030	R/W	200 to 2000	0.1 [%]
141Fh	Output [11] active state	C031	R/W	0 (NO), 1 (NC)	-
1420h	Output [12] active state	C032	R/W	0 (NO), 1 (NC)	-
1421h to 1423h	(Reserved)	-	-	-	-
1424h	Alarm relay active state	C036	R/W	0 (NO), 1 (NC)	-
1425h	(Reserved)	-	-	-	-
1426h	Output mode of low current detection	C038	R/W	0 (output during acceleration/deceleration and constant-speed operation), 1 (output only during constant-speed operation)	-
1427h	Low current detection level	C039	R/W	0 to 2000	0.1 [%]
1428h	Overload signal output mode	C040	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1429h	Overload warning level	C041	R/W	0 to 2000	0.1 [%]

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
142Ah	Frequency arrival setting for accel.	C042 (high)	R/W	0 to 40000	0.01 [Hz]
142Bh		C042 (low)	R/W		
142Ch	Frequency arrival setting for decel.	C043 (high)	R/W	0 to 40000	0.01 [Hz]
142Dh		C043 (low)	R/W		
142Eh	PID deviation level	C044	R/W	0 to 1000	0.1 [%]
142Fh	Frequency arrival setting 2 for accel.	C045 (high)	R/W	0 to 40000	0.01 [Hz]
1430h		C045 (low)	R/W		
1431h	Frequency arrival setting 2 for decel.	C046 (high)	R/W	0 to 40000	0.01 [Hz]
1432h		C046 (low)	R/W		
1433h	Pulse train input scale conversion for EO output	C047	R/W	0.01 – 99.99	-
1434h to 1437h	(Reserved)	-	-	-	-
1438h	Maximum PID feedback data	C052	R/W	0 to 1000	0.1 [%]
1439h	Minimum PID feedback data	C053	R/W	0 to 1000	0.1 [%]
143Ah	Over-torque/under-torque selection	C054	R/W	0(Over torque)/1(under torque)	-
143Bh	Over-torque (forward-driving) level setting	C055	R/W	0 to 200	1 [%]
143Ch	Over-torque (reverse regenerating) level setting	C056	R/W	0 to 200	1 [%]
143Dh	Over-torque (reverse driving) level setting	C057	R/W	0 to 200	1 [%]
143Eh	Over-torque (forward regenerating) level setting	C058	R/W	0 to 200	1 [%]
143Fh	Signal output mode of Over/under torque	C059	R/W	00 (output during acceleration/deceleration and constant-speed operation), 01 (output only during constant-speed operation)	-
1440h	(Reserved)	-	-	-	-
1441h	Electronic thermal warning level	C061	R/W	0 to 100	1 [%]
1442h	(Reserved)	-	-	-	-
1443h	Zero speed detection level	C063	R/W	0 to 10000	0.01 [Hz]
1444h	Heat sink overheat warning level	C064	R/W	0 to 110	1 [°c]
1445h to 144Ah	(Reserved)	-	-	-	-
144Bh	Communication speed	C071	R/W	03(2400bps), 04(4800bps), 05(9600bps), 06(19.2kbps), 07(38.4kbps), 08(57.6kbps), 09(76.8kbps), 10(115.2kbps)	-
144Ch	Modbus address	C072	R/W	1. to 247.	-
144Dh	(Reserved)	-	-	-	-
144Eh	Communication parity	C074	R/W	00 (no parity), 01 (even parity), 02 (odd parity)	-
144Fh	Communication stop bit	C075	R/W	1 (1 bit), 2 (2 bits)	-
1450h	Selection of the operation after communication error	C076	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1451h	Communication timeout limit	C077	R/W	0 to 9999	0.01 [s]
1452h	Communication wait time	C078	R/W	0 to 1000	1 [ms]
1453h to 1454h	(Reserved)	-	-	-	-
1455h	[O] input span calibration	C081	R/W	0 to 2000	0.1
1456h	[OI] input span calibration	C082	R/W	0 to 2000	0.1
1457h to 1458h	(Reserved)	-	-	-	-
1459h	Thermistor input tuning	C085	R/W	0 to 2000	0.1
145Ah to 145Eh	(Reserved)	-	-	-	-
145Fh	Debug mode enable	C091	R	0/1	-
1460h to 1463h	(Reserved)	-	-	-	-
1464h	Communication selection	C096	R/W	0(Modbus-RTU) 1(EzCOM) 2(EzCOM<administrator>)	-
1465h	(Reserved)	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1466h	EzCOM start adr. of master	C098	R/W	1~8	
1467h	EzCOM end adr. of master	C099	R/W	1~8	
1468h	EzCOM starting trigger	C100	R/W	00(Input terminal), 01(Always)	
1469h	Up/Down memory mode selection	C101	R/W	0 (not storing the frequency data), 1 (storing the frequency data)	-
146Ah	Reset mode selection	C102	R/W	0 (resetting the trip when RS is on), 1 (resetting the trip when RS is off), 2 (enabling resetting only upon tripping [resetting when RS is on]), 3(resetting only trip)	-
146Bh	Restart mode after reset	C103	R/W	0 (starting with 0 Hz), 1 (starting with matching frequency), 2 (restarting with active matching frequency)	-
146Ch	UP/DWN clear mode	C104	R/W	0 (0Hz)/1 (EEPROM data)	-
146Dh	FM gain adjustment	C105	R/W	50 to 200	1 [%]
146Eh	AM gain adjustment	C106	R/W	50 to 200	1 [%]
146Fh	(Reserved)	-	-	Inaccessible	1 [%]
1471h	AM bias adjustment	C109	R/W	0 to 100	1 [%]
1472h	(Reserved)	-	-	-	1 [%]
1473h	Overload warning level 2	C111	R/W	0 to 2000	0.1 [%]
1474h to 1485h	(Reserved)	-	-	-	-
1486h	Output [11] on-delay time	C130	R/W	0 to 1000	0.1 [s]
1487h	Output [11] off-delay time	C131	R/W	0 to 1000	0.1 [s]
1488h	Output [12] on-delay time	C132	R/W	0 to 1000	0.1 [s]
1489h	Output [12] off-delay time	C133	R/W	0 to 1000	0.1 [s]
148Ah to 148F	(Reserved)	-	-	-	-
1490h	Output RY on-delay time	C140	R/W	0 to 1000	0.1 [s]
1491h	Output RY off-delay time	C141	R/W	0 to 1000	0.1 [s]
1492h	Logic output 1 operand A	C142	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1493h	Logic output 1 operand B	C143	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1494h	Logical output 1 operator	C144	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1495h	Logic output 2 operand A	C145	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1496h	Logic output 2 operand B	C146	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1497h	Logical output 2 operator	C147	R/W	0 (AND), 1 (OR), 2 (XOR)	-
1498h	Logic output 3 operand A	C148	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
1499h	Logic output 3 operand B	C149	R/W	Same as the settings of C021 to C026 (except those of LOG1 to LOG6, OPO, no)	-
149Ah	Logical output 3 operator	C150	R/W	0 (AND), 1 (OR), 2 (XOR)	-
149Bh to 14A3h	(Reserved)	-	-	-	-
14A4h	Input [1] response time	C160	R/W	0 to 200	
14A5h	Input [2] response time	C161	R/W	0 to 200	
14A6h	Input [3] response time	C162	R/W	0 to 200	
14A7h	Input [4] response time	C163	R/W	0 to 200	
14A8h	Input [5] response time	C164	R/W	0 to 200	
14A9h	Input [6] response time	C165	R/W	0 to 200	
14AAh	Input [7] response time	C166	R/W	0 to 200	
14ABh to 14ACh	(Reserved)	-	-	-	
14ADh	Multistage speed/position determination time	C169	R/W	0 to 200	
14AEh to 14CBh	unused	-	-	Inaccessible	-
14CCh	IRDY action selection <sup>2</sup>	C900	R/W	0(Before Ver. 3.0), 1(After Ver. 3.0)	-
14CDh to 1500h	unused	-	-	Inaccessible	-

<sup>2</sup>: Available from version 3.0



## Parameter group H

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1501h	Auto-tuning Setting	H001	R/W	0 (disabling auto-tuning), 1 (auto-tuning without rotation), 2 (auto-tuning with rotation)	-
1502h	Motor data selection, 1st motor	H002	R/W	0 (Hitachi standard data), 2 (auto-tuned data)	-
1503h	Motor capacity, 1st motor	H003	R/W	00(0.1kW)- 15 (18.5kW)	-
1504h	Motor poles setting, 1st motor <sup>*1</sup>	H004	R/W	0(2 poles), 1(4 poles), 2(6 poles), 3(8 poles), 4(10 poles), 5(12 poles), 6(14 poles), 7(16 poles), 8(18 poles), 9(20 poles), 10(22 poles), 11(24 poles), 12(26 poles), 13(28 poles), 14(30 poles), 15(32 poles), 16(34 poles), 17(36 poles), 18(38 poles), 19(40 poles), 20(42 poles), 21(44 poles), 22(46 poles), 23(48 poles)	-
1505h	(Reserved)	-	-	-	-
1506h	Motor speed constant, 1st motor	H005	R/W	0 to 1000	1[%]
1508h~1514h	(Reserved)	-	-	-	-
1516h	Motor stabilization constant, 1st motor	H006	R/W	0 to 255	1
1517h	(Reserved)	-	-	-	-
1516h	Motor constant R1, 1st motor	H020	R/W	1 to 65530	0.001 [ $\Omega$ ]
1517h	(Reserved)	-	-	-	-
1518h	Motor constant R2, 1st motor	H021	R/W	1 to 65530	0.001 [ $\Omega$ ]
1519h	(Reserved)	-	-	-	-
151Ah	Motor constant L, 1st motor	H022	R/W	1 to 65530	0.01 [mH]
151Bh	(Reserved)	-	-	-	-
151Ch	Motor constant lo	H023	R/W	1 to 65530	0.01 [A]
151Dh	Motor constant J	H024 (high)	R/W	1 to 9999000	0.001
151Eh		H024 (low)	R/W		
151Hf~1524h	(Reserved)	-	-	-	-
1525h	Auto constant R1, 1st motor	H030	R/W	1 to 65530	0.001 [ $\Omega$ ]
1526h	(Reserved)	-	-	Inaccessible	-
1527h	Auto constant R2, 1st motor	H031	R/W	1 to 65530	0.001 [ $\Omega$ ]
1528h	(Reserved)	-	-	-	-
1529h	Auto constant L, 1st motor	H032	R/W	1 to 65530	0.01 [mH]
152Ah	(Reserved)	-	-	Inaccessible	-
152Bh	Auto constant lo, 1st motor	H033	R/W	1 to 65530	0.01 [A]
152Ch	Auto constant J, 1st motor	H034 (high)	R/W	1 to 9999000	0.001
152Dh		H034 (low)	R/W		
152Eh~153Ch	(Reserved)	-	-	-	-
153Dh	Slip compensation P gain for V/f control with FB	H050	R/W	0 to 10000	0.1
153Eh	Slip compensation P gain for V/f control with FB	H051	R/W	0 to 10000	1
153Fh~1600h	unused	-	-	Inaccessible	-

\*1: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1571h	PM motor code setting	H102	R/W	00 (Hitachi standard data)/ 01 (auto-tuned data)	-
1572h	PM motor capacity	H103	R/W	0(0.1) 4(0.75) 8(3.0) 12(7.5) 1(0.2) 5(1.1) 9(3.7) 13(11.0) 2(0.4) 6(1.5) 10(4.0) 14(15.0) 3(0.55) 7(2.2) 11(5.5) 15(18.5)	-
1573h	PM motor pole setting	H104	R/W	0(2P) 6(14P) 12(26P) 18(38P) 1(4P) 7(16P) 13(28P) 19(40P) 2(6P) 8(18P) 14(30P) 20(42P) 3(8P) 9(20P) 15(32P) 21(44P) 4(10P) 10(22P) 16(34P) 22(46P) 5(12P) 11(24P) 17(36P) 23(48P)	-
1574h	PM Rated Current	H105	R/W	0~1000	0.1[%]
1575h	PM const R(Resistance)	H106	R/W	1 to 65535	0.001[Ω]
1576h	PM const Ld(d-axis inductance)	H107	R/W	1 to 65535	0.01[mH]
1577h	PM const Lq(q-axis inductance)	H108	R/W	1 to 65535	0.01[mH]
1578h	PM const Ke(Induction voltage constant)	H109	R/W	1 to 65535	0.0001 [V/(rad/s)]
1579h	PM const J(Moment of inertia)	H110	R/W	1 to 9999000	0.001 [kgm <sup>2</sup> ]
157Ah	(Reserved)	-	-	-	-
157Bh	PM const R (Resistance)	H111	R/W	1 to 65535	0.001[Ω]
157Ch	PM const Ld(d-axis inductance)	H112	R/W	1 to 65535	0.01[mH]
157Dh	PM const Lq(q-axis inductance)	H113	R/W	1 to 65535	0.01[mH]
157Eh	(Reserved)	-	-	-	-
157Fh	(Reserved)	-	-	-	-
1580h	(Reserved)	-	-	-	-
1581h	PM Speed Response	H116	R/W	1 to 1000	1[%]
1582h	PM Starting Current	H117	R/W	2000 to 10000	0.01[%]
1583h	PM Starting Time	H118	R/W	1 to 6000	0.01[s]
1584h	PM Stabilization Constant	H119	R/W	0 to 120	1[%]
1585h	(Reserved)	-	-	-	-
1586h	PM Minimum Frequency	H121	R/W	0 to 255	0.1[%]
1587h	PM No-Load Current	H122	R/W	0 to 10000	0.01[%]
1588h	PM Starting Method Select	H123	R/W	00 (disabling)/ 01 (enabling)	-
1589h	(Reserved)	-	-	-	-
158Ah	PM Initial Magnet Position Estimation 0V Wait Times	H131	R/W	0 to 255	1
158Bh	PM Initial Magnet Position Estimation Detect Wait Times	H132	R/W	0 to 255	1
158Ch	PM Initial Magnet Position Estimation Detect Times	H133	R/W	0 to 255	1
158Dh	PM Initial Magnet Position Estimation Voltage Gain	H134	R/W	0 to 200	1
158Eh~1600h	Unused	-	-	-	-

## Parameter group P

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1601h	Operation mode on expansion card 1 error	P001	R/W	0 (tripping), 1 (continuing operation)	-
1602h	(Reserved)	-	-	-	-
1603h	[EA] terminal selection	P003	R/W	00 (Speed reference, incl. PID) 01 (Encoder feedback) 02 (Extended terminal for EzSQ)	-
1604h	Pulse train input mode for feedback	P004	R/W	00 (Single-phase pulse [EA]) 01 (2-phase pulse [90° difference] 1 ([EA] and [EB])) 02 (2-phase pulse [90° difference] 2 ([EA] and [EB])) 03 (Single-phase pulse [EA] and direction signal [EB])	-
1605h to 160Ah	(Reserved)	-	-	-	-
160Bh	Encoder pulse-per-revolution (PPR) setting	P011	R/W	32 to 1024	1
160Ch	Simple positioning selection	P012	R/W	00 (simple positioning deactivated) 02 (simple positioning activated)	-
160Dh	(Reserved)	-	-	-	-
160Eh	Creep pulse ratio <sup>2</sup>	P014	R/W	0 to 4000	0.1[%]
160Fh	Creep speed	P015	R/W	"start frequency" to 1000	0.01 [Hz]
1610h	(Reserved)	-	-	-	-
1611h	Positioning completion range <sup>2</sup>	P017	R/W	0 to 10000	1[pulse]
1612h to 1619h	(Reserved)	-	-	-	-
161Ah	Over-speed error detection level	P026	R/W	0 to 1500	0.1 [%]
161Bh	Speed deviation error detection level	P027	R/W	0 to 12000	0.01 [Hz]
161Ch to 161Eh	(Reserved)	-	-	-	-
161Fh	Accel/decel time input selection	P031	R/W	0 (digital operator), 3 (easy sequence)	-
1620h	(Reserved)	-	-	-	-
1621h	Torque command input selection	P033	R/W	0 (O terminal), 1 (OI terminal), 3 (digital operator), 06 (Option)	-
1622h	Torque command setting	P034	R/W	0 to 200	1 [%]
1623h	(Reserved)	-	-	-	-
1624h	Torque bias mode	P036	R/W	0 (disabling the mode), 1 (digital operator),	-
1625h	Torque bias value	P037	R/W	-200 to +200	1 [%]
1626h	Torque bias polarity selection	P038	R/W	0 (as indicated by the sign), 1 (depending on the operation direction), 05(Option)	-
1627h	Speed limit for torque-controlled operation (forward rotation)	P039 (high)	R/W	0 to 12000	0.01 [Hz]
1628h		P039 (low)	R/W		
1629h	Speed limit for torque-controlled operation (reverse rotation)	P040 (high)	R/W	0 to 12000	0.01 [Hz]
162Ah		P040 (low)	R/W		
162Bh	Speed / torque control switching time	P041	R/W	0 to 1000	-
162Ch to 162Dh	(Reserved)	-	-	-	-
162Eh	Communication watchdog timer	P044	R/W	0 to 9999	0.01 [s]
162Fh	Inverter action on communication error	P045	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-
1630h	DeviceNet polled I/O: Output instance number	P046	R/W	0-20	-
1631h	(Reserved)	-	-	-	-
1632h	Inverter action on communication idle mode	P048	R/W	0 (tripping), 1 (tripping after decelerating and stopping the motor), 2 (ignoring errors), 3 (stopping the motor after free-running), 4 (decelerating and stopping the motor)	-

<sup>2</sup>: Available from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1633h	Motor poles setting for RPM	P049	R/W	0 (0 pole), 1 (2 poles), 2 (4 poles), 3 (6 poles), 4 (8 poles), 5 (10 poles), 6 (12 poles), 7 (14 poles), 8 (16 poles), 9 (18 poles), 10 (20 poles), 11 (22 poles), 12 (24poles), 13 (26 poles), 14 (28 poles), 15 (30 poles), 16 (32 poles), 17 (34 poles), 18 (36 poles), 19 (38 poles), 20 (40 poles), 21 (42 poles), 22 (44poles), 23 (46 poles), 24 (48 poles)	-
1634h to 1638h	(Reserved)	-	-	-	-
1639h	Pulse train frequency scale	P055	R/W	10 to 320 (input frequency corresponding to the allowable maximum frequency)	0.1 [kHz]
163Ah	Time constant of pulse train frequency filter	P056	R/W	1 to 200	0.01 [s]
163Bh	Pulse train frequency bias	P057	R/W	-100 to +100	1 [%]
163Ch	Pulse train frequency limit	P058	R/W	0 to 100	1 [%]
163Dh	Lower cut off level of the input pulse <sup>2</sup>	P059	R/W	1 to 2000	0.01[%]
163Eh	Multistage position 0	P060(HIGH)	R/W		1
163Fh		P060(LOW)	R/W		
1640h	Multistage position 1	P061(HIGH)	R/W		1
1641h		P061(LOW)	R/W		
1642h	Multistage position 2	P062(HIGH)	R/W		1
1643h		P062(LOW)	R/W		
1644h	Multistage position 3	P063(HIGH)	R/W		1
1645h		P063(LOW)	R/W		
1646h	Multistage position 4	P064(HIGH)	R/W		1
1647h		P064(LOW)	R/W		
1648h	Multistage position 5	P065(HIGH)	R/W		1
1649h		P065(LOW)	R/W		
164Ah	Multistage position 6	P066(HIGH)	R/W		1
164Bh		P066(LOW)	R/W		
164Ch	Multistage position 7	P067(HIGH)	R/W		1
164Dh		P067(LOW)	R/W		
164Eh	Homing mode selection	P068	R/W	0(Low) / 1(High)	
164Fh	Homing direction	P069	R/W	0(FW) / 1(RV)	
1650h	Low-speed homing frequency	P070	R/W	0 to 1000	
1651h	High-speed homing frequency	P071	R/W	0 to 40000	
1652h	Position range (forward)	P072(HIGH)	R/W	0 to 268435455	1
1653h		P072(LOW)	R/W		
1654h	Position range (reverse)	P073(HIGH)	R/W	-268435455 to 0	1
1655h		P073(LOW)	R/W		
1656h	(Reserved),	-	-	-	-
1657h	Positioning mode	P075	R/W	00...With limitation 01...No limitation (fastest control)	
1658h	(Reserved),	-	-	-	-
1659h	Encoder disconnection timeout	P077	R/W	0 to 100	0.1[s]
165Ah to 165Bh	(Reserved),	-	-	-	-
165Ch	Positioning restart range <sup>2</sup>	P080	R/W	0 to 10000	1[pulse]
165Dh	Store position at power off selection <sup>2</sup>	P081	R/W	0: Not store, 1: Store	-
165Eh	Current position at power off <sup>2</sup>	P082(HIGH)	R	P073 to P072	1
165Fh		P082(LOW)	R		
1660h	Preset position data <sup>2</sup>	P083(HIGH)	R/W	P073 to P072	1
1661h		P083(LOW)	R/W		
1662h to 1665h	(Reserved)	-	-	-	-

<sup>2</sup>: Available from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1666h	EzSQ user parameter U (00)	P100	R/W	0 to 65530	1
1667h	EzSQ user parameter U (01)	P101	R/W	0 to 65530	1
1668h	EzSQ user parameter U (02)	P102	R/W	0 to 65530	1
1669h	EzSQ user parameter U (03)	P103	R/W	0 to 65530	1
166Ah	EzSQ user parameter U (04)	P104	R/W	0 to 65530	1
166Bh	EzSQ user parameter U (05)	P105	R/W	0 to 65530	1
166Ch	EzSQ user parameter U (06)	P106	R/W	0 to 65530	1
166Dh	EzSQ user parameter U (07)	P107	R/W	0 to 65530	1
166Eh	EzSQ user parameter U (08)	P108	R/W	0 to 65530	1
166Fh	EzSQ user parameter U (09)	P109	R/W	0 to 65530	1
1670h	EzSQ user parameter U (10)	P110	R/W	0 to 65530	1
1671h	EzSQ user parameter U (11)	P111	R/W	0 to 65530	1
1672h	EzSQ user parameter U (12)	P112	R/W	0 to 65530	1
1673h	EzSQ user parameter U (13)	P113	R/W	0 to 65530	1
1674h	EzSQ user parameter U (14)	P114	R/W	0 to 65530	1
1675h	EzSQ user parameter U (15)	P115	R/W	0 to 65530	1
1676h	EzSQ user parameter U (16)	P116	R/W	0 to 65530	1
1677h	EzSQ user parameter U (17)	P117	R/W	0 to 65530	1
1678h	EzSQ user parameter U (18)	P118	R/W	0 to 65530	1
1679h	EzSQ user parameter U (19)	P119	R/W	0 to 65530	1
167Ah	EzSQ user parameter U (20)	P120	R/W	0 to 65530	1
167Bh	EzSQ user parameter U (21)	P121	R/W	0 to 65530	1
167Ch	EzSQ user parameter U (22)	P122	R/W	0 to 65530	1
167Dh	EzSQ user parameter U (23)	P123	R/W	0 to 65530	1
167Eh	EzSQ user parameter U (24)	P124	R/W	0 to 65530	1
167Fh	EzSQ user parameter U (25)	P125	R/W	0 to 65530	1
1680h	EzSQ user parameter U (26)	P126	R/W	0 to 65530	
1681h	EzSQ user parameter U (27)	P127	R/W	0 to 65530	
1682h	EzSQ user parameter U (28)	P128	R/W	0 to 65530	1
1683h	EzSQ user parameter U (29)	P129	R/W	0 to 65530	1
1684h	EzSQ user parameter U (30)	P130	R/W	0 to 65530	1
1685h	EzSQ user parameter U (31)	P131	R/W	0 to 65530	1
1686h to 168Dh	(Reserved),	-	-	-	-
168Eh	EzCOM number of data	P140	R/W	1 to 5	
168Fh	EzCOM destination 1 address	P141	R/W	1 to 247	
1690h	EzCOM destination 1 register	P142	R/W	0000 to FFFF	
1691h	EzCOM source 1 register	P143	R/W	0000 to FFFF	
1692h	EzCOM destination 2 address	P144	R/W	1 to 247	
1693h	EzCOM destination 2 register	P145	R/W	0000 to FFFF	
1694h	EzCOM source 2 register	P146	R/W	0000 to FFFF	
1695h	EzCOM destination 3 address	P147	R/W	1 to 247	
1696h	EzCOM destination 3 register	P148	R/W	0000 to FFFF	
1697h	EzCOM source 3 register	P149	R/W	0000 to FFFF	
1698h	EzCOM destination 4 address	P150	R/W	1 to 247	
1699h	EzCOM destination 4 register	P151	R/W	0000 to FFFF	
169Ah	EzCOM source 4 register	P152	R/W	0000 to FFFF	
169Bh	EzCOM destination 5 address	P153	R/W	1 to 247	
169Ch	EzCOM destination 5 register	P154	R/W	0000 to FFFF	
169Dh	EzCOM source 5 register	P155	R/W	0000 to FFFF	
169Eh~16A1h	(Reserved),	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
16A2h	Option I/F command register to write 1	P160	R/W	0000 to FFFF	-
16A3h	Option I/F command register to write 2	P161	R/W	0000 to FFFF	-
16A4h	Option I/F command register to write 3	P162	R/W	0000 to FFFF	-
16A5h	Option I/F command register to write 4	P163	R/W	0000 to FFFF	-
16A6h	Option I/F command register to write 5	P164	R/W	0000 to FFFF	-
16A7h	Option I/F command register to write 6	P165	R/W	0000 to FFFF	-
16A8h	Option I/F command register to write 7	P166	R/W	0000 to FFFF	-
16A9h	Option I/F command register to write 8	P167	R/W	0000 to FFFF	-
16AAh	Option I/F command register to write 9	P168	R/W	0000 to FFFF	-
16ABh	Option I/F command register to write 10	P169	R/W	0000 to FFFF	-
16ACh	Option I/F command register to read 1	P170	R/W	0000 to FFFF	-
16ADh	Option I/F command register to read 2	P171	R/W	0000 to FFFF	-
16AEh	Option I/F command register to read 3	P172	R/W	0000 to FFFF	-
16AFh	Option I/F command register to read 4	P173	R/W	0000 to FFFF	-
16B0h	Option I/F command register to read 5	P174	R/W	0000 to FFFF	-
16B1h	Option I/F command register to read 6	P175	R/W	0000 to FFFF	-
16B2h	Option I/F command register to read 7	P176	R/W	0000 to FFFF	-
16B3h	Option I/F command register to read 8	P177	R/W	0000 to FFFF	-
16B4h	Option I/F command register to read 9	P178	R/W	0000 to FFFF	-
16B5h	Option I/F command register to read 10	P179	R/W	0000 to FFFF	-
16B6h	Profibus Node address	P180	R/W	0 to 125	-
16B7h	Profibus Clear Node address	P181	R/W	0(clear)/1(not clear)	-
16B8h	Profibus Map selection	P182	R/W	0(PPO)/1(Converntional) )/ 2 (Flexible Mode Format Selection)	-
16B9h to 16BAh	(Reserved),	-	-	-	-
16BBh	CANopen Node address	P185	R/W	0 to 127	-
16BCh	CAN open communication speed	P186	R/W	0 (automatic)    5 (250kbps) 1 (10kbps)        6 (500kbps) 2 (20kbps)        7 (800kbps) 3 (50kbps)        8 (1Mbps) 4 (125kbps)	-
16BDh~16BFh	(Reserved),	-	-	-	-
16C0h	CompoNet Node address	P190	R/W	00 to 63	1
16C1h	(Reserved),	-	-	-	-
16C2h	DeviceNet MAC ID	P192	R/W	00 to 63	1
16C3h	(Reserved)	-	-	-	-
16C4h	(Reserved)	-	-	-	-
16C5h	ML2 frame length	P195	R/W	0(32bytes) / 1(17bytes)	1
16C6h	ML2 Node address	P196	R/W	21h to 3Eh	1
16C7h to 1E00h	Unused	-	-	-	-

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
1E02h	Coil data 2	-	R/W	2 <sup>0</sup> : coil number 0020h – 2 <sup>15</sup> : coil number 002Fh -	-
1E03h	Coil data 3	-	R/W	2 <sup>0</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1E04h	Coil data 4	-	R/W	2 <sup>0</sup> : coil number 0030h – 2 <sup>15</sup> : coil number 003Fh -	-
1E05h	Coil data 5	-	R/W	2 <sup>0</sup> : coil number 0040h – 2 <sup>15</sup> : coil number 004Fh -	-
1E06h to 1F18h	(reserved)	-	-	-	-
1E19h to 1F00h	Unused	-	-	-	-
1F01h	Coil data 0	-	R/W	2 <sup>0</sup> : coil number 0001h – 2 <sup>15</sup> : coil number 000Fh -	-
1F02h to 1F1Dh	(reserved)	-	-	(note: 2)	-
1F1Eh to 2102h	Unused	-	-	Inaccessible	-

Note 1: above register (coil data 0 to 5) is consisted with 16 coil data. EzCOM communication (inverter to inverter) doesn't support coil, but only register is supported, in case of need to access coil, please use above registers.

Note 2: Be sure not to write into above 1F02h to 1F1Dh.

## (vi) List of registers (2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2103h	Acceleration time (1), 2nd motor <sup>1</sup>	F202 (high)	R/W	0 to 360000	0.01 [s]
2104h		F202 (low)	R/W		
2105h	Deceleration time (1), 2nd motor <sup>1</sup>	F203 (high)	R/W	0 to 360000	0.01 [s]
2106h		F203 (low)	R/W		
2107h to 2200h	unused	-	-	Inaccessible	-

<sup>1</sup>: Range modified from version 3.0

## (vii) List of registers (function modes for the 2nd control settings)

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2201h	Frequency source, 2nd motor	A201	R/W	0 (keypad potentiometer), 1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option), 6 (pulse train input), 7 (easy sequence), 10 (operation function result)	-
2202h	Frequency source, 2nd motor	A202	R/W	1 (control circuit terminal block), 2 (digital operator), 3 (Modbus), 4 (option)	-
2203h	Base frequency, 2nd motor	A203	R/W	300 to "maximum frequency, 2nd motor"	0.1 [Hz]
2204h	Maximum frequency, 2nd motor	A204	R/W	300 to 4000	0.1 [Hz]
2205h to 2215h	(Reserved)	-	-	Inaccessible	-
2216h 2217h	Multispeed frequency setting, 2nd motor	A220 (high)	R/W	0 or "start frequency" to "maximum frequency, 2nd motor"	0.01 [Hz]
		A220 (low)	R/W		
2218h to 223Ah	(Reserved)	-	-	Inaccessible	-
223Bh	Torque boost method selection, 2nd motor	A241	R/W	0 (manual torque boost), 1 (automatic torque boost)	-
223Ch	Manual torque boost value, 2nd motor	A242	R/W	20 to 200	1 [%]
223Dh	Manual torque boost frequency, 2nd motor	A243	R/W	0 to 255	1 [%]
223Eh	V/f characteristic curve selection, 2nd motor	A244	R/W	0 (VC), 1 (VP), 2 (free V/f), 3 (sensorless vector control)	-
223Fh	V/f gain, 2nd motor	A245	R/W	20 to 100	1 [%]
2240h	Voltage compensation gain setting for automatic torque boost, 2nd motor	A246	R/W	0 to 255	1
2241h	Slippage compensation gain setting for automatic torque boost, 2nd motor	A247	R/W	0 to 255	1
2242h to 224Eh	(Reserved)	-	-	Inaccessible	-
224Fh	Frequency upper limit, 2nd motor	A261 (high)	R/W	00 or "2nd minimum frequency limit" to "maximum frequency, 2nd motor"	0.01 [Hz]
2250h		A261 (low)	R/W		
2251h	Frequency lower limit, 2nd motor	A262 (high)	R/W	00 or "start frequency" to "maximum frequency, 2nd motor limit"	0.01 [Hz]
2252h		A262 (low)	R/W		
2253h to 2268h	(Reserved)	-	-	Inaccessible	-
2269h	AVR function select, 2nd motor	A281	R/W	0 (always on), 1 (always off), 2 (off during deceleration)	-
226Ah	AVR voltage select, 2nd motor	A282	R/W	200 V class: 0 (200)/1 (215)/2 (220)/3 (230)/4 (240) 400 V class: 5 (380)/6 (400)/7 (415)/8 (440)/9 (460)/ 10 (480)	-
226Bh to 226Eh	(Reserved)	-	-	Inaccessible	-



Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
226Fh	Acceleration time (2), 2nd motor <sup>*1</sup>	A292 (high)	R/W	0 to 360000	0.01 [s]
2270h		A292 (low)	R/W		
2271h	Deceleration time (2), 2nd motor <sup>*1</sup>	A293 (high)	R/W	0 to 360000	0.01 [s]
2272h		A293 (low)	R/W		
2273h	Select method to switch to Acc2/Dec2, 2nd motor	A294	R/W	0 (switching by 2CH terminal), 1 (switching by setting), 2 (switching only when the rotation is reversed)	-
2274h	Acc1 to Acc2 frequency transition point, 2nd motor	A295 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2275h		A295 (low)	R/W		
2276h	Dec1 to Dec2 frequency transition point, 2nd motor	A296 (high)	R/W	0 to 40000 (100000)	0.01 [Hz]
2277h		A296 (low)	R/W		
2278h to 230Bh	(Reserved)	-	-	-	-
230Ch	Level of electronic thermal, 2nd motor	b212	R/W	200 to 1000	0.1 [%]
230Dh	Electronic thermal characteristic, 2nd motor	b213	R/W	0 (reduced-torque characteristic), 1 (constant-torque characteristic), 2 (free setting)	-
230Eh to 2315h	(Reserved)	-	-	-	-
2316h	Overload restriction operation mode, 2nd motor	b221	R/W	0 (disabling), 1 (enabling during acceleration and constant-speed operation), 2 (enabling during constant-speed operation), 3 (enabling during acceleration and constant-speed operation [speed increase at regeneration])	-
2317h	Overload restriction level, 2nd motor	b222	R/W	100 to 2000	0.1[%]
2318h	Deceleration rate at overload restriction, 2nd motor	b223	R/W	1 to 30000	0.1[s]
2319h to 2428h	unused	-	-	Inaccessible	-
2429h	Overload warning level 2, 2nd motor	C241	R/W	0 to 2000	0.1[%]
242Ah to 2501h	Unused	-	-	Inaccessible	-
2502h	Motor data selection, 2nd motor	H202	R/W	0 (Hitachi standard data), 2 (auto-tuned data),	-
2503h	Motor capacity, 2nd motor	H203	R/W	00(0.1kW)- 15 (18.5kW)	-

\*1: Range modified from version 3.0

Register No.	Function name	Function code	R/W	Monitoring and setting items	Data resolution
2504h	Motor poles setting, 2nd motor	H204	R/W	0(2 poles), 1(4 poles), 2(6 poles), 3(8 poles), 4(10 poles), 5(12 poles), 6(14 poles), 7(16 poles), 8(18 poles), 9(20 poles), 10(22 poles), 11(24 poles), 12(26 poles), 13(28 poles), 14(30 poles), 15(32 poles), 16(34 poles), 17(36 poles), 18(38 poles), 19(40 poles), 20(42 poles), 21(44 poles), 22(46 poles), 23(48 poles)	-
2505h	Motor speed constant, 2nd motor	H205 (high)	R/W	1 to 1000	0.001
2506h		H205 (low)	R/W		
2507h	Motor stabilization constant, 2nd motor	H206	R/W	0 to 255	1
2508h to 2515h	(Reserved)	-	-	-	-
2516h	Motor constant R1, 2nd motor	H220 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2517h	(Reserved)	-	-	-	-
2518h	Motor constant R2, 2nd motor	H221 (high)	R/W	1 to 65535	0.001 [ $\Omega$ ]
2519h	(Reserved)	-	-	-	-
251Ah	Motor constant L, 2nd motor	H222 (high)	R/W	1 to 65535	0.01 [mH]
251Bh	(Reserved)	-	-	-	-
251Ch	Motor constant lo, 2nd motor	H223 (high)	R/W	1 to 65535	0.01 [A]
251Dh	Motor constant J, 2nd motor	H224 (high)	R/W	1 to 9999000	0.001
251Eh		H224 (low)	R/W		
251Fh to 2524h	(Reserved)	-	-	-	-
2525h	Auto constant R1, 2nd motor	H230 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2526h	(Reserved)	-	-	-	-
2527h	Auto constant R2, 2nd motor	H231 (high)	R/W	1 to 65530	0.001 [ $\Omega$ ]
2528h	(Reserved)	-	-	-	-
2529h	Auto constant L, 2nd motor	H232 (high)	R/W	1 to 65530	0.01 [mH]
252Ah	(Reserved)	-	-	-	-
252Bh	Auto constant lo, 2nd motor	H233 (high)	R/W	1 to 65530	0.01 [A]
252Ch	Auto constant J, 2nd motor	H234 (high)	R/W	1 to 9999000	0.001
252Dh		H234 (low)	R/W		
252Eh ~	Unused	-	-	Inaccessible	-

\*1: Range modified from version 3.0

## Monitoring functions



**NOTE:** Parameters marked with "✓" in A column can set even in inverter running and marked with "✗" cannot set in inverter running. Parameters marked with "✓" in B column can set even in inverter running and marked with "✗" cannot set in inverter running when in the high level access mode, which means that b031 is set to "10". Parameter marked with "-" in A and B column cannot be set, because that menu is a monitor function.

\* Please change from "04 (Basic display)" to "00 (Full display)" in parameter **b037** (Function code display restriction), in case some parameters cannot be displayed.


# IMPORTANT



Please be sure to set the motor nameplate data into the appropriate parameters

to ensure proper operation and protection of the motor:

- b012 is the motor overload protection value
- A082 is the motor voltage selection
- H003 is the motor kW capacity
- H004 is the number of motor poles

Please refer to the appropriate pages in this guide and the Instruction Manual for further details.

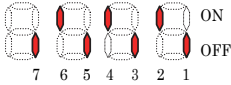"d" Function					
Func. Code	Name	Description	A	B	Units
d001	Output frequency monitor	Real time display of output frequency to motor from 0.00 to 400.0(580.0)*1 Hz If <b>b163</b> is set high, output frequency ( <b>F001</b> ) can be changed by up/down key with d001 monitoring.	✓	✓	Hz
d002	Output current monitor	Filtered display of output current to motor, range is 0.0 to 655.3 ampere (~99.9 ampere for 1.5kW and less)	-	-	A
d003	Rotation direction monitor	Three different indications: "F"...Forward "S"...Stop "R"...Reverse	-	-	-
d004	Process variable (PV), PID feedback monitor	Displays the scaled PID process variable (feedback) value ( <b>A075</b> is scale factor), 0.00 to 10000	-	-	% times constant
d005	Intelligent input terminal status	Displays the state of the intelligent input terminals:  Terminal numbers	-	-	-

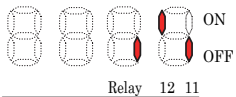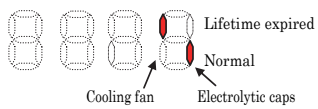"d" Function			A	B	Units
Func. Code	Name	Description			
d006	Intelligent output terminal status	Displays the state of the intelligent output terminals:  	-	-	-
d007	Scaled output frequency monitor	Displays the output frequency scaled by the constant in <b>b086</b> . Decimal point indicates range: 0 to 3999	✓	✓	Hz times constant
d008	Actual frequency monitor	Displays the actual frequency, range is -400 (-580) to 400 (580) *1 Hz	-	-	Hz
d009	Torque command monitor	Displays the torque command, range is -200. to 200. %	-	-	%
d010	Torque bias monitor	Displays the torque bias value, range is -200 to 200 %	-	-	%
d012	Output torque monitor	Displays the output torque, range is -200. to 200. %	-	-	%
d013	Output voltage monitor	Voltage of output to motor, Range is 0.0 to 600.0V	-	-	V
d014	Input power monitor	Displays the input power, range is 0.0 to 999.9 kW	-	-	KW
d015	Watt-hour monitor	Displays watt-hour of the inverter, range is 0 to 9999000	-	-	
d016	Elapsed RUN time monitor	Displays total time the inverter has been in RUN mode in hours. Range is 0 to 9999 / 1000 to 9999 / ┌100 to ┌999 (10,000 to 99,900)	-	-	hours
d017	Elapsed power-on time monitor	Displays total time the inverter has been powered up in hours. Range is 0 to 9999 / 1000 to 9999 / ┌100 to ┌999 (10,000 to 99,900)	-	-	hours
d018	Heat sink temperature monitor	Temperature of the cooling fin, range is -20 to 150	-	-	°C
d022	Life check monitor	Displays the state of lifetime of electrolytic capacitors on the PWB and cooling fan.  	-	-	-
d023	Program counter monitor [EzSQ]	Range is 0 to 1024	-	-	-
d024	Program number monitor [EzSQ]	Range is 0 to 9999	-	-	-
d025	User monitor 0 [EzSQ]	Result of EzSQ execution, range is -2147483647 to 2147483647	-	-	-
d026	User monitor 1 [EzSQ]	Result of EzSQ execution, range is -2147483647 to 2147483647	-	-	-
d027	User monitor 2 [EzSQ]	Result of EzSQ execution, range is -2147483647 to 2147483647	-	-	-
d029	Positioning command monitor	Displays the positioning command, range is -268435455 to +268435455	-	-	-
d030	Current position monitor	Displays the current position, range is -268435455 to +268435455	-	-	-
d050	Dual monitor	Displays two different data configured in <b>b160</b> and <b>b161</b> .	-	-	-

"d" Function			A	B	Units
Func. Code	Name	Description			
d060	Inverter mode monitor	Displays currently selected inverter mode : I-Γ...IM CT mode I-μ...IM VT mode P...PM mode	-	-	-
d062*2	Frequency source monitor	0...Operator 1-15...1-15 Multi-speed 16...Jog frequency 18...Modbus communication 19...Option 21...Potentiometer(available with OPE-SR or OPE-SRmini) 22...Pulse train 23... Calculate function output 24...EzSQ / 25... [O] input 26... [OI] input / 27... [O] + [OI] input	-	-	-
d063*2	Run command source monitor	1...Control terminal / 2...Operator 3...Modbus network / 4...Option	-	-	-
d080	Trip counter	Number of trip events, Range is 0. to 65530	-	-	events
d081	Trip monitor 1	Displays trip event information: • Error code	-	-	-
d082	Trip monitor 2	• Output frequency at trip point	-	-	-
d083	Trip monitor 3	• Motor current at trip point	-	-	-
d084	Trip monitor 4	• DC bus voltage at trip point	-	-	-
d085	Trip monitor 5	• Cumulative inverter operation time at trip point	-	-	-
d086	Trip monitor 6	• Cumulative power-ON time at trip point	-	-	-
d090	Warning monitor	Displays the warning code	-	-	-
d102	DC bus voltage monitor	Voltage of inverter internal DC bus, Range is 0.0 to 999.9 (V)	-	-	V
d103	BRD load ratio monitor	Usage ratio of integrated brake chopper, range is 0.0 to 100.0%	-	-	%
d104*2	Electronic thermal monitor	Accumulated value of electronic thermal detection, range is from 0.0 to 100.0%	-	-	%
d130*2	Analog input O monitor	0 to 1023	-	-	-
d131*2	Analog input OI monitor	0 to 1023	-	-	-
d133*2	Pulse train input monitor	0.00 to 99.99 /100.0[%]	-	-	-
d153*2	PID deviation monitor	-999 to 9999. [%]	-	-	-
d155*2	PID output monitor	0.00 to 100.0[%] (A071 = 01) -100. to 100.0[%] (A071 = 02)	-	-	-

\*2: Available from version 3.0

\*3: Power cycle is required to reflect a change.

# Drive Parameter Setting Tables

## Introduction

This appendix lists the user-programmable parameters for the WJ200 for version2 series inverters and the default values for European and U.S. product types. The right-most column of the tables is blank, so you can record values you have changed from the default. This involves just a few parameters for most applications. This appendix presents the parameters in a format oriented toward the keypad on the inverter.

## Parameter Settings for Keypad Entry

WJ200 for version2 series inverters provide many functions and parameters that can be configured by the user. We recommend that you record all parameters that have been edited, in order to help in troubleshooting or recovery from a loss of parameter data.

Inverter model	WJ200		}	This information is printed on the specification label located on the right side of the inverter
MFG. No.				

## Main Profile Parameters



**NOTE:** Parameters marked with "✓" in A column can set even in inverter running and marked with "✗" cannot set in inverter running. Parameters marked with "✓" in B column can set even in inverter running and marked with "✗" cannot set in inverter running when in the high level access mode, which means that b031 is set to "10". Parameter marked with "–" in A and B column cannot be set, because that menu is a monitor function.

"F" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
F001	Output frequency setting	Standard default target frequency that determines constant motor speed, range is 0.0 / start frequency to maximum frequency (A004)	✓	✓	0.00	Hz
F002	Acceleration time (1)	Standard default acceleration, range is 0.00 to 3600 sec.	✓	✓	10.00	s
F202	Acceleration time (1), 2 <sup>nd</sup> motor		✓	✓	10.00	s
F003	Deceleration time (1)	Standard default deceleration, range is 0.00 to 3600 sec.	✓	✓	10.00	s
F203	Deceleration time (1), 2 <sup>nd</sup> motor		✓	✓	10.00	s
F004	Keypad RUN key routing	Two options; select codes: 00...Forward 01...Reverse	✗	✗	00	–

## Standard Functions



**NOTE:** Parameters marked with "✓" in A column can set even in inverter running and marked with "✗" cannot set in inverter running. Parameters marked with "✓" in B column can set even in inverter running and marked with "✗" cannot set in inverter running when in the high level access mode, which means that b031 is set to "10". Parameter marked with "-" in A and B column cannot be set, because that menu is a monitor function.

Func. Code	"A" Function		A	B	Defaults	
	Name	Description			Initial data	Units
A001	Frequency source	Eight options; select codes: 00...POT on ext. operator *Valid when connecting the OPE-SR/SRmini	✗	✗	02	-
A201	Frequency source, 2 <sup>nd</sup> motor	01...Control terminal *Set to "01" when connecting the WJ-VL or External volume via control terminal 02...Function F001 setting 03...Modbus network input 04...Option 06...Pulse train input 07...via EzSQ 10...Calculate function output	✗	✗	02	-
A002	Run command source	Four options; select codes: 01...Control terminal 02...Run key on keypad, or digital operator	✗	✗	02	-
A202	Run command source, 2 <sup>nd</sup> motor	03...Modbus network input 04...Option	✗	✗	02	-
A003	Base frequency	Settable from 30 Hz to the maximum frequency(A004)	✗	✗	60.0	Hz
A203	Base frequency, 2 <sup>nd</sup> motor	Settable from 30 Hz to the 2 <sup>nd</sup> maximum frequency(A204)	✗	✗	60.0	Hz
A004	Maximum frequency	Settable from the base frequency to 400(580) <sup>*1</sup> Hz	✗	✗	60.0	Hz
A204	Maximum frequency, 2 <sup>nd</sup> motor	Settable from the 2 <sup>nd</sup> base frequency to 400(580) <sup>*1</sup> Hz	✗	✗	60.0	Hz
A005	[AT] selection	Three options; select codes: 00...Select between [O] and [OI] at [AT] (ON=OI, OFF=O) 02...Select between [O] and external POT at [AT] (ON=POT, OFF=O) 03...Select between [OI] and external POT at [AT] (ON=POT, OFF=OI)	✗	✗	00	-
A011	[O] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0(580.0) <sup>*1</sup>	✗	✓	0.00	Hz
A012	[O] input active range end frequency	The output frequency corresponding to the analog input range ending point, range is 0.00 to 400.0(580.0) <sup>*1</sup>	✗	✓	0.00	Hz
A013	[O] input active range start voltage	The starting point (offset) for the active analog input range, range is 0. to 100.	✗	✓	0.	%
A014	[O] input active range end voltage	The ending point (offset) for the active analog input range, range is 0. to 100.	✗	✓	100.	%

Func. Code	"A" Function		A	B	Defaults	
	Name	Description			Initial data	Units
<b>A015</b>	[O] input start frequency enable	Two options; select codes: <b>00</b> ...Use offset ( <b>A011</b> value) <b>01</b> ...Use 0Hz	✗	✓	01	-
<b>A016</b>	Analog input filter	Range n = 1 to 31, 1 to 30 : ×2ms filter 31: 500ms fixed filter with ± 0.1kHz hysteresisi.	✗	✓	8.	Spl.
<b>A017</b>	EzSQ function select	Select codes: <b>00</b> ...Disable <b>01</b> ...Activate by PRG terminal <b>02</b> ...Activate always	✓	✓	00	-
<b>A019</b>	Multi-speed operation selection	Select codes: <b>00</b> ...Binary operation (16 speeds selectable with 4 terminals) <b>01</b> ...Bit operation (8 speeds selectable with 7 terminals)	✗	✗	00	-
<b>A020</b>	Multi-speed freq. 0	Defines the first speed of a multi-speed profile, range is 0.00 / start frequency to 400(580)*1Hz <b>A020</b> = Speed 0 (1st motor)	✓	✓	0.00	Hz
<b>A220</b>	Multi-speed freq. 0, 2 <sup>nd</sup> motor	Defines the first speed of a multi-speed profile or a 2nd motor, range is 0.00 / start frequency to 400(580)*1Hz <b>A220</b> = Speed 0 (2nd motor)	✓	✓	0.00	Hz
<b>A021</b> to <b>A035</b>	Multi-speed freq. 1 to 15 (for both motors)	Defines 15 more speeds, range is 0.00 / start frequency to 400(580)*1Hz. <b>A021</b> =Speed 1 to <b>A035</b> =Speed15	✓	✓	0.00	Hz
<b>A038</b>	Jog frequency	Defines limited speed for jog, range is from start frequency to 9.99 Hz	✓	✓	6.00	Hz
<b>A039</b>	Jog stop mode	Define how end of jog stops the motor; six options: <b>00</b> ...Free-run stop (invalid during run) <b>01</b> ...Controlled deceleration (invalid during run) <b>02</b> ...DC braking to stop(invalid during run) <b>03</b> ...Free-run stop (valid during run) <b>04</b> ...Controlled deceleration (valid during run) <b>05</b> ...DC braking to stop(valid during run)	✗	✓	04	-
<b>A041</b>	Torque boost select	Two options: <b>00</b> ...Manual torque boost <b>01</b> ...Automatic torque boost	✗	✗	00	-
<b>A241</b>	Torque boost select, 2 <sup>nd</sup> motor		✗	✗	00	-
<b>A042</b>	Manual torque boost value	Can boost starting torque between 0 and 20% above normal V/f curve, range is 0.0 to 20.0%	✓	✓	1.0	%
<b>A242</b>	Manual torque boost value, 2 <sup>nd</sup> motor		✓	✓	1.0	%
<b>A043</b>	Manual torque boost frequency	Sets the frequency of the V/f breakpoint A in graph (top of previous page) for torque boost, range is 0.0 to 50.0%	✓	✓	5.0	%
<b>A243</b>	Manual torque boost frequency, 2 <sup>nd</sup> motor		✓	✓	5.0	%



"A" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
A044	V/f characteristic curve	Four available V/f curves; 00...Constant torque 01...Reduced torque (1.7) 02...Free V/F 03...Sensorless vector (SLV)	✗	✗	00	-
A244	V/f characteristic curve, 2 <sup>nd</sup> motor		✗	✗	00	-
A045	V/f gain	Sets voltage gain of the inverter, range is 20. to 100.%	✓	✓	100.	%
A245	V/f gain, 2 <sup>nd</sup> motor		✓	✓	100.	%
A046	Voltage compensation gain for automatic torque boost	Sets voltage compensation gain under automatic torque boost, range is 0. to 255.	✓	✓	100.	-
A246	Voltage compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	✓	100.	-
A047	Slip compensation gain for automatic torque boost	Sets slip compensation gain under automatic torque boost, range is 0. to 255.	✓	✓	100.	-
A247	Slip compensation gain for automatic torque boost, 2 <sup>nd</sup> motor		✓	✓	100.	-
A051	DC braking enable	Three options; select codes: 00...Disable 01...Enable during stop 02...Frequency detection	✗	✓	00	-
A052	DC braking frequency	The frequency at which DC braking begins, range is from the start frequency ( <b>b082</b> ) to 60Hz	✗	✓	0.50	Hz
A053	DC braking wait time	The delay from the end of controlled deceleration to start of DC braking (motor free runs until DC braking begins), range is 0.0 to 5.0 sec.	✗	✓	0.0	s
A054	DC braking force for deceleration	Level of DC braking force, settable from 0 to 100%	✗	✓	50.	%
A055	DC braking time for deceleration	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	✓	0.5	s
A056	DC braking / edge or level detection for [DB] input	Two options; select codes: 00...Edge detection 01...Level detection	✗	✓	01	-
A057	DC braking force at start	Level of DC braking force at start, settable from 0 to 100%	✗	✓	0.	%
A058	DC braking time at start	Sets the duration for DC braking, range is from 0.0 to 60.0 seconds	✗	✓	0.0	s
A059	Carrier frequency during DC braking	Carrier frequency of DC braking performance, range is from 2.0 to 15.0kHz	✗	✓	5.0	s
A061	Frequency upper limit	Sets a limit on output frequency less than the maximum frequency ( <b>A004</b> ). Range is from frequency lower limit ( <b>A062</b> ) to maximum frequency ( <b>A004</b> ). 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz

Func. Code	"A" Function		A	B	Defaults	
	Name	Description			Initial data	Units
A261	Frequency upper limit, 2nd motor	Sets a limit on output frequency less than the maximum frequency (A204). Range is from frequency lower limit (A262) to maximum frequency (A204). 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
A062	Frequency lower limit	Sets a limit on output frequency greater than zero. Range is start frequency (b082) to frequency upper limit (A061) 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
A262	Frequency lower limit, 2nd motor	Sets a limit on output frequency greater than zero. Range is start frequency (b082) to frequency upper limit (A261) 0.0 setting is disabled >0.0 setting is enabled	✗	✓	0.00	Hz
A063 A065 A067	Jump freq. (center) 1 to 3	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) Range is 0.00 to 400.0(580.0)*1 Hz	✗	✓	0.00 0.00 0.00	Hz
A064 A066 A068	Jump freq. width (hysteresis) 1 to 3	Defines the distance from the center frequency at which the jump around occurs Range is 0.00 to 10.0 Hz	✗	✓	0.50 0.50 0.50	Hz
A069	Acceleration hold frequency	Sets the frequency to hold acceleration, range is 0.0 to 400.0(580.0)*1Hz	✗	✓	0.00	Hz
A070	Acceleration hold time	Sets the duration of acceleration hold, range is 0.0 to 60.0 seconds	✗	✓	0.0	s
A071	PID enable	Enables PID function, three option codes: 00...PID Disable 01...PID Enable 02...PID Enable with reverse output	✗	✓	00	-
A072	PID proportional gain	Proportional gain has a range of 0.00 to 25.00	✓	✓	1.00	-
A073	PID integral time constant	Integral time constant has a range of 0.0 to 3600 seconds	✓	✓	1.0	s
A074	PID derivative time constant	Derivative time constant has a range of 0.00 to 100.0seconds seconds	✓	✓	0.00	s
A075	PV scale conversion	Process Variable (PV), scale factor (multiplier), range of 0.01 to 99.99	✗	✓	1.00	-
A076	PV source	Selects source of Process Variable (PV), option codes: 00...[OI] terminal (current in) 01...[O] terminal (voltage in) 02...Modbus network 03...Pulse train input 10...Calculate function output	✗	✓	00	-
A077	Reverse PID action	Two option codes: 00...PID input = SP-PV 01...PID input = -(SP-PV)	✗	✓	00	-
A078	PID output limit	Sets the limit of PID output as percent of full scale, range is 0.0 to 100.0%	✗	✓	0.0	%

"A" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
A079	PID feed forward selection	Selects source of feed forward gain, option codes: 00...Disabled 01...[O] terminal (voltage in) 02...[OI] terminal (current in)	✗	✓	00	-
A081	AVR function select	Automatic (output) voltage regulation, selects from three type of AVR functions, three option codes:	✗	✗	02	-
A281	AVR function select, 2 <sup>nd</sup> motor	00...AVR enabled 01...AVR disabled 02...AVR enabled except during deceleration	✗	✗	02	-
A082	AVR voltage select	200V class inverter settings: .....200/215/220/230/240	✗	✗	200/ 400	V
A282	AVR voltage select, 2 <sup>nd</sup> motor	400V class inverter settings: .....380/400/415/440/460/480	✗	✗	200/ 400	V
A083	AVR filter time constant	Define the time constant of the AVR filter, range is 0.000 to 10.00 sec.	✗	✓	0.300	s
A084	AVR deceleration gain	Gain adjustment of the braking performance, range is 50. to 200.%	✗	✓	100.	%
A085	Energy-saving operation mode	Two option codes: 00...Normal operation 01...Energy-saving operation	✗	✗	00	-
A086	Energy-saving mode tuning	Range is 0.0 to 100.0 %.	✓	✓	50.0	%
A092	Acceleration time (2)	Duration of 2 <sup>nd</sup> segment of acceleration, range is: 0.00 to 3600 sec.	✓	✓	10.00	s
A292	Acceleration time (2), 2 <sup>nd</sup> motor		✓	✓	10.00	s
A093	Deceleration time (2)	Duration of 2 <sup>nd</sup> segment of deceleration, range is: 0.00 to 3600 sec.	✓	✓	10.00	s
A293	Deceleration time (2), 2 <sup>nd</sup> motor		✓	✓	10.00	s
A094	Select method to switch to Acc2/Dec2 profile	Three options for switching from 1st to 2nd accel/decel: 00...2CH input from terminal	✗	✗	00	-
A294	Select method to switch to Acc2/Dec2 profile, 2 <sup>nd</sup> motor	01...Transition frequency 02...Forward and reverse	✗	✗	00	-
A095	Acc1 to Acc2 frequency transition point	Output frequency at which Accel1 switches to Accel2, range is 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✗	0.00	Hz
A295	Acc1 to Acc2 frequency transition point, 2 <sup>nd</sup> motor		✗	✗	0.00	Hz
A096	Dec1 to Dec2 frequency transition point	Output frequency at which Decel1 switches to Decel2, range is 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✗	0.00	Hz
A296	Dec1 to Dec2 frequency transition point, 2 <sup>nd</sup> motor		✗	✗	0.00	Hz
A097	Acceleration curve selection	Set the characteristic curve of Acc1 and Acc2, five options: 00...linear 01...S-curve 02...U-curve 03...Inverse U-curve 04...EL S-curve	✗	✗	01	-

Func. Code	"A" Function		A	B	Defaults	
	Name	Description			Initial data	Units
<b>A098</b>	Deceleration curve selection	Set the characteristic curve of Dec1 and Dec2, options are same as above ( <b>A097</b> )	✗	✗	01	-
<b>A101</b>	[OI] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0(580.0)*1Hz	✗	✓	0.00	Hz
<b>A102</b>	[OI] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.00 to 400.0(580.0)*1Hz	✗	✓	0.00	Hz
<b>A103</b>	[OI] input active range start current	The starting point (offset) for the current input range, range is 0. to 100.%	✗	✓	20.	%
<b>A104</b>	[OI] input active range end current	The ending point (offset) for the current input range, range is 0. to 100.%	✗	✓	100.	%
<b>A105</b>	[OI] input start frequency select	Two options; select codes: 00...Use offset ( <b>A101</b> value) 01...Use 0Hz	✗	✓	00	-
<b>A131</b>	Acceleration curve constant	Range is 01 to 10.	✗	✓	02	-
<b>A132</b>	Deceleration curve constant	Range is 01 to 10.	✗	✓	02	-
<b>A141</b>	A input select for calculate function	Seven options: 00...Operator 01...POT on ext. Operator *Valid when connecting OPE-SR/SRmini 02...Terminal [O] input 03...Terminal [OI] input 04...RS485 05...Option 07...Pulse train input	✗	✓	02	-
<b>A142</b>	B input select for calculate function	Seven options: 00...Operator 01... POT on ext. Operator *Valid when connecting OPE-SR/SRmini 02...Terminal [O] input 03...Terminal [OI] input 04...RS485 05...Option 07...Pulse train input	✗	✓	03	-
<b>A143</b>	Calculation symbol	Calculates a value based on the A input source ( <b>A141</b> selects) and B input source ( <b>A142</b> selects). Three options: 00...ADD (A input + B input) 01...SUB (A input - B input) 02...MUL (A input * B input)	✗	✓	00	-
<b>A145</b>	ADD frequency	An offset value that is applied to the output frequency when the [ADD] terminal is ON. Range is 0.00 to 400.(580.)*1Hz	✗	✓	0.00	Hz
<b>A146</b>	ADD direction select	Two options: 00...Plus (adds <b>A145</b> value to the output frequency setting) 01...Minus (subtracts <b>A145</b> value from the output frequency setting)	✗	✓	00	-
<b>A150</b>	Curvature of EL-S-curve at the start of acceleration	Range is 0. to 50.%	✗	✗	10.	%

"A" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
<b>A151</b>	Curvature of EL-S-curve at the end of acceleration	Range is 0. to 50.%	✗	✗	10.	%
<b>A152</b>	Curvature of EL-S-curve at the start of deceleration	Range is 0 to 50%	✗	✗	10.	%
<b>A153</b>	Curvature of EL-S-curve at the end of deceleration	Range is 0. to 50.%	✗	✗	10.	%
<b>A154</b>	Deceleration hold frequency	Sets the frequency to hold deceleration, range is 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
<b>A155</b>	Deceleration hold time	Sets the duration of deceleration hold, range is 0.0 to 60.0 seconds	✗	✓	0.0	s
<b>A156</b>	PID sleep function action threshold	Sets the threshold for the action, set range 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
<b>A157</b>	PID sleep function action delay time	Sets the delay time for the action, set range 0.0 to 25.5 sec	✗	✓	0.0	s
<b>A161</b>	[VR] input active range start frequency	The output frequency corresponding to the analog input range starting point, range is 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
<b>A162</b>	[VR] input active range end frequency	The output frequency corresponding to the current input range ending point, range is 0.00 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
<b>A163</b>	[VR] input active range start %	The starting point (offset) for the current input range, range is 0. to 100.%	✗	✓	0.	%
<b>A164</b>	[VR] input active range end %	The ending point (offset) for the current input range, range is 0. to VR end ratio(%)	✗	✓	100.	%
<b>A165</b>	[VR] input start frequency select	Two options; select codes: <b>00</b> ...Use offset ( <b>A161</b> value) <b>01</b> ...Use 0Hz	✗	✓	01	-

\*2: Available from version 3.0

\*3: Power cycle is required to reflect a change.

## Fine Tuning Functions

Func. Code	Name	"b" Function Description	A	B	Defaults	
					Initial data	Units
b001	Restart mode on power failure / under-voltage trip	Select inverter restart method, Five option codes: 00...Alarm output after trip, no automatic restart 01...Restart at 0Hz 02...Resume operation after frequency matching 03...Resume previous freq. after freq. matching, then decelerate to stop and display trip info 04...Resume operation after active freq. matching	✗	✓	00	-
b002	Allowable under-voltage power failure time	The amount of time a power input under-voltage can occur without tripping the power failure alarm. Range is 0.3 to 25 sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	✗	✓	1.0	s
b003	Retry wait time before motor restart	Time delay after under-voltage condition goes away, before the inverter runs motor again. Range is 0.3 to 100 seconds.	✗	✓	1.0	s
b004	Instantaneous power failure / under-voltage trip alarm enable	Three option codes: 00...Disable 01...Enable 02...Disable during stop and decelerates to a stop	✗	✓	00	-
b005	Number of restarts on power failure / under-voltage trip events	Two option codes: 00...Restart 16 times 01...Always restart	✗	✓	00	-
b007	Restart frequency threshold	Restart the motor from 0Hz if the frequency becomes less than this set value during the motor is coasting, range is 0.00 to 400(580) <sup>*1</sup> Hz	✗	✓	0.00	Hz
b008	Restart mode on over voltage / over current trip	Select inverter restart method, Five option codes: 00...Alarm output after trip, no automatic restart 01...Restart at 0Hz 02...Resume operation after frequency matching 03...Resume previous freq. after active freq. matching, then decelerate to stop and display trip info 04...Resume operation after active freq. matching	✗	✓	00	-
b010	Number of retry on over voltage / over current trip	Range is 1 to 3 times	✗	✓	3	times
b011	Retry wait time on over voltage / over current trip	Range is 0.3 to 100 sec.	✗	✓	1.0	s
b012	Level of electronic thermal	Set a level between 20% and 100% of the rated inverter current.	✗	✓	Rated current for each inverter model	A
b212	Level of electronic thermal, 2 <sup>nd</sup> motor		✗	✓		A
b013	Electronic thermal characteristic	Select from three curves, option codes: 00...Reduced torque 01...Constant torque	✗	✓	01	-
b213	Electronic thermal characteristic, 2 <sup>nd</sup> motor	02...Free setting	✗	✓	01	-

Func. Code	Name	"b" Function Description	A	B	Defaults	
					Initial data	Units
b015	Free setting electronic thermal ~freq.1	Range is 0 to 400(580) <sup>2</sup> Hz	✗	✓	0.	Hz
b016	Free setting electronic thermal ~current1	Range is 0 to inverter rated current Amps	✗	✓	0.00	Amps
b017	Free setting electronic thermal ~freq.2	Range is 0 to 400(580) <sup>2</sup> Hz	✗	✓	0.	Hz
b018	Free setting electronic thermal ~current2	Range is 0 to inverter rated current Amps	✗	✓	0.00	Amps
b019	Free setting electronic thermal ~freq.3	Range is 0 to 400(580) <sup>2</sup> Hz	✗	✓	0.	Hz
b020	Free setting electronic thermal ~current3	Range is 0 to inverter rated current Amps	✗	✓	0.00	Amps
b021	Overload restriction operation mode	Select the operation mode during overload conditions, four options, option codes: 00...Disabled 01... Enabled for acceleration and constant speed 02... Enabled for constant speed only 03... Enabled for acceleration and constant speed, increase speed at regen.	✗	✓	01	-
b221	Overload restriction operation mode, 2 <sup>nd</sup> motor		✗	✓	01	-
b022	Overload restriction level	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	✓	Rated current x 1.50	Amps
b222	Overload restriction level, 2 <sup>nd</sup> motor		✗	✓	Rated current x 1.50	Amps
b023	Deceleration rate at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	✓	1.0	s
b223	Deceleration rate at overload restriction, 2 <sup>nd</sup> motor		✗	✓	1.0	s
b024	Overload restriction operation mode 2	Select the operation mode during overload conditions, four options, option codes: 00...Disabled 01... Enabled for acceleration and constant speed 02... Enabled for constant speed only 03... Enabled for acceleration and constant speed, increase speed at regen.	✗	✓	01	-
b025	Overload restriction level 2	Sets the level of overload restriction, between 20% and 200% of the rated current of the inverter, setting resolution is 1% of rated current	✗	✓	Rated current x 1.50	%
b026	Deceleration rate 2 at overload restriction	Sets the deceleration rate when inverter detects overload, range is 0.1 to 3000.0, resolution 0.1	✗	✓	1.0	s
b027	OC suppression selection	Two option codes: 00...Disabled 01... Enabled without voltage reduction 02... Enable with voltage reduction	✗	✓	01	-
b028	Current level of active freq. matching	Sets the current level of active freq. matching restart, range is 0.2*inverter rated current to 2.0*inverter rated current, resolution 0.1	✗	✓	Rated current	A

Func. Code	Name	"b" Function Description	A	B	Defaults	
					Initial data	Units
<b>b029</b>	Deceleration rate of active freq. matching	Sets the deceleration rate when active freq. matching restart, range is 0.1 to 3000.0, resolution 0.1	✗	✓	0.5	s
<b>b030</b>	Start freq. of active freq. matching	Three option codes: <b>00</b> ...freq at previous shutoff <b>01</b> ...start from max. Hz <b>02</b> ...start from set frequency	✗	✓	00	-
<b>b031</b>	Software lock mode selection	Prevents parameter changes, in five options, option codes:  <b>00</b> ...all parameters except <b>b031</b> are locked when [SFT] terminal is ON  <b>01</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked when [SFT] terminal is ON <b>02</b> ...all parameters except <b>b031</b> are locked <b>03</b> ...all parameters except <b>b031</b> and output frequency <b>F001</b> are locked <b>10</b> ...High level access including <b>b031</b> <i>See the row "Run Mode Edit" for the accessible parameters in this mode.</i>	✗	✓	01	-
<b>b033</b>	Motor cable length parameter	Set range is 5. to 20.	✓	✓	10.	-
<b>b034</b>	Run/power ON warning time	Range is, <b>0</b> :Warning disabled <b>1</b> . to <b>9999</b> : 10 to 99,990 hrs (unit: 10) <b>1000</b> to <b>6553</b> : 100,000 to 655,350 hrs (unit: 100)	✗	✓	0.	Hrs.
<b>b035</b>	Rotation direction restriction	Three option codes: <b>00</b> ...No restriction <b>01</b> ...Reverse rotation is restricted <b>02</b> ...Forward rotation is restricted	✗	✗	00	-
<b>b036</b>	Reduced voltage start selection	Set range, <b>0</b> (disabling the function), <b>1</b> (approx. 6ms) to <b>255</b> (approx. 1.5s)	✗	✓	2	-
<b>b037</b>	Function code display restriction	Six option codes: <b>00</b> ...Full display <b>01</b> ...Function-specific display <b>02</b> ...User setting (and <b>b037</b> ) <b>03</b> ...Data comparison display <b>04</b> ...Basic display <b>05</b> ...Monitor display only	✗	✓	04	-
<b>b038</b>	Initial display selection	<b>000</b> ...Initial display selection by SET key. <b>001</b> to <b>030</b> ... <b>d001</b> to <b>d030</b> displayed <b>201</b> ... <b>F001</b> displayed <b>202</b> ...B display of LCD operator	✗	✓	001	-
<b>b039</b>	Automatic user parameter registration	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	✓	00	-
<b>b040</b>	Torque limit selection	Three option codes: <b>00</b> ...Quadrant-specific setting mode <b>01</b> ...Terminal-switching mode <b>02</b> ...Analog voltage input mode(O)	✗	✓	00	-
<b>b041</b>	Torque limit 1 (fwd/power)	Torque limit level in forward powering quadrant, range is 0. to 200.%/no(disabled)	✗	✓	200.	%
<b>b042</b>	Torque limit 2 (rev/regen.)	Torque limit level in reverse powering quadrant, range is 0. to 200.%/no(disabled)	✗	✓	200.	%
<b>b043</b>	Torque limit 3 (rev/power)	Torque limit level in reverse powering quadrant, range is 0. to 200.%/no(disabled)	✗	✓	200.	%
<b>b044</b>	Torque limit 4 (fwd/regen.)	Torque limit level in forward regen. quadrant, range is 0. to 200.%/no(disabled)	✗	✓	200.	%
<b>b045</b>	Torque LAD STOP selection	Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✗	✓	00	-



Func. Code	Name	“b” Function Description	A	B	Defaults	
					Initial data	Units
<b>b046</b>	Reverse run protection	Two option codes: <b>00</b> ...No protection <b>01</b> ...Reverse rotation is protected	✗	✓	01	-
<b>b049</b>	Dual Rating Selection	<b>00</b> ... (CT mode) / <b>01</b> ... (VT mode)	✗	✗	00	-
<b>b050</b>	Controlled deceleration on power loss	Four option codes: <b>00</b> ...Trips <b>01</b> ...Decelerates to a stop <b>02</b> ...Decelerates to a stop with DC bus voltage controlled <b>03</b> ...Decelerates to a stop with DC bus voltage controlled, then restart	✗	✗	00	-
<b>b051</b>	DC bus voltage trigger level of ctrl. decel.	Setting of DC bus voltage to start controlled decel. operation. Range is 0.0 to 1000.0	✗	✗	220.0/ 440.0	V
<b>b052</b>	Over-voltage threshold of ctrl. decel.	Setting the OV-LAD stop level of controlled decel. operation. Range is 0.0 to 1000.0	✗	✗	360.0/ 720.0	V
<b>b053</b>	Deceleration time of ctrl. decel.	Range is 0.01 to 3600.0	✗	✗	1.00	s
<b>b054</b>	Initial freq. drop of ctrl. decel.	Setting of initial freq. drop. Range is 0.00 to 10.00 Hz	✗	✗	0.00	Hz
<b>b060</b>	Maximum-limit level of window comparator (O)	Set range, {Min.-limit level ( <b>b061</b> ) + hysteresis width ( <b>b062</b> )x2} to 100 % (Minimum of 0%)	✓	✓	100.	%
<b>b061</b>	Minimum-limit level of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - hysteresis width ( <b>b062</b> )x2} % (Maximum of 0%)	✓	✓	0.	%
<b>b062</b>	Hysteresis width of window comparator (O)	Set range, 0 to {Max.-limit level ( <b>b060</b> ) - Min.-limit level ( <b>b061</b> )} / 2 % (Maximum of 10%)	✓	✓	0.	%
<b>b063</b>	Maximum-limit level of window comparator (OI)	Set range, {Min.-limit level ( <b>b064</b> + hysteresis width ( <b>b065</b> )x2} to 100 % (Minimum of 0%)	✓	✓	100.	%
<b>b064</b>	Minimum-limit level of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - hysteresis width ( <b>b065</b> )x2} % (Maximum of 0%)	✓	✓	0.	%
<b>b065</b>	Hysteresis width of window comparator (OI)	Set range, 0 to {Max.-limit level ( <b>b063</b> ) - Min.-limit level ( <b>b064</b> )} / 2 % (Maximum of 10%)	✓	✓	0.	%
<b>b070</b>	Operation level at O disconnection	Set range, 0. to 100.%, or “no” (ignore)	✗	✓	no	-
<b>b071</b>	Operation level at OI disconnection	Set range, 0. to 100.%, or “no” (ignore)	✗	✓	no	-
<b>b075</b>	Ambient temperature setting	Set range is, -10 to 50 °C	✓	✓	40.	°C
<b>b078</b>	Watt-hour clearance	Two option codes: <b>00</b> ...OFF <b>01</b> ...ON (press STR then clear)	✓	✓	00	-
<b>b079</b>	Watt-hour display gain	Set range is, 1. to 1000.	✓	✓	1.	-
<b>b082</b>	Start frequency	Sets the starting frequency for the inverter output, range is 0.10 to 9.99 Hz	✗	✓	0.50	Hz
<b>b083</b>	Carrier frequency	Sets the PWM carrier (internal switching frequency), range is 2.0 to 15.0 kHz	✗	✓	2.0	kHz
<b>b084</b>	Initialization mode (parameters or trip history)	Select initialized data, five option codes: <b>00</b> ...Initialization disabled <b>01</b> ...Clears Trip history <b>02</b> ...Initializes all Parameters <b>03</b> ...Clears Trip history and initializes all parameters <b>04</b> ...Clears Trip history and initializes all parameters and EzSQ program	✗	✗	00	-
<b>b085</b>	Country for initialization	<b>01</b> ...Mode 1	✗	✗	00	-

Func. Code	Name	"b" Function Description	A	B	Defaults	
					Initial data	Units
<b>b086</b>	Frequency scaling conversion factor	Specify a constant to scale the displayed frequency for <b>d007</b> monitor, range is 0.01 to 99.99	✓	✓	1.00	-
<b>b087</b>	STOP key enable	Select whether the STOP key on the keypad is enabled, three option codes: <b>00</b> ...Enabled <b>01</b> ...Disabled always <b>02</b> ... Disabled for stop	✗	✓	00	-
<b>b088</b>	Restart mode after FRS	Selects how the inverter resumes operation when free-run stop (FRS) is cancelled, three options: <b>00</b> ...Restart from 0Hz <b>01</b> ...Restart from frequency detected from real speed of motor (freq. matching) <b>02</b> ...Restart from frequency detected from real speed of motor (active freq. matching)	✗	✓	00	-
<b>b089</b>	Automatic carrier frequency reduction	Three option codes: <b>00</b> ...Disabled <b>01</b> ...Enabled, depending on the output current <b>02</b> ... Enabled, depending on the heat-sink temperature	✗	✗	01	-
<b>b090</b>	Dynamic braking usage ratio	Select the rate of use (in %) of the regenerative braking resistor per 100 sec. intervals, range is 0.0 to 100%. 0%: Function disabled >0%: Enabled, per value	✗	✓	0.0	%
<b>b091</b>	Stop mode selection	Select how the inverter stops the motor, two option codes: <b>00</b> ...DEC (decelerate to stop) <b>01</b> ... FRS (free-run to stop)	✗	✓	00	-
<b>b092</b>	Cooling fan control	Selects when the fan is ON during inverter operation, three options: <b>00</b> ...Fan is always ON <b>01</b> ...Fan is ON during run, OFF during stop (5 minute delay from ON to OFF) <b>02</b> ...Fan is temperature controlled	✗	✓	01	-
<b>b093</b>	Clear elapsed time of cooling fan	Two option codes: <b>00</b> ...Count <b>01</b> ...Clear	✗	✗	00	-
<b>b094</b>	Initialization target data	Select initialized parameters, four option codes: <b>00</b> ...All parameters <b>01</b> ...All parameters except in/output terminals and communication. <b>02</b> ...Only registered parameters in Uxxx. <b>03</b> ...All parameters except registered parameters in Uxxx and <b>b037</b> .	✗	✗	00	-
<b>b095</b>	Dynamic braking control (BRD) selection	Three option codes: <b>00</b> ...Disable <b>01</b> ...Enable during run only <b>02</b> ...Enable always	✗	✓	01	-
<b>b096</b>	BRD activation level	Range is: 330 to 380V (200V class) 660 to 760V (400V class)	✗	✓	360/ 720	V
<b>b097</b>	BRD resistor value	Min.Resistance to 600.0	✗	✓	Min. Resistance	Ohm
<b>b100</b>	Free V/F setting, freq.1	Set range, 0 to value of <b>b102</b>	✗	✗	0.	Hz
<b>b101</b>	Free V/F setting, voltage.1	Set range, 0 to 800V	✗	✗	0.0	V
<b>b102</b>	Free V/F setting, freq.2	Set range, value of <b>b100</b> to <b>b104</b>	✗	✗	0.	Hz
<b>b103</b>	Free V/F setting, voltage.2	Set range, 0 to 800V	✗	✗	0.0	V
<b>b104</b>	Free V/F setting, freq.3	Set range, value of <b>b102</b> to <b>b106</b>	✗	✗	0.	Hz
<b>b105</b>	Free V/F setting, voltage.3	Set range, 0 to 800V	✗	✗	0.0	V

Func. Code	Name	"b" Function Description	A	B	Defaults	
					Initial data	Units
<b>b106</b>	Free V/F setting, freq.4	Set range, value of <b>b104</b> to <b>b108</b>	✗	✗	0.	Hz
<b>b107</b>	Free V/F setting, voltage.4	Set range, 0 to 800V	✗	✗	0.0	V
<b>b108</b>	Free V/F setting, freq.5	Set range, value of <b>b108</b> to <b>b110</b>	✗	✗	0.	Hz
<b>b109</b>	Free V/F setting, voltage.5	Set range, 0 to 800V	✗	✗	0.0	V
<b>b110</b>	Free V/F setting, freq.6	Set range, value of <b>b108</b> to <b>b112</b>	✗	✗	0.	Hz
<b>b111</b>	Free V/F setting, voltage.6	Set range, 0 to 800V	✗	✗	0.0	V
<b>b112</b>	Free V/F setting, freq.7	Set range, <b>b110</b> to 400(580) <sup>*1</sup>	✗	✗	0.	Hz
<b>b113</b>	Free V/F setting, voltage.7	Set range, 0 to 800V	✗	✗	0.0	V
<b>b120</b>	Brake control enable	Two option codes: <b>00</b> ...Disable <b>01</b> ...P012=00:Enable/ P012=02:Enable with DC breaking at positioning end <b>02</b> ... P012=00:Enable/ P012=02:Enable without DC breaking at positioning end	✗	✓	00	-
<b>b121</b>	Brake Wait Time for Release	Set range: 0.00 to 5.00 sec	✗	✓	0.00	s
<b>b122</b>	Brake Wait Time for Acceleration	Set range: 0.00 to 5.00 sec	✗	✓	0.00	s
<b>b123</b>	Brake Wait Time for Stopping	Set range: 0.00 to 5.00 sec	✗	✓	0.00	s
<b>b124</b>	Brake Wait Time for Confirmation	Set range: 0.00 to 5.00 sec	✗	✓	0.00	s
<b>b125</b>	Brake release freq.	Set range: 0.00 to 400.0(580.0) <sup>*1</sup> Hz	✗	✓	0.00	Hz
<b>b126</b>	Brake release current	Set range: 0.00 to 200% of inverter rated current	✗	✓	Rated current	A
<b>b127</b>	Braking freq. setting	Set range: 0.00 to 400.0(580.0) <sup>*1</sup> Hz	✗	✓	0.00	Hz
<b>b130</b>	Deceleration overvoltage suppression enable	<b>00</b> ...Disabled <b>01</b> ...Enabled <b>02</b> ...Enabled with accel.	✗	✓	00	-
<b>b131</b>	Decel. overvolt. suppress level	DC bus voltage of suppression. Range is: 200V class...330 to 395 400V class...660 to 790	✗	✓	380 /760	V
<b>b132</b>	Decel. overvolt. suppress const.	Accel. rate when b130=02. Set range: 0.10 to 30.00 sec.	✗	✓	1.00	s
<b>b133</b>	Decel. overvolt. suppress proportional gain	Proportional gain when b130=01. Range is: 0.00 to 5.00	✓	✓	0.20	-
<b>b134</b>	Decel. overvolt. suppress integral time	Integration time when b130=01. Range is: 0.0 to 150.0	✓	✓	1.0	s
<b>b145</b>	GS input mode	Two option codes: <b>00</b> ...No trip (Hardware shutoff only) <b>01</b> ...Trip	✗	✓	00	-
<b>b150</b>	Display ex.operator connected	When an external operator is connected via RS-422 port, the built-in display is locked and shows only one "d" parameter configured in: <b>d001</b> to <b>d030</b>	✓	✓	001	-
<b>b160</b>	1st parameter of Dual Monitor	Set any two "d" parameters in b160 and b161, then they can be monitored in d050. The two parameters are switched by up/down keys. Set range: <b>d001</b> to <b>d030</b>	✓	✓	001	-
<b>b161</b>	2nd parameter of Dual Monitor		✓	✓	002	-

Func. Code	Name	“b” Function Description	A	B	Defaults	
					Initial data	Units
<b>b163</b>	Frequency set in monitoring	Two option codes: <b>00</b> ...Freq. set disabled <b>01</b> ...Freq. set enabled	✓	✓	00	-
<b>b164</b>	Automatic return to the initial display	10 min. after the last key operation, display returns to the initial parameter set by <b>b038</b> . Two option codes: <b>00</b> ...Disable <b>01</b> ...Enable	✓	✓	00	-
<b>b165</b>	Ex. operator com. loss action	Five option codes: <b>00</b> ...Trip <b>01</b> ...Trip after deceleration to a stop <b>02</b> ...Ignore <b>03</b> ...Coasting (FRS) <b>04</b> ...Decelerates to a stop	✓	✓	02	-
<b>b166</b>	Data Read/Write select	<b>00</b> ... Read/Write OK <b>01</b> ... Protected	✗	✓	00	-
<b>b171</b>	Inverter mode selection	Three option codes: <b>00</b> ...No function <b>01</b> ...Std. IM (Induction Motor) <b>03</b> ...PM (Permanent Magnet Motor)	✗	✗	00	-
<b>b180</b>	Initialization trigger	This is to perform initialization by parameter input with <b>b084</b> , <b>b085</b> and <b>b094</b> . Two option codes: <b>00</b> ...Initialization disable <b>01</b> ...Perform initialization	✗	✗	00	-
<b>b190</b>	Password Settings A	0000(Invalid Password) 0001-FFFF(Password)	✗	✗	0000	-
<b>b191</b>	Password authentication A	0000-FFFF	✗	✗	0000	-
<b>b192</b>	Password Settings B	0000(Invalid Password) 0001-FFFF(Password)	✗	✗	0000	-
<b>b193</b>	Password authentication B	0000-FFFF	✗	✗	0000	-
<b>b910</b> <sup>*2</sup>	Electronic thermal subtraction function selection	<b>00</b> ...OFF <b>01</b> ...Linear subtraction: pre-fixed ratio <b>02</b> ...Linear subtraction: ratio set in b911 <b>03</b> ...Subtraction with first-order lag filter: ratio set in b912	✗	✓	00	-
<b>b911</b> <sup>*2</sup>	Thermal subtraction time	0.10 to 100000.00[s] (upper four digits are shown)	✗	✓	600.00	s
<b>b912</b> <sup>*2</sup>	Thermal subtraction time constant	0.10 to 100000.00[s] (upper four digits are shown)	✗	✓	120.00	s
<b>b913</b> <sup>*2</sup>	Thermal accumulation gain	1.0 to 200.0 [%]	✗	✓	100.0	%

<sup>\*2</sup>: Available from version 3.0

<sup>\*3</sup>: Power cycle is required to reflect a change.

## Intelligent Terminal Functions

Func. Code	Name	“C” Function Description	A	B	Defaults	
					Initial data	Units
C001	Input [1] function	Select input terminal [1] function, 68 options (see next section)	✗	✓	00 [FW]	-
C002	Input [2] function	Select input terminal [2] function, 68 options (see next section)	✗	✓	01 [RV]	-
C003	Input [3] function [GS1 assignable]	Select input terminal [3] function, 68 options (see next section)	✗	✓	02 [CF1]	-
C004	Input [4] function [GS2 assignable]	Select input terminal [4] function, 68 options (see next section)	✗	✓	03 [CF2]	-
C005	Input [5] function [PTC assignable]	Select input terminal [5] function, 68 options (see next section)	✗	✓	09 [2CH]	-
C006	Input [6] function	Select input terminal [6] function, 68 options (see next section)	✗	✓	18 [RS]	-
C007	Input [7] function	Select input terminal [7] function, 68 options (see next section)	✗	✓	13 [USP]	-
C011	Input [1] active state	Select logic conversion, two option codes: 00...normally open [NO] 01...normally closed [NC]	✗	✓	00	-
C012	Input [2] active state		✗	✓	00	-
C013	Input [3] active state		✗	✓	00	-
C014	Input [4] active state		✗	✓	00	-
C015	Input [5] active state		✗	✓	00	-
C016	Input [6] active state		✗	✓	00	-
C017	Input [7] active state		✗	✓	00	-
C021	Output [11] function [EDM assignable]	48 programmable functions available for logic (discrete) outputs (see next section)	✗	✓	01 [FA1]	-
C022	Output [12] function		✗	✓	00 [RUN]	-
C026	Alarm relay function	48 programmable functions available for logic (discrete) outputs (see next section)	✗	✓	05 [AL]	-
C027	[EO] terminal selection (Pulse/PWM output)	13 programmable functions: 00...Output frequency (PWM) 01...Output current (PWM) 02...Output torque (PWM) 03...Output frequency (Pulse train) 04...Output voltage (PWM) 05...Input power (PWM) 06...Electronic thermal load ratio (PWM) 07...LAD frequency (PWM) 08...Output current (Pulse train) 10...Heat sink temperature (PWM) 12...General output (PWM) 15...Pulse train input monitor 16...Option(PWM)	✗	✓	07	-
C028	[AM] terminal selection (Analog voltage output 0...10V)	11 programmable functions: 00...Output frequency 01...Output current 02...Output torque 04...Output voltage 05...Input power 06...Electronic thermal load ratio 07...LAD frequency 10...Heat sink temperature 11...Output torque (with code) 13...General output 16...Option	✗	✓	07	-
C030	Digital current monitor reference value	Current with digital current monitor output at 1,440Hz Range is 20%~200% of rated current	✓	✓	Rated current	A

Func. Code	Name	"C" Function Description	A	B	Defaults	
					Initial data	Units
C031	Output [11] active state	Select logic conversion, two option codes: 00...normally open [NO] 01...normally closed [NC]	✗	✓	00	-
C032	Output [12] active state		✗	✓	00	-
C036	Alarm relay active state		✗	✓	01	-
C038	Output mode of low current detection	Two option codes: 00...During acceleration, deceleration and constant speed 01...During constant speed only	✗	✓	01	-
C039	Low current detection level	Set the level of low load detection, range is 0.0 to 2.0 * inverter rated current	✓	✓	Rated current	A
C040	Output mode of overload warning	Two option codes: 00...During accel., decel. and constant speed 01...During constant speed only	✗	✓	01	-
C041	Overload warning level	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	✓	Rated current x 1.15	A
C241	Overload warning level, 2 <sup>nd</sup> motor		✓	✓	Rated current x 1.15	A
C042	Frequency arrival setting for acceleration	Sets the frequency arrival setting threshold for the output frequency during acceleration, range is 0.0 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
C043	Frequency arrival setting for deceleration	Sets the frequency arrival setting threshold for the output frequency during deceleration, range is 0.0 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
C044	PID deviation level	Sets the allowable PID loop error magnitude (absolute value), SP-PV, range is 0.0 to 100%	✗	✓	3.0	%
C045	Frequency arrival setting 2 for acceleration	Set range is 0.0 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
C046	Frequency arrival setting 2 for deceleration	Set range is 0.0 to 400.0(580.0)* <sup>1</sup> Hz	✗	✓	0.00	Hz
C047	Pulse train input/output scale conversion	If EO terminal is configured as pulse train input (C027=15), scale conversion is set in C047. Pulse-out = Pulse-in × (C047) Set range is 0.01 to 99.99	✓	✓	1.00	-
C052	PID FBV output high limit	When the PV exceeds this value, the PID loop turns OFF the PID second stage output, range is 0.0 to 100%	✗	✓	100.0	%
C053	PID FBV output low limit	When the PV goes below this value, the PID loop turns ON the PID second stage output, range is 0.0 to 100%	✗	✓	0.0	%
C054	Over-torque/under-torque selection	Two option codes: 00...Over-torque 01...Under-torque	✗	✓	00	-
C055	Over/under-torque level (Forward powering mode)	Set range is 0. to 200.%	✗	✓	100.	%
C056	Over/under-torque level (Reverse regen. mode)	Set range is 0. to 200.%	✗	✓	100.	%
C057	Over/under-torque level (Reverse powering mode)	Set range is 0. to 200.%	✗	✓	100.	%
C058	Over/under-torque level (Forward regen. mode)	Set range is 0. to 200.%	✗	✓	100.	%
C059	Signal output mode of Over/under-torque	Two option codes: 00...During accel., decel. and constant speed 01...During constant speed only	✗	✓	01	-
C061	Electronic thermal warning level	Set range is 0 to 100% Setting 0 means disabled.	✗	✓	90.	%
C063	Zero speed detection level	Set range is 0.00 to 100.0Hz	✗	✓	0.00	Hz
C064	Heat sink overheat warning	Set range is 0. to 110. °C	✗	✓	100.	°C

Func. Code	Name	“C” Function Description	A	B	Defaults	
					Initial data	Units
C071*3	Communication speed	Eight option codes: 03...2,400 bps 04...4,800 bps 05...9,600 bps 06...19,200 bps 07...38,400 bps 08...57,600 bps 09...76,800 bps 10...115,200 bps	✗	✓	05	baud
C072	Modbus address	Set the address of the inverter on the network. Range is 1 to 247	✗	✓	1.	-
C074*3	Communication parity	Three option codes: 00...No parity 01...Even parity 02...Odd parity	✗	✓	00	-
C075*3	Communication stop bit	Two option codes: 1...1 bit 2...2 bit	✗	✓	1	bit
C076	Communication error select	Selects inverter response to communications error. Five options: 00...Trip 01...Decelerate to a stop and trip 02...Disable 03...Free run stop (coasting) 04...Decelerates to a stop	✗	✓	02	-
C077	Communication error time-out	Sets the communications watchdog timer period. Range is 0.00 to 99.99 sec 0.0 = disabled	✗	✓	0.00	s
C078	Communication wait time	Time the inverter waits after receiving a message before it transmits. Range is 0. to 1000. ms	✗	✓	0.	ms
C081	O input span calibration	Scale factor between the external frequency command on terminals L-O (voltage input) and the frequency output, range is 0.0 to 200.0%	✓	✓	100.0	%
C082	OI input span calibration	Scale factor between the external frequency command on terminals L-OI (voltage input) and the frequency output, range is 0.0 to 200.0%	✓	✓	100.0	%
C085	Thermistor input (PTC) span calibration	Scale factor of PTC input. Range is 0.0 to 200.0%	✓	✓	100.0	%
C091	Debug mode enable	Factory use only. Do not change.	/	/	/	/
C096*3	Communication selection	00...Modbus-RTU 01... EzCOM 02... EzCOM<administrator>	✗	✗	00	-
C098*3	EzCOM start adr. of master	1 to 8	✗	✗	1.	-
C099*3	EzCOM end adr. of master	1 to 8	✗	✗	1.	-
C100*3	EzCOM starting trigger	00... Input terminal 01... Always	✗	✗	00	-
C101	Up/Down memory mode selection	Controls speed setpoint for the inverter after power cycle. Two option codes: 00...Clear last frequency (return to default frequency <b>F001</b> ) 01...Keep last frequency adjusted by UP/DWN	✗	✓	00	-
C102	Reset selection	Determines response to Reset input [RS]. Four option codes: 00...Cancel trip state at input signal ON transition, stops inverter if in Run Mode 01...Cancel trip state at signal OFF transition, stops inverter if in Run Mode 02...Cancel trip state at input ON transition, no effect if in Run Mode 03...Clear the memories only related to trip status	✓	✓	00	-

Func. Code	Name	"C" Function Description	A	B	Defaults	
					Initial data	Units
C103	Restart mode after reset	Determines the restart mode after reset is given, three option codes: 00...Start with 0 Hz 01...Start with freq. matching 02...Start with active freq. matching	✗	✓	00	-
C104	UP/DWN clear mode	Freq. set value when UDC signal is given to the input terminal, two option codes: 00...0 Hz 01...Original setting (in the EEPROM memory at power on)	✗	✓	00	-
C105	EO gain adjustment	Set range is 50. to 200.%	✓	✓	100.	%
C106	AM gain adjustment	Set range is 50. to 200.%	✓	✓	100.	%
C109	AM bias adjustment	Set range is 0. to 100.%	✓	✓	0.	%
C111	Overload warning level 2	Sets the overload warning signal level between 0% and 200% (from 0 to two time the rated current of the inverter)	✓	✓	Rated current x 1.15	A
C130	Output [11] on delay	Set range is 0.0 to 100.0 sec.	✗	✓	0.0	s
C131	Output [11] off delay		✗	✓	0.0	s
C132	Output [12] on delay	Set range is 0.0 to 100.0 sec.	✗	✓	0.0	s
C133	Output [12] off delay		✗	✓	0.0	s
C140	Relay output on delay	Set range is 0.0 to 100.0 sec.	✗	✓	0.0	s
C141	Relay output off delay		✗	✓	0.0	s
C142	Logic output 1 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C143	Logic output 1 operand B		✗	✓	00	-
C144	Logic output 1 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-
C145	Logic output 2 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C146	Logic output 2 operand B		✗	✓	00	-
C147	Logic output 2 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-
C148	Logic output 3 operand A	All the programmable functions available for logic (discrete) outputs except LOG1 to LOG3, OPO, no	✗	✓	00	-
C149	Logic output 3 operand B		✗	✓	00	-
C150	Logic output 3 operator	Applies a logic function to calculate [LOG] output state, Three options: 00...[LOG] = A AND B 01...[LOG] = A OR B 02...[LOG] = A XOR B	✗	✓	00	-



"F" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
<b>C160</b>	Input [1] response time	Sets response time of each input terminal, set range: <b>0</b> (x 2 [ms]) to <b>200</b> (x 2 [ms]) (0 to 400 [ms])	✗	✓	1.	-
<b>C161</b>	Input [2] response time		✗	✓	1.	-
<b>C162</b>	Input [3] response time		✗	✓	1.	-
<b>C163</b>	Input [4] response time		✗	✓	1.	-
<b>C164</b>	Input [5] response time		✗	✓	1.	-
<b>C165</b>	Input [6] response time		✗	✓	1.	-
<b>C166</b>	Input [7] response time		✗	✓	1.	-
<b>C169</b>	Multistage speed/position determination time	Set range is 0. to 200. (x 10ms)	✗	✓	0.	ms
<b>C900</b>	IRDY action selection	<b>00</b> ... Before Ver. 3.0 <b>01</b> ... After Ver. 3.0	✗	✓	01	-

\*2: Available from version 3.0

\*3: Power cycle is required to reflect a change.

**Input Function Summary Table** – This table shows all thirty-one intelligent input functions at a glance. Detailed description of these functions, related parameters and settings, and example wiring diagrams are in “Using Intelligent Input Terminals” on page 30.

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	FW	FORWARD Run/Stop	ON	Inverter is in Run Mode, motor runs forward
			OFF	Inverter is in Stop Mode, motor stops
01	RV	Reverse Run/Stop	ON	Inverter is in Run Mode, motor runs reverse
			OFF	Inverter is in Stop Mode, motor stops
02	CF1	Multi-speed Select, Bit 0 (LSB)	ON	Binary encoded speed select, Bit 0, logical 1
			OFF	Binary encoded speed select, Bit 0, logical 0
03	CF2	Multi-speed Select, Bit 1	ON	Binary encoded speed select, Bit 1, logical 1
			OFF	Binary encoded speed select, Bit 1, logical 0
04	CF3	Multi-speed Select, Bit 2	ON	Binary encoded speed select, Bit 2, logical 1
			OFF	Binary encoded speed select, Bit 2, logical 0
05	CF4	Multi-speed Select, Bit 3 (MSB)	ON	Binary encoded speed select, Bit 3, logical 1
			OFF	Binary encoded speed select, Bit 3, logical 0
06	JG	Jogging	ON	Inverter is in Run Mode, output to motor runs at jog parameter frequency
			OFF	Inverter is in Stop Mode
07	DB	External DC braking	ON	DC braking will be applied during deceleration
			OFF	DC braking will not be applied
08	SET	Set (select) 2nd Motor Data	ON	The inverter uses 2nd motor parameters for generating frequency output to motor
			OFF	The inverter uses 1st (main) motor parameters for generating frequency output to motor
09	2CH	2-stage Acceleration and Deceleration	ON	Frequency output uses 2nd-stage acceleration and deceleration values
			OFF	Frequency output uses standard acceleration and deceleration values
11	FRS	Free-run Stop	ON	Causes output to turn OFF, allowing motor to free run (coast) to stop
			OFF	Output operates normally, so controlled deceleration stop motor
12	EXT	External Trip	ON	When assigned input transitions OFF to ON, inverter latches trip event and displays <b>E 12</b>
			OFF	No trip event for ON to OFF, any recorded trip events remain in history until reset
13	USP	Unattended Start Protection	ON	On powerup, the inverter will not resume a Run command (mostly used in the US)
			OFF	On powerup, the inverter will resume a Run command that was active before power loss
14	CS	Commercial power source switchover	ON	Motor can be driven by commercial power
			OFF	Motor is driven via the inverter
15	SFT	Software Lock	ON	The keypad and remote programming devices are prevented from changing parameters
			OFF	The parameters may be edited and stored
16	AT	Analog Input Voltage/Current Select	ON	Refer to “Analog Input Operation” on page 45.
			OFF	
18	RS	Reset Inverter	ON	The trip condition is reset, the motor output is turned OFF, and powerup reset is asserted
			OFF	Normal power-ON operation
19	PTC	PTC thermistor Thermal Protection (C005 only)	ANLG	When a thermistor is connected to terminal [5] and [L], the inverter checks for over-temperature and will cause trip event and turn OFF output to motor
			OPEN	A disconnect of the thermistor causes a trip event, and the inverter turns OFF the motor

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
20	STA	Start (3-wire interface)	ON	Starts the motor rotation
			OFF	No change to present motor status
21	STP	Stop (3-wire interface)	ON	Stops the motor rotation
			OFF	No change to present motor status
22	F/R	FWD, REV (3-wire interface)	ON	Selects the direction of motor rotation: ON = FWD. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
			OFF	Selects the direction of motor rotation: OFF = REV. While the motor is rotating, a change of F/R will start a deceleration, followed by a change in direction
23	PID	PID Disable	ON	Temporarily disables PID loop control. Inverter output turns OFF as long as PID Enable is active ( <b>A071=01</b> )
			OFF	Has no effect on PID loop operation, which operates normally if PID Enable is active ( <b>A071=01</b> )
24	PIDC	PID Reset	ON	Resets the PID loop controller. The main consequence is that the integrator sum is forced to zero
			OFF	No effect on PID controller
27	UP	Remote Control UP Function (motorized speed pot.)	ON	Accelerates (increases output frequency) motor from current frequency
			OFF	Output to motor operates normally
28	DWN	Remote Control Down Function (motorized speed pot.)	ON	Decelerates (decreases output frequency) motor from current frequency
			OFF	Output to motor operates normally
29	UDC	Remote Control Data Clearing	ON	Clears the UP/DWN frequency memory by forcing it to equal the set frequency parameter F001. Setting <b>C101</b> must be set= <b>00</b> to enable this function to work
			OFF	UP/DWN frequency memory is not changed
31	OPE	Operator Control	ON	Forces the source of the output frequency setting <b>A001</b> and the source of the Run command <b>A002</b> to be from the digital operator
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
32	SF1	Multi-speed Select, Bit operation Bit 1	ON	Bit encoded speed select, Bit 1, logical 1
			OFF	Bit encoded speed select, Bit 1, logical 0
33	SF2	Multi-speed Select, Bit operation Bit 2	ON	Bit encoded speed select, Bit 2, logical 1
			OFF	Bit encoded speed select, Bit 2, logical 0
34	SF3	Multi-speed Select, Bit operation Bit 3	ON	Bit encoded speed select, Bit 3, logical 1
			OFF	Bit encoded speed select, Bit 3, logical 0
35	SF4	Multi-speed Select, Bit operation Bit 4	ON	Bit encoded speed select, Bit 4, logical 1
			OFF	Bit encoded speed select, Bit 4, logical 0
36	SF5	Multi-speed Select, Bit operation Bit 5	ON	Bit encoded speed select, Bit 5, logical 1
			OFF	Bit encoded speed select, Bit 5, logical 0
37	SF6	Multi-speed Select, Bit operation Bit 6	ON	Bit encoded speed select, Bit 6, logical 1
			OFF	Bit encoded speed select, Bit 6, logical 0
38	SF7	Multi-speed Select, Bit operation Bit 7	ON	Bit encoded speed select, Bit 7, logical 1
			OFF	Bit encoded speed select, Bit 7, logical 0
39	OLR	Overload Restriction Source Changeover	ON	Perform overload restriction
			OFF	Normal operation

Input Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
40	TL	Torque Limit Selection	ON	Setting of <b>b040</b> is enabled
			OFF	Max. torque is limited with 200%
41	TRQ1	Torque limit switch 1	ON	Torque limit related parameters of Powering/regen, and FW/RV modes are selected by the combinations of these inputs.
			OFF	
42	TRQ2	Torque limit switch 2	ON	
			OFF	
44	BOK	Brake confirmation	ON	Brake wait time ( <b>b124</b> ) is valid
			OFF	Brake wait time ( <b>b124</b> ) is not valid
46	LAC	LAD cancellation	ON	Set ramp times are ignored. Inverter output immediately follows the freq. command.
			OFF	Accel. and/or decel. is according to the set ramp time
47	PCLR	Pulse counter clear	ON	Clear the position deviation data
			OFF	Maintain the position deviation data
50	ADD	ADD frequency enable	ON	Adds the <b>A145</b> (add frequency) value to the output frequency
			OFF	Does not add the <b>A145</b> value to the output frequency
51	F-TM	Force Terminal Mode	ON	Force inverter to use input terminals for output frequency and Run command sources
			OFF	Source of output frequency set by <b>A001</b> and source of Run command set by <b>A002</b> is used
52	ATR	Enable torque command input	ON	Torque control command input is enabled
			OFF	Torque control command input is disabled
53	KHC	Clear watt-hour data	ON	Clear watt-hour data
			OFF	No action
56	MI1	General purpose input (1)	ON	General purpose input (1) is made ON under EzSQ
			OFF	General purpose input (1) is made OFF under EzSQ
57	MI2	General purpose input (2)	ON	General purpose input (2) is made ON under EzSQ
			OFF	General purpose input (2) is made OFF under EzSQ
58	MI3	General purpose input (3)	ON	General purpose input (3) is made ON under EzSQ
			OFF	General purpose input (3) is made OFF under EzSQ
59	MI4	General purpose input (4)	ON	General purpose input (4) is made ON under EzSQ
			OFF	General purpose input (4) is made OFF under EzSQ
60	MI5	General purpose input (5)	ON	General purpose input (5) is made ON under EzSQ
			OFF	General purpose input (5) is made OFF under EzSQ
61	MI6	General purpose input (6)	ON	General purpose input (6) is made ON under EzSQ
			OFF	General purpose input (6) is made OFF under EzSQ
62	MI7	General purpose input (7)	ON	General purpose input (7) is made ON under EzSQ
			OFF	General purpose input (7) is made OFF under EzSQ

Input Function Summary Table					
Option Code	Terminal Symbol	Function Name	Description		
65	AHD	Analog command hold	ON	Analog command is held	
			OFF	Analog command is not held	
66	CP1	Multistage-position switch (1)	ON	Multistage position commands are set according to the combination of these switches.	
			OFF		
67	CP2	Multistage-position switch (2)	ON		
			OFF		
68	CP3	Multistage-position switch (3)	ON		
			OFF		
69	ORL	Limit signal of homing	ON	Limit signal of homing is ON	
			OFF	Limit signal of homing is OFF	
70	ORG	Trigger signal of homing	ON	Starts homing operation	
			OFF	No action	
73	SPD	Speed/position changeover	ON	Speed control mode	
			OFF	Position control mode	
77	GS1	GS1 input	ON	EN60204-1 related signals: Signal input of "Safe torque off" function.	
			OFF		
78	GS2	GS2 input	ON		
			OFF		
81	485	Start EzCOM	ON		Starts EzCOM
			OFF		No execution
82	PRG	Executing EzSQ program	ON	Executing EzSQ program	
			OFF	No execution	
83	HLD	Retain output frequency	ON	Retain the current output frequency	
			OFF	No retention	
84	ROK	Permission of Run command	ON	Run command permitted	
			OFF	Run command is not permitted	
85	EB	Rotation direction detection (C007 only)	ON	Forward rotation	
			OFF	Reverse rotation	
86	DISP	Display limitation	ON	Only a parameter configured in <b>b038</b> is shown	
			OFF	All the monitors can be shown	
91	PSET	"PSET" simple position control retains preset place.	ON	A value of (P083 x 4) is set as present place	
			OFF	DC braking will not be applied	
255	no	No function	ON	(input ignored)	
			OFF	(input ignored)	

**Output Function Summary Table** – This table shows all functions for the logical outputs (terminals [11], [12] and [AL]) at a glance. Detailed descriptions of these functions, related parameters and settings, and example wiring diagrams are in “Using Intelligent Output Terminals” on page 39.

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
00	RUN	Run Signal	ON	When the inverter is in Run Mode
			OFF	When the inverter is in Stop Mode
01	FA1	Frequency Arrival Type 1–Constant Speed	ON	When output to motor is at the set frequency
			OFF	When output to motor is OFF, or in any acceleration or deceleration ramp
02	FA2	Frequency Arrival Type 2–Over frequency	ON	When output to motor is at or above the set freq, even if in accel (C042) or decel (C043) ramps
			OFF	When output to motor is OFF, or at a level below the set frequency
03	OL	Overload Advance Notice Signal 1	ON	When output current is more than the set threshold (C041) for the overload signal
			OFF	When output current is less than the set threshold for the deviation signal
04	OD	Output Deviation for PID Control	ON	When PID error is more than the set threshold for the deviation signal
			OFF	When PID error is less than the set threshold for the deviation signal
05	AL	Alarm Signal	ON	When an alarm signal has occurred and has not been cleared
			OFF	When no alarm has occurred since the last cleaning of alarm(s)
06	FA3	Frequency Arrival Type 3–Set frequency	ON	When output to motor is at the set frequency, during accel (C042) and decel (C043).
			OFF	When output to motor is OFF, or is not at a level of the set frequency
07	OTQ	Over/under Torque Signal	ON	Estimated motor torque exceeds the specified level
			OFF	Estimated motor torque is lower than the specified level
09	UV	Undervoltage	ON	Inverter is in Undervoltage
			OFF	Inverter is not in Undervoltage
10	TRQ	Torque Limited Signal	ON	Torque limit function is executing
			OFF	Torque limit function is not executing
11	RNT	Run Time Expired	ON	Total running time of the inverter exceeds the specified value
			OFF	Total running time of the inverter does not exceed the specified value
12	ONT	Power ON time Expired	ON	Total power ON time of the inverter exceeds the specified value
			OFF	Total power ON time of the inverter does not exceed the specified value
13	THM	Thermal Warning	ON	Accumulated thermal count exceeds the C061 set value
			OFF	Accumulated thermal count does not exceed the C061 set value
19	BRK	Brake Release Signal	ON	Output for brake release
			OFF	No action for brake
20	BER	Brake Error Signal	ON	Brake error has occurred
			OFF	Brake performance is normal
21	ZS	Zero Hz Speed Detection Signal	ON	Output frequency falls below the threshold specified in C063
			OFF	Output frequency is higher than the threshold specified in C063
22	DSE	Speed Deviation Excessive	ON	Deviation of speed command and actual speed exceeds the specified value P027.
			OFF	Deviation of speed command and actual speed does not exceed the specified value P027.
23	POK	Positioning Completion	ON	Positioning is completed
			OFF	Positioning is not completed

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
24	FA4	Frequency Arrival Type 4-Over frequency	ON	When output to motor is at or above the set freq., even if in accel (C045) or decel (C046) ramps
			OFF	When output to motor is OFF, or at a level below the set frequency
25	FA5	Frequency Arrival Type 5-Set frequency	ON	When output to motor is at the set frequency, during accel (C045) and decel (C046).
			OFF	When output to motor is OFF, or is not at a level of the set frequency
26	OL2	Overload Advance Notice Signal 2	ON	When output current is more than the set threshold (C111) for the overload signal
			OFF	When output current is less than the set threshold for the deviation signal
27	ODc	Analog Voltage Input Disconnect Detection	ON	When the [O] input value < b070 setting (signal loss detected)
			OFF	When no signal loss is detected
28	OIDc	Analog Current input Disconnect Detection	ON	When the [OI] input value < b071 setting (signal loss detected)
			OFF	When no signal loss is detected
31	FBV	PID Second Stage Output	ON	Transitions to ON when the inverter is in RUN Mode and the PID Process Variable (PV) is less than the Feedback Low Limit (C053)
			OFF	Transitions to OFF when the PID Process Variable (PV) exceeds the PID High Limit (C052), and transitions to OFF when the inverter goes from Run Mode to Stop Mode
32	NDc	Network Disconnect Detection	ON	When the communications watchdog timer (period specified by C077) has time out
			OFF	When the communications watchdog timer is satisfied by regular communications activity
33	LOG1	Logic Output Function 1	ON	When the Boolean operation specified by C143 has a logical "1" result
			OFF	When the Boolean operation specified by C143 has a logical "0" result
34	LOG2	Logic Output Function 2	ON	When the Boolean operation specified by C146 has a logical "1" result
			OFF	When the Boolean operation specified by C146 has a logical "0" result
35	LOG3	Logic Output Function 3	ON	When the Boolean operation specified by C149 has a logical "1" result
			OFF	When the Boolean operation specified by C149 has a logical "0" result
39	WAC	Capacitor Life Warning Signal	ON	Lifetime of internal capacitor has expired.
			OFF	Lifetime of internal capacitor has not expired.
40	WAF	Cooling Fan Warning Signal	ON	Lifetime of cooling fan has expired.
			OFF	Lifetime of cooling fan has not expired.
41	FR	Starting Contact Signal	ON	Either FW or RV command is given to the inverter
			OFF	No FW or RV command is given to the inverter, or both are given to the inverter
42	OHF	Heat Sink Overheat Warning	ON	Temperature of the heat sink exceeds a specified value (C064)
			OFF	Temperature of the heat sink does not exceed a specified value (C064)
43	LOC	Low load detection	ON	Motor current is less than the specified value (C039)
			OFF	Motor current is not less than the specified value (C039)
44	MO1	General Output 1	ON	General output 1 is ON
			OFF	General output 1 is OFF
45	MO2	General Output 2	ON	General output 2 is ON
			OFF	General output 2 is OFF

Output Function Summary Table				
Option Code	Terminal Symbol	Function Name	Description	
46	MO3	General Output 3	ON	General output 3 is ON
			OFF	General output 3 is OFF
50	IRDY	Inverter Ready Signal	ON	Inverter can receive a run command
			OFF	Inverter cannot receive a run command
51	FWR	Forward Rotation	ON	Inverter is driving the motor in forward direction
			OFF	Inverter is not driving the motor in forward direction
52	RVR	Reverse Rotation	ON	Inverter is driving the motor in reverse direction
			OFF	Inverter is not driving the motor in reverse direction
53	MJA	Major Failure Signal	ON	Inverter is tripping with major failure
			OFF	Inverter is normal, or is not tripping with major failure
54	WCO	Window Comparator for Analog Voltage Input	ON	Analog voltage input value is inside of the window comparator
			OFF	Analog voltage input value is outside of the window comparator
55	WCOI	Window Comparator for Analog Current Input	ON	Analog current input value is inside of the window comparator
			OFF	Analog current input value is outside of the window comparator
58	FREF	Frequency Command Source	ON	Frequency command is given from the operator
			OFF	Frequency command is not given from the operator
59	REF	Run Command Source	ON	Run command is given from the operator
			OFF	Run command is not given from the operator
60	SETM	2 <sup>nd</sup> Motor Selection	ON	2 <sup>nd</sup> motor is being selected
			OFF	2 <sup>nd</sup> motor is not being selected
62	EDM	STO (Safe Torque Off) Performance Monitor (Output terminal 11 only)	ON	STO is being performed
			OFF	STO is not being performed
63	OPO	Option card output	ON	(output terminal for option card)
			OFF	(output terminal for option card)
255	no	Not used	ON	-
			OFF	-



## Motor Constants Functions

Func. Code	"H" Function		A	B	Defaults	
	Name	Description			Initial data	Units
H001	Auto-tuning selection	Three option codes: 00...Disabled 01...Enabled with motor stop 02...Enabled with motor rotation	×	×	00	-
H002	Motor constant selection	Two option codes: 00...Hitachi standard motor 02...Auto tuned data	×	×	00	-
H202	Motor constant selection, 2 <sup>nd</sup> motor		×	×	00	-
H003	Motor capacity	Twelve selections: 0.1/0.2/0.4/0.55/0.75/1.1/1.5/2.2/3.0 /3.7/	×	×	Specified by the capacity of each inverter model	kW
H203	Motor capacity, 2 <sup>nd</sup> motor	4.0/5.5/7.5/11/15/18.5	×	×		kW
H004	Motor poles setting	Forty eight selections: 2(0)/4(1)/6(2)/8(3)/10(4)/12(5)/14(6)/ 16(7)/18(8)/	×	×	4	poles
H204	Motor poles setting, 2 <sup>nd</sup> motor	20(9)/22(10)/24(11)/26(12)/28(13)/3 0(14)/32(15)/ 34(16)/36(17)/38(18)/40(19)/42(20)/ 44(21)/46(22)/ 48(23)	×	×	4	poles
H005	Motor speed response constant	Set range is 1 to 1000	✓	✓	100.	-
H205	Motor speed response constant, 2 <sup>nd</sup> motor		✓	✓	100.	-
H006	Motor stabilization constant	Motor constant (factory set), range is 0. to 255.	✓	✓	100.	-
H206	Motor stabilization constant, 2 <sup>nd</sup> motor		✓	✓	100.	-
H020	Motor constant R1 (Hitachi motor)	0.001 to 65.535 ohms	×	×	Specified by the capacity of each inverter mode	Ohm
H220	Motor constant R1, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		Ohm
H021	Motor constant R2 (Hitachi motor)	0.001 to 65.535 ohms	×	×		Ohm
H221	Motor constant R2, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		Ohm
H022	Motor constant L (Hitachi motor)	0.01 to 655.35mH	×	×		mH
H222	Motor constant L, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		mH
H023	Motor constant I0 (Hitachi motor)	0.01 to 655.35A	×	×		A
H223	Motor constant I0, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		A
H024	Motor constant J (Hitachi motor)	0.001 to 9999 kgm <sup>2</sup>	×	×		kgm <sup>2</sup>
H224	Motor constant J, 2 <sup>nd</sup> motor (Hitachi motor)		×	×		kgm <sup>2</sup>
H030	Motor constant R1 (Auto tuned data)	0.001 to 65.535 ohms	×	×	Specified by the capacity of each inverter mode	ohm
H230	Motor constant R1, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		ohm
H031	Motor constant R2 (Auto tuned data)	0.001 to 65.535 ohms	×	×		ohm
H231	Motor constant R2, 2 <sup>nd</sup> motor (Auto tuned data)		×	×		ohm
H032	Motor constant L (Auto tuned data)		0.01 to 655.35mH	×		×

Func. Code	"H" Function		A	B	Defaults	
	Name	Description			Initial data	Units
H232	Motor constant L, 2 <sup>nd</sup> motor (Auto tuned data)		✗	✗		mH
H033	Motor constant I0 (Auto tuned data)	0.01 to 655.35A	✗	✗		A
H233	Motor constant I0, 2 <sup>nd</sup> motor (Auto tuned data)		✗	✗		A
H034	Motor constant J (Auto tuned data)	0.001 to 9999 kgm <sup>2</sup>	✗	✗		kgm <sup>2</sup>
H234	Motor constant J, 2 <sup>nd</sup> motor (Auto tuned data)		✗	✗		kgm <sup>2</sup>
H050	Slip compensation P gain for V/f control with FB	0.00 to 10.00	✓	✓	0.20	Times
H051	Slip compensation I gain for V/f control with FB	0. to 1000	✓	✓	2	s

PM Motor Constants Functions

Func. Code	"H" Function		A	B	Defaults	
	Name	Description			Initial data	Units
H102	PM motor code setting	00...Hitachi standard (Use H106-H110 for motor constants) 01...Auto-Tuning (Use H109-H110, H111-H113 for motor constants)	✗	✗	00	-
H103	PM motor capacity	0.1/0.2/0.4/0.55/0.75/1.1/1.5/2.2/3.0/3.7/4.0/5.5/7.5/11.0/15.0/18.5	✗	✗	Specified by the capacity of each inverter mode	kW
H104	PM motor pole setting	2/4/6/8/10/12/14/16/18/20/22/24/26/28/30/32/34/36/38/40/42/44/46/48	✗	✗		Poles
H105	PM Rated Current	(0.00 to 1.00) × Rated current of the inverter [A]	✗	✗		A
H106	PM const R(Resistance)	0.001 to 65.535 [Ω]	✗	✗		Ohm
H107	PM const Ld (d-axis inductance)	0.01 to 655.35 [mH]	✗	✗		mH
H108	PM const Lq (q-axis inductance)	0.01 to 655.35 [mH]	✗	✗		mH
H109	PM const Ke (Induction voltage constant)	0.0001 to 6.5535 [V/(rad/s)]	✗	✗		V/(rad/s)
H110	PM const J (Moment of inertia)	0.001 to 9999.000 [kgm <sup>2</sup> ]	✗	✗	kgm <sup>2</sup>	
H111	PM const R (Resistance, Auto)	0.001 to 65.535 [Ω]	✗	✗	Specified by the capacity of each inverter mode	Ohm
H112	PM const Ld (d-axis inductance, Auto)	0.01 to 655.35 [mH]	✗	✗		mH
H113	PM const Lq(q-axis inductance, Auto)	0.01 to 655.35 [mH]	✗	✗		mH
H116	PM Speed Response	1 to 1000 [%]	✓	✓	100	%
H117	PM Starting Current	20.00 to 100.00 [%]	✗	✗	70.00	%
H118	PM Starting Time	0.01 to 60.00 [s]	✗	✗	1.00	s

Func. Code	"H" Function		A	B	Defaults	
	Name	Description			Initial data	Units
<b>H119</b>	PM Stabilization Constant	0 to 120 [%]	✓	✓	100	%
<b>H121</b>	PM Minimum Frequency	0.0 to 25.5 [%]	✓	✓	8.0	%
<b>H122</b>	PM No-Load Current	0.00 to 100.00 [%]	✓	✓	10.00	%
<b>H123</b>	PM Starting Method Select	<b>00</b> ... Normal <b>01</b> ... Initial Magnet Position Estimation	✗	✗	00	-
<b>H131</b>	PM Initial Magnet Position Estimation 0V Wait Times	0 to 255	✗	✗	10	-
<b>H132</b>	PM Initial Magnet Position Estimation Detect Wait Times	0 to 255	✗	✗	10	-
<b>H133</b>	PM Initial Magnet Position Estimation Detect Times	0 to 255	✗	✗	30	-
<b>H134</b>	PM Initial Magnet Position Estimation Voltage Gain	0 to 200	✗	✗	100	-

## Expansion Card Functions

“P” parameters will be appeared when the expansion option is connected.

Func. Code	Name	“P” Function Description	A	B	Defaults	
					Initial data	Units
P001	Reaction when option card error occurs	Two option codes: 00...Inverter trips 01...Ignores the error (Inverter continues operation)	✗	✓	00	-
P003	[EA] terminal selection	Three option codes: 00...Speed reference (incl. PID) 01...For control with encoder feedback 02...Extended terminal for EzSQ	✗	✗	00	-
P004	Pulse train input mode selection for feedback	Four option codes: 00...Single-phase pulse [EA] 01...2-phase pulse (90° difference) 1 ([EA] and [EB]) 02...2-phase pulse (90° difference) 2 ([EA] and [EB]) 03...Single-phase pulse [EA] and direction signal [EB]	✗	✗	00	-
P011	Encoder pulse setting	Sets the pulse number (ppr) of the encoder, set range is 32 to 1024 pulses	✗	✗	512.	-
P012	Simple positioning selection	Two option codes: 00...simple positioning deactivated 01...simple positioning activated	✗	✗	00	-
P014 *2	Creep pulse ratio	0.0 to 400.0[%]	✗	✗	125.0	%
P015	Creep Speed	Set range is start frequency (b082) to 10.00 Hz	✗	✓	5.00	Hz
P017* 2	Positioning completion range	0 to 9999. /1000 (10000) [pulse]	✗	✗	50	Pulses
P026	Over-speed error detection level	Set range is 0 to150%	✗	✓	115.0	%
P027	Speed deviation error detection level	Set range is 0 to 120 Hz	✗	✓	10.00	Hz
P031	Deceleration time Input Type	00...Operator 01...EzSQ	✗	✗	00	-
P033	Torque command input selection	Three option codes: 00...Analog voltage input [O] 01...Analog current input [OI] 03...Operator 06...Option	✗	✗	00	-
P034	Torque command level input	Set range is 0 to 200%	✓	✓	0.	%
P036	Torque bias mode selection	Two option codes: 00...No bias 01...Operator 05...Option	✗	✗	00	-
P037	Torque bias value setting	Range is -200 to 200%	✓	✓	0.	%
P038	Torque bias polar selection	Three option codes: 00...According to the sign 01...According to the rotation direction	✗	✗	00	-
P039	Speed limit of Torque control (Forward rotation)	Set range is 0.00 to 120.00Hz	✗	✗	0.00	Hz
P040	Speed limit of Torque control (Forward rotation)	Set range is 0.00 to 120.00Hz	✗	✗	0.00	Hz
P041	Speed / Torque control switching time	Set range is 0 to 1000 ms	✗	✗	0.	ms

Func. Code	Name	"P" Function Description	A	B	Defaults	
					Initial data	Units
P044	Communication watchdog timer (for option)	Set range is 0.00 to 99.99s	✗	✗	1.00	s
P045	Inverter action on communication error (for option)	00...Tripping 01...Tripping after decelerating and stopping the motor 02...Ignoring errors 03...Stopping the motor after free-running 04...Decelerating and stopping the motor	✗	✗	00	-
P046	DeviceNet polled I/O: Output instance number	0 to 20	✗	✗	1	-
P048	Inverter action on communication idle mode	00...Tripping 01...Tripping after decelerating and stopping the motor 02...Ignoring errors 03...Stopping the motor after free-running 04...Decelerating and stopping the motor	✗	✗	00	-
P049	Motor poles setting for RPM	0/2/4/6/8/10/12/14/16/18/20/22/24/26/28/30/32/34/36/38/40/42/44/46/48	✗	✗	0	Poles
P055	Pulse train input frequency scale setting	Sets the pulse numbers at max. frequency, set range is 1.0~32.0 kHz	✗	✓	25.0	kHz
P056	Pulse train input frequency filter time constant setting	Set range is 0.01 to 2.00 sec.	✗	✓	0.10	s
P057	Pulse train input bias setting	Set range is -100 to 100 %	✗	✓	0.	%
P058	Limitation of the pulse train input setting	Set range is 0 to 100 %	✗	✓	100.	%
P059 <sup>*</sup> <sub>2</sub>	Lower cut off level of the input pulse	0.01 to 20.00[%]	✗	✓	1.00	%
P060	Multistage position 0	P073 to P072 (Displayed higher 4-digits only)	✓	✓	0	Pulses
P061	Multistage position 1		✓	✓	0	Pulses
P062	Multistage position 2		✓	✓	0	Pulses
P063	Multistage position 3		✓	✓	0	Pulses
P064	Multistage position 4		✓	✓	0	Pulses
P065	Multistage position 5		✓	✓	0	Pulses
P066	Multistage position 6		✓	✓	0	Pulses
P067	Multistage position 7		✓	✓	0	Pulses
P068	Homing mode selection	00...Low speed mode 01...High speed mode	✓	✓	00	-
P069	Homing direction	00...Forward rotation side 01...Reverse rotation side	✓	✓	01	-
P070	Low speed homing freq.	0 to 10Hz	✓	✓	5.00	Hz
P071	High speed homing freq.	0 to 400(580) <sup>*1</sup> Hz	✓	✓	5.00	Hz

Func. Code	Name	"P" Function Description	A	B	Defaults	
					Initial data	Units
P072	Position range (Forward)	0 to +268435455 (Higher 4-digits displayed)	✓	✓	+268435455	Pulses
P073	Position range (Reverse)	-268435455 to 0 (Higher 4-digits displayed)	✓	✓	-268435455	Pulses
P075	Positioning mode selection	00...With limitation 01...No limitation (shorter route) P004 is to be set 00 or 01	✗	✗	00	-
P077	Encoder disconnection timeout	0.0 to 10.0 s	✓	✓	1.0	s
P080 <sup>*</sup> 2	Positioning restart range	0 to 9999. /1000 (10000) [pulse]	✗	✗	0	Pulse s
P081 <sup>*</sup> 2	Store position at power off selection	00...Not store 01...Store	✗	✓	00	-
P082 <sup>*</sup> 2	Current position at power off	P073 to P072(upper four digits are shown)	✓	✓	0	Pulse s
P083 <sup>*</sup> 2	Preset position data	P073 to P072(upper four digits are shown)	✓	✓	0	Pulse s
P100 to P131	EzSQ user parameter U(00) ~ U(31)	Each set range is 0 to 65535	✓	✓	0.	-
P140	EzCOM number of data	1 to 5	✓	✓	5.	-
P141	EzCOM destination 1 address	1 to 247	✓	✓	1.	-
P142	EzCOM destination 1 register	0000 to FFFF	✓	✓	0000	-
P143	EzCOM source 1 register	0000 to FFFF	✓	✓	0000	-
P144	EzCOM destination 2 address	1 to 247	✓	✓	2.	-
P145	EzCOM destination 2 register	0000 to FFFF	✓	✓	0000	-
P146	EzCOM source 2 register	0000 to FFFF	✓	✓	0000	-
P147	EzCOM destination 3 address	1 to 247	✓	✓	3.	-
P148	EzCOM destination 3 register	0000 to FFFF	✓	✓	0000	-
P149	EzCOM source 3 register	0000 to FFFF	✓	✓	0000	-
P150	EzCOM destination 4 address	1 to 247	✓	✓	4.	-
P151	EzCOM destination 4 register	0000 to FFFF	✓	✓	0000	-
P152	EzCOM source 4 register	0000 to FFFF	✓	✓	0000	-

Func. Code	Name	"P" Function Description	A	B	Defaults	
					Initial data	Units
P153	EzCOM destination 5 address	1 to 247	✓	✓	5.	-
P154	EzCOM destination 5 register	0000 to FFFF	✓	✓	0000	-
P155	EzCOM source 5 register	0000 to FFFF	✓	✓	0000	-
P160 to P169*	Option I/F command register to write 1 to 10	0000h to FFFFh	✓	✓	0000	-
P170 to P179*	Option I/F command register to read 1 to 10	0000h to FFFFh	✓	✓	0000	-
P180*	Profibus Node address	0. to 125.	✗	✗	0.	-
P181*	Profibus Clear Node address	00...Clear 01...Hold previous time value	✗	✗	00	-
P182*	Profibus Map selection	00...PPO type 01...Conventional 02...Flexible Mode Format Selection	✗	✗	00	-
P185*	CANOpen Node address	0 to 127	✗	✗	0	-
P186*	CANOpen communication speed	00 to 08	✗	✗	06	-
P190*	CompoNet Node address	0 to 63	✗	✗	0	-
P192*	DeviceNet MAC ID	0 to 63	✗	✗	63	-
P195*	ML2 frame length	00...32bytes 01...17bytes	✗	✗	00	-
P196*	ML2 Node address	21h to 3Eh	✗	✗	21h	-

\*2: Available from version 3.0

\*3: Power cycle is required to reflect a change.

"P" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
<b>P200</b> *2*3	Serial communication mode	00...Standard 01...Free mapping	✗	✓	00	-
<b>P201</b> to <b>P210</b> *2*3	Modbus external register 1 to 10	0000h to FFFFh	✗	✓	0000	-
<b>P211</b> to <b>P220</b> *2*3	Modbus register format 1 to 10	00...Unsigned 01...Signed	✗	✓	00	-
<b>P221</b> to <b>P230</b> *2*3	Modbus register scaling 1 to 10	0.001 to 65.535	✗	✓	1.000	%
<b>P301</b> to <b>P310</b> *2*3	Modbus internal register 1 to 10	0000h to FFFFh	✗	✓	0000	-
<b>P400</b> *2*3	Modbus endian setting	00...Big endian 01...Little endian 02...Special endian*3	✗	✓	00	-

\*2: Available from version 3.0

\*3: Power cycle is required to reflect a change.

## User setting parameters

"U" Function			A	B	Defaults	
Func. Code	Name	Description			Initial data	Units
<b>U001</b> to <b>U032</b>	User selection 1 to User selection 32	no/d001 to P196	✓	✓	no	-



# Additional function

## For Version 3.1



In This Chapter...	page
- Improvement of the reaction time of overload output signal.....	2
- Improvement of speed detection with single-phase encoder.....	3
- Addition of special monitor display and error .....	4
- Special monitor display (-S--, -F**) cancellation.....	7
- Increase of upper limit of BRD Activation Level .....	7

Note :

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

## Improvement of the reaction time of overload output signal

- Processing cycle of overload advance notice signal (OL, OL2) is selectable from 40ms / 2ms by C901. Please select appropriate processing cycle for your application.
- C902 and C903 are available only when C901 = 01.
- Overload signal is turned off when output current is lower than “overload warning level (C041 / C241, C111), and its hysteresis can be specified by overload advance notice signal hysteresis (C903)”.  
(If C903 is bigger than overload warning level, overload advance notice signal is turned off when motor stops.)
- If overload advance notice signal repeats switching on/off in short time due to the instability of output current, please adjust C902 and C903. Because a response changes depends on C902 and C903 value, please be careful.



**NOTE:** Parameters marked with “✓” in A column can set even in inverter running and marked with “✗” cannot set in inverter running. Parameters marked with “✓” in B column can set even in inverter running and marked with “✗” cannot set in inverter running when in the high level access mode, which means that b031 is set to “10”.

Table Ver.3.1-1

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
C901	Processing cycle of overload advance notice signal select	00...40 msec. 01...2 msec.	✗	✓	00	14f0h	–
C902	Filter time constant for overload advance notice signal	It effects detection of output current that is used for judgement of overload advance notice signal, range is 0 to 9999 msec.	✗	✓	0	14f1h	1 [ms]
C903	Overload advance notice signal hysteresis	The ratio for the rated current of each INV mode. It effects turning off of overload advance notice signal, range is 0.00 to 50.00 %	✗	✓	10.00	14f2h	0.01 [%]

Timing chart of overload advance notice signal (2msec)

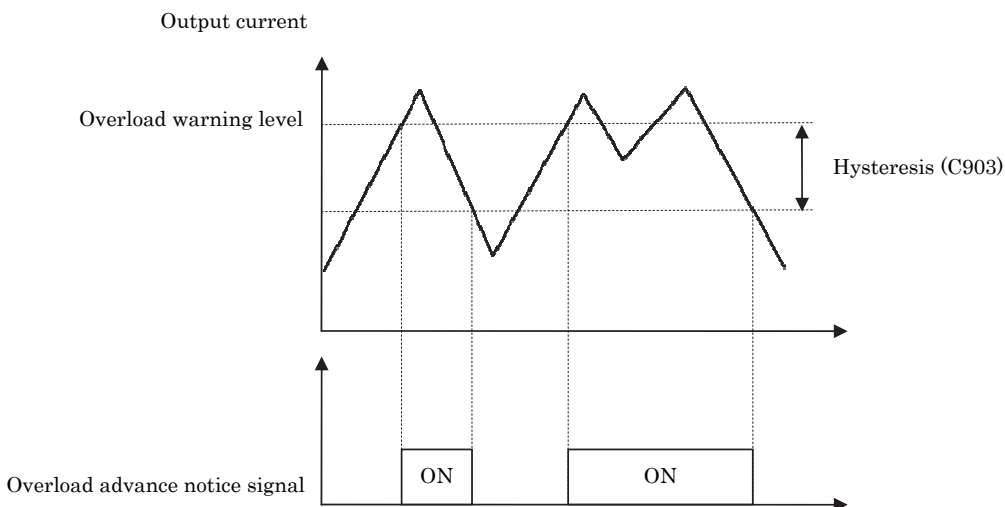


Fig. Ver.3.1-1

## Improvement of speed detection with single-phase encoder

- P900 can switch half cycle / whole cycle of pulse input at speed detection with single-phase encoder. Please set 01 to P900 if detection precision is not high due to the dispersion of duty ratio of single-phase encoder.
- If the result of speed detection with pulse input of single-phase encoder is not stable even if P900 is set to 01, please adjust P901. Because a response changes depends on P901 value, please be careful.

Table Ver.3.1-2

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
<b>P900</b>	Single-phase encoder pulse input half cycle / whole cycle select	<b>00</b> ...Half cycle <b>01</b> ...Whole cycle	✘	✓	00	16f6h	-
<b>P901</b>	Filter time constant for speed detection	It effects speed detection by encoder pulse input, range is 0 to 9999 msec.	✘	✓	20	16f7h	1 [ms]

## Addition of special monitor display and error

- The set range of b145 has been expanded to support a new special monitor and error display. In the expanded setting of b145, the signal states of EDM, GS1 and GS2 are monitored and special monitor display content or error code is showed on keypad in accordance with table Ver.3.1-5.

**<CAUTION>**

- This additional monitor function is just a supplementary display function. A whole system must be designed and configured in accordance with the instructions in Appendix E.

b146 can adjust the delay time that specifies time to transit from state (4) to state(7) depicted in fig. Ver.3.1-2. This parameter is valid only when b145=05. Once the state transits to state (7) in fig. Ver.3.1-2, it is necessary to active (open) both GS1 and GS2 again (to state (2)), and then deactivate (close) both GS1 and GS2 in order to return to normal operation (state (1)).

Table Ver.3.1-3

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
<b>b145</b>	GS input mode select	<b>00-06</b> Displays special monitor display content and error specified in table Ver.3.1-5. Please refer to table Ver3.1-5.	✗	✓	00	1394h	-
<b>b146</b>	Delay time of release operation	Valid only when b145 = 05, range is 0.00 to 2.00 sec.	✗	✓	0.00	1395h	0.01 [sec]

- The table Ver.3.1-4 below shows the newly supported monitor display content and error codes related to the parameter b145. Refer to table Ver.3.1-5 and fig Ver.3.1-2 together.

Table Ver.3.1-4

Display of the Keypad	Description	Trip or No Trip
-S--	GS1 and GS2 are both opened. No inconsistency in signal states of GS1, GS2 and EDM signal.	No trip
-F01 *3	Inconsistency of signal states of GS1 and GS2. Delay of GS1 during transition from “-S--” (state (2)) → “Normal operation” (state (1)).	No trip
-F02*3	Inconsistency of signal states of GS1 and GS2. Delay of GS2 during transition from “-S--” (state (2)) → “Normal operation” (state (1)).	No trip
-F10*3	Inconsistency of signal states of GS1 and GS2. Delay of GS1 during transition from “Normal operation” (state (1)) → “-S--” (state (2)).	No trip
-F20*3	Inconsistency of signal states of GS1 and GS2. Delay of GS2 during transition from “Normal operation” (state (1)) → “-S--” (state (2)).	No trip
E37 *1	At least either GS1 or GS2 is opened.	Trip
E98 *2	States of GS1 and GS2 are inconsistent.	Trip
E99 *2	States of GS1/GS2 and EDM are inconsistent.	Trip

\*1: This trip is canceled by terminal RS(reset) and cycling power, but the reset of keypad is impossible.

\*2: The error E98 and E99 are cleared (reset) only by cycling power.

\*3: Refer to fig. Ver.3.1-2 state transition diagram, for the details of each state.

- The table Ver.3.1-5 shows signal status of GS1/GS2/EDM and corresponding special monitor display content / error codes according to setting of b145.

Table Ver.3.1-5

GS1	Close	Open	Close	Open	Close	Open	Close	Open (Shut Act)	
GS2	Close	Close	Open	Open	Close	Close	Open	Open	
EDM	Open				Close (Act)				
b145	00	—	—	—	—	—	—	—	—
	01	—	E37	E37	E37	—	E37	E37	E37
	02	—	E98	E98	E99	E99	E99	E99	-S--
	03	—	—	—	E99	E99	E99	E99	-S--
	04	—	—	—	—	—	—	—	-S--
	05	—	-F01 or -F20	-F02 or -F10	E99	E99	E99	E99	-S--
	06	—	-F01 or -F20	-F02 or -F10	—	—	—	—	-S--

- State transition diagram (b145=05, 06)

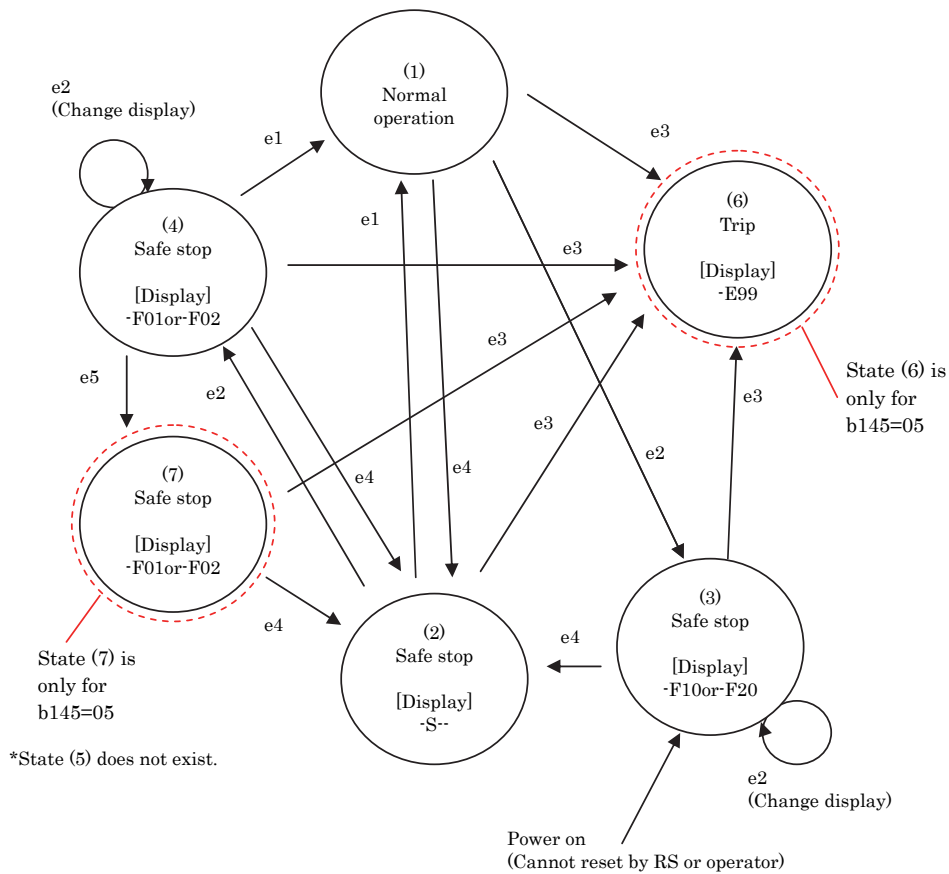


Fig. Ver.3.1-2 State transition diagram

Definition of state ① to ⑧

Terminal	①	②	③	④	⑤	⑥	⑦	⑧
GS1	Close	Open	Close	Open	Close	Open	Close	Open
GS2	Close	Close	Open	Open	Close	Close	Open	Open
EDM	Open				Close			

Definition of event e1 to e5

Event	Description
e1	Signal state becomes ①
e2	Signal state becomes ② or ③
e3	Signal state becomes either ④ to ⑦ This event does not occur when b145=06
e4	Signal state becomes ⑧
e5	Signal state is held more than T(b146). This event does not occur when b145=06.

## Special monitor display (-S--, -F\*\*) cancellation

- The parameter of b147 can be used to select whether special monitor display is canceled temporarily by pressing down a key on the keypad during special monitor display (-S--, -F\*\*) is displayed. Please refer to table Ver.3.1-5 for details of special monitor display.
- In the case of b147=00 (Cancellation of special display is invalid) setting, key operation is not accepted at all, and special monitor display (-S--, -F\*\*) is kept on being displayed.
- In the case of b147=01 (Cancellation of special display is valid) setting, special monitor display is canceled temporarily by pressing a key on the keypad and then normal display (parameter display) is displayed.
- After having canceled special monitor display, it returns to an original special monitor display content if no key operation has been done for the time specified by b148 (Special monitor display re-display time). If content of special monitor display is changed due to transition of signal status, it displays corresponding special monitor display content immediately regardless of the cancellation time. (e.g.: change into “-F\*\*” state from “-S--” state)
- b148 can adjust the time to re-display special monitor display after it has been cancelled. Special display is displayed again after passing time specified by b148 from the last key operation.

Table Ver.3.1-6

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
<b>b147</b>	Special monitor display cancellation	00...Cancellation of special display is invalid 01...Cancellation of special display is valid	✗	✓	00	13d0h	-
<b>b148</b>	Special monitor display re-display time	Time to return to special display, range is 1 to 30 sec.	✗	✓	30	13d1h	1 [sec]

## Increase of upper limit up of BRD Activation Level

- The upper limit of b096 “BRD Activation Level” of 200V and 400V class are increased by 10V and 20V respectively.

Table Ver.3.1-7

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
<b>b096</b>	BRD activation level	When internal DC voltage exceeds the specified level, BRD circuit is activated. When internal DC voltage falls below the level, BRD circuit is inactivated. (Ver. 3.0 or before)Range is: 330 to 380 V (200V class) 660 to 760 V (400V class) (Ver. 3.1 or after)Range is: 330 to 390 V (200V class) 660 to 780 V (400V class)	✗	✓	360/ 720	1363h	1 [V]

# Additional function For Version 3.2



---

In This Chapter...	page
- Additional output signal [GSS] .....	2

Note :

Sections listed about Ver.2, Ver.3.0, Ver.3.1 and Ver.3.2 are added to this instruction manual. If there is the description about the same item to the plural points, the substance described in the Ver.3.2 section has priority most. The substance described in the Ver.3.1 section takes first priority next. The next priority is the substance described in the Ver.3.0 and Ver.2.other sections. Please refer to the substance described in other sections for the item that is not described in Ver.3.2 section, Ver.3.1 section, Ver.3.0 section and Ver.2 section.

---



## Additional output signal [GSS]

- GS synchronization output signal [GSS] is added as a new output signal of WJ200. The [GSS] signal is deactivated when the inverter is in trip or delay on/off of safety input is detected (-Fxx is displayed). Since the safety input delay on/off detection is available only when b145 is set to 05 or 06, the [GSS] reflects the safety input status only when b145 is set to 05 or 06. Even if b147 is set to 01 and -Fxx display is cancelled, the [GSS] signal remains deactivated. The output signal of [GSS] is judged every 10ms.



**NOTE:** Parameters marked with "✓" in A column can set even in inverter running and marked with "✗" cannot set in inverter running. Parameters marked with "✓" in B column can set even in inverter running and marked with "✗" cannot set in inverter running when in the high level access mode, which means that b031 is set to "10".

Table Ver.3.2-1

Func. Code	Name	Description	A	B	Initial data	Modbus register number	Resolution
C021	Output [11] function [EDM assignable]	64( GS synchronization [GSS] ) is added to conventional 00-63 code.	✗	✓	00 [RUN]	1415h	-
C022	Output [12] function		✗	✓	01 [FA1]	1416h	-
C026	Alarm relay function		✗	✓	05 [AL]	141Ah	-

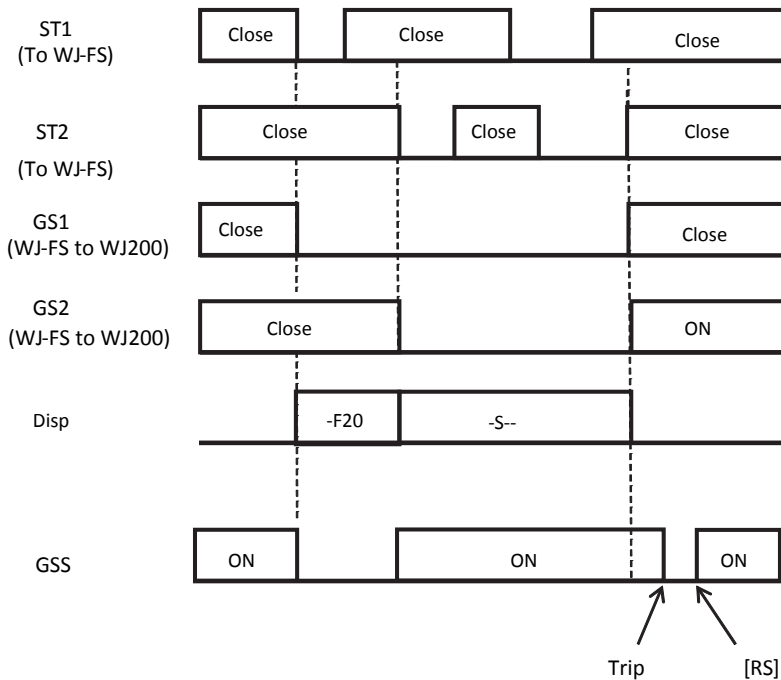


Fig. Ver.3.2-1 GSS time chart [With WJ-FS (b145=05, 06), Auto reset is activated]

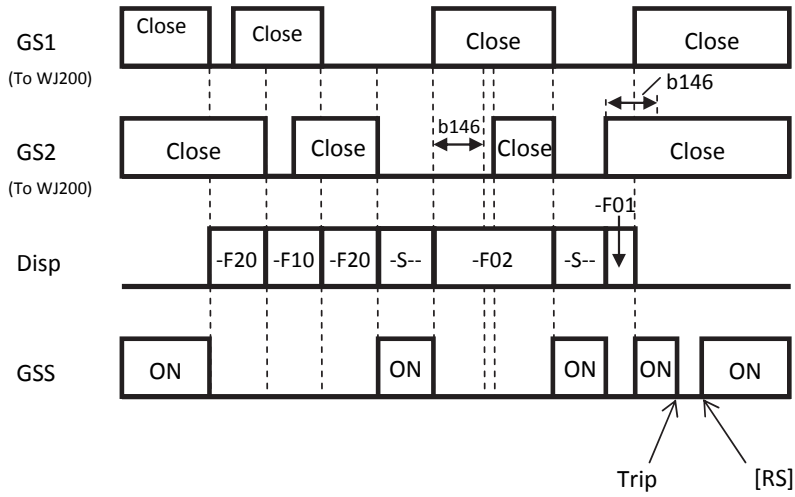


Fig. Ver.3.2-2 GSS time chart [Without WJ-FS (b145=05)]

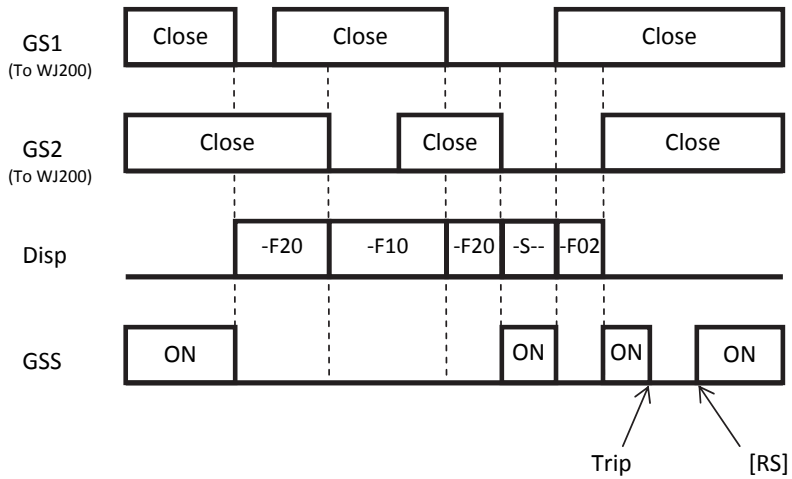


Fig. Ver.3.2-3 GSS time chart [Without WJ-FS (b145=06)]

# Index



---

<b>Index</b>	<b>page</b>
- <b>A,B,C</b> .....	<b>2</b>
- <b>D,E,F,G,H</b> .....	<b>3</b>
- <b>I,J,K,L,M</b> .....	<b>4</b>
- <b>N,O,P</b> .....	<b>5</b>
- <b>Q,R,S</b> .....	<b>6</b>
- <b>T,U,V,W,X,Y,Z</b> .....	<b>7</b>

---

## A

A Group function .....	3-12
AC reactors .....	5-3
Acceleration .....	1-23,3-11
characteristic curvers .....	3-38
second function .....	3-37
stop .....	3-30
two stage .....	4-22
Accessories .....	5-2
Active frequency matching	
restart .....	3-47
ADD frequency .....	3-42
enable .....	4-41
Alarm signal .....	4-52,4-59
Algorithm torque control .....	3-4,3-104
Ambient temperature .....	2-8,A-2
setting .....	3-68
Analog	
command hold .....	4-45
current input disconnect	
detect .....	4-70
voltage input disconnect	
detect .....	4-70
Analog input	
adjusting characteristics .....	3-16
calibration settings .....	3-99
current / voltage select .....	4-28
current input .....	4-87
disconnect detect .....	4-70
O/OI monitor .....	Ver.3-4
operation .....	4-87
range settings .....	3-40,3-43
settings .....	3-16,3-40
voltage in put .....	4-87
Analog outputs	
operation .....	4-90
calibration related function .....	3-101
Arrival frequency .....	A-2
Automatic	
Restart mode .....	3-44
user parameter registration .....	3-61
Automatic voltage regulation .....	2-31,3-35
Auto-tuning function .....	3-108.A-2

## B

B Group functions .....	3-44
Base frequency .....	2-31,A-2
setting .....	3-15
Bibliography .....	A-8
Braking .....	1-21
dynamic .....	5-5
settings .....	3-26
resistor .....	A-2
Brake	
control function related .....	3-75
confirmation .....	4-38
error signal .....	4-66
release signal .....	4-66

Break-away torque .....	A-2
-------------------------	-----

## C

C Group function .....	3-83
Calculate function .....	3-41
Capacitor life	
curve .....	6-22
warning signal .....	4-76
Carrier frequency .....	A-2
adjustment .....	3-69
automatic reduction .....	3-69
(PWM)related .....	3-69
Cautions	
general .....	x
index to .....	iv
inverter mounting .....	2-7
operating procedures .....	4-2
CE approval .....	A-2
CE-EMC guidelines .....	D-2
Choke .....	2-4,5-2,A-2
Clear watt-hour data .....	4-43
Commercial power source	
switchover .....	4-26
Communication signal	
disconnect	
detection .....	4-74
Components to be combined .....	E-6
Constant	
torque .....	3-22
voltage/hertz operation .....	1-19
Contact informationl .....	xx
Control Algorithms .....	3-22
Cooling fan warning signal .....	4-76
Creep pulse ratio .....	Ver.3-8
Current	
limitation related functions .....	3-51
input .....	4-87
overload .....	2-32,3-48
Current/voltage input select .....	4-28

- D**
- D Group parameters ..... 3-7
  - Data read/write selection ..... Ver.2-16
  - DC braking ..... 3-26,4-20,A-3
    - frequency detection ..... 3-26
    - (DB)settings ..... 3-26
  - DC Bus AVR ..... 3-78
  - Deadband ..... A-3
  - Deceleration ..... 1-23,3-11
    - characteristic curves ..... 3-38
    - second function ..... 3-37
    - stop ..... 3-30
    - two-stage ..... 4-22
  - Default settings
    - Listing ..... C-2
    - restoring ..... 6-15
  - Delay function output circuits ..... 4-53
  - Digital operator ..... 2-25,3-3,A-3
  - Dimensions
    - Inverter ..... 2-9
    - terminals ..... 2-17
  - Diode ..... A-3
  - Disconnect defect analog input ..... 4-70
  - Display
    - limitation ..... 4-50
    - related parameter ..... 3-57
  - Drive parameter
    - setting table ..... Ver.2-48, Ver.3-120
  - Dual selection ..... 3-5
  - Duty cycle ..... A-3
  - Dynamic braking ..... 1-21,A-3
    - related function ..... 3-70,Ver.2-15
- E**
- Edit mode ..... 2-35
  - Editing parameters ..... 2-25,2-29
  - EDM ..... A-3
  - Electronic thermal
    - characteristic ..... 3-49
    - characteristic curve ..... 3-49
    - detection system Error ..... Ver.3-85
    - warning output ..... 3-50,3-96
    - subtraction ..... Ver.3-17
  - EMC installation
    - guidelines ..... D-2
    - recommendations ..... D-6
  - EMI ..... A-3
    - filter ..... xii
  - Energy savings mode ..... 3-36
  - Encoder related settings ..... 3-112
  - Environmental specs ..... 1-8,1-9
  - Event clearing ..... 4-72
  - Executing EzSQ program ..... 4-49
  - Explanation of function codes ..... B-10
  - External
    - frequency filter time
      - constant ..... 3-17
      - DC braking ..... 4-20
      - trip ..... 4-24
  - EzCOM(peer-to-peer communication) ..... B-20
  - EzSQ related
    - settings ..... 3-18
  - EzSQ related parameter related settings ..... 3-122
- F**
- F Group functions ..... 3-11
  - Factory default settings
    - restoring ..... 6-15
  - Fan control ..... 3-70
  - Fan outlet ..... 2-8
  - FAQ ..... 1-23
  - Features ..... 1-2,2-2
  - Feedback value check ..... 4-73
  - Filters noise suppressions ..... 5-2
  - Fine-tuning functions ..... 3-44
  - Force
    - operation from digital operator ..... 4-35
    - terminal mode ..... 4-42
  - Forward
    - run/stop ..... 4-16
    - reverse ..... 4-31
    - rotation ..... 4-81
  - Four quadrant operation ..... 4-93
  - Free-run stop ..... 4-23,A-4
  - Free-V/F settings related ..... 3-74
  - Frequency arrival
    - type 1-constant speed ..... 4-55
    - type 2-over frequency ..... 4-55
    - type 3-set frequency ..... 4-55
    - type 4-over frequency(2) ..... 4-55
    - type 5-set frequency(2) ..... 4-55
    - output ..... 3-95
  - Frequency
    - command source ..... 4-84
    - limits ..... 3-28
    - related functions ..... 3-28
    - setting ..... A-4
    - source monitor ..... Ver.3-3
    - source setting ..... 3-12
  - Frequently asked questions ..... 1-23
  - Fuse size ..... xv,2-16
- G**
- General input(1)~(3) ..... 4-79
  - General purpose input(1)~(7) ..... 4-44
  - Glossary of terms ..... A-2
  - GS synchronization signal ..... Ver.3.2-2
- H**
- H Group parameters ..... 3-104
  - Harmonics ..... A-4
  - Heat sink overheat warning ..... 4-78
  - Heat sink overheat warning output ..... 3-96
  - History of trip events ..... 3-9
  - Holding register endian select ..... Ver.3-64
  - Homing function ..... 3-121
  - Horse power ..... A-4
  - How to connect? ..... 4-9

- I**
  - IGBT ..... 1-18,A-4
    - test method ..... 6-18
    - measurements techniques ..... 6-21
    - procedures ..... 6-15
    - unpacking ..... 2-2
  - Inertia ..... A-4
  - Initialization ..... 6-14
    - codes ..... 3-70
    - related ..... 3-70
  - Initial value change(PM mode) ..... Ver.3-22
  - Input
    - circuits ..... 4-4,4-12
    - terminal configuration ..... 3-83
    - function summary table ..... 3-85
  - Inspection
    - electrical measurements ..... 6-19
  - Installation
    - for WJ200 series ..... D-5
    - instructions ..... 2-6
  - Insulation test ..... 6-16
  - Integral gain ..... 3-31
  - intelligent input ..... 4-10
    - terminals ..... 3-83,4-12
    - terminal overview ..... 3-84
  - Intelligent output ..... 4-11
    - terminals ..... 3-89,4-51
  - intelligent terminals
    - definition ..... A-4
    - functions ..... 3-83
    - index ..... 4-10
  - Inverter ..... 1-18,A-4
    - dimensions ..... 2-9
    - mode selection ..... Ver.2-16, Ver.3-2
    - mode setting ..... 3-79
    - programming ..... 3-2
    - ready signal ..... 4-80
  - IRDY old/new spec. selection ..... Ver.3-21
  - Isolation transformer ..... A-4
- J**
  - Jog frequency ..... 3-21
    - settings ..... 3-19
  - Jogging ..... 4-19
  - Jogging operation ..... A-5
  - Jump frequencies ..... 3-29,A-5
- K**
  - Keypad ..... 2-2,3-3
    - Connected ..... 3-10
    - features ..... 2-25,3-3
    - navigation ..... 2-26
    - navigation trip events ..... 6-8
- L**
  - LAD cancellation ..... 4-39, Ver.3-4
  - LEDs ..... 2-25,2-26,3-3
  - Line reactor ..... A-5
  - Linear accel/deccel ..... 3-38
  - Logic output
    - function ..... 3-102,4-75
    - terminals ..... 3-83,4-6
  - Low load detection ..... 4-79
    - parameters ..... 3-94
- M**
  - Main profile parameters ..... 3-11
  - Maintenance procedures ..... 6-15
  - Major failure signal ..... 4-82
  - Manual torque boost ..... 3-24
  - Massage configuration
    - query ..... B-6
    - response ..... B-8
  - Maximum frequency settings ..... 3-15
  - Megger test ..... 6-17
  - ModBus
    - coil list ..... B-24,Ver.2-18
    - data listing ..... B-24,Ver.2-18, Ver.3-86
    - holding registers ..... B-26,Ver.2-20
    - introduction to network ..... B-2
    - Mapping function ..... Ver.3-23
  - Model number
    - convention ..... 1-3
    - on nameplate ..... 1-3
  - Model-specs table ..... 1-4
  - Monitor mode ..... 2-26,3-4,6-9
  - Monitoring
    - function ..... 3-7
    - parameters ..... 2-34
  - Motor
    - cable length parameter ..... 3-54
    - constants ..... 3-104
    - constants selection ..... 3-106
    - load ..... A-5
    - poles ..... 1-24,2-33,3-104
    - speed ..... 2-36
    - voltage selection ..... 3-104
    - wiring ..... 2-22
  - Mounting
    - clearance for ventilation ..... 2-8
    - dimensions ..... 2-9
    - Location ..... 2-7
  - Multi-speed
    - operation ..... A-5
    - select bit0(LSB) ..... 4-17
    - select bit1 ..... 4-17
    - select bit2 ..... 4-17
    - select bit3(MSB) ..... 4-17
    - profiles ..... 1-22
    - settings ..... 3-19
  - Multistage position
    - switching function ..... 3-119
    - switch(1)~(3) ..... 4-46
  - Multistage speed-bit operation ..... 4-36

<b>N</b>	<ul style="list-style-type: none"> <li>Nameplate ..... 1-3</li> <li>Navigational               <ul style="list-style-type: none"> <li>map ..... 2-26</li> <li>trip events ..... 6-13</li> </ul> </li> <li>NEC ..... A-5</li> <li>NEMA definition ..... A-5</li> <li>Netwoak communcations ..... 1-23,B-2               <ul style="list-style-type: none"> <li>error code ..... 6-11</li> <li>ModBUS data listing ..... B-24</li> <li>parameter settings ..... B-4</li> <li>protocol reference ..... B-5</li> <li>settings ..... 3-98</li> <li>termination resistor ..... B-3</li> </ul> </li> </ul>
<b>O</b>	<ul style="list-style-type: none"> <li>Off-line auto-tuning procedures ..... 3-110</li> <li>Option card error ..... 3-111</li> <li>Open collector outputs ..... 4-51,A-5</li> <li>Operational               <ul style="list-style-type: none"> <li>modes ..... 3-4</li> <li>precautions ..... 2-24</li> <li>components ..... 1-2,2-7</li> </ul> </li> <li>Orientation ..... 2-2</li> <li>Other               <ul style="list-style-type: none"> <li>analog input-related topics ..... 4-88</li> <li>functions ..... 3-103</li> </ul> </li> <li>Output               <ul style="list-style-type: none"> <li>adjustment paramerter ..... 3-95</li> <li>circuits ..... 4-4,4-51</li> <li>deay function ..... 4-53</li> <li>deviation for PID control ..... 4-58</li> <li>logic and timing ..... 3-102</li> <li>frequency ..... 2-34</li> <li>frequency range ..... Ver.3-7</li> <li>setting ..... 3-11</li> <li>summary table ..... 3-91</li> <li>motor ..... 1-20</li> <li>overload ..... 3-48</li> </ul> </li> <li>Over-current trip ..... 3-44               <ul style="list-style-type: none"> <li>suppression ..... 3-51, Ver.3-6</li> <li>torque signal ..... 4-61</li> </ul> </li> <li>Overload               <ul style="list-style-type: none"> <li>Advance notice signal ... 4-57, Ver.3.1-2</li> <li>configuration ..... 3-48</li> <li>error codes ..... 6-8</li> <li>restriction ..... 3-51</li> <li>restriction source                   <ul style="list-style-type: none"> <li>changeover ..... 4-37</li> <li>warring output ..... 3-95</li> </ul> </li> </ul> </li> <li>Override source settings ..... 3-13</li> <li>Over/under torque outpur ..... 3-95</li> <li>Over-voltage trip ..... 3-44               <ul style="list-style-type: none"> <li>error code ..... 6-8,6-9,6-10,6-11</li> </ul> </li> </ul>
<b>P</b>	<ul style="list-style-type: none"> <li>P Group other parameter ..... 3-111</li> <li>Paramerter editing ..... 2-25,2-29               <ul style="list-style-type: none"> <li>setting ..... 1-21,2-26</li> <li>listing ..... C-2</li> </ul> </li> <li>Password function ..... 3-81</li> <li>Periodical check ..... E-3</li> <li>Permission               <ul style="list-style-type: none"> <li>Of run command ..... 4-50</li> <li>for torque command input ..... 4-42</li> </ul> </li> <li>PID               <ul style="list-style-type: none"> <li>loop ..... 1-25,A-5                   <ul style="list-style-type: none"> <li>clear ..... 4-32</li> <li>configuration ..... 3-33</li> <li>control ..... 3-31</li> <li>deviation monitor ..... Ver.3-5</li> <li>deviation output ..... 3-34</li> <li>disable ..... 4-32</li> <li>error ..... 4-58,A-3</li> <li>error inversion ..... 3-33</li> <li>feedback comparison                       <ul style="list-style-type: none"> <li>output ..... 3-34</li> <li>output limit ..... 3-33</li> <li>output monitor ..... Ver.3-5</li> </ul> </li> <li>process variable definition ..... A-6</li> <li>second stage output ..... 4-71</li> <li>settings ..... 3-31</li> <li>scaling ..... 3-34</li> <li>sleep function ..... 3-34</li> </ul> </li> </ul> </li> <li>PLC connecting tol ..... 4-4</li> <li>PM motor drive ..... Ver.2-2</li> <li>Poles of motor ..... 1-24,2-33,3-104</li> <li>Position feedback monitor ..... Ver.3-3</li> <li>Positioning completion ..... 4-69</li> <li>Potentiomerter ..... 2-23,3-12,4-55</li> <li>Power               <ul style="list-style-type: none"> <li>factor ..... A-5                   <ul style="list-style-type: none"> <li>on time expiration signal ..... 4-64</li> </ul> </li> <li>Power fail ..... 3-44</li> <li>Power up fail ..... 2-23</li> <li>Power test observations ..... 2-36                   <ul style="list-style-type: none"> <li>acceleration and                       <ul style="list-style-type: none"> <li>decceleration ..... 2-36</li> <li>error codes ..... 2-36</li> <li>interpreting the display ..... 2-36</li> <li>inverter at stop ..... 2-36</li> </ul> </li> <li>monitor/program modes ..... 2-36                       <ul style="list-style-type: none"> <li>run/stop vs monitor/program                           <ul style="list-style-type: none"> <li>modes ..... 2-36</li> <li>speed(RPM) ..... 2-36</li> </ul> </li> </ul> </li> </ul> </li> <li>Powerup unattended start ..... 4-25                   <ul style="list-style-type: none"> <li>error coder ..... 6-9,6-10,6-11</li> </ul> </li> <li>Powering the inverter ..... 2-24</li> <li>Preventative maintenancet ..... 6-16</li> <li>Pre test ..... 2-24</li> <li>Process variable ..... A-6</li> <li>Proof test ..... A-6</li> <li>Program mode ..... 2-26,2-34,3-4</li> <li>Programming device ..... 3-2</li> <li>Proportional gain ..... 3-31</li> <li>Pulse               <ul style="list-style-type: none"> <li>counter clear ..... 4-40</li> <li>train input A/B ..... 4-89, Ver.3-10</li> <li>train input monitor ..... Ver.3-4</li> </ul> </li> <li>PV source settting ..... 3-31</li> <li>PWM ..... A-6</li> </ul> </li></ul>

# Index-6

<b>Q</b>		
Quick start enable.....	4-42	
<b>R</b>		
Ratings level .....	1-3	
Reactance .....	A-6	
Recommended ferrule.....	4-9	
Rectifier .....	A-6	
Reduce torque.....	3-22	
Regenerative braking.....	A-6	
Regulation.....	A-6	
Relay		
alarm signal contacts .....	4-59	
as intelligent output .....	4-52	
Remote control.....	4-33	
up function(motorized speed pot) .....	4-34	
down function (motorized speed pot).....	4-34	
data clear.....	4-34	
Reset		
function.....	3-102	
inverter .....	4-29	
Restart Mode configuration .....	3-72	
Restarting simple positioning .....	Ver.3-11	
Retain output frequency .....	4-49	
Revision history.....	xix	
Reverse		
rotation .....	4-81	
run/stop .....	4-16	
run protection .....	3-55	
torque .....	A-6	
RF noisefilter.....	5-4	
Rotor.....	A-6	
Rotation		
direction detection .....	4-50	
direction restriction.....	3-55	
restriction related parameter .....	3-55	
RPM.....	2-36	
Run		
command .....	4-11	
command source .....	4-84	
command source setting2-30,3-12,4-35 mode .....	2-34,3-4	
power on warning time.....	3-55	
signal.....	4-54	
source monitor .....	Ver.3-3	
time expiration signal.....	4-64	
Running the motor .....	2-34	
Run time edits .....	3-4,3-53,4-27	
<b>S</b>		
Safety		
how it work.....	E-2	
Installation .....	E-3	
massage .....	I	
precaution.....	E-3	
related signals .....	4-49	
Safe stop function .....	Ver.3.1-4	
Saturation voltage.....	A-6	
Scaling .....	3-70	
S-curve accel/deccel .....	3-38	
Second		
accel and decel .....	3-37	
motor.....	4-21	
stage output.....	4-71	
2 <sup>nd</sup> motor selection.....	4-85	
Sensorless vector control ...	3-22,3-107,A-6	
Service warranty .....	6-22	
Set (select)2nd motor data.....	4-21	
Setpoint .....	A-7	
Simple positioning .....	3-114	
current position store.....	Ver.3-16	
preset function by PSET .....	Ver.3-16	
settings.....	3-116	
&Brake control co-operation.....	Ver.3-14	
Single-phase power.....	A-7	
Single phase pulse input.....	3-114,3-115,Ver.3.1-3	
Sink/source input configuration .....	4-12	
Slip		
definition.....	A-7	
compensation gain .....	3-24	
Software lock.....	3-4,3-53,4-27	
Specifications		
control logic signals.....	1-10,4-6	
general .....	1-8	
inverter .....	1-4	
inverter label.....	1-3	
Speed		
command.....	2-29	
control .....	1-18,1-22,4-17	
detection .....	Ver.3-3,Ver.3.1-3	
deviation excessive signal .....	4-68	
position changeover .....	4-48	
position switching function.....	3-120	
pot.....	2-25	
Squirrel cage.....	A-7	
Standard functions.....	3-12	
Start		
frequency adjustment .....	3-70	
contact signal.....	4-77	
motor .....	4-31	
Stator.....	A-7	
STO(Safe Torque Off)		
performance monitor (output terminal 11 only).....	4-86	
settings.....	3-79	
Stop		
enable function .....	3-70	
mode configuration.....	3-72	
motor.....	4-31	
Store new register data (enter command).....	B-19	
Supply wiring .....	2-16	
Support of multiple pole.....	Ver.3-7	
Symbol definitions .....	i	
System description .....	2-4	



## T

- Tachometer ..... A-7
- Technical support .....xx
- Term drfinition ..... A-2
- Terminal/program source configuration ..... 3-12
- Terminals
  - listing ..... 4-10
  - torque specs ..... xiv,2-17
- Termination resistor network ..... B-3
- Thermal detection system error ... Ver.2-17
- Thermal protection
  - Inverter error code ..... 6-9
- Thermal
  - switch ..... A-7
  - warning signal output ..... 4-65
- Thermistor
  - definition ..... A-7
  - error code ..... 6-9
  - thermal protection ..... 4-30
- Three-phase power
  - definition ..... A-7
  - motor phase connections ..... 1-18
  - wiring precautions ..... 2-15
- Torque..... 1-19,A-8
  - boost ..... 3-24
  - command related settings ..... 3-113
  - control algorithm ..... 3-4,3-22,3-104
  - limit function ..... 3-62
  - limit selection ..... 4-37
  - limited signal ..... 4-63
  - limit switch 1,2 ..... 4-38
  - specs terminals ..... xiv,2-17
- Transistor ..... A-8
- Trip alarm ..... 4-60
- Trip evevnts..... 3-9,4-29
  - clearing ..... 6-9
  - definition ..... A-8
  - error codes ..... 6-8
  - history of ..... 6-13
  - monitoring ..... 6-8
- Trip/power loss alarm ..... 4-60
- Trouble shotting tips ..... 6-3
- Transmission procedure ..... B-5
- Two-stage acceletion and decceldtion ..... 4-22

## U

- UL instructions ..... xiii
- Unattended start protection ..... 4-25
  - error cod ..... 6-9
- Uncover the inverter vents ..... 2-23
- Undervoltage signal ..... 4-62
- Under-voltage
  - trip ..... 3-44
  - error code ..... 6-9
- Unpacking ..... 2-2
- Up/down function ..... 4-33
- Unattended start protection ..... 4-56

## V

- V/f control ..... 3-22
- Variable torque ..... 3-22
- Variable frequency drives
  - introduction ..... 1-18
- velocity profile ..... 1-22
- Ventilation ..... 2-8
- Voltage compensation gain ..... 3-24
- Voltage input ..... 3-16,4-87
- User parameter registration ..... 3-61

## W

- Warning
  - Codes ..... 6-11
  - general ..... x
  - index to ..... iv
  - operating procedures ..... 4-3
  - troubleshooting ..... 6-2
- Warranty ..... 6-23
- Watt hour related ..... 3-68
- Watt loss ..... A-8
- Window comparator for analog
  - Current input ..... 4-83
  - voltage input ..... 4-83
- Window comparator alog
  - disconnection ..... 3-67
- Wire size control relay terminls ..... 4-8
  - Wiring
    - analog inputs ..... 4-87
    - gauge ..... xiv,2-16
    - inverter output ..... 2-22
    - logic connectors ..... 2-22,4-6
    - power input ..... 2-18
    - preparation ..... 2-15
    - relay contacts ..... 4-6
    - sample control logic
    - terminal ..... 4-7
    - system diagram ..... 4-5

## Z

- Zero-phase reactor ..... 5-4
- Zero speed detection output ..... 3-96
- Zero Hz speed detection signal ..... 4-67